

Trainings ▾

Install

with Mechanically Actuated Injector


Note : For engines equipped with the phase 2.0 wiring harness, the engine harness and the engine harness support bracket are one piece.

Install the right bank wiring harness support bracket.

Tighten the capscrews.


Torque Value: 45 n•m [33 ft-lb]

Install the wiring harness onto the support bracket.

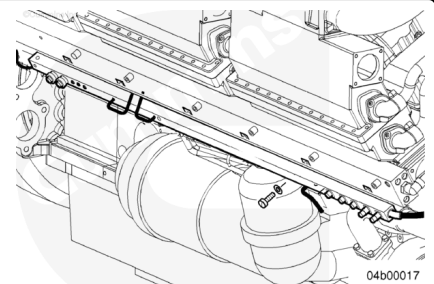

Connect the following sensors:


- Pre-filter oil pressure sensor, if equipped.
- Post-filter oil pressure sensor, if equipped.
- Right bank front intake manifold temperature sensor, if equipped.
- Right bank middle intake manifold pressure sensor, if equipped.
- Right bank rear intake manifold temperature sensor, if equipped.

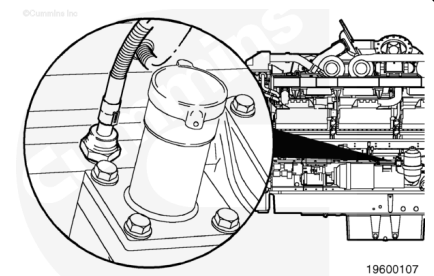


Attach the wiring harness to the cam follower covers using P-clips.

Tighten the capscrews.


Torque Value: 45 n•m [33 ft-lb]

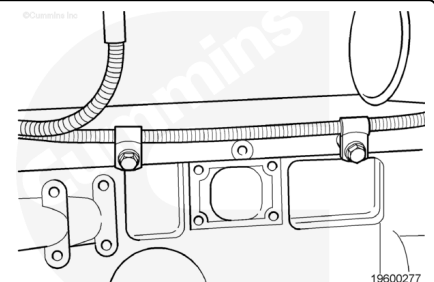

Connect the wiring harness to all right bank exhaust temperature sensors.

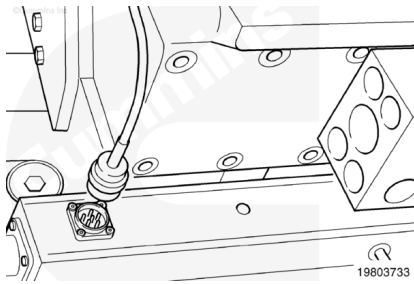


Connect all right bank wiring harness connectors to the left bank wiring harness.

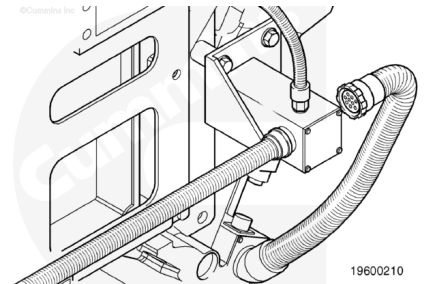

Connect the wiring harness ground lead to the bracket.
Tighten the capscrew.


Torque Value: 10 n·m [89 in-lb]

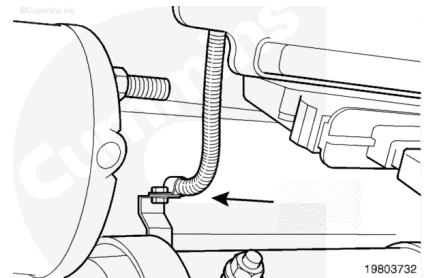

Note : For engines equipped with the phase 2.0 wiring harness, the engine harness and the engine harness support bracket are one piece.


Install the left bank wiring harness support bracket.
Tighten the capscrews.

Torque Value: 45 n·m [33 ft-lb]

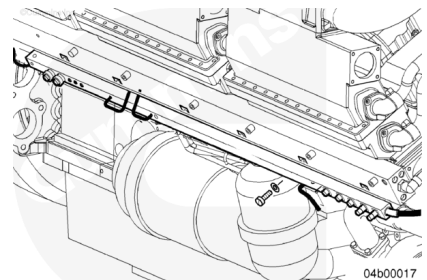

Install the left bank wiring harness routing block, if equipped.
Tighten the capscrews.

Torque Value: 45 n·m [33 ft-lb]

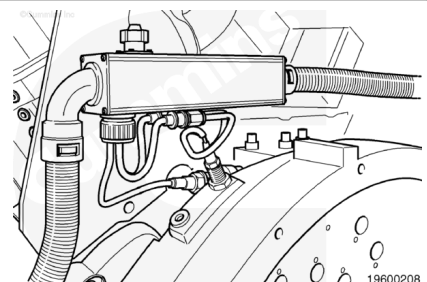


Connect the left bank wiring harness to the electronic control valve assembly.

Connect the two shutoff valve terminal connectors (1).

Tighten the nuts.

Torque Value: 6 n•m [53 in-lb]

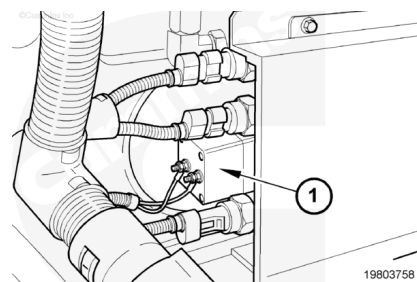


Connect the left bank wiring harness to the ECM.

Tighten the two capscrews.

Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5.32 in] hex head adapter to tighten the connector jackscrew.


Torque Value: 2.8 n•m [25 in-lb]

Note : Do not over torque as connector damage can occur.

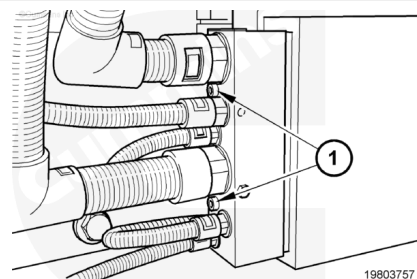

Connect the following sensors:


- Left bank rear intake manifold temperature sensor, if equipped.
- Oil temperature sensor, if equipped.
- Left bank rear turbocharger compressor inlet temperature sensor, if equipped.
- Main rifle oil pressure sensor.
- Speed sensor.
- Analog oil level sensor.
- Fuel temperature sensor.
- Timing pressure sensor.
- Fuel rail pressure sensor.
- Barometric/ambient air pressure sensor.
- Blowby pressure sensor.
- Left bank rear intake manifold pressure sensor, if equipped.
- Coolant level sensor.
- Fuel pump pressure sensor.
- Coolant pressure sensor.
- Coolant temperature sensor.
- Left bank front intake manifold pressure sensor.
- Left bank front intake manifold temperature sensor.
- Aftercooler water temperature sensor, if equipped.

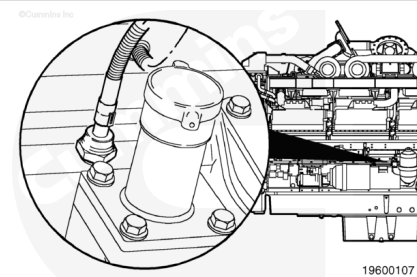

Install the Rockford™ fan clutch lead P-clips, if equipped, located next to the thermostat housing.

Tighten the capscrews.


Torque Value: 45 n•m [33 ft-lb]

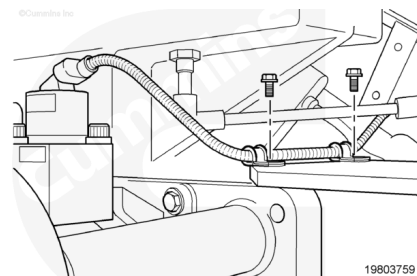

Install the Rockford™ fan clutch, if equipped and coolant temperature lead P-clips.

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

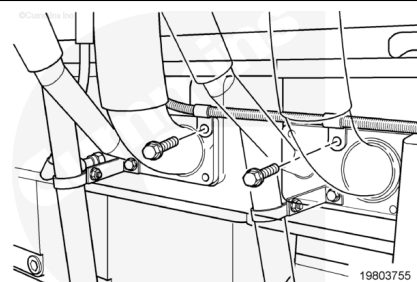


Connect the left bank wiring harness to the Centinel™ system, if equipped.

Install the P-clips fixing the lead to the Centinel™ actuator support bracket.

Tighten the capscrews.


Torque Value: 45 n•m [33 ft-lb]

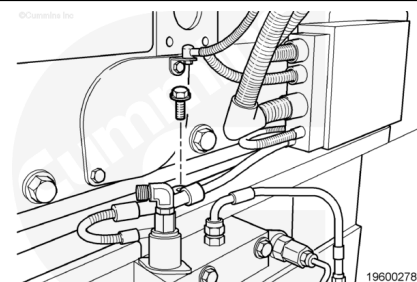


Connect the left bank wiring harness ground lead to the bracket.

Tighten the capscrew.


Torque Value: 10 n•m [89 in-lb]

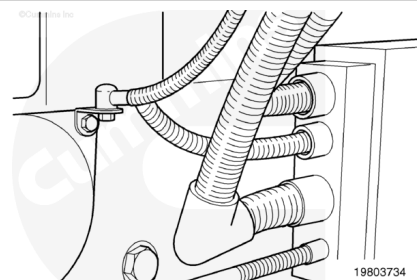


Connect the wiring harness to all of the left bank exhaust temperature sensors.

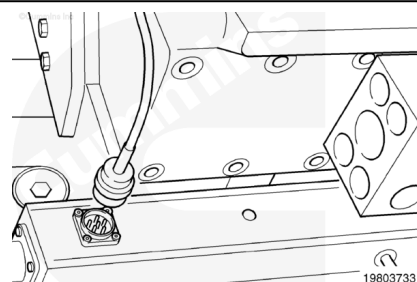


Connect the 3-pin Deutsch™ J1939 datalink to the communication harness.

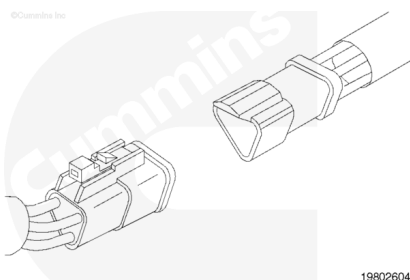

Connect all OEM connectors to the left bank wiring harness.

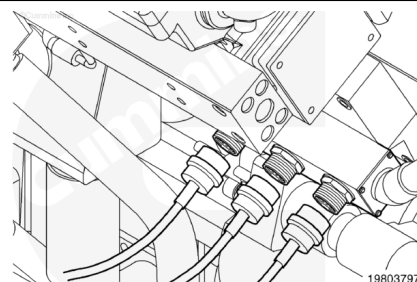

Connect all left bank wiring harness connections to the right bank wiring harness.

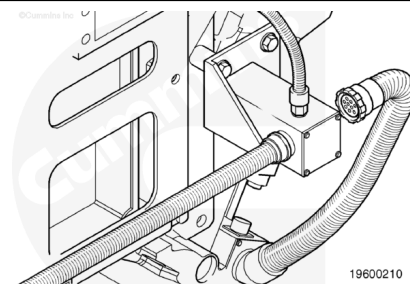


with Electronically Actuated Injector

Connect the engine harness to the ECMs.


Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5.32 in] hex head adapter to tighten the connector jackscrew.

Torque Value: 2.8 n·m [25 in-lb]


Note : Do not over-torque as connector damage can occur.

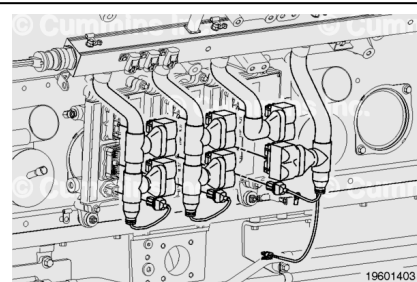

Install the harness clamps that hold the engine harness to the block.

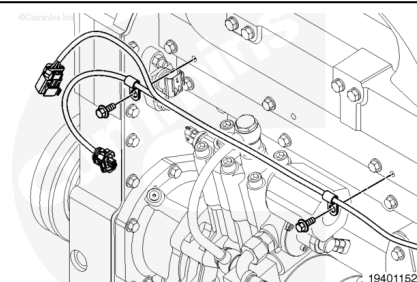

Connect the sensors and switches to the engine harness.

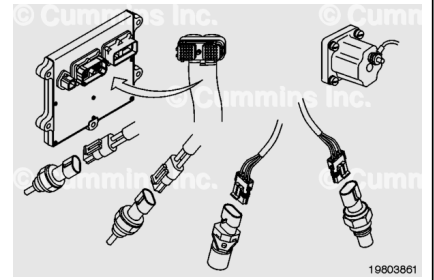

Last Modified: 17-Apr-2014
