

Trainings ▾


Tool Number

3823495

Depth Gauge Assembly

Used to measure the cylinder liner protrusion and cylinder liner counterbore ledge angle.

©Cummins Inc

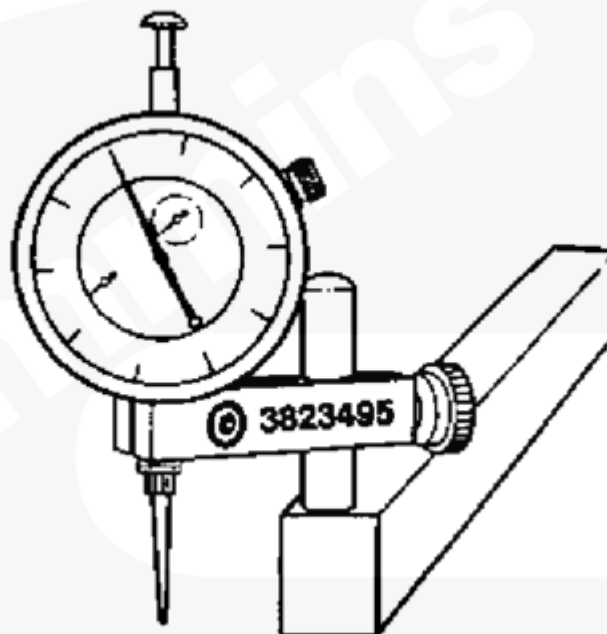

3823495


Tool Number

3164438

Depth Gauge Assembly

Used to measure the cylinder liner protrusion, injector protrusion, cylinder counterbore depths, and valve intrusion and/or protrusion.

©Gummine Inc

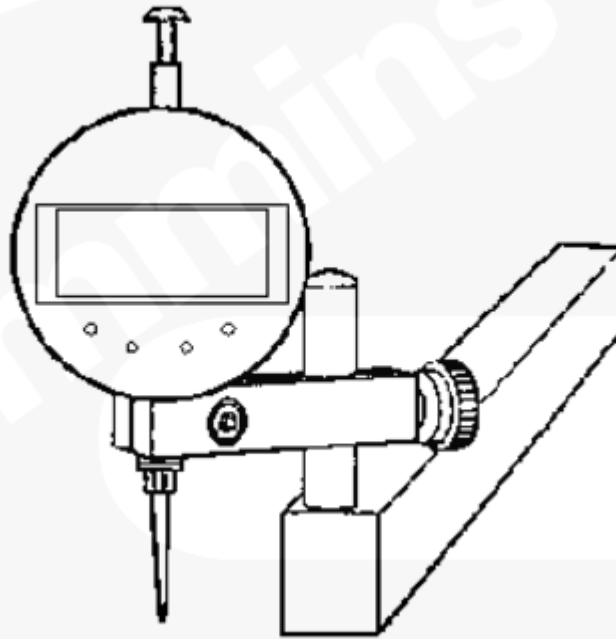


3164438

Tool Number

3164341

Cylinder Head Leak Test Kit

Test kit designed to plug and pressurize the cylinder head for leak test.

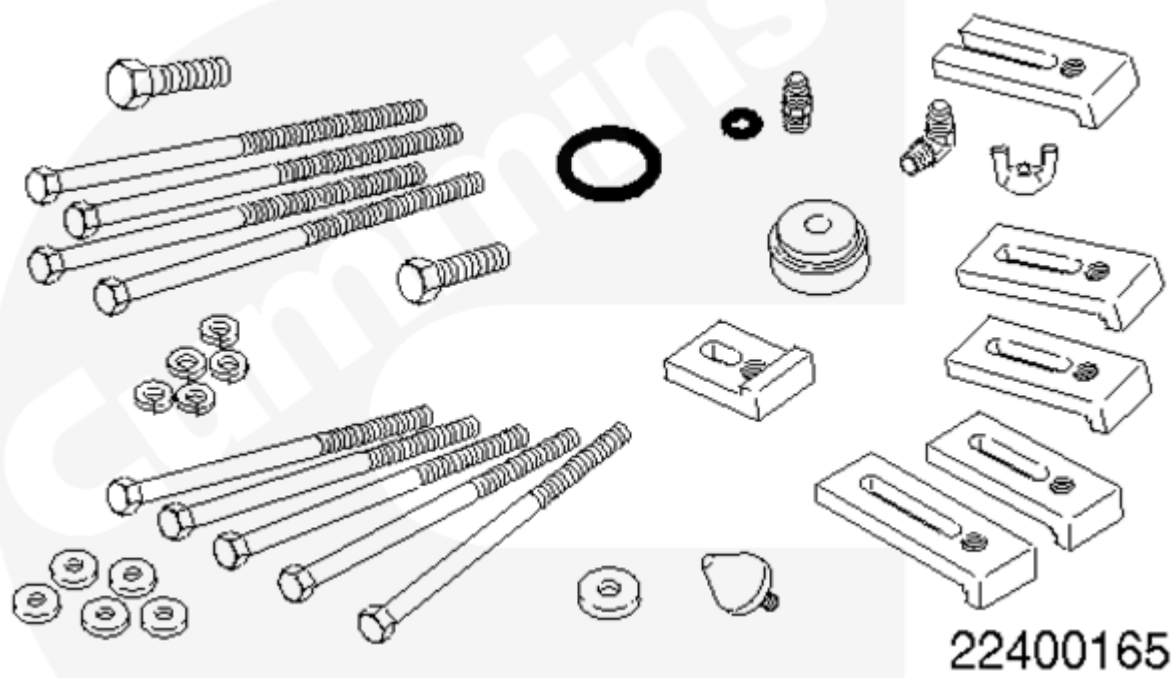

22400165


Tool Number

ST-647

Gear Remover

Used to remove the alternator and accessory drive pulleys.

©Cummins Inc

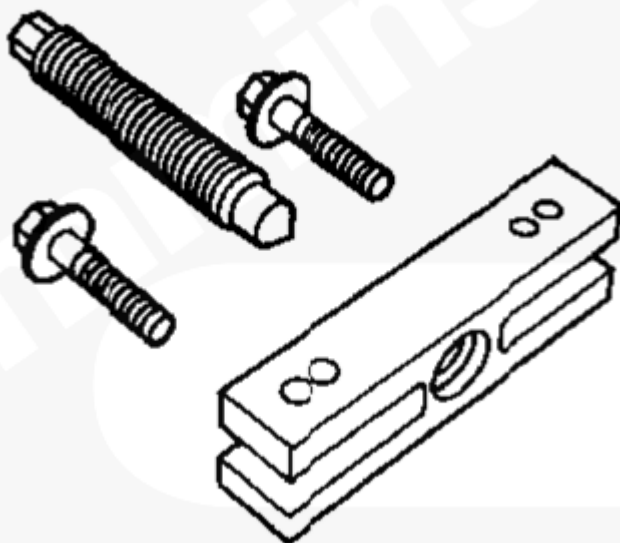

ad8toga

Tool Number


ST-1134

Dowel Pin Extractor

Used to remove dowel pins and crosshead guides.

© Cummins Inc.

© Cummins Inc.

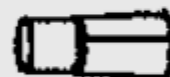


ck8toge

Tool Number

3163720

Dowel Pin Extractor


Used to remove dowel pins and crosshead guides.

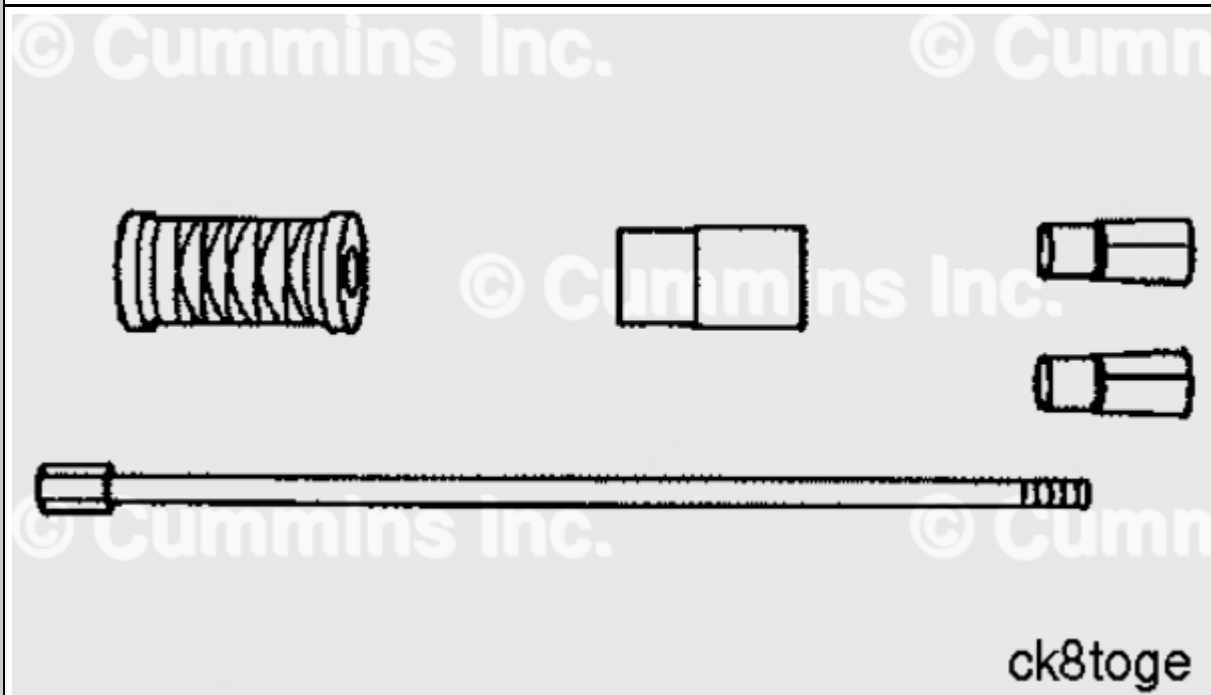**Tool Number**

ST-1269

Piston Ring Expander

Used to install the piston rings on the piston without damaging or distorting the rings.

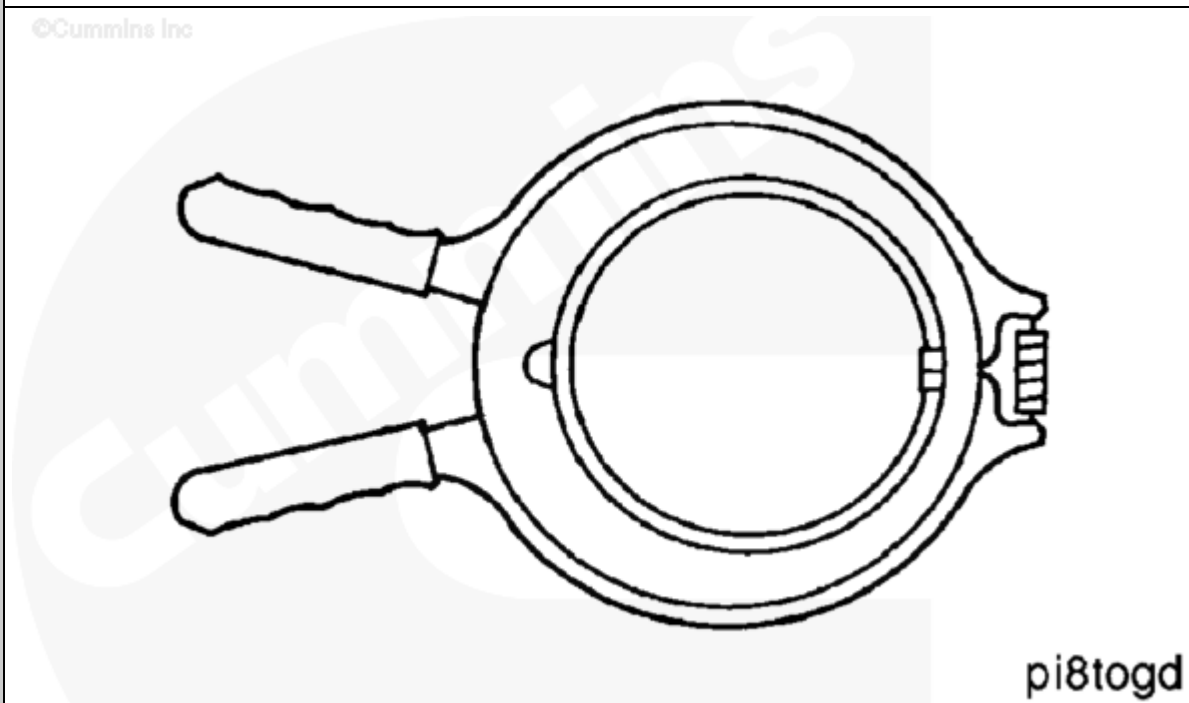



Tool Number

3163329

Cylinder Liner Installation Tool and Clamp

Used to install the cylinder liner in the engine.

©Cummins Inc

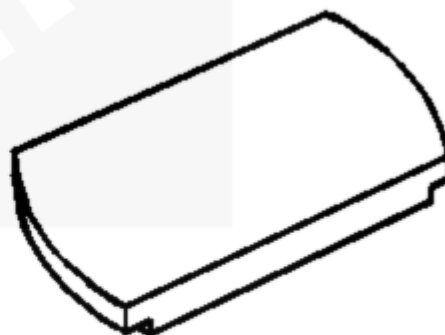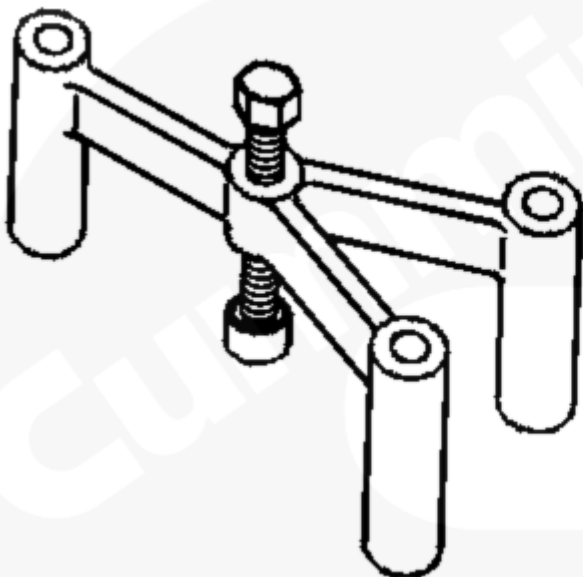

22600107



Tool Number

3164870

Cylinder Liner Installation Tool and Clamp

Used to install the cylinder liner in the engine.

©Cummins Inc

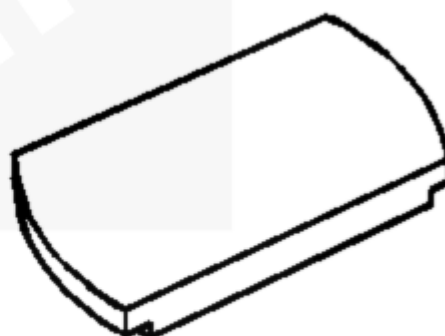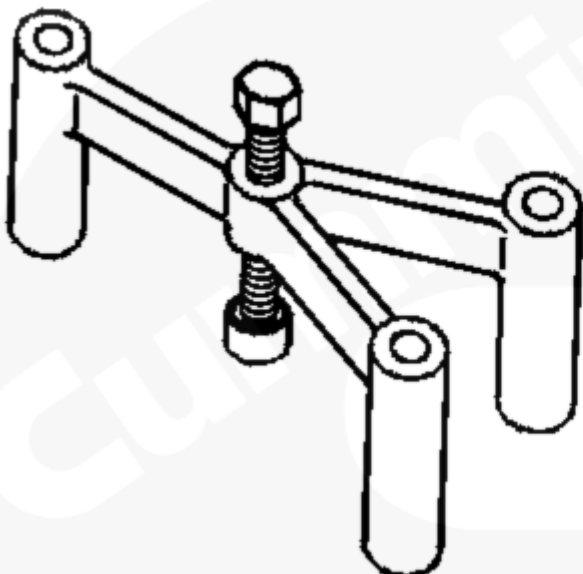

22600107


Tool Number

3375432

Crack Detection Kit

Used to check for cracks in any engine component. It contains cleaner, developer, and penetrant.

©Gummine Inc

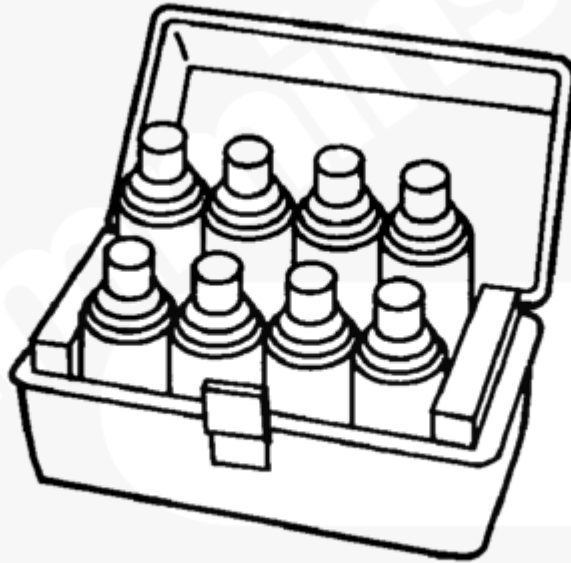

bp8togj


Tool Number

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

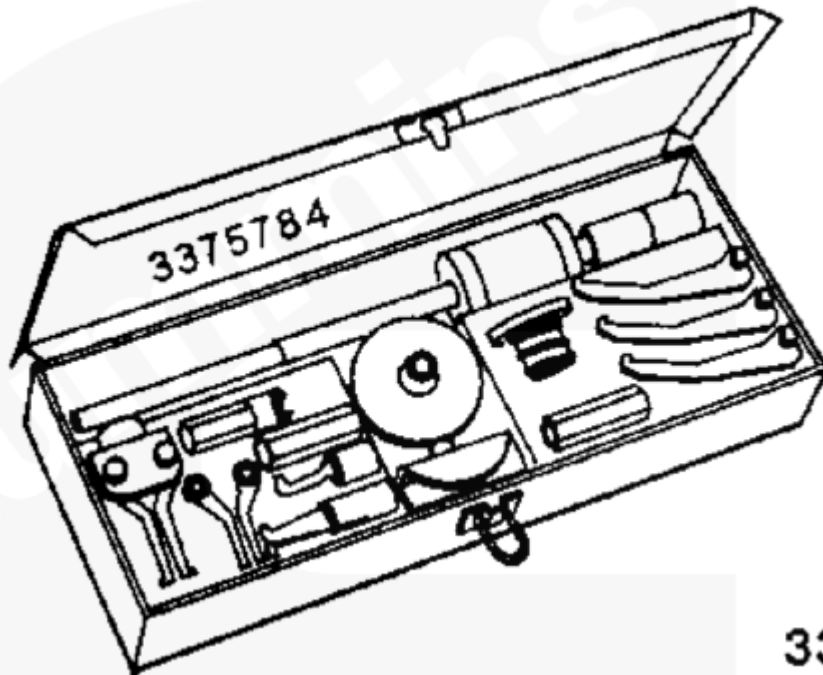

3375784


Tool Number

3163745

Liner Remover

Used with liner remover plate, Part Number 3162886, to remove the cylinder liner from the engine.

©Cummins Inc

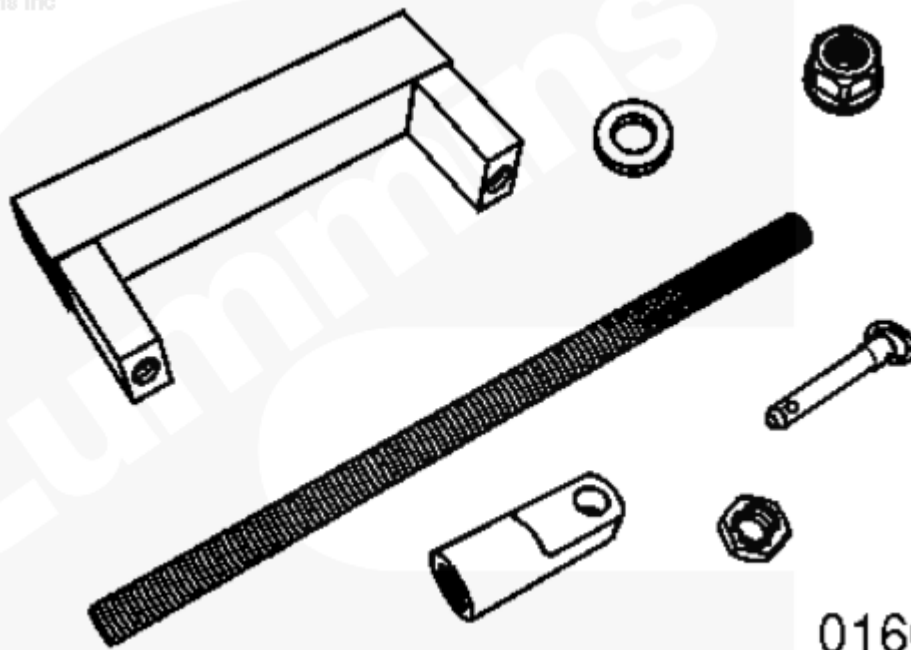

01600269


Tool Number

3823621

Camshaft Bushing Tool Hydraulic Actuator Kit

Used with the QSK45 and QSK60 camshaft bushing installation/removal kit, Part Number 3163015, to remove and install camshaft bushings.

©Cummins Inc

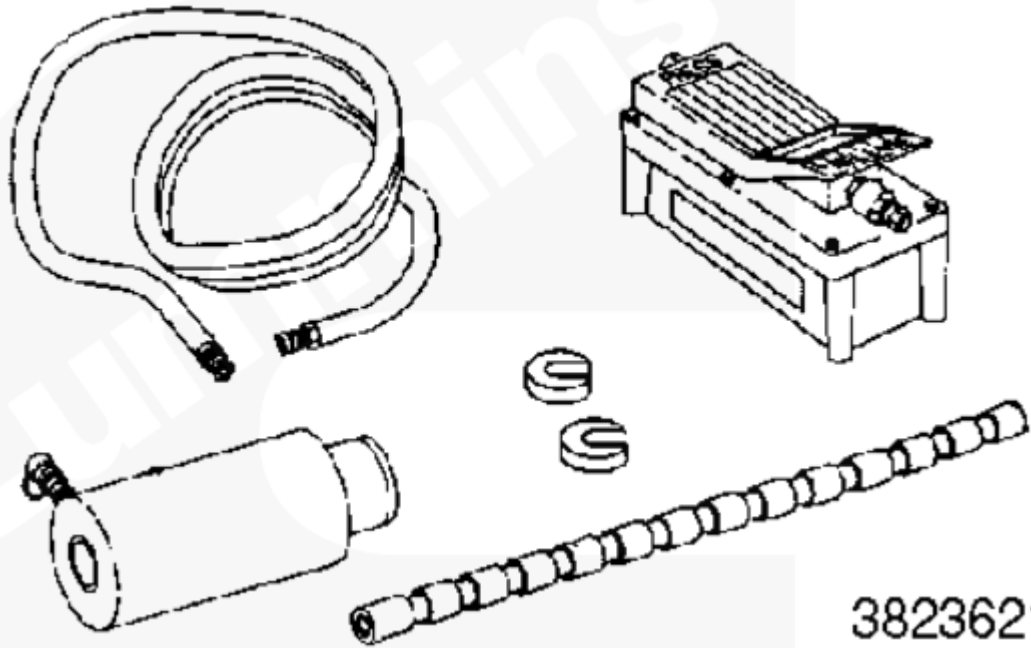


Tool Number

3163015

QSK45 and QSK60 Camshaft Bushing Installation/Removal Kit

Used with the camshaft bushing hydraulic actuator kit, Part Number. 3823621, to remove and install camshaft bushings.

©Cummins Inc

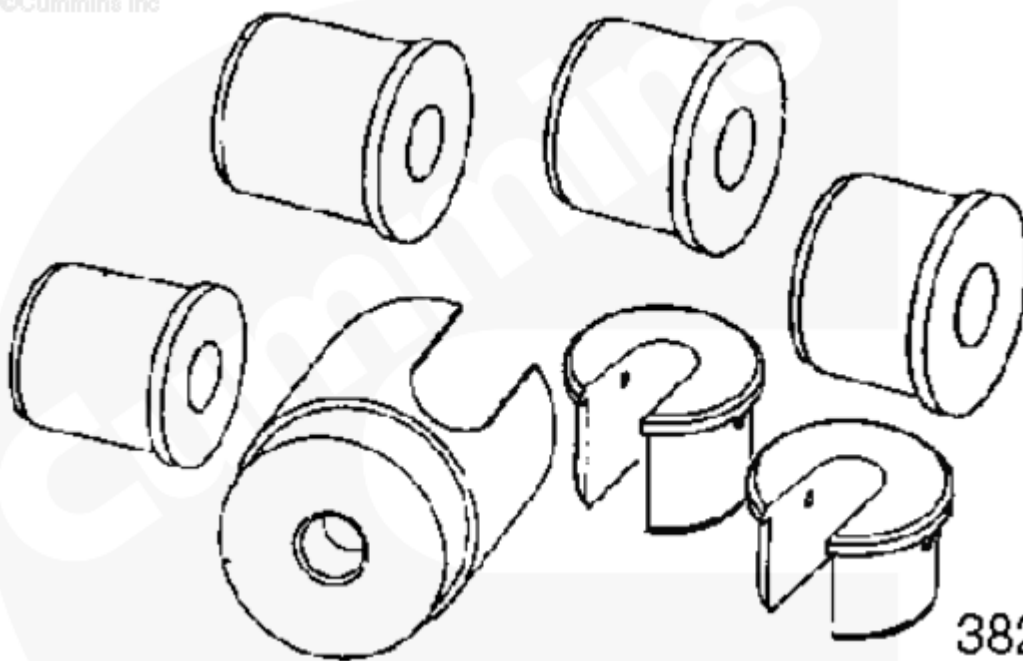

3824842


Tool Number

3163195

Camshaft Pilot

Used to install camshaft without damaging the camshaft bushings or camshaft.

©Cummins Inc

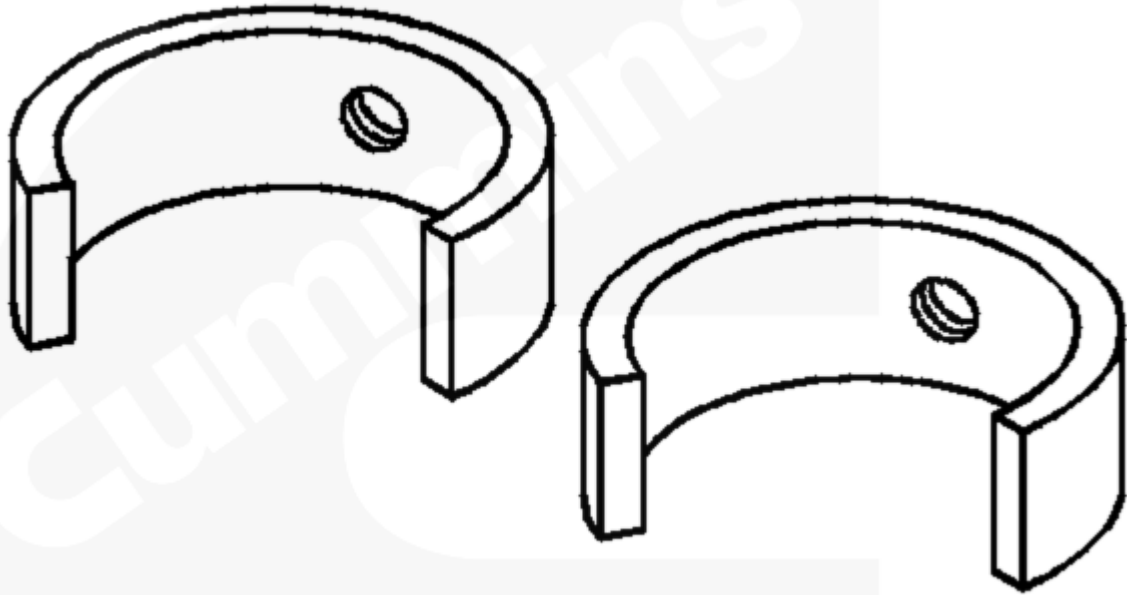

01600164


Tool Number

3824942

Injection Timing Tool

Used to check the injection timing. The timing fixture is designed to determine the push-tube travel in relation to the piston travel. Used with indicator stem extension, Part Number 3163305, alignment gauge Part Number 3163306, and hold down screw, Part Number 3163307.

©Cummins Inc

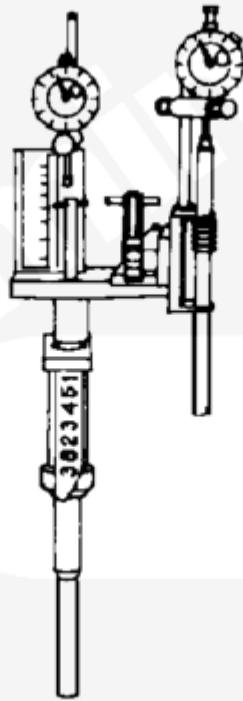

3823451


Tool Number

3823818

Main Bearing Remover

Used to remove and install the upper main bearing shell.

©Cummins Inc

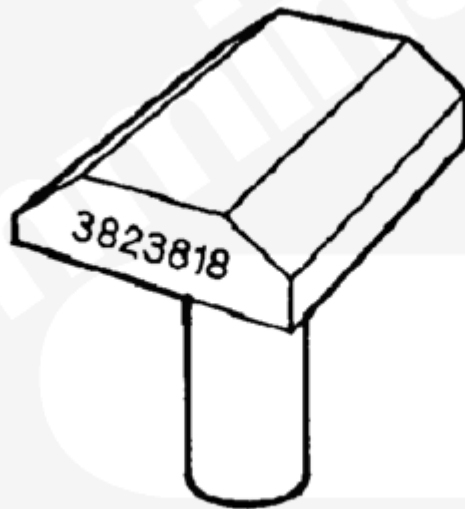

3823818


Tool Number

ST 1116

Main Bearing Cap Remover

Used to remove the main bearing caps.

©Cummins Inc

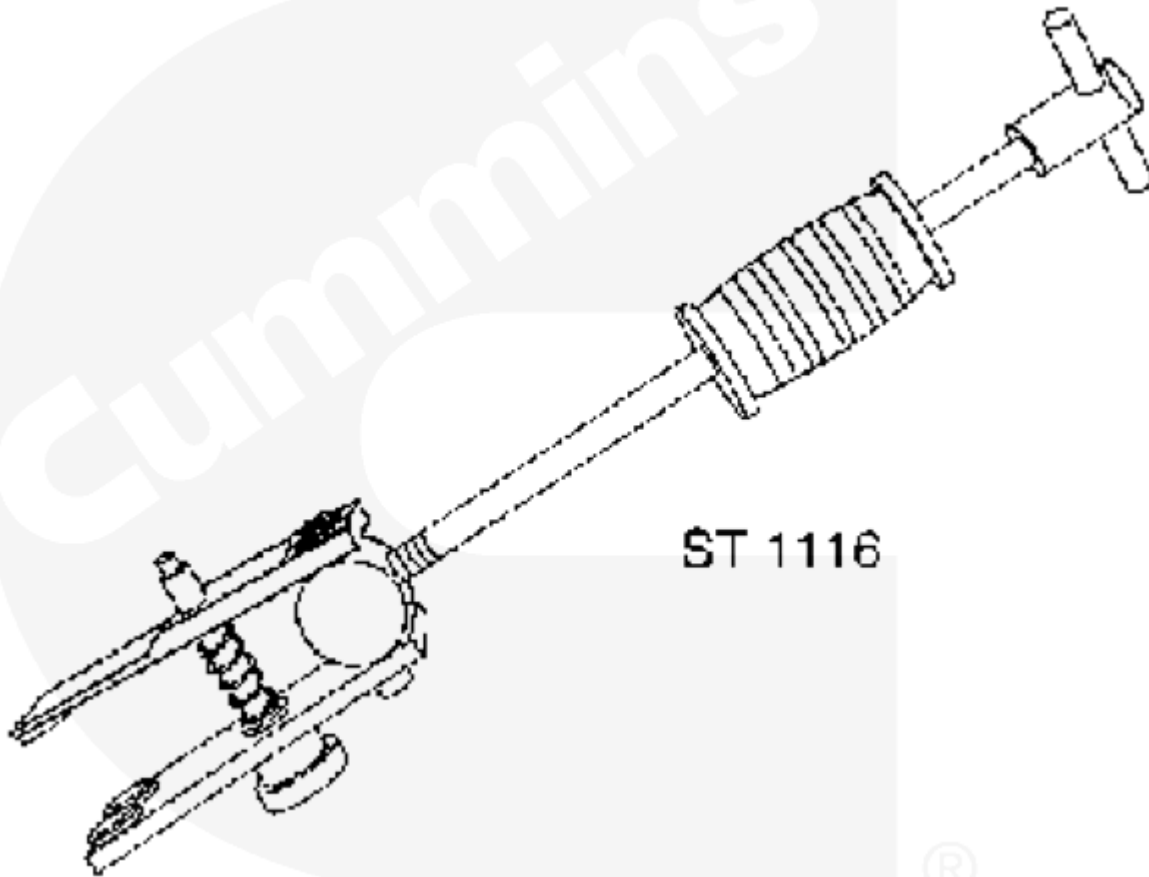

ST 1116



Tool Number

3824846

Piston Ring Groove Wear Gauge

Used to inspect the piston top ring groove.

©Cummins Inc

**ST 560**


Tool Number

3823294

Piston Ring Compressor

Used to install the pistons, with rings installed, into the cylinder.

©Cummins Inc

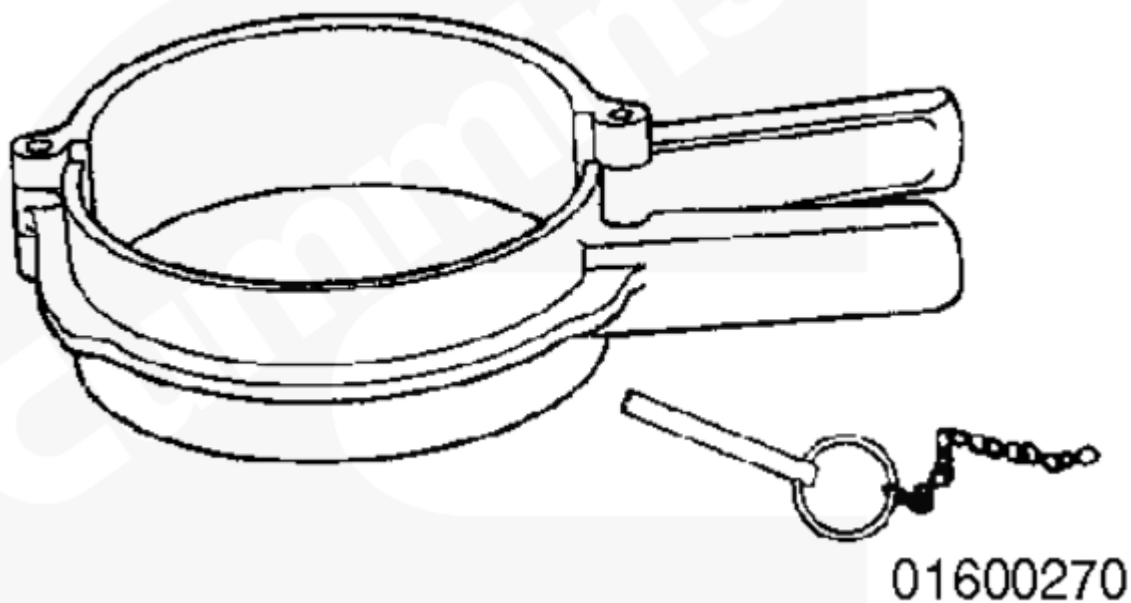


Tool Number

3163349

Crankshaft Seal Installation/Removal Tool

Used to remove and install the front and rear crankshaft seal.

©Cummins Inc

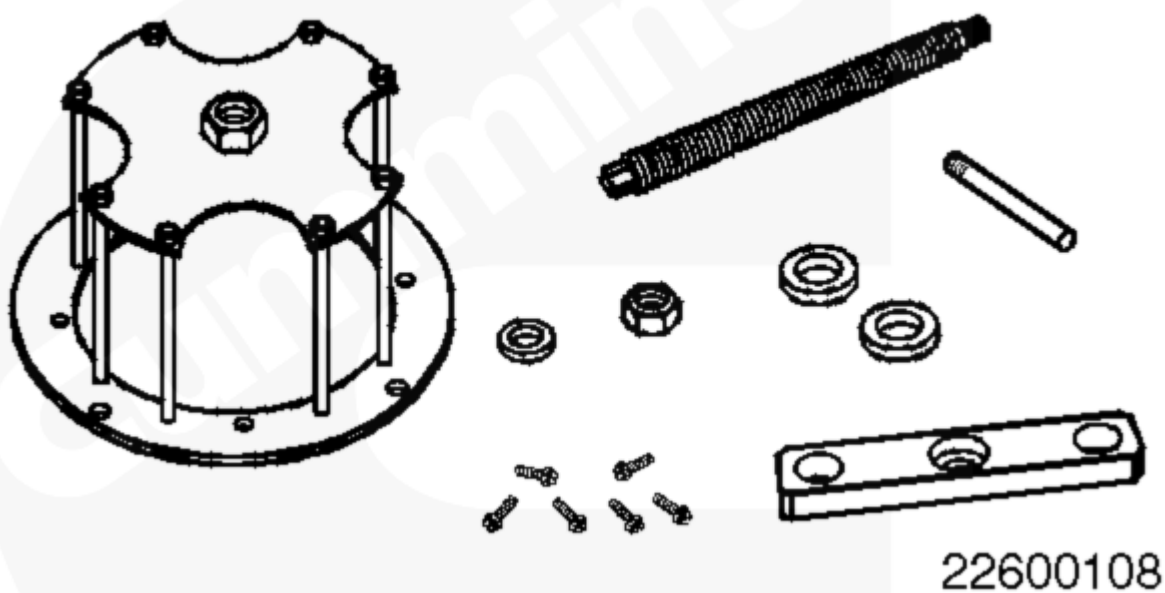


Tool Number

3163264

Engine Lift Fixture

Used to lift the engine during installation and removal.

©Cummins Inc

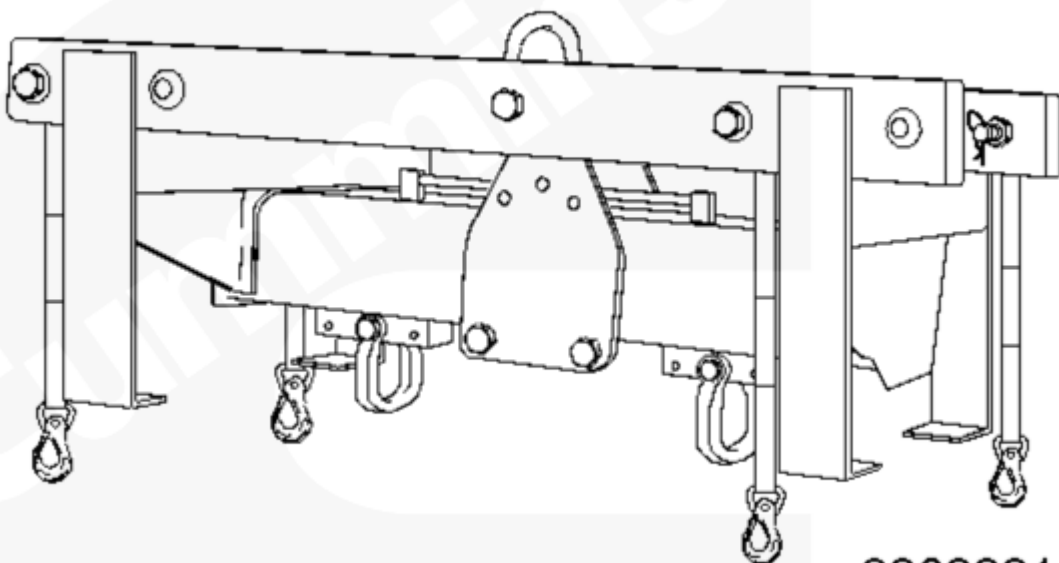

00600041


Tool Number

3376050

Dial Indicator Assembly

Used for checking flywheel housing runout, gear/shaft end play, and gear backlash.

©Cummins Inc

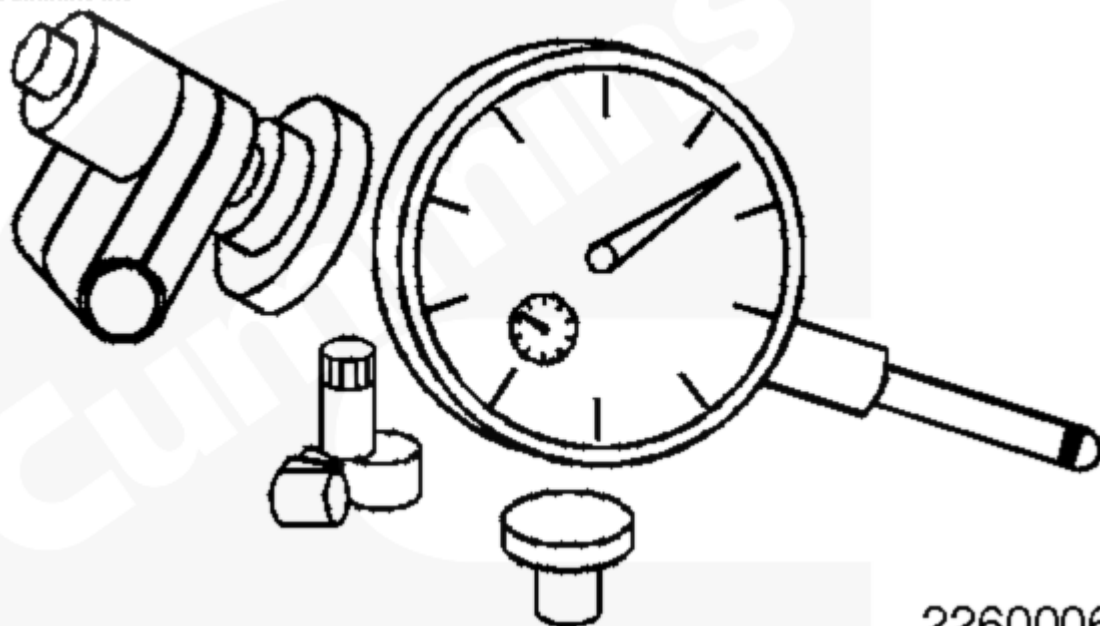

22600064


Tool Number

3377399

Magnetic Base Indicator Holder

Used in conjunction with dial indicator assembly, Part Number 3376051, to check gear backlash, shaft end play and gear end play.

©Cummins Inc

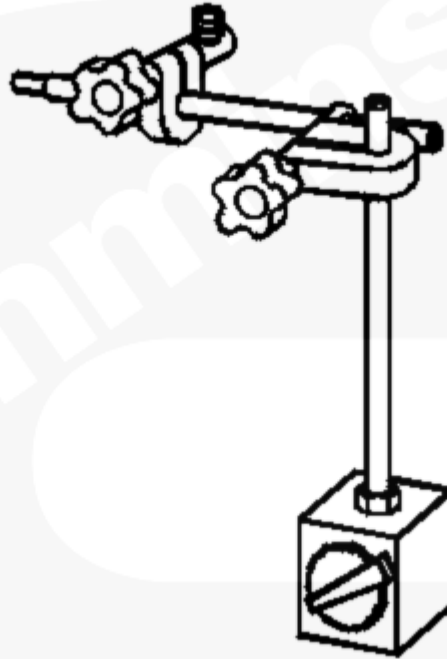

22600063


Tool Number

3823258

Scotch-Bright 7448

Used to clean carbon from the upper liner bores, removing rust and corrosion, and scuffing surfaces.

©Cummins Inc

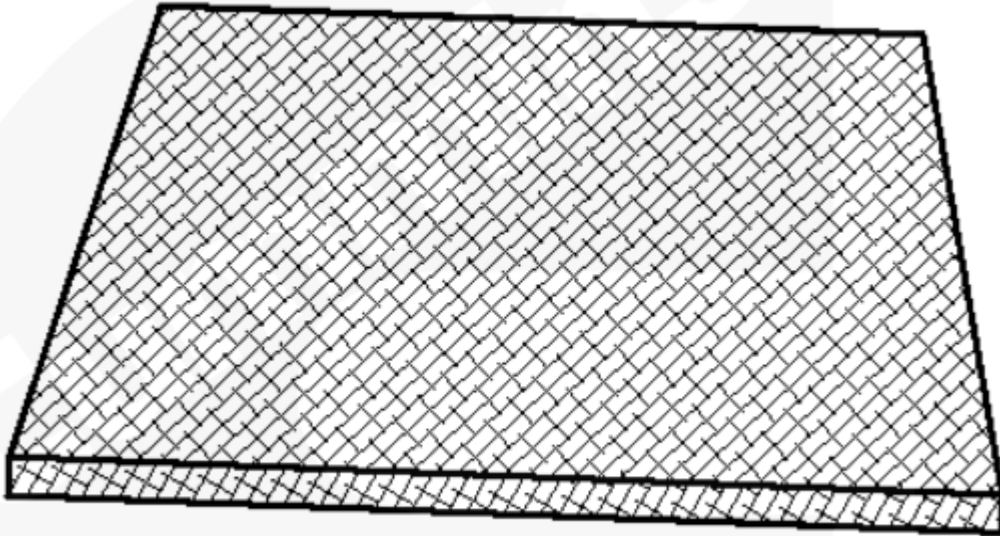

01600272

Tool Number

3375957

Nylon Lift Slings (50.8 x 1828 mm [2 in x 6 ft])

Used to aid the removal and installation of heavy components.

©Cummins Inc



ks8toge

Tool Number

3375958

Nylon Lift Slings (25.4 x 1828 mm [1 in x 6 ft])

Used to aid the removal and installation of heavy components.

©Cummins Inc



ks8toge

Tool Number

3164375

Hydraulic Gear Remover

Used with the QSK45, QSK60 and QSK78 camshaft and crankshaft gear remover kit, Part Number 3164378, to remove the crankshaft and camshaft gear.

©Cummins Inc



01600268

Tool Number

3822735

Bead Blast Media

Used for cleaning parts.

©Cummins Inc



01600271


Tool Number

ST 561

Connecting Rod Checking Fixture

Use with mandrel kit, Part Number 3165110, to inspect connecting rods for bend and twist.

©Cummins Inc

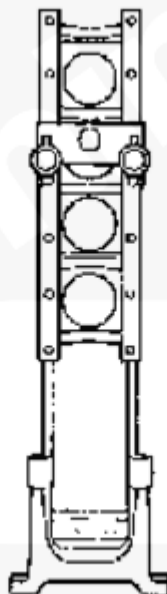

01600273


Tool Number

3164874

Crankshaft Bore Centering Kit

Used with boring/alignment bar, Part Number 3375061, to measure main bore alignment.

©Cummins Inc

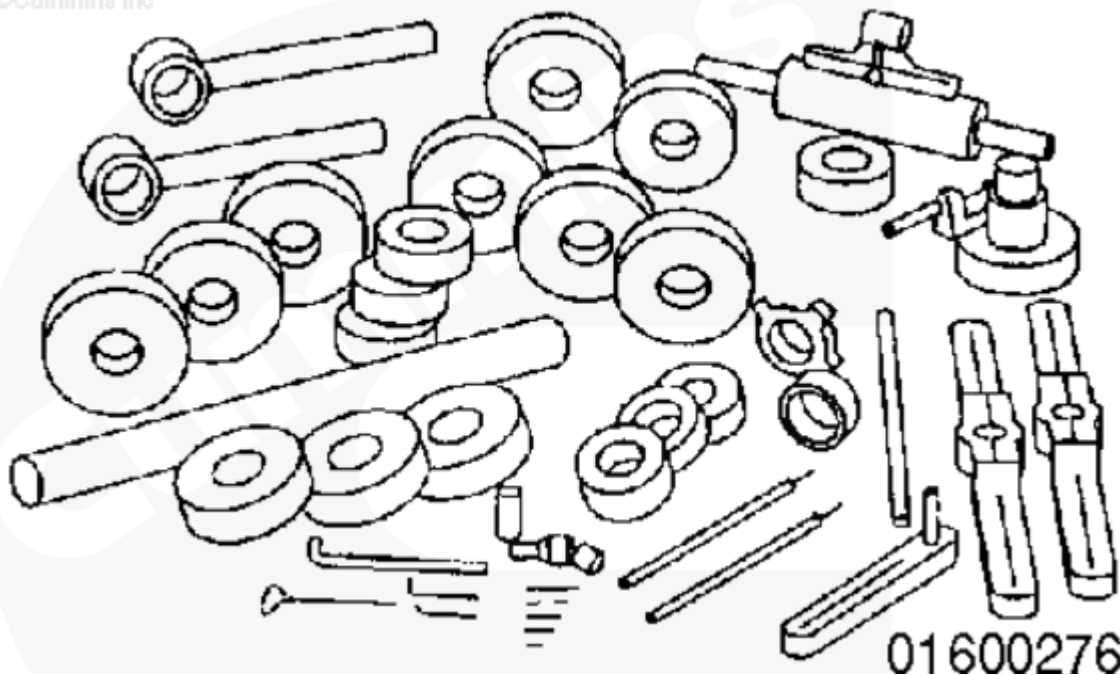

01600276


Tool Number

ST 1177

Main Bearing Boring Tool

Used to salvage main bearing bores.

©Cummins Inc

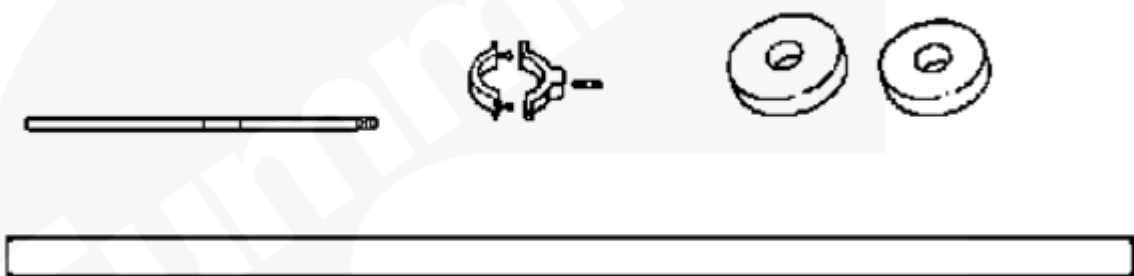

01600274


Tool Number

3163400

Bushing Remover

Used to remove and install bushings in the front cover.

©Cummins Inc

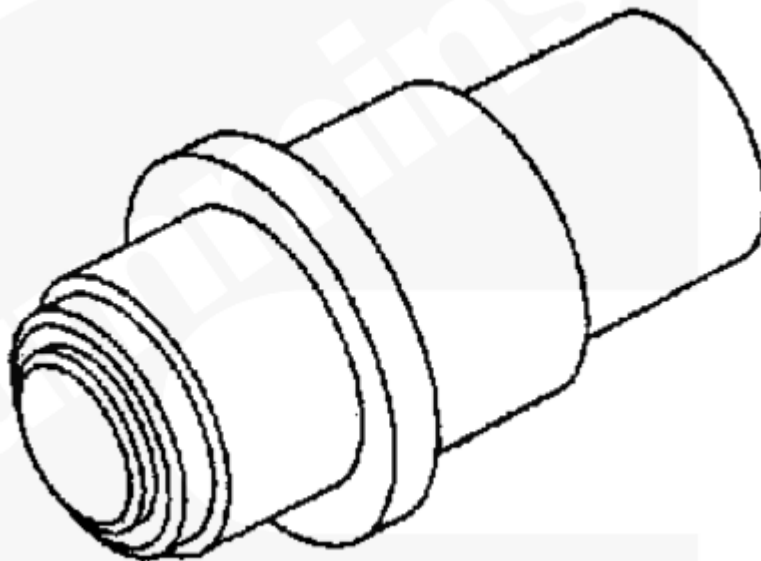

01600275

Tool Number

3163086

Lubricant

Lubriplate 105.

©Cummins Inc



22800554

Tool Number

3163087

Lubricant™ 105

A 10-ounce tube of Lubricant.

©Cummins Inc



22800554