

Trainings ▾


Tool Number

3376859

Fitting, Quick-Disconnect Female

Connects gauges when measuring various fuel pressures.

©Cummins Inc

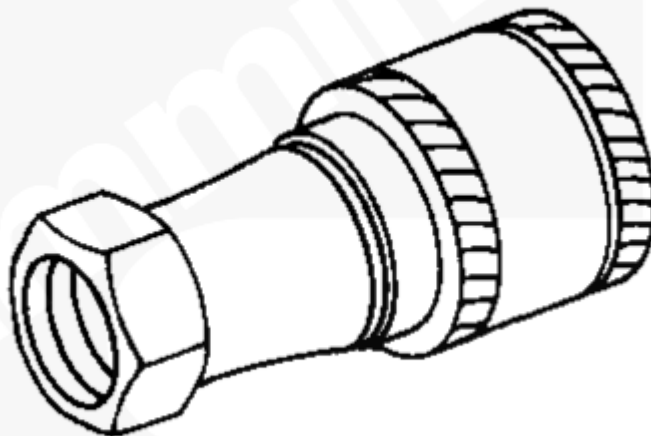

st-435-7

Tool Number

3377244

Fitting, Quick-Disconnect Male

Used to perform a pressure-side air-in-fuel test.

©Cummins Inc



3377244

Tool Number

3824877

Gauge

Use to measure the fuel pump pressure from 0 to 2758 kPa [0 to 400 psi]. Includes necessary hoses and hardware to attach to a fuel pump.

©Cummins Inc



eg8togh


Tool Number

3377161

Digital Multimeter

Check resistance of fuel shutoff solenoid.

©Cummins Inc

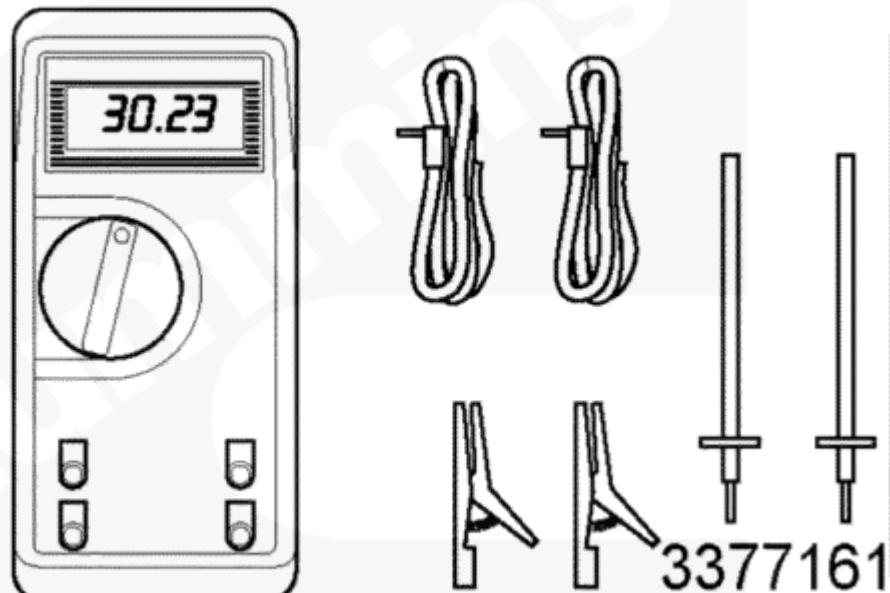


Tool Number

3164488

Digital Multimeter

Check resistance of fuel shutoff solenoid.

©Cummins Inc

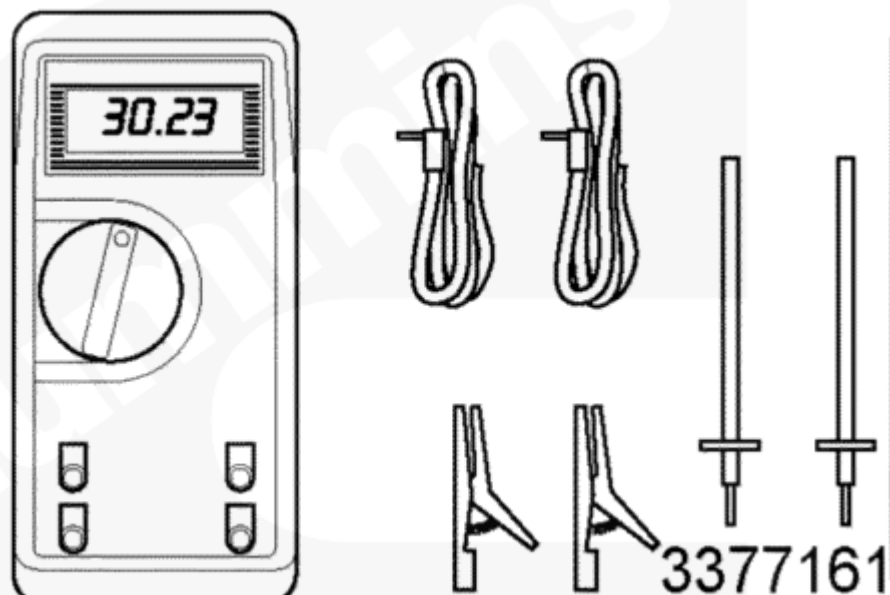

Tool Number

3822934

Lubricant DS-ES

Use dielectric lithium grease to lubricate the pins in the electrical connectors.

©Cummins Inc



3377132

Tool Number

3824510

QD Contact Cleaner

Use a nonpetroleum cleaner to clean electrical connections.

©Cummins Inc



oi8togt

Tool Number

3376506

Remote Starter Switch

Use to crank the engine to measure the cranking fuel pressure.

©Cummins Inc



3376506


Tool Number

3377462

Optical Tachometer

Use to measure engine rpm.

©Cummins Inc

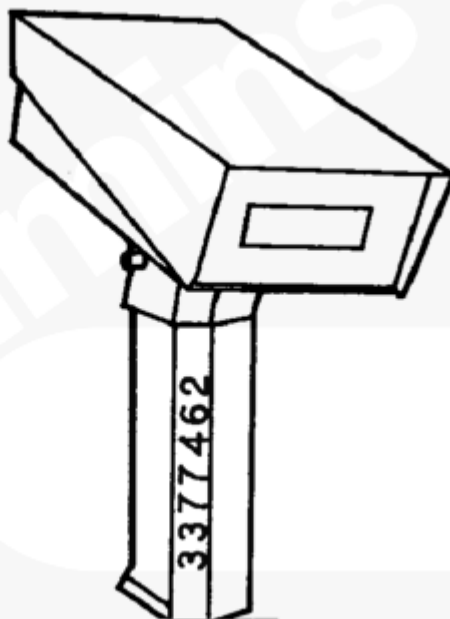


3377462,

Tool Number

3375599

AFC Barrel Puller

Use to pull metering barrel from the fuel pump regulator.

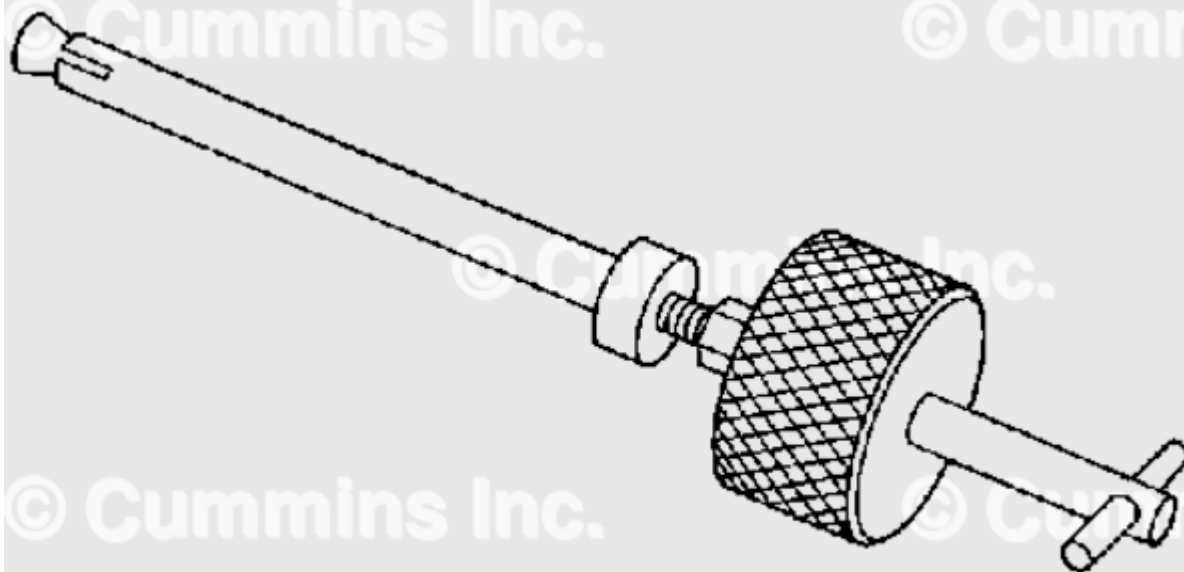


22600248

Tool Number

3376177

Injector Orifice Torque Wrench

Use to tighten control orifice and control orifice plug.

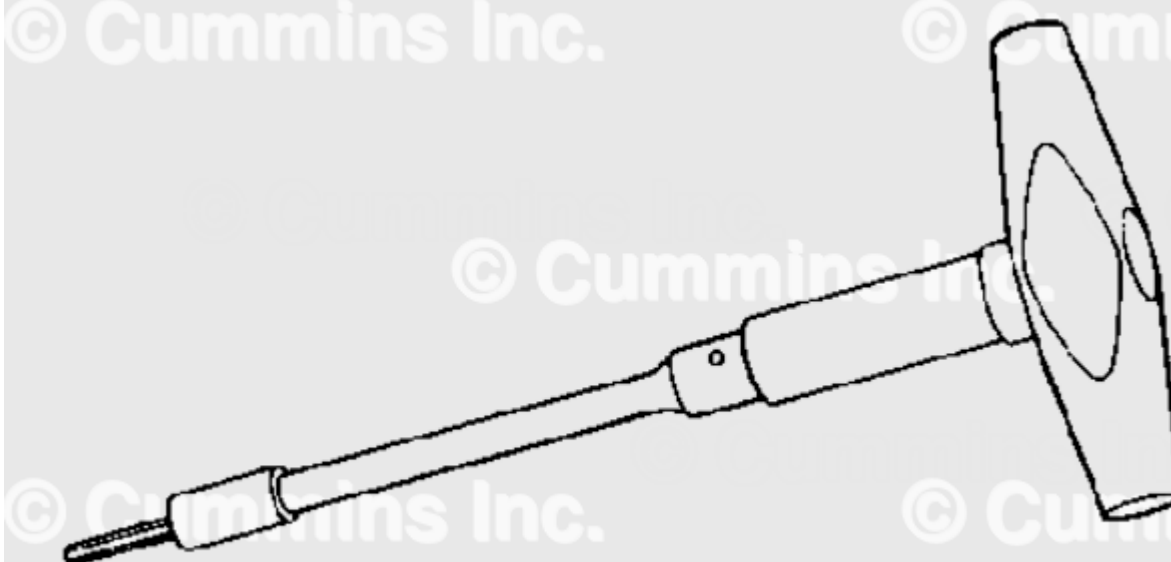

22600247

Tool Number

4918603

Fuel Pump Lifting Bracket

Used to support the weight of the fuel pump during removal and installation on the engine.

