



Service Tool Instruction

**Service Tool Instruction
Number: 3377822-1**

Revision Level:

Released Date: 25-jul-2005


Description

Fuel Pump Gear Puller

Purpose

This document provides information for Fuel Pump Gear Puller, Part Number 3163381. The puller is used to remove the fuel pump gear from the fuel pump shaft. For additional information, see the following publications.

- Refer to Procedure 005-012 (/qs3/pubsys2/xml/en/procedures/40/40-005-012.html) in the Troubleshooting and Repair Manual B3.9, B4.5, and B5.9, Series Engines, Bulletin 3666087
- Refer to Procedure 005-014 (/qs3/pubsys2/xml/en/procedures/22/22-005-014.html) in the Troubleshooting and Repair Manual QSB3.9-30, QSB4.5-30, and QSB5.9-30 Series Engines, Bulletin 4021398
- Refer to Procedure 005-012 (/qs3/pubsys2/xml/en/procedures/41/41-005-012.html) in the Troubleshooting and Repair Manual C Series Engines, Bulletin 3666003
- Refer to Procedure 005-016 (/qs3/pubsys2/xml/en/procedures/44/44-005-016.html) in the Troubleshooting and Repair Manual ISB ^e, ISB, and QSB5.9 (Common Rail Fuel System) Series Engines, Bulletin 4021271
- Refer to Procedure 005-016 (/qs3/pubsys2/xml/en/procedures/45/45-005-016.html) in the Troubleshooting and Repair Manual ISC, ISC ^e, QSC8.3, ISL, and QSL9 Engines, Bulletin 4021418.

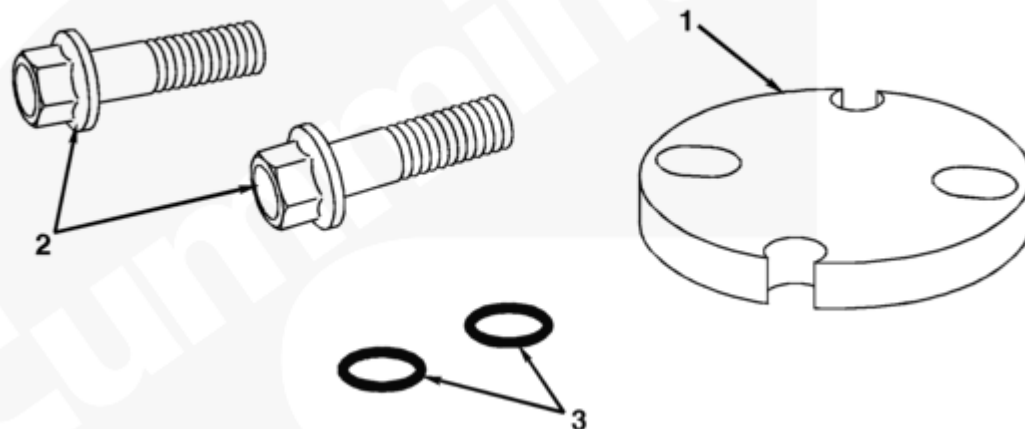

22900021

Table 1, Fuel Pump Gear Puller, Part Number 3163381

Item Number	Part Number	Description	Quantity
1	3163382	Puller plate	1
2	3900633	Capscrew	2
3	3823398	O-ring	2

Table 2, Items Used with the Fuel Pump Gear Puller, Purchased Separately

Item Number	Part Number	Description	Quantity
Not shown	4918317	Spacer (marine application only)	1