



Technical Service Bulletin: tsb100778

Released Date: 18-Dec-2008

New Flywheels and Flywheel Housings

New Flywheels and Flywheel Housings

Warranty Statement


The information in this document has no effect on present warranty coverage or repair practices, nor does it authorize TRP or Campaign actions.

Contents

This Technical Service Bulletin replaces 07T16-2. Two additional new flywheel housings have been added to Table 1, Part Numbers 4942185 and 4942186. This Technical Service Bulletin announces a standardization of flywheels which will eliminate the need for starter motor spacers. Several new flywheels and flywheel housings have been released.

Presently the spacers are used between the starter and the flywheel housing to achieve correct spacing.

©Cummins Inc

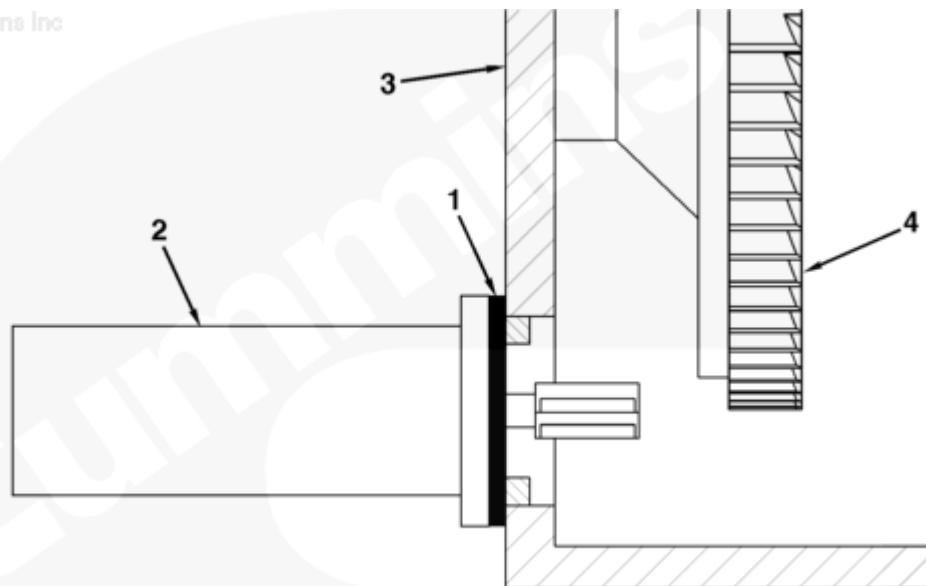

16d00114

Figure 1, Starter Spacer Application (1 - Starter Spacer, 2 - Starter, 3 - Flywheel Housing, 4 - Flywheel)

The new flywheel and flywheel housing hold a constant spacing between the starter mounting plate on the flywheel housing and the flywheel.

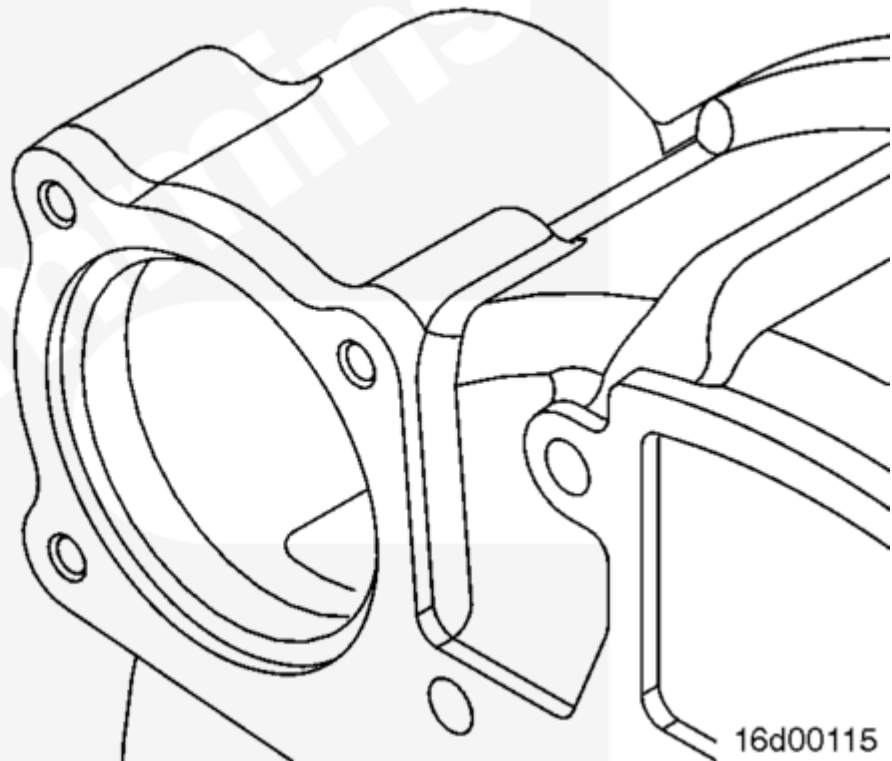


Figure 2, Old Flywheel Housing - 106 mm [4.2 in] with Step-down to 92.05 m [3.6 in] Starter Bore

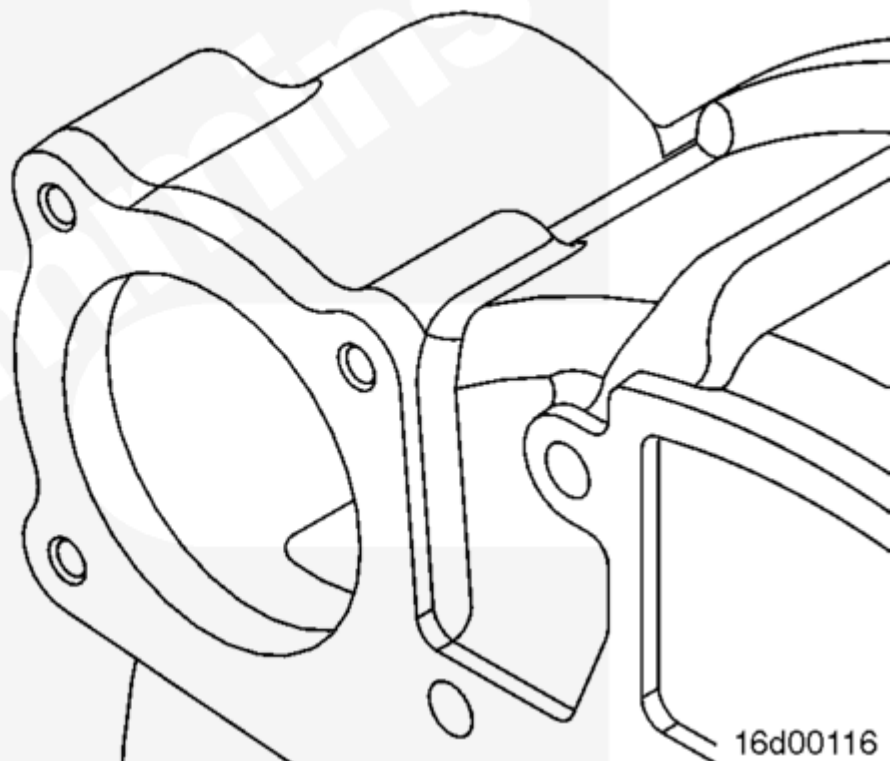


Figure 3, New Flywheel Housing - 92.05 m [3.6 in] Starter Bore

The new flywheel and flywheel housing part numbers will obsolete and supersede the present part numbers. See Table 1, Flywheel Housing Part Number Changes for direct supersession information. See Table 2, Flywheel Part Number Changes, for direct part number supersessions and for the compatibility information/conditions existing when using a new flywheel with an old flywheel housing.

Note : If a new flywheel is used with a new flywheel housing, no spacer is used.

Note : A new flywheel housing can not be used with an old flywheel.

Table 1, Flywheel Housing Part Number Changes

Old Flywheel Housing (I.D. 10)	New Flywheel Housing (I.D. 10)
3924581	3970731
3906689	3973302
3927780	3973303
3352392	3973305
3926207	3973308
3281473	3973310
3908548	3973312
3911604	3973314
3354392	3974770
3356305	3974772
3928490	4942185
3928491	4942186

Table 2, Flywheel Part Number Changes

Old Flywheel Assembly (I.D. 16)	New Flywheel Assembly (I.D. 16)	Part Number Change Details
3282053	3970976	Direct supersession, no change required.
3907466	3970976	Direct supersession, no change required.
3934860	3970976	Direct supersession, no change required.
3920442	3970976	Direct supersession, no change required.
3935086	3972548	Direct supersession, no change required.
3935089	3972549	Direct supersession, no change required.
3936822	3972705	Direct supersession, no change required.
3283105	3973139	Direct supersession, no change required.
3906394	3973139	Direct supersession, no change required.

Table 2, Flywheel Part Number Changes		
Old Flywheel Assembly (I.D. 16)	New Flywheel Assembly (I.D. 16)	Part Number Change Details
3916634	3973139	Direct supersession, no change required.
3906807	3973495	Direct supersession, no change required.
3906809	3973497	*See condition below.
3913117	3973497	*See condition below.
3914106	3973497	*See condition below.
3282171	3973497	*See condition below.
3957903	3973497	*See condition below.
3963920	3973497	*See condition below.
3902569	3973499	Direct supersession, no change required.
3921238	3973499	Direct supersession, no change required.
3917039	3973501	Direct supersession, no change required.
3968882	3973501	Direct supersession, no change required.
3936423	3973506	*See condition below.
3285124	3973508	Direct supersession, no change required.
3287084	3973517	*See Condition Below.
3286952	3973519	Direct supersession, no change required.
3905898	3973522	Direct supersession, no change required.
3936238	3973525	Direct supersession, no change required.
3928778	3974138	Direct supersession, no change required.
3285082	3974140	Direct supersession, no change required.
3968881	3974142	Direct supersession, no change required.
3922645	3974147	*See Condition Below.
3921250	3974147	Direct supersession, no change required.

Table 2, Flywheel Part Number Changes		
Old Flywheel Assembly (I.D. 16)	New Flywheel Assembly (I.D. 16)	Part Number Change Details
3287531	3974235	*See Condition Below.
3287509	3974411	Direct supersession, no change required.
3287524	3974411	Direct supersession, no change required.
3935426	3974413	*See Condition Below.
3913274	3974415	Direct supersession, no change required.
3906800	3974417	Direct supersession, no change required.
3916161	3974419	Direct supersession, no change required.
3283047	3974421	Direct supersession, no change required.
3287511	3974423	Direct supersession, no change required.
3673363	3974431	Direct supersession, no change required.
3918557	3974433	Direct supersession, no change required.
3908576	3974437	*See Condition Below.
3918889	3974438	*See Condition Below.
3920876	3974438	Direct supersession, no change required.
3907558	3974452	*See Condition Below.
3282366	3974460	*See Condition Below.
3355692	3974464	Direct supersession, no change required.
3283685	3974466	Direct supersession, no change required.
3918623	3979005	Direct supersession, no change required.
3918624	3979006	*See Condition Below.
3286892	3979011	Direct supersession, no change required.
3286953	3979017	Direct supersession, no change required.

Table 2, Flywheel Part Number Changes		
Old Flywheel Assembly (I.D. 16)	New Flywheel Assembly (I.D. 16)	Part Number Change Details
3286932	3979019	Direct supersession, no change required.
3929836	4063399	*See Condition Below.
3922016	4929447	Direct supersession, no change required.
3284356	4929617	*See Condition Below.
3905852	4932154	Direct supersession, no change required.
3912913	4932330	*See Condition Below.
3936821	4933355	Direct supersession, no change required.
3287008	4933356	Direct supersession, no change required.
3287142	4933357	Direct supersession, no change required.
3905927	4933359	Direct supersession, no change required.
3936329	4933365	Direct supersession, no change required.
3902217	4933366	Direct supersession, no change required.
3910684	4933366	Direct supersession, no change required.
3905587	4933367	Direct supersession, no change required.
3928776	4933369	Direct supersession, no change required.
3915565	4933370	Direct supersession, no change required.
3285252	4933372	Direct supersession, no change required.
3921263	4933458	Direct supersession, no change required.
3908575	4933459	Direct supersession, no change required.
3999937	4933464	Direct supersession, no change required.

Table 2, Flywheel Part Number Changes		
Old Flywheel Assembly (I.D. 16)	New Flywheel Assembly (I.D. 16)	Part Number Change Details
3287513	4933464	Direct supersession, no change required.
3910371	4933469	Direct supersession, no change required.
3910541	4933472	*See Condition Below.
3911425	4933476	Direct supersession, no change required.
3943681	4933487	Direct supersession, no change required.
3943729	4933488	Direct supersession, no change required.
3909908	4933490	Direct supersession, no change required.
*Condition: If a new flywheel is used with an old flywheel housing (Flywheel Housing Part Numbers: 3924581, 3906689, 3927780, 3352392, 3926207, 3281473, 3908548, 3911604, 3354392, or 3356305), the spacer (Part Number 3967057) must be used. Note : If the engine is equipped with an old flywheel housing (Flywheel Housing, Part Numbers 3928490 and 3928491, the new flywheel will not be compatible with the old flywheel housing. The flywheel housing must be replaced to the new style flywheel housing. See Table 1 for details.		