



Service Tool Instruction

Service Tool Instruction
Number: 3377634

Revision Level:

Released Date: 01-feb-
2008

Description

AVSEAL® Removal and Installation Kit

Purpose

This document provides information for AVSEAL® Removal and Installation Kit, Part Number 3823154. The kit is used to install and remove the AVSEAL® II blind sealing plugs in the K38, K50, QSK38, QSK45, QSK50, QSK60, and QSK78 cylinder blocks and associated engine accessories.

For additional information, refer to Procedure 001-026 (Cylinder Block) in Section 1 of the K38, K50, QSK38, QSK50 Service Manual, Bulletin 4021528. (/qs3/pubsys2/xml/en/procedures/28/28-001-026-tr.html)

For additional information, refer to Procedure 001-026 (Cylinder Block) in Section 1 of the QSK45 and QSK60 Service Manual, Bulletin 4021530. (/qs3/pubsys2/xml/en/procedures/56/56-001-026.html)

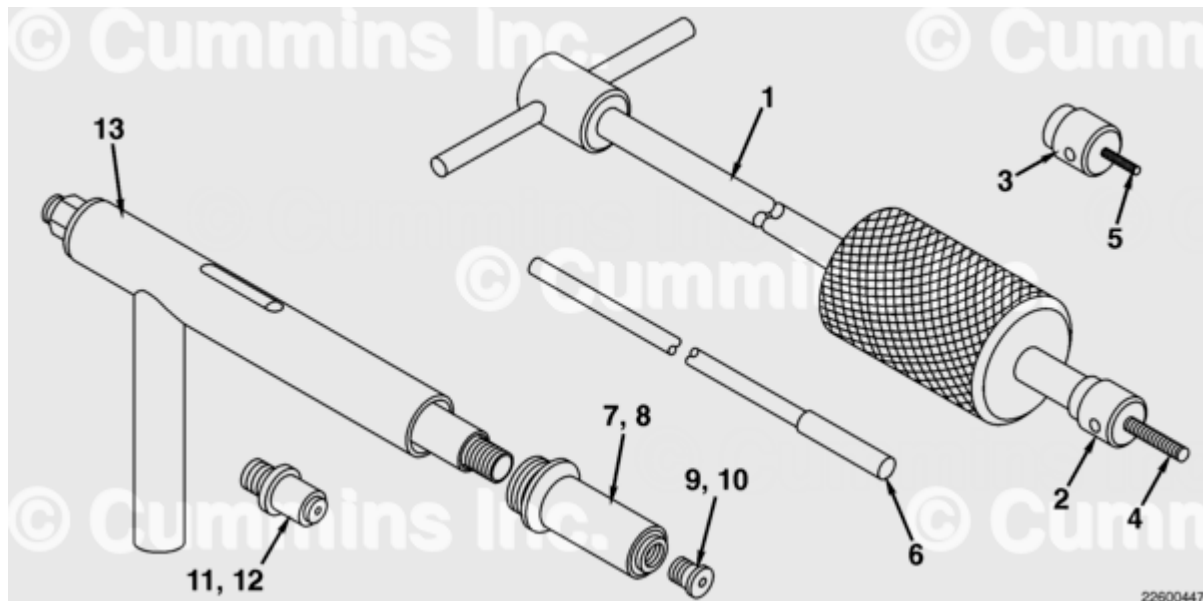


Table 1, AVSEAL® Removal and Installation Kit, Part Number 3823154

Item Number	Part Number	Description	Quantity
1	4919011	Remover slide hammer kit	1

Table 1, AVSEAL® Removal and Installation Kit, Part Number 3823154			
Item Number	Part Number	Description	Quantity
2	4919008	Remover screw (#14 screw)	1
3	4919007	Remover screw (#10 screw)	1
4	3823162	Self tapping metal screw (#14 x 1.000 inch long)	5
5	3823163	Self tapping metal screw (#10 x .750 inch long)	5
6	3823164	Magnet	1
7	4918971	Installer adapter (10 mm)	1
8	4918972	Installer adapter (6 mm)	1
9	4918973	Installer guide (6 mm)	1
10	4918974	Installer guide (7 mm)	1
11	4918975	Installer guide (8 mm)	1
12	4918976	Installer guide (10 mm)	1
13	4919010	Seal installer	1


AVSEAL® II Blind Sealing Plug Removal

6 and 7 mm

- Install the remover screw (3) on the remover slide hammer kit (1).

8 and 10 mm

- Install the remover screw (2) on the remover slide hammer kit (1).

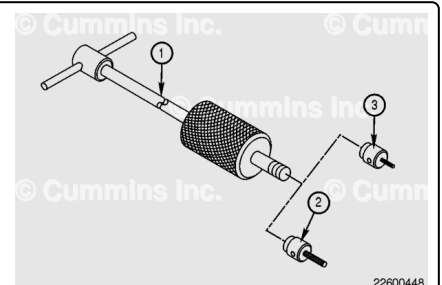

AVSEAL® II Blind Sealing Plug Installation

6 mm

- Assemble the installer guide 6 mm (9) to the installer adapter 6 mm (8). Install the guide and adapter assembly onto the seal installer (13).

7 mm

- Assemble the installer guide 7 mm (10) to the installer adapter 6 mm (8). Install the guide and adapter assembly onto the seal installer (13).

8 mm

- Assemble the extended installer guide 8 mm (11) to the installer adapter 10 mm (7). Install the guide and adapter assembly onto the seal installer (13).

10 mm

- Assemble the extended installer guide 10 mm (12) to the installer adapter 10 mm (7). Install the guide and adapter assembly onto the seal installer (13).

