



Service Tool Instruction

Service Tool Instruction
Number: 3377908

Revision Level:

Released Date: 01-may-
2001


Description

Valve Stem Seal Depth Gauge

Purpose

The cylinder head valve stem seal depth gauge, Part Number 3164462, is used to set the required clearance when installing the valve stem seal for the QSK19, QSK45, and QSK60. This gauge is used with the valve seal installer to set the clearance, which allows the seal to function properly.

©Cummins Inc

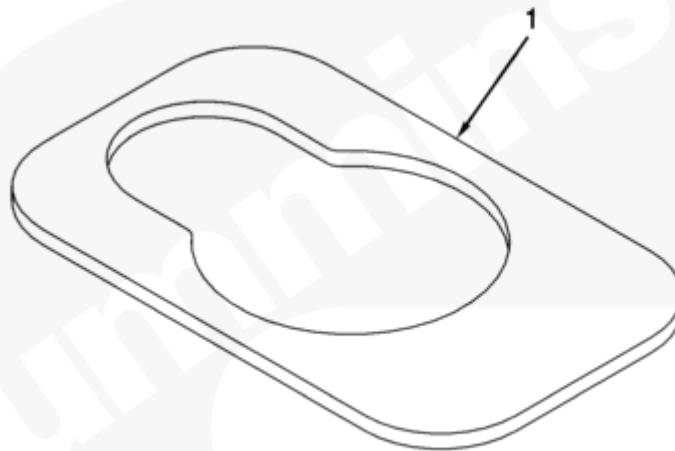

22400109


Table 1, Valve Stem Seal Depth Gauge, Part Number 3164462

Item Number	Part Number	Description	Quantity
1	3164462	Valve stem seal depth gauge	1

⚠ CAUTION ⚠

To avoid the valve seal fitting loosely on the valve guide, do not lubricate the valve seal. The seal must be installed dry.

Place the valve stem seal depth gauge over the valve guide and move the smaller slot of the gauge into the valve guide groove area over the shoulder.

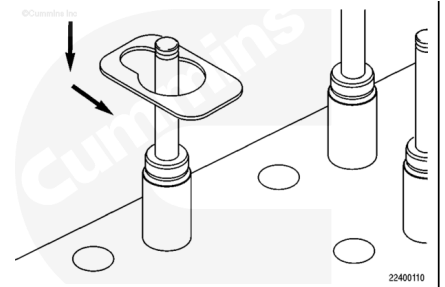

Install the valve stem seal on the valve guide until it is positioned against the valve stem seal depth gauge.

Slide the valve stem seal depth gauge to the large end of the slot and remove the gauge, passing over the valve stem seal outside diameter.

