



Service Tool Instruction

Service Tool Instruction
Number: 3377944

Revision Level:

Released Date: 02-apr-
2003


Description

Valve Head Thickness Gauge

Purpose

This document provides information for using valve head thickness gauge, Part Number 3164984. The gauge is used to determine if the QSK19, QSK45, and QSK60 intake and exhaust valve can be reused after reconditioning.

©Cummins Inc

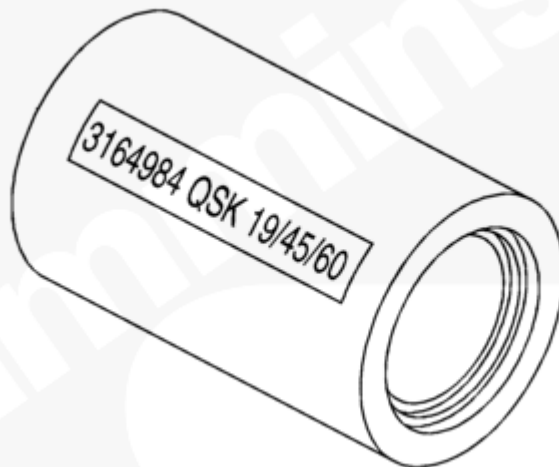

22600216

Table 1, Valve Head Thickness Gauge, Part Number 3164984

Item Number	Part Number	Description	Quantity
1	3164984	Valve head thickness gauge	1

The intake and exhaust valve face and seating surfaces **must** be cleaned and free of carbon deposits before the inspection is performed. Use Scotch-Brite 7448, Part Number 3823258, or equivalent, to clean the valve.

The valve head thickness gauge, Part Number 3164984, is used to check the intake and exhaust valve head thickness.

Place the valve into the valve head thickness gauge.

Measure the valve height. If the valve is flush or above the gauging surface, the valve can be reused. If the valve is below the gauging surface, the valve can **not** be reused.

