



Service Tool Instruction

**Service Tool Instruction
Number: 3400304-1**

Revision Level:

**Released Date: 17-feb-
2010**

Description

Main Bearing Cap Remover

Purpose

This document provides information for main bearing cap remover, Part Number 4919744. The remover is used to remove the main bearing caps in the K38, K50, QSK45, QSK60, and QSK78 engines. For additional information, reference the following procedures.

- Use the following procedure in the QSK45 and QSK60 Service Manual, Bulletin 4021530. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/56/56-001-006-tr.html>)
- Use the following procedure in the QSK45G and QSK60G Industrial Troubleshooting and Repair Manual, Bulletin 4021383. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/84/84-001-006-tr.html>)
- Use the following procedure in the QSK60G Generator CM700 Troubleshooting and Repair Manual, Bulletin 4021396. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/84/84-001-006-tr.html>)
- Use the following procedure in the K38, K50, QSK38, and QSK50 Service Manual, Bulletin 4021528. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/28/28-001-006-tr.html>)
- Use the following procedure in the KTA38GC CM558 Service Manual, Bulletin 4021642. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/28/28-001-006-tr-gc.html>)
- Use the following procedure in the QSK78 Troubleshooting and Repair Manual, Bulletin 3666727. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/50/50-001-006.html>)

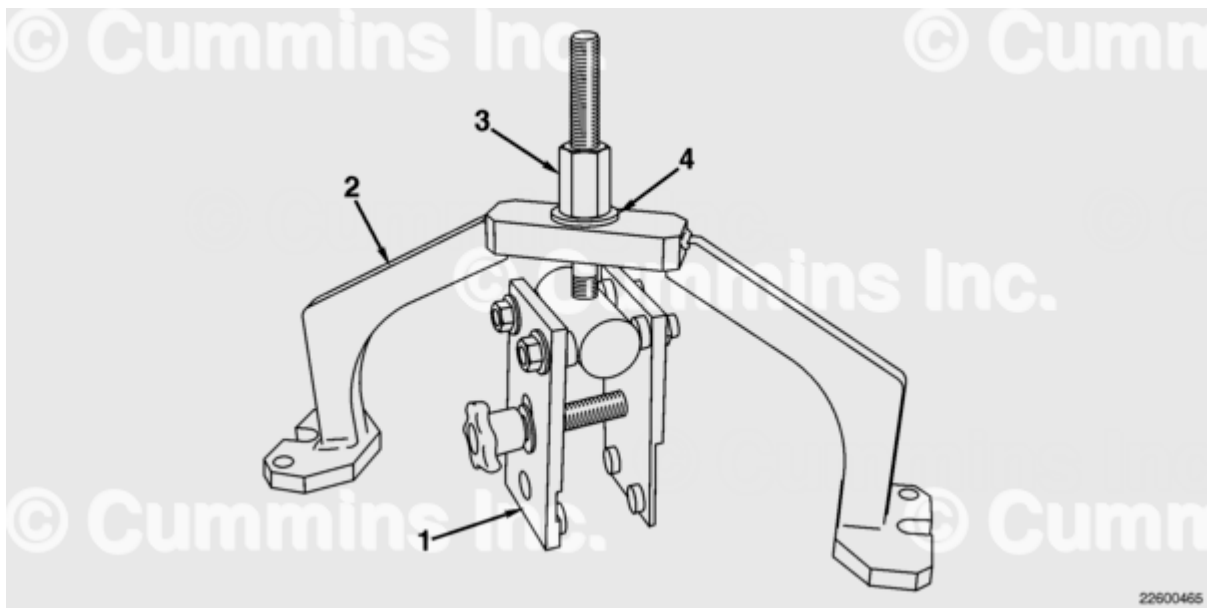


Table 1, Main Bearing Cap Remover, Part Number 4919744

Item Number	Part Number	Description	Quantity
1	4919749	Main bearing cap remover	1
2	4919466	Remover fixture	1
3	4919468	Coupling nut	1
4	4919469	Thrust washer	1

Last Modified: 05-Jan-2011