



Technical Service Bulletin: TSB130149

Released Date: 22-Oct-2013

Next Generation CENSE™ CM2330 - INSITE™ Electronic Service Tool, Image/Trend Log Collection Instructions

Next Generation CENSE™ CM2330 - INSITE™ Electronic Service Tool, Image/Trend Log Collection Instructions

Warranty Statement

The information in this document has no effect on present warranty coverage or repair practices, nor does it authorize TRP or Campaign actions.


Contents

The Next Generation CENSE™ CM2330 module is a diagnostic module and will interface with different engine control modules, depending on the specific application. The process for connecting to the Next Generation CENSE™ CM2330 module will **not** be the same as connecting to the CENSE™ CM530 module.

To connect to the Next Generation CENSE™ CM2330 module, follow these steps:

Step 1:

Connect INSITE™ electronic service tool. You will get a dropdown menu to choose between your main system (e.g. CM500 for HPI products or CM700 for certain gas engines) and the BEB system as illustrated below:

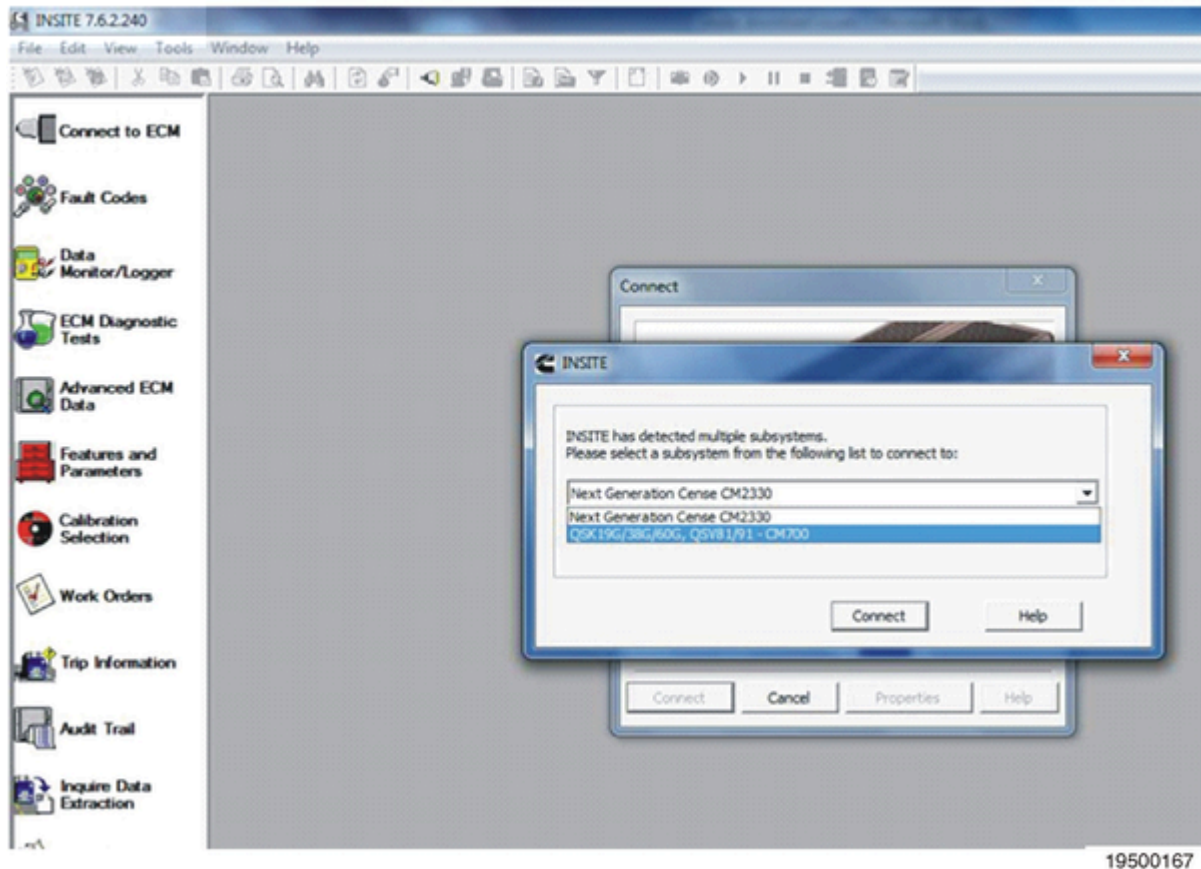


Step 2:

You can choose the system you would like to connect, as shown above. If you do **not** see a dropdown as described, restart INSITE™ electronic service tool and and the Powercycle INLINE™ adapter and thereafter when you try to connect INSITE™ electronic service tool, INSITE™ electronic service tool should give you a dropdown as expected.

To download engine control module (ECM) images and AEM data from the Next Generation CENSE™ CM2330 module:

Step 1:

Connect INSITE™ electronic service tool and create a work order, as shown below, with all the possible details. INSITE™ electronic service tool has the ability to create two images, initial and final.

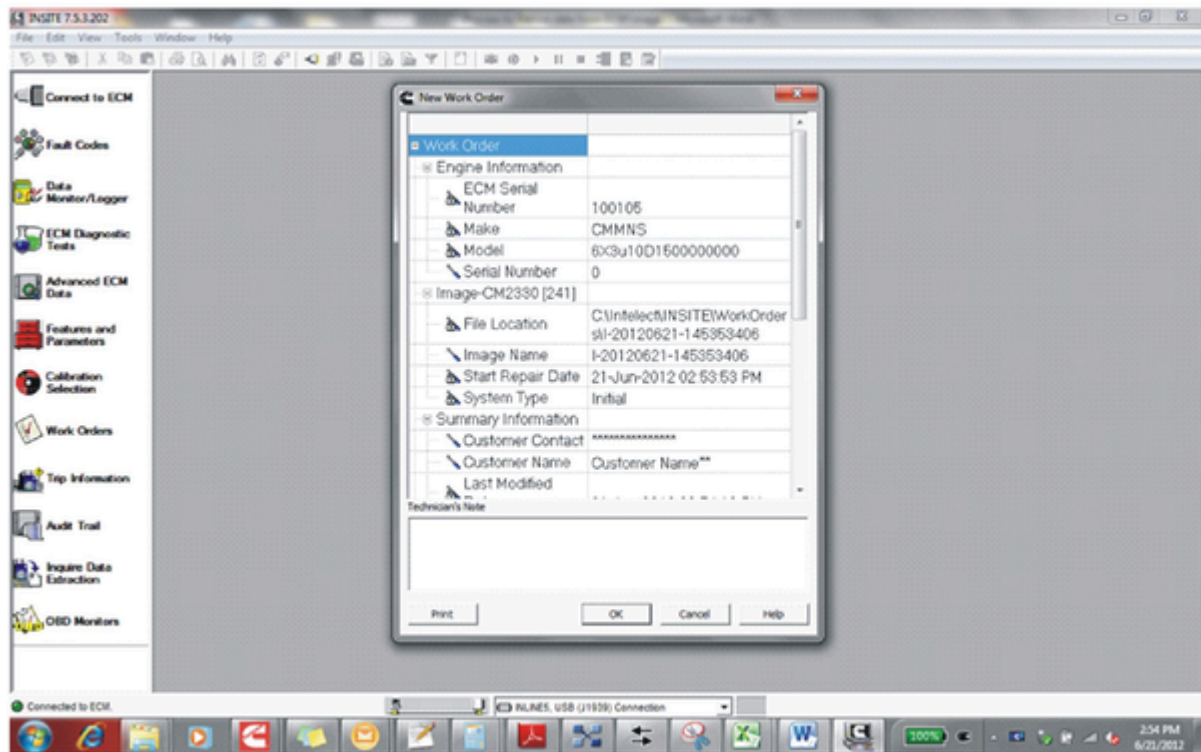

19500168

Note : When you initialize a work order, it creates an initial image and prompts you to save a final image when exiting INSITE™ electronic service tool.

Step 2:

Click on “Advanced ECM Data” and collect the AEM logs as soon as they are displayed by clicking the “Get Log” and “Save” buttons in each specific log screen, as illustrated below.

Note : These logs will not be saved when you exit INSITE™ electronic service tool and can not be retrieved via ECM image either.

Next Generation Cense CM2330

AEM Trend Log

The AEM Trend Log Feature allows access to the log for viewing, saving and resetting. A large amount of PC memory is required to retrieve the log and may cause a crash.

Parameters	Units	Value
Sample Rate	HH:MM:SS	00:00:00
Engine Speed Condition	RPM	1000
Engine Load Condition	Percent	0.00

Event	Real Time	Engine Time	Engine Oil Temperature	Engine Speed	Engine Oil Pressure Sensor Signal Voltage	Engine Oil Temperature Sensor Signal Voltage
		Units	F	RPM	V	V
1	21-Jun-2012 14:58:36	123:31:57	115.4	1125	0.00	1
2	21-Jun-2012 14:58:36	123:31:58	115.4	1125	0.00	1
3	21-Jun-2012 14:58:36	123:31:58	115.4	1125	0.00	1
4	21-Jun-2012 14:58:35	123:31:56	115.4	1125	0.00	1
5	21-Jun-2012 14:58:35	123:31:57	115.4	1125	0.00	1
6	21-Jun-2012 14:58:35	123:31:57	115.4	1125	0.00	1
7	21-Jun-2012 14:58:35	123:31:57	115.4	1125	0.00	1
8	21-Jun-2012 14:58:34	123:31:55	115.4	1125	0.00	1
9	21-Jun-2012 14:58:34	123:31:56	115.4	1125	0.00	1
10	21-Jun-2012 14:58:34	123:31:56	115.4	1125	0.00	1
11	21-Jun-2012 14:58:34	123:31:56	115.4	1125	0.00	1

Buttons: Help, Save, Reset, Get Log

Connected to ECM: NLN5, USB (1939) Connection, NLN5 S (1939) Firmware: 5.48

19500169

Screen image for the "Get Log" window.

Next Generation Cense CM2330

AEM Trend Log

The AEM Trend Log Feature allows access to the log for viewing, saving and resetting. A large amount of PC memory is required to retrieve the log and may cause a crash.

Parameters	Units	Value
Sample Rate	HH:MM:SS	00:00:00
Engine Speed Condition	RPM	1000
Engine Load Condition	Percent	0.00

Event	Real Time	Engine Time	Engine Oil Temperature	Engine Speed	Engine Oil Pressure Sensor Signal Voltage	Engine Oil Temperature Sensor Signal Voltage
		Units	F	RPM	V	V
10	21-Jun-2012 14:58:34	123:31:56	115.4	1125	0.00	1
11	21-Jun-2012 14:58:34	123:31:56	115.4	1125	0.00	1

Buttons: Help, Save, Reset, Get Log

Connected to ECM: NLN5, USB (1939) Connection, NLN5 S (1939) Firmware: 5.48

Save As

Save in: Logs

Name	Date modified	Type
Enhanced Fault Snapshot Log-20120618-165...	6/18/2012 4:50 PM	Micros...
Enhanced Fault Snapshot Log-20120619-085...	6/19/2012 8:56 AM	Micros...
Enhanced Fault Snapshot Log-20120619-085...	6/19/2012 8:56 AM	Micros...
TL-20120615-160346	6/15/2012 4:03 PM	Micros...
TL-20120615-161116	6/15/2012 4:11 PM	Micros...
TL-20120615-161349	6/15/2012 4:13 PM	Micros...
TL-20120615-164022	6/15/2012 4:41 PM	Micros...
TL-20120618-140445	6/18/2012 2:04 PM	Micros...
TL-20120618-141259	6/18/2012 2:13 PM	Micros...
TL-20120618-141922	6/18/2012 2:19 PM	Micros...
TL-20120618-143005	6/18/2012 2:30 PM	Micros...
TL-20120618-144038	6/18/2012 2:40 PM	Micros...
TL-20120621-140315	6/21/2012 2:03 PM	Micros...


File name: TL-20120618-140315

Save as type: CSV Files (*.csv)

Buttons: Save, Cancel

19500170

Screen image for the “Save” window.

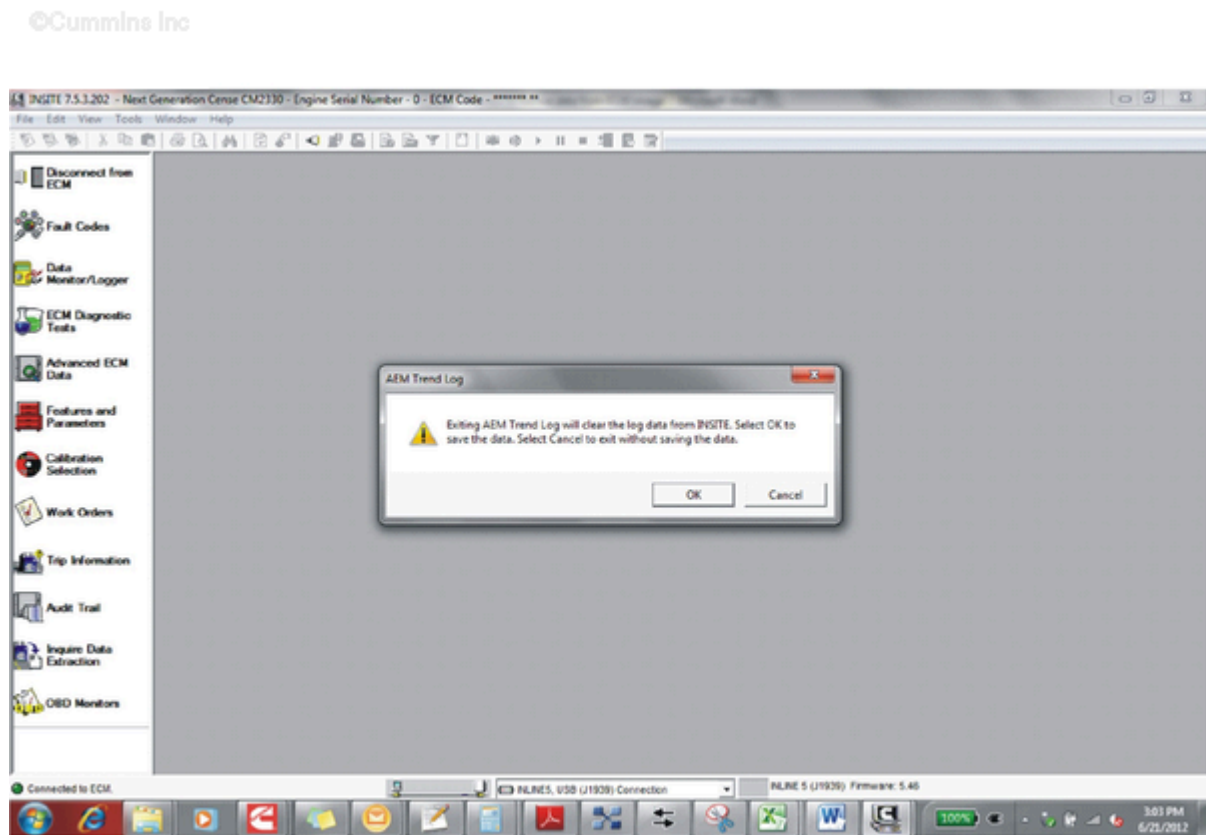

Step 3:

After you have collected the ECM image and all four logs from the Advanced ECM Data section in INSITE™ electronic service tool, you can “Disconnect from ECM” and take a final ECM image, if required.

Document History

Date	Details
2013-10-7	Module Created

Last Modified: 22-Oct-2013
