



Installation Instruction

Installation Instruction Number: 5659983

Released Date: 01-dec-2020

High Horse Power Fuel Injector Clamp

High Horse Power Fuel Injector Clamp

General Information

To inspect for interference between fuel injector hold down clamp chamfer and injector hold down bolt.

Product Affected

- QSK19 CM850
- QSK19 CM2150
- QSK19 CM2350 K105
- QSK19 CM2350 K114
- QSK23 CM2350 K127
- QSK38 CM850
- QSK38 CM2150
- QSK38 CM2150 K106
- QSK38 CM2350 K125
- QSK38 CM2350 K138M
- QSK50 CM850
- QSK50 CM2150
- QSK50 CM2150 K107
- QSK50 CM2350 K108
- QSK50 CM2350 K130
- QSK50 CM2350 K146G
- QSK60 CM850
- QSK60 CM2150
- QSK60 CM2350 K116
- QSK60 CM2350 K117
- QSK60 CM2350 K121
- QSK60 CM2350 K135
- QSK60 CM2350 K136
- QSK60 CM2350 K149M
- QSK78 CM2350 K126
- QSK78 CM2350 K137

Locating Component

Locate the valve covers on the engine.

Recommended Cummins® Service Tools

- Protective plug, Part Number 4918767
- QD™ contact cleaner, Part Number 3824510, or equivalent
- Additional Service Items
- Heel bar
- Straightedge

Preparatory Steps

WARNING

Normal engine operation creates highly pressurized fuel in the fuel line which will remain in the fuel line after engine shutdown. Never open the fuel system when the engine is operating. Before servicing the fuel system, always loosen the pump-to-rail fuel line at the rail to vent the pressure. Keep hands clear of the line when loosening. High pressure fuel spray can penetrate the skin, resulting in serious personal injury or death.

1. Before removing any high pressure lines, make sure the pressure is relieved from the fuel system.
2. Cover the end plug with a lint-free cloth.
3. Slowly loosen the plug on the last injector of the high pressure fuel lines 1/4 to 1/2 turn. The plug does **not** need to be removed to relieve the pressure.
4. Connect INSITE™ electronic service tool.
5. Verify the fuel pressure has bled down by monitoring the fuel rail pressure.

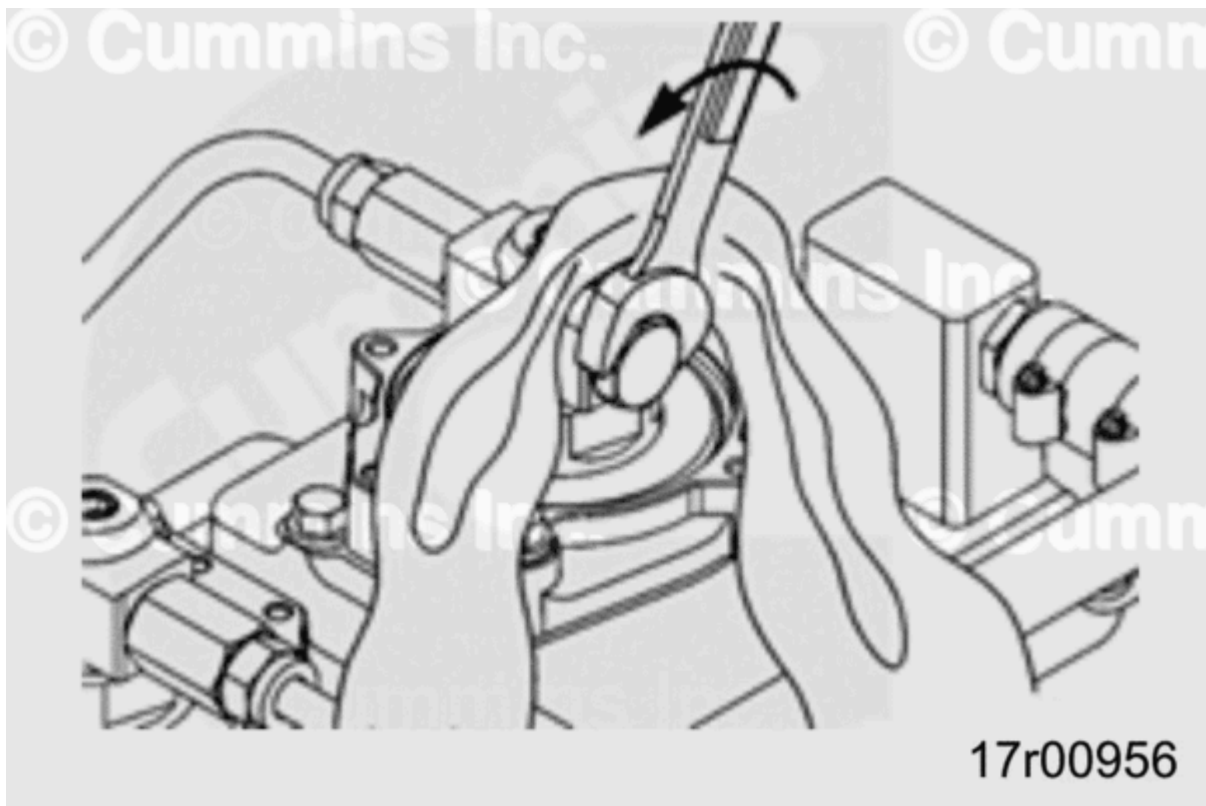


Figure 1, High Pressure Fuel Lines

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

⚠ WARNING ⚠

Depending on the circumstance, fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death, or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

- Disconnect the batteries. See equipment manufacturer service information.
- Remove the turbocharger, if applicable. Refer to Procedure 010-033 in Section 10 of the appropriate service manual.
- Remove the injector supply lines. Refer to Procedure 006-051 in Section 6 of the appropriate service manual.
- Install injector protective plugs, Part Number 4918767.
- Remove the rocker lever cover. Refer to Procedure 003-011 in Section 3 of the appropriate service manual.

Remove

Remove injector. Refer to Procedure 006-026 in Section 6 of the appropriate service manual.

Inspect

Inspect injector hold down clamp bolt chamfer for signs of interference with injector hold bolt. If signs of interference are found; refer to TSB190005 to correct the issue.

Associated Publications

- <https://quickserve.cummins.com/qs3/pubsys2/xml/en/tsb/2019/tsb190005.html?q=tsb190005>
(<https://quickserve.cummins.com/qs3/pubsys2/xml/en/tsb/2019/tsb190005.html?q=tsb190005>)

Document History

Date	Details
2020-12-1	Module Created
2023-2-14	Quick Fix application: replaced procrefs with general procedure reference for various manuals.

Last Modified: 14-Feb-2023
