



Service Tool Instruction

Service Tool Instruction
Number: 3400205-1

Revision Level:

Released Date: 19-aug-
2009

Description

INLINE™ 5 Data Link Adapter Kit

Purpose

This document provides information for the INLINE™ 5 Data Link Adapter Kit, Part Number 4918416, and the associated cables to connect a personal computer to the data link adapter. The INLINE™ 5 data link adapter is designed for use with the SAE J1708 and J1939 standard protocols. The INLINE™ 5 data link adapter is used with software applications such as INSITE™ electronic service tool 6.3 and later versions, to communicate with the B5.9G, B5.9LPG, B Gas Plus, B LPG Plus, ISB, ISB^e (4 and 6 cylinder), QSB3.9-30, QSB4.5-30, QSB5.9-30, QSB5.9 Marine, QSB5.9-44, C Gas Plus, ISC, QSC8.3, L10, L10 Gas, ISL, QSL9, L Gas Plus, M11, N14, Signature™, ISX, QSX15, ISM, ISM^e, QSM11, QSK19, QSK19G, QSK23, QST30, QSK45, QSK45G, QSK60, QSK60G, and QSK78 engines.

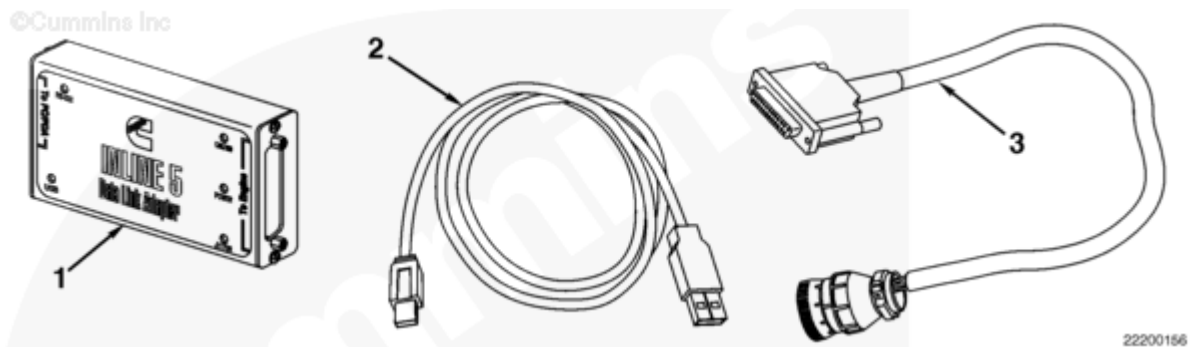


Table 1, INLINE™ 5 Data Link Adapter Kit, Part Number 4918416


Item Number	Part Number	Description	Quantity
1	3165033	INLINE™ 5 data link adapter	1
2	4918419	USB cable, (2 M [6.56 feet])	1
3	3165160	Data link cable (DB25F 6-Pin Deutsch™ connector)	1

Table 1, INLINE™ 5 Data Link Adapter Kit, Part Number 4918416			
Item Number	Part Number	Description	Quantity
3	3165159	Data link cable (DB25F 9-Pin Deutsch™ connector)	1
Not shown	3165143	Storage case	1
Not shown	4918417	INLINE™ 5 software compact disc	1
Not shown	4918418	DB9F-DB9M serial cable, (1.83 M [6 feet])	1
Not shown	4918436	INLINE™ 4 and 5 ruggedized protective boot	1

Table 2, Items Used with INLINE™ 5 Data Link Adapter Kit, Part Number 4918416, Purchased Separately			
Item Number	Part Number	Description	Quantity
3	4918857	Data link cable (DB25F 16-Pin OBD II connector)	1
Not shown	3165141	DB25F 2-Pin Weather-Pack™ and 3-Pin Deutsch™ with Cigarette Plug connector	1
Not shown	3824440	DB25F 8-Pin AMP™ connector	1
Not shown	3163096	J1939 backbone adapter	1
Not shown	3163597	J1939 gender change adapter	1
Not shown	3165017	Palm™ universal cable	1
Not shown	3162850	DB9F-DB9M serial cable	1
Not shown	4918591	USB cable, (5 M [16.4 feet])	1

Note : A fully populated USB cable, Part Number 4918419, or DB9F-DB9M, serial cable, Part Number 4918418, must be used.

Connect the DB9F-DB9M serial cable, Part Number 4918418, or USB cable, Part Number 4918419 to the RS-232 serial port or the USB port of the computer and to the INLINE™ 5 data link adapter, Part Number 3165033.

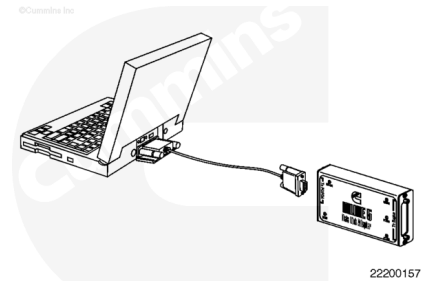


The INLINE™ 5 data link adapter requires +8-VDC to +50-VDC at 250mA that can be supplied through the OEM connector or by a separate power source.

Connect the appropriate data link cable to the INLINE™ 5 data link adapter, Part Number 3165033.

With the data link cable connected to the INLINE™ 5 data link adapter, connect the other end of the data link cable to the vehicle cab or engine compartment data link connector.

Launch the electronic service tool application software.

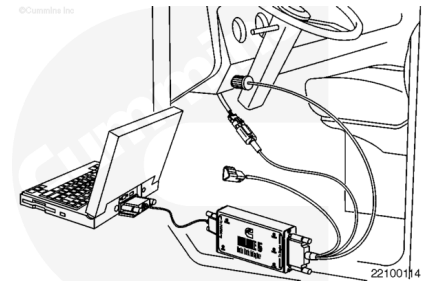

- Power Lamp

When the power lamp is continuously illuminated, DC power is being supplied to the adapter at the proper voltage level. The INLINE™ 5 data link adapter requires +8-VDC to +50-VDC at 250mA that can be supplied through the OEM connector or by a separate power source.

When the power lamp is flashing, improper DC power is being supplied to the adapter. A slow flashing power lamp indicates voltage is less than +8-VDC. A fast flashing power lamp indicates voltage is greater than +50-VDC.

If the power lamp is not illuminated, check for power at the vehicle connector and check for correct polarity.

- J1939 Lamp

A J1939 fast flashing lamp indicates the adapter is connected to a J1939 data link, the vehicle key switch is in the ON position, and communications are being received. A J1939 slow flashing lamp indicates the adapter is transmitting over a J1939 data link, but is not receiving any messages.

- J1708 Lamp

A J1708 fast flashing lamp indicates the adapter is connected to a J1708 data link, the vehicle key switch is in the ON position, and communications are being received. A J1708 slow flashing lamp indicates the adapter is transmitting over a J1708 data link, but is not receiving any messages.

- RS-232 Lamp

A RS-232 fast flashing lamp indicates the adapter is connected to a RS-232 port, the vehicle key switch is in the ON position, and communications are being received. A RS-232 slow

flashing lamp indicates the adapter is transmitting over a RS-232 port, but is not receiving any messages.

- **USB Lamp**

A USB fast flashing lamp indicates the adapter is connected to a USB port, the vehicle key switch is in the ON position, and communications are being received. A USB slow flashing lamp indicates the adapter is transmitting over a USB port, but is not receiving any messages.