Private deployment operation documentation

v2.2

2024-11-10

1. Introduction to private deployment

Refers to a cloud built for standalone use, providing the most effective control over data security and service quality. Private clouds can be deployed within the firewall of an enterprise data center, or they can be deployed in a secure hosting location. The core of a private cloud refers to a proprietary resource of an enterprise. A private cloud can be owned, managed, and operated by the organization, a third party, or both.

Deployment form: online privatization, intranet server.

Deployment content: database, application, middleware, etc.

Advantages: The core of private deployment is that it is more user-friendly than cloud solutions.

• More flexible functions, more mature management mode, support for enterprise customization

• Higher security, the system is deployed locally, and the data is more secure and controllable

• Strong scalability, enterprises can independently develop secondary

• Can achieve internal and external network isolation, LAN + external network office to play a comprehensive advantage

2. Configuration requirements

Recommended configuration:

CPU: 8 threads 2.7 GHz+

Memory: 64GB

Hard disk: 1TB SSD

OS: Ubuntu 22.04

Corresponding version:

Chassis: 2.10.3+

py: 1.3.38+

Baseline app: 370+

Tablet app: 1.5.8+

Factory tool: 1.0.48+

3. Server Address

Transmission Protocol	Encryption Protocol
apiglobal.autoxing.com	TCP
serviceglobal.autoxing.com	TCP
mobileappglobal.autoxing.com	TCP
mqttglobal.autoxing.com	TCP
mqttchassisglobal.autoxing.com	TCP
tunnelglobal.autoxing.com	TCP
8.8.8.8	UDP
ntp1.autoxing.com	UDP
ntp2.autoxing.com	

5.Private deployment operation process


Privatization box side

1. Plug the power cord into the power port of the privatization box.

2. Connect the router and the privatization box with an Ethernet cable and connect to the ETH0 interface.

3. Press the power button to turn on the machine.

4. Connect the PC to the ETH1 interface using an Ethernet cable and visit: http://192.168.9.1:9608/ to view the IP address of the privatization box

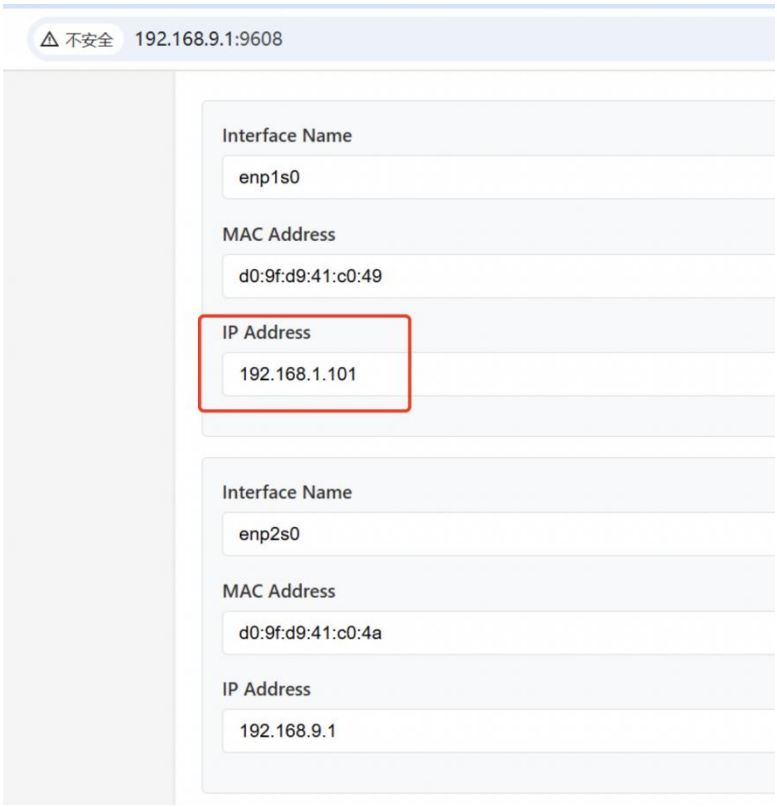

PC network connection

1. Connect to the local area network via Ethernet or WiFi

2. Configure hosts

Directory: C:\Windows\System32\drivers\etc

File: hosts

Modify hosts to:

192.168.1.101 servicelocal.autoxing.com

192.168.1.101 apilocal.autoxing.com

192.168.1.101 mobileapplocal.autoxing.com

192.168.1.101 mqttlocal.autoxing.com

*Note: The IP address must be replaced with the IP address obtained by visiting http://192.168.9.1:9608/

3. Browser certificate installation

Reference steps: Take Chrome as an example, Settings > Privacy and Security > Security > Manage Device Certificates > Import > Next, select ca.crt, Next, Certificate storage location: Trusted Root Certification Authorities > Follow the prompts > After completion, restart the browser to verify.

4. Visit https://servicelocal.autoxing.com/admin/; Account: admin Password: 0s^w9j3v

*Note: Currently, a maximum of 20 ordinary accounts are provided. To avoid leaking the password of an over-managed account, please contact the administrator to obtain it.

Robot side

1. Enter the factory detection tool

Enter the robot settings page, click "Developer Debug" at the bottom of the left menu bar; enter the password "*#*#9569".

2. Switch service access point

Select privatization and enter the correct access point. Default https://apilocal.autoxing.com

3. Privatization configuration

Enter the server IP in "Privatization Configuration IP"

*Note: The IP needs to be replaced with the IP obtained by visiting http://192.168.9.1:9608/

Click one-click privatization configuration and wait for the configuration to complete.



PAD side

Operation steps:

1. Enter the settings page

   Select "privatization" for APP connection mode

   Enter the server i ip

   Click Save

   Click the verification address, prompt: Verification service address passed

2. Return to the login page

   Select "offline connection"

   Select the machine to connect to

   Enter the machine setting details page

Service settings-cloud service access point: select privatization, enter the server ip, and click one-click privatization configuration

After 30 seconds, check the cloud service platform and the machine is online