

G-AlertTM

AG-N-2I0D-0A00

User Guide for Installation and Operation



TABLE OF CONTENT

1. BEFORE POWERING UP.....	3
1.1 SIM CARD.....	3
1.2 ANTENNA.....	3
1.3 INPUT TYPE.....	3
1.4 POWER SUPPLY.....	3
1.5 NETWORK TYPE.....	3
2. AFTER POWERING UP.....	3
2.1 LED STATUS.....	4
2.2 DEVICE CONFIGURATION (SMS).....	4
2.2.1 SET CONFIGURATION.....	4
2.2.2 GET CONFIGURATION.....	5
3. REFERENCE IMAGE.....	7
3.1 SET CONFIGURATION.....	7
3.1.1 SET ADMIN.....	7
3.1.2 ADD PHONE NUMBERS.....	7
3.1.3 SET ALERT MESSAGE.....	8
3.1.4 SET VOICE RECORD.....	8
3.1.5 SET ALERT TYPE.....	9
3.1.6 ENABLE ZONE.....	10
3.1.7 DISABLE ZONE.....	10
3.1.8 ACTIVE DEVICE.....	11
3.1.9 DEACTIVE DEVICE.....	11
3.1.10 ALERT MODE (SMS/CALL).....	12
3.2 GET CONFIGURATION.....	12
3.2.1 GET PHONE NUMBER.....	12
3.2.2 GET ALERT MESSAGE.....	13
3.2.3 GET DEVICE STATUS.....	13
3.2.4 GET VERSION.....	14
3.3 RESET.....	14
3.3.1 MASTER RESET.....	14
3.3.2 DEVICE REBOOT.....	15
3.4 WIRING INSTALLIATION.....	15

1. BEFORE POWERING UP

1.1 SIM CARD

- Allow micro type normal SIM card
- Remove the top cover and then insert/eject SIM card



1.2 ANTENNA

- 2dbi along with device
- 3dbi, 6dbi, and 9dbi may be required according to location or signal strength(optional)

1.3 INPUT TYPE

- Potential free input
- NC Common relay output
- Dry Connect

1.4 POWER SUPPLY

- 12 Vdc or 24 Vdc-2Amps

1.5 NETWORK TYPE

- 2G network platform (4G SIM will support for this device except JIO)



2. AFTER POWERING UP

2.1 LED STATUS


S. No	COLOUR	STATUS	DESCRIPTION
Status LED			
1	Blue	Blink	Initialization
2	Green	Stable	System on/Activate
3	Red	Stable	Deactivate
4	Red & Green	Blink	Alert Status
5	Magenta	Fast Blinking Slow Blinking	Voice Recording Voice playback
6	White	Stable	Device Disable
Network LED			
7	Green	Fast Blinking Slow Blinking	Searching Network Network Obtained

2.2 DEVICE CONFIGURATION (SMS)

2.2.1 SET CONFIGURATION

1. Admin Registration

- SMS Command: **ADMIN**
- Success: Admin change SUCCESS
- Failed: No Response

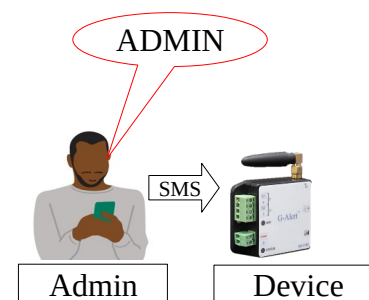

2. Set Phone Number

- SMS Command: **SPHO**<n><space><10-digit phone number>
- Success: p1: xxxxxxxxxxxxSUCCESS
- Failed: FAILED

3. Alert Message

- SMS Command: **SMSG**<n><space><Enter Message>
- Success: SUCCESS
- Failed: Failed

4. Alert Type

- SMS Command: **SALT**<space><O/C/S><O/C/S> [O-OPEN, C-CLOSE, S-OPEN AND CLOSE]
- Success: SUCCESS
- Failed: FAILED

5. Zones

- Active Zone
 - SMS Command: **SACTA**
 - Success: SUCCESS
 - Failed: FAILED
- Deactivate Zone

- SMS Command: **SDATA**
- Success: SUCCESS
- Failed: FAILED
- Enable Zone
 - SMS Command: **SENBA** or **SENB**<SPACE><1/2>
 - Success: SUCCESS
 - Failed: FAILED
- Disable Zone
 - SMS Command: **SDSBA** or **SDSB** <SPACE><1/2>
 - Success: SUCCESS
 - Failed: FAILED

Note: If you want to Activate or Deactivate the device, call the SIM number of the device from the admin number.

6. Reset

- Master Reset
 - SMS Command: **MRST**
 - Success: Master Reset
 - Failed: NA
- Device Reboot
 - SMS Command: **SRST**
 - Success: Device Reboot
 - Failed: NA

7. Alert Mode

- SMS Command: **SOCS**<Space><N/Y><N/Y>
- Success: SUCCESS
- Failed: NA

Note: [Y-Enable, N-Disable], <YY>call & sms enable, <NY>call disable & sms enable, <YN>call enable & sms disable, <NN>call & sms disable.

8. Voice Record

- SMS Command: **VREC** <space><1/2>
- Success: Call will receive
- Failed: NA

2.2.2 GET CONFIGURATION

1. Get User Phone Number
 - SMS Command: **SPHO**

- Success: PR:
p1-xxxxxxxxxx
p2-xxxxxxxxxx
 - Failed: NA
2. Get Alert Message
- SMS Command: **SMSG**
 - Success: MR:
M1-xxxxxxxxxx
M2-xxxxxxxxxx
 - Failed: NA
3. Get Device Status
- SMS Command: **GSTS**
Success: ST: Z1-(E/D)-{A/D}-{O/C/S}-{CLS/OPN},
Z2-(E/D)-{A/D}-{O/C/S}-{CLS/OPN},
SMS-{NIL/AVBL},
CALL-{NIL/AVBL}
 - Failed: NA


Note: Z1- Zone1; Z2 - Zone 2; E - Enable; D - Disable; A - Active; D: Deactive; O - Open; C - Close; S - Open and Close Condition; CLS - Close (current Condition) OPN - Open;

4. Get Version
- SMS Command: **GVER**
 - Success: MR: GV: NANO(2D) VER:2.0.5
IMEI:868325023490800
GSM: Oairtel, S18(1)
 - Failed: NA


3. REFERENCE IMAGE

3.1 SET CONFIGURATION


3.1.1 SET ADMIN

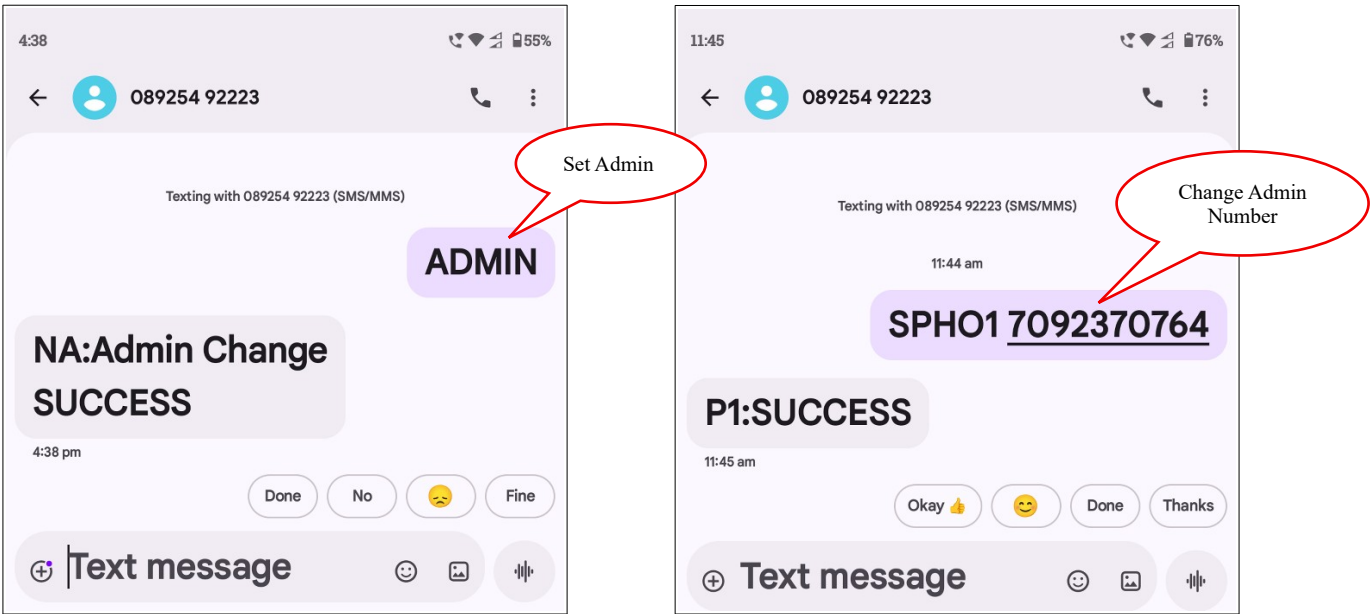

3.1.2 ADD PHONE NUMBERS

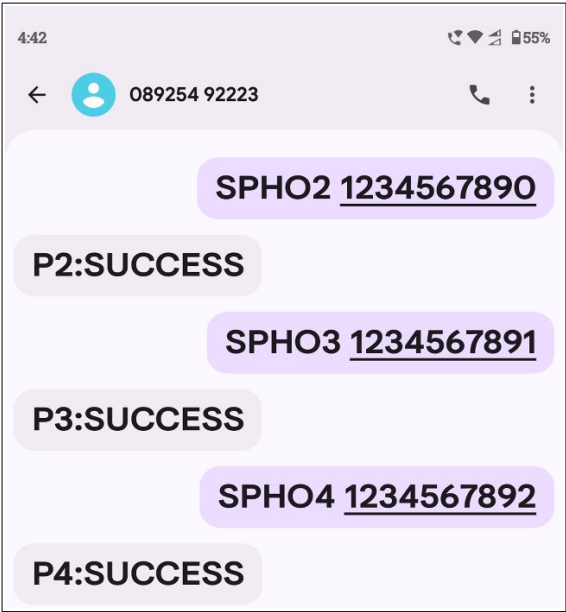


3.1.3 SET ALERT MESSAGE

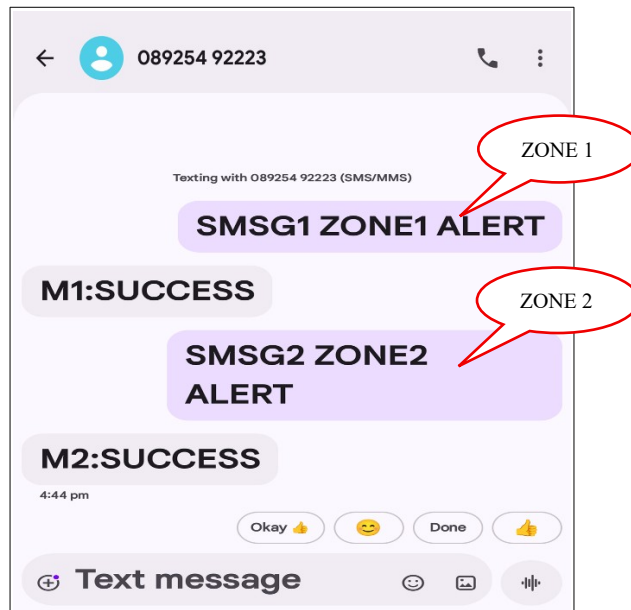




3.1.4 SET VOICE RECORD

- SMS Command: **VREC<space><1/2>**
- Success: Call will receive
- Failed: NA

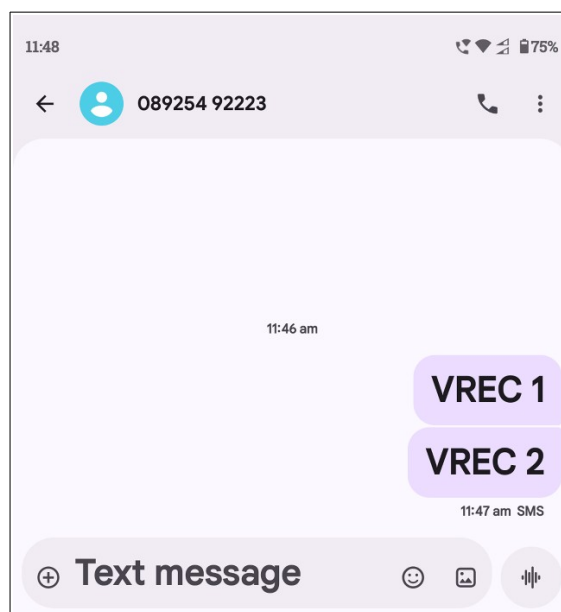


- ✓ You can record your message after attend the call.
- ✓ First 20 seconds you can record your message, Next 20 seconds its playback your message.


3.1.5 SET ALERT TYPE

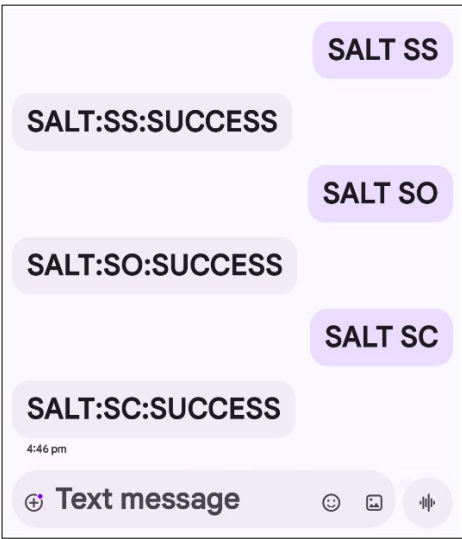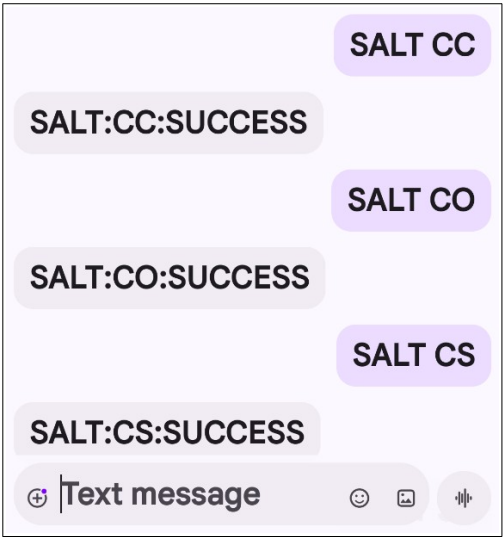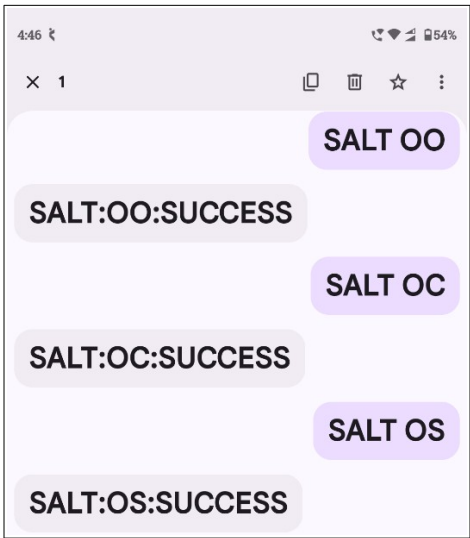


3.1.6 ENABLE ZONE

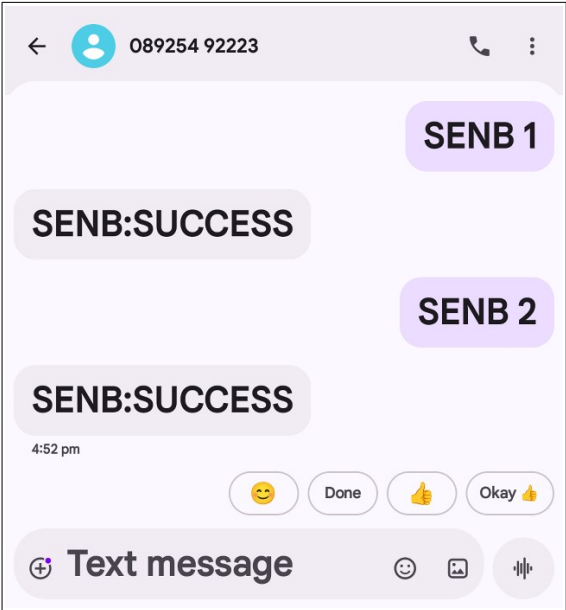


3.1.7 DISABLE ZONE

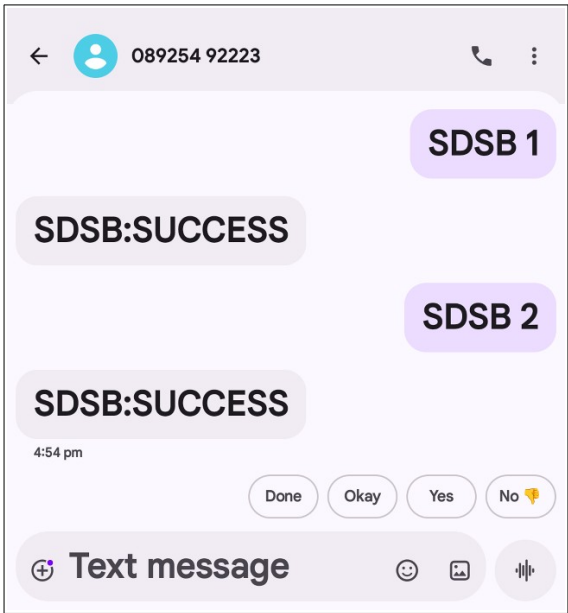



3.1.8 ACTIVE DEVICE

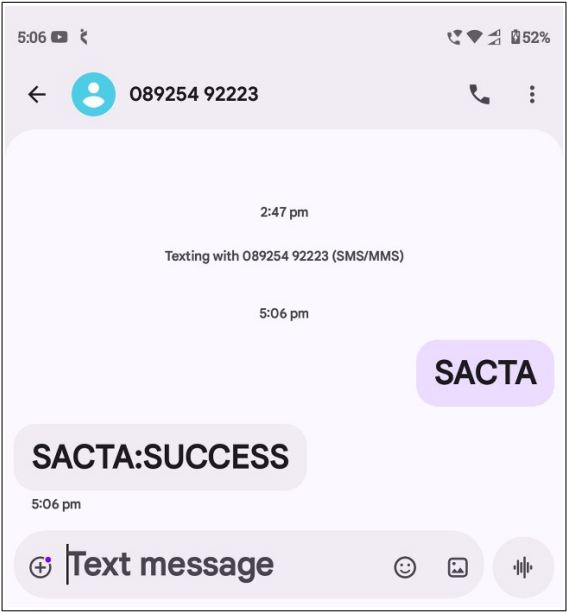

3.1.9 DEACTIVE DEVICE


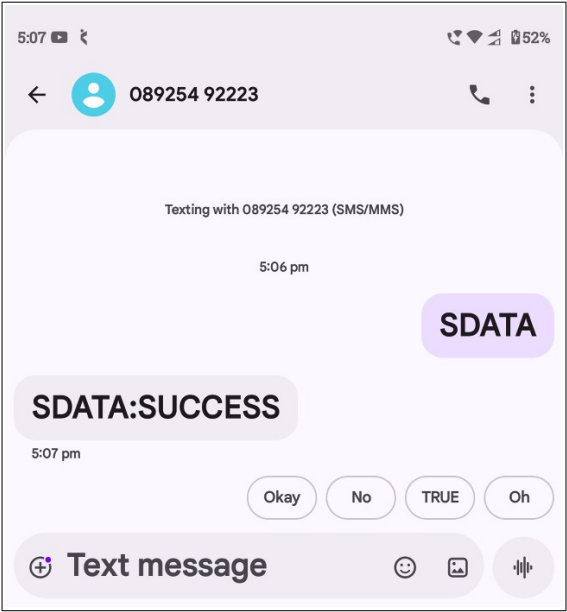


3.1.10 ALERT MODE (SMS/CALL)

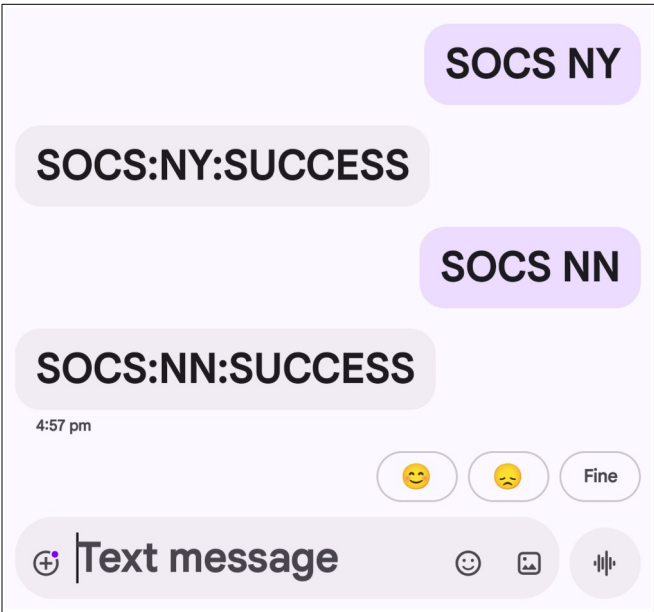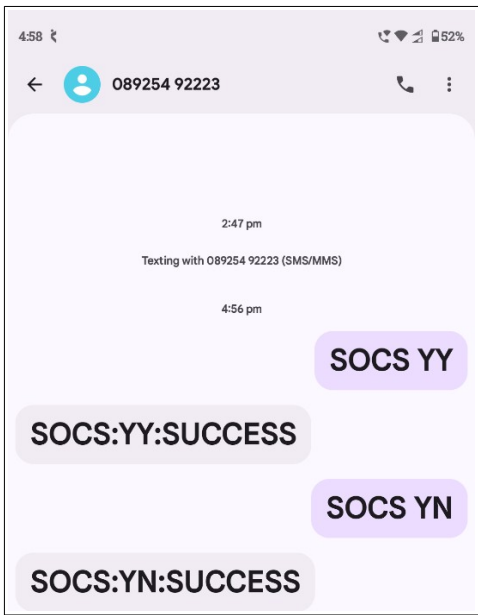


3.2 GET CONFIGURATION


3.2.1 GET PHONE NUMBER

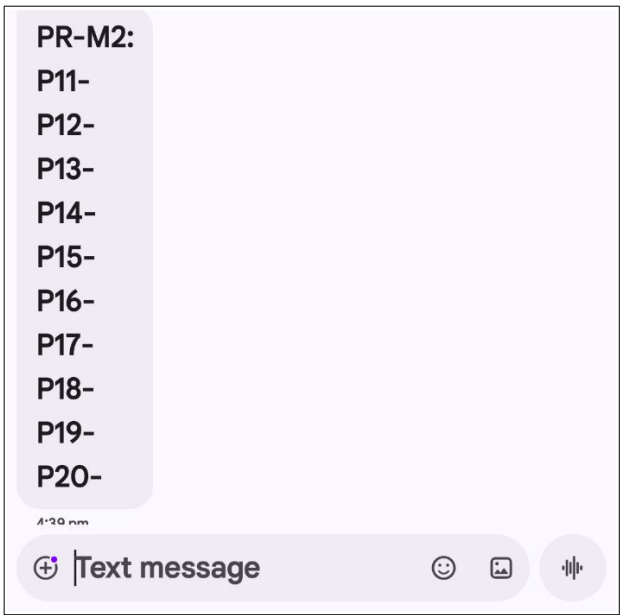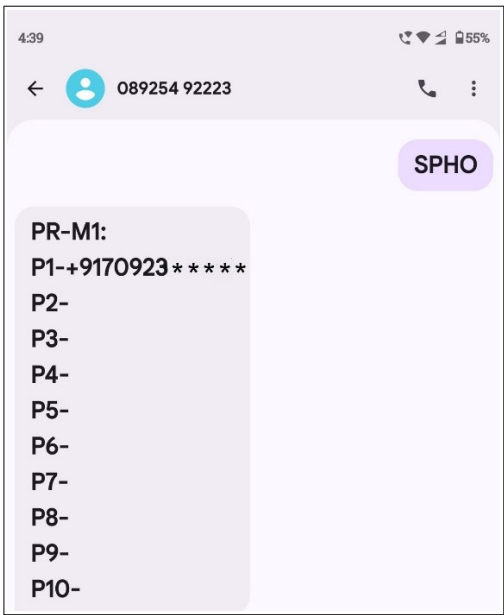


3.2.2 GET ALERT MESSAGE

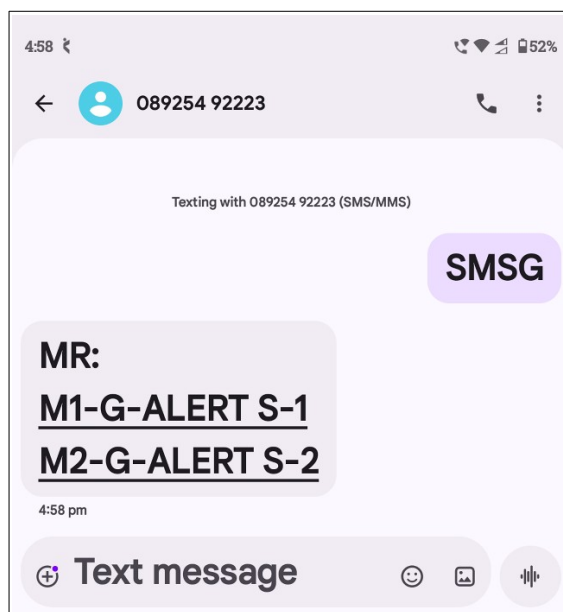

3.2.3 GET DEVICE STATUS

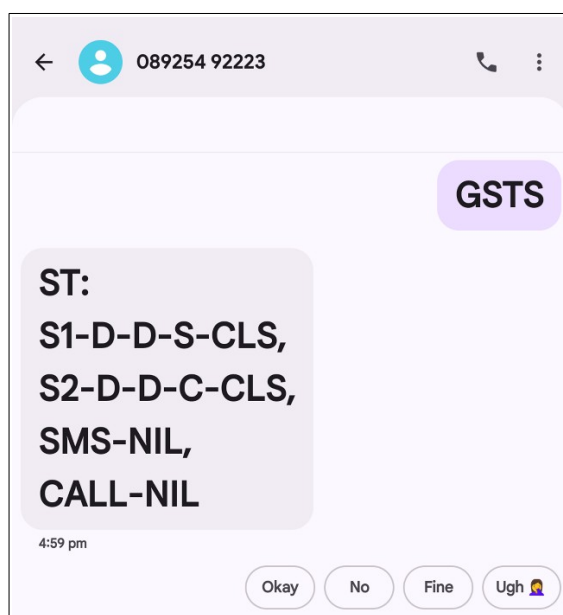


3.2.4 GET VERSION

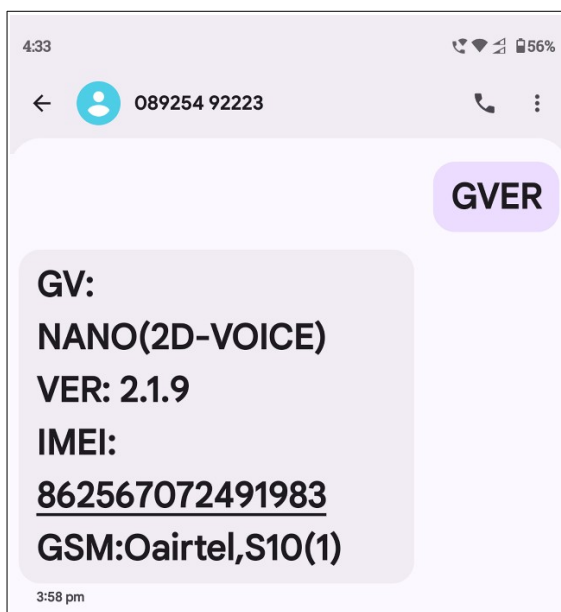


3.3 RESET


3.3.1 MASTER RESET

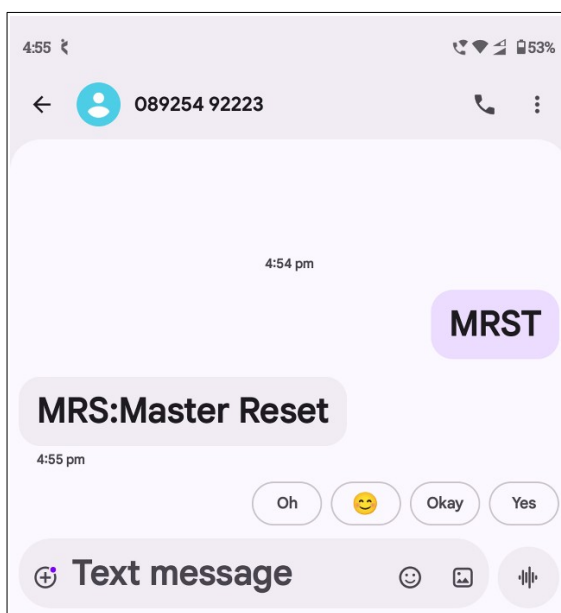

3.3.2 DEVICE REBOOT

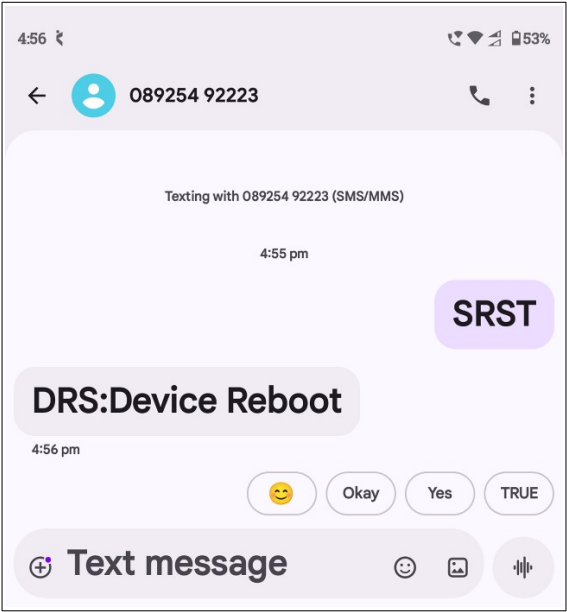

3.4 WIRING INSTALLIATION

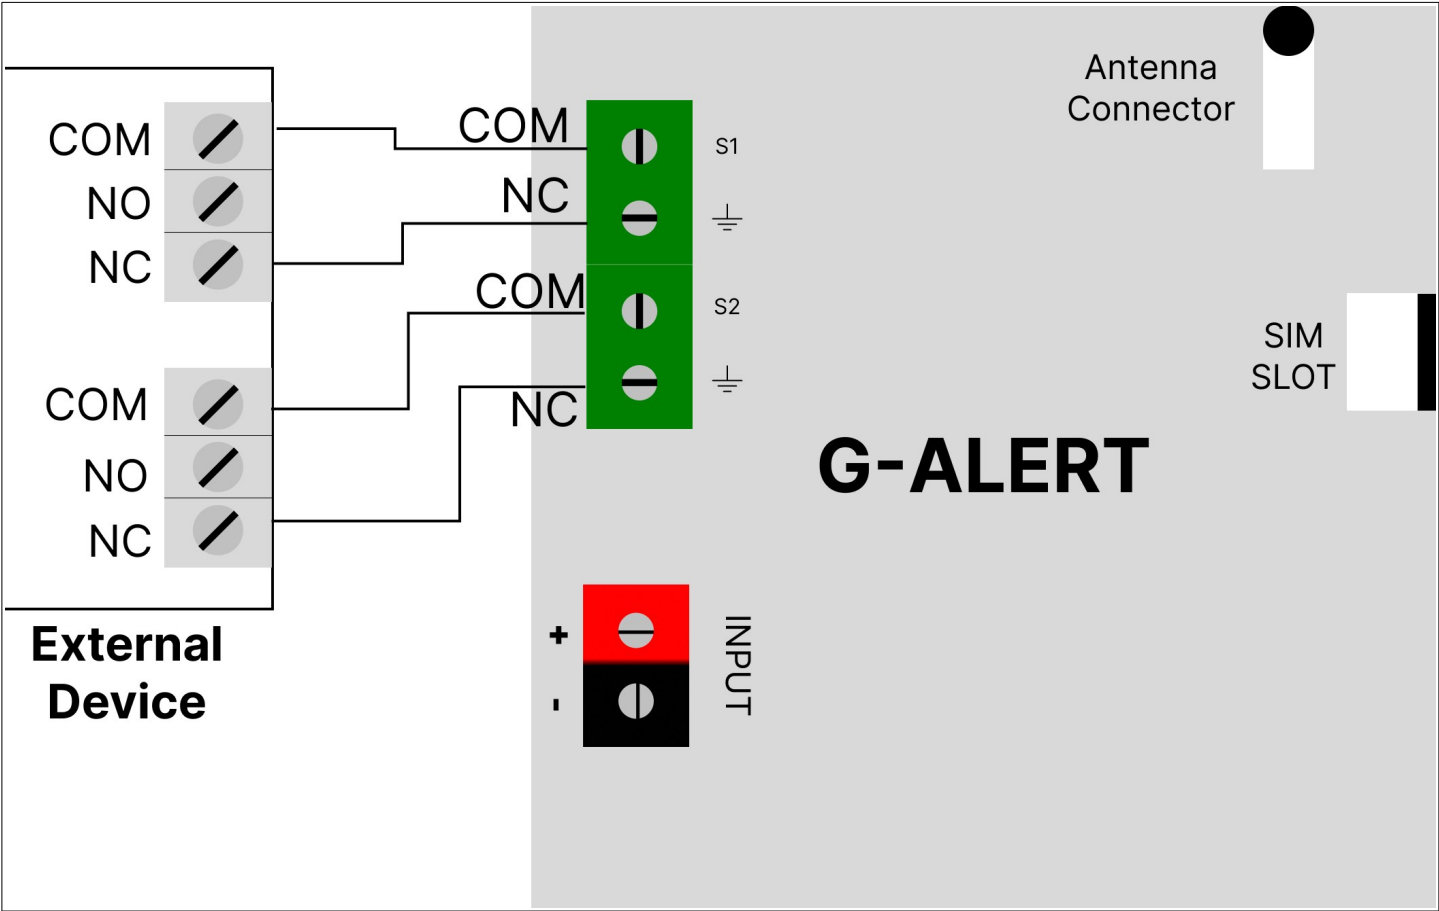

SiFe Engineering

Old No 6/2, New No 15, Flower Road, Arumbakkam,
Chennai-600106Tamil Nadu, India.

E-Mail info@sife.in, Mob: + 91 9003042821

Lan: +91 44 42660114