

G-AlertTM
AG-N-2I0D-0A00



User Manual

Table of Contents

- 1. Before Powering up 3
 - 1.1. SIM Card 3
 - 1.2. Antenna 3
 - 1.3. Input Type 3
 - 1.4. Power Supply 3
 - 1.5. Network Type 3
- 2. After Powering up 4
 - 2.1. LED Status 4
 - 2.2. Device Configuration (SMS) 4
 - 2.2.1. Set Configuration 4
 - 2.2.2. Get Configuration 7

.1. Before Powering up

.1..1. SIM Card

- Allow micro type normal SIM card
- Remove the top cover and then insert/eject SIM card



.1..2. Antenna

- 2dbi along with device
- 3dbi, 6dbi, and 9dbi may be required according to location or signal strength(optional)

.1..3. Input Type

- Potential free input
- NC Common relay output
- Dry connect

.1..4. Power Supply

12 Vdc or 24 Vdc-2Amps

.1..5. Network Type

2G network platform (4G SIM will support for this device)

2. After Powering up




2.1. LED Status

S No	Colour	Status	Description
Status LED			
1	Blue	Blink	Initialization
2	Green	Stable	System on/Activate
3	Red	Stable	Deactivate
4	Red & Green	Blink	Alert Status
5	Magenta	Fast Blinking Slow Blinking	Voice Recording Voice playback
6	White	Stable	Device Disable
Network LED			
7	Green	Fast Blinking Slow Blinking	Searching Network Network Obtained

2.2. Device Configuration (SMS)

2.2.1. Set Configuration

- 1. Admin Registration
 - SMS command:**ADMIN**
 - Success: admin change SUCCESS
 - Failed: No response

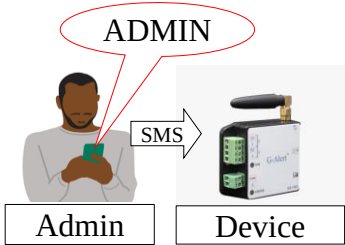

- 2. Set Phone Number

- SMS command: **SPHO**<n><space><10 digit phone number>
 - Success: p1: xxxxxxxxxxxxSUCCESS
 - Failed: FAILED
3. Alert Message
- SMS command: **SMSG**<n><space><Enter Message>
 - Success: Success
 - Failed: Failed
4. Alert Type
- SMS command: **SALT<SPACE><O/C/S><O/C/S>** [O-OPEN, C-CLOSE, S-OPEN AND CLOSE]
 - Success: SUCCESS
 - Failed: FAILED
5. Zones
- Activate Zone
 - SMS command: **SACTA**
 - Success: SUCCESS
 - Failed: FAILED
 - Deactivate Zone
 - SMS command: **SDATA**
 - Success: SUCCESS
 - Failed: FAILED
 - Enable Zone
 - SMS command: **SENBA** or **SENB<SPACE><1/2>**
 - Success: SUCCESS
 - Failed: FAILED
 - Disable Zone
 - SMS command: **SDSBA** or **SDSB<SPACE><1/2>**

Success: SUCCESS

Failed: FAILED

Note: If you want to Activate or Deactivate the device, call the SIM number of the device from the admin number.

6. Reset

- Factory Restore

SMS command: **SFRT**

Success: Factory Restore

Failed: NA

- Master Reset

SMS command: **MRST**

Success: Master Reset

Failed: NA

- Device Reboot

SMS command: **SRST**

Success: Device Reboot

Failed: NA

7. Alert Mode

- SMS command: **SOCS**<Space><**N/Y**><**N/Y**>
- Success: Success
- Failed: NA

Note: [Y-Enable, N-Disable],<YY>call & sms enable,<NY>call disable & sms enable, <YN>call enable & sms disable,<NN>call & sms disable.

8. Voice Record

- SMS command: **VREC <1/2>**
- Success: call will receive
- Failed: NA

.2..2.2. Get Configuration

1. Get User Phone Number

- SMS command: **SPHO**
- Success: PR:
p1-xxxxxxxxxxx
p2-xxxxxxxxxxx
- Failed: NA

2. Get Alert Message

- SMS command: **SMSG**
- Success: MR:
M1-xxxxxxxxxxx
M2-xxxxxxxxxxx
- Failed: NA
-

3. Get Device Status

- SMS command: **GSTS**
- Success: ST:
Z1-(E/D)-{A/D}-{O/C/S}-{CLS/OPN},
Z2-(E/D)-{A/D}-{O/C/S}-{CLS/OPN},

SMS- {NIL/AVBL},
CALL- {NIL/AVBL}

- Failed: NA

Note: Z1- Zone1; Z2 - Zone 2; E - Enable; D - Disable; A - Active; D: Deactive;
O - Open; C - Close; S - Open and Close Condition; CLS - Close (current
Condition) OPN - Open;

4. Get Version

- SMS command: **GVER**
- Success: GV:NANO(2D) VER:2.0.5
IMEI:868325023490800
GSM:Oairtel,S18(1)
- Failed: NA

SiFe Engineering

Old No 6/2, New No 15, Flower road, Arumbakkam,
Chennai-600106Tamil Nadu, India.

E-Mail info@sife.in, Mob: + 91 9003042821

Lan:+91 44 42660114