

Fragments

Micro Sampler / Sequencer

Fragments is a six-slot audio recorder and clocked fragment sequencer for the Music Thing Modular Workshop Computer.

Each slot holds up to 250 ms of stereo audio at 48 kHz. Samples can be captured from the audio inputs or imported with the included browser librarian.

A bank of 21 patterns sequences the slots, while shift, repeat division, reverse probability, playback mode, MIDI pitch, and random CV outputs provide variation.

The two audio channels remain independent when recording from the card, so they can be used as stereo or as two unrelated mono sources.

USB MIDI

Fragments appears as a USB MIDI device over USB-C.

Pitch + Speed

Notes above or below C4 change the playback speed/pitch of all slots together.

Pitch Bend +/- 12 semitones

Knob Control

CC 16 - Main

CC 17 - X

CC 18 - Y

Controls

Main	X	Y	Z
Sample Slot Select (1-6)	Slot Play Mode Loop 1-Shot Interrupt Passthrough	Reverse Probability	Up
Pattern Select	Pattern Shift	Step Repeat	Middle
-	-	-	Down Hold for 2s (LED flash) + once more to clear samples, 2x to save sample slots

I/O

CV/Audio In 1 + 2 Ch 1 + 2 Sample Input	CV/Audio Out 1 + 2 Ch 1 + 2 Sample Output
CV In 1 Pattern shift CV (Depth control by X)	CV Out 1 Stepped Random Voltage
CV In 2 Step Repeat CV (Depth control by Y)	CV Out 2 Slewed Random Voltage
Pulse In 1 Advance Step (Clock Input)	Pulse Out 1 Trigger out per Step
Pulse In 2 Sample Trigger	Pulse Out 2 Trigger out at pattern start

Web Librarian

Open /fragments_librarian.html in a browser with Web MIDI and SysEx support, such as Chrome or Edge.

The librarian provides:

- Global Playback speed
- MIDI control of Main, X, and Y
- Sample Import
- Pattern Import via .csv file
- Sample Slot save and load commands for recalling samples after power cycle

Quick Start

1. Patch audio into either audio input.
2. Move Z up and use Main to select one of the six slots.
3. Send a gate to Pulse In 2 to record into that slot.
4. Return Z to the middle position.
5. Send a clock to Pulse In 1.
6. Move Main to select a pattern, X to shift its slot numbers, and Y to set the repeat division.
7. The LEDs show the selected slot while Z is up and the active playback slot while Z is in the middle.



Fragments (Alt Mode)

Micro Sampler / Sequencer

Booting Fragments while holding the Z switch down activates an alternate firmware.

Instead of sequencing six different slots, the card records one sample up to 1.5 seconds at 48 kHz, then plays it six different ways: normal, +1 octave, +1.5 octaves, reverse, reverse +1 octave, and -1 octave.

Patterns still control the order of playback, but each pattern step selects a variation of the same recorded sample. With the Z switch up, the Main knob controls pitch over a +/-24 semitone range, while X and Y set the sample start and end points.

USB MIDI

Fragments appears as a USB MIDI device over USB-C.


Pitch + Speed

Notes above or below C4 change the playback speed/pitch of all slots together.

Pitch Bend +/- 12 semitones

Knob Control

CC 16 - Main CC 17 - X CC 18 - Y

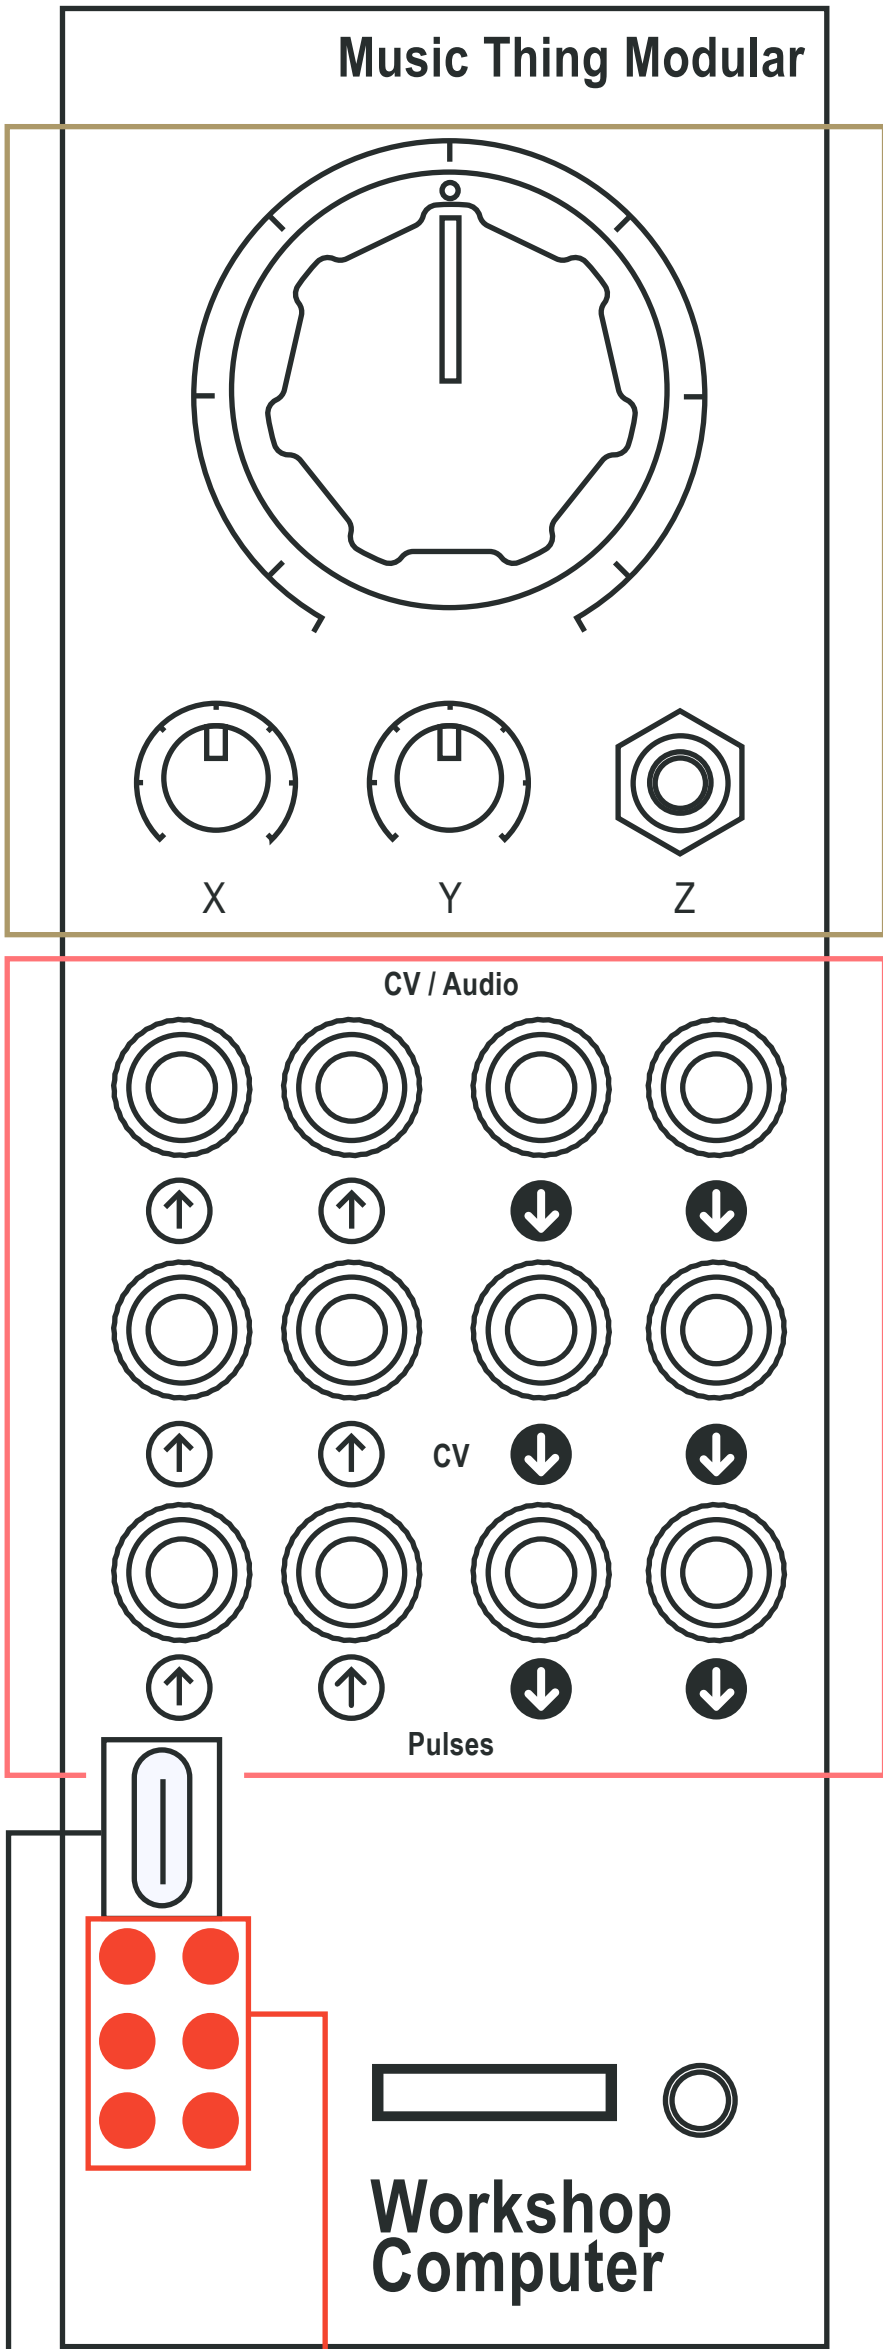


Controls

Main	X	Y	Z
Sample Pitch	-	-	Up
Pattern Select	Pattern Shift	Step Repeat	Middle
-	-	-	Down Hold for 2s (LED flash) + once more to clear samples, 2x to save sample slots

I/O

- CV/Audio In 1 + 2**
Ch 1 + 2 Sample Input
- CV In 1**
Pattern shift CV (Depth control by X)
- CV In 2**
Step Repeat CV (Depth control by Y)
- Pulse In 1**
Advance Step (Clock Input)
- Pulse In 2**
Sample Trigger
- CV/Audio Out 1 + 2**
Ch 1 + 2 Sample Output
- CV Out 1**
Stepped Random Voltage
- CV Out 2**
Slewed Random Voltage
- Pulse Out 1**
Trigger out per Step
- Pulse Out 2**
Trigger out at pattern start

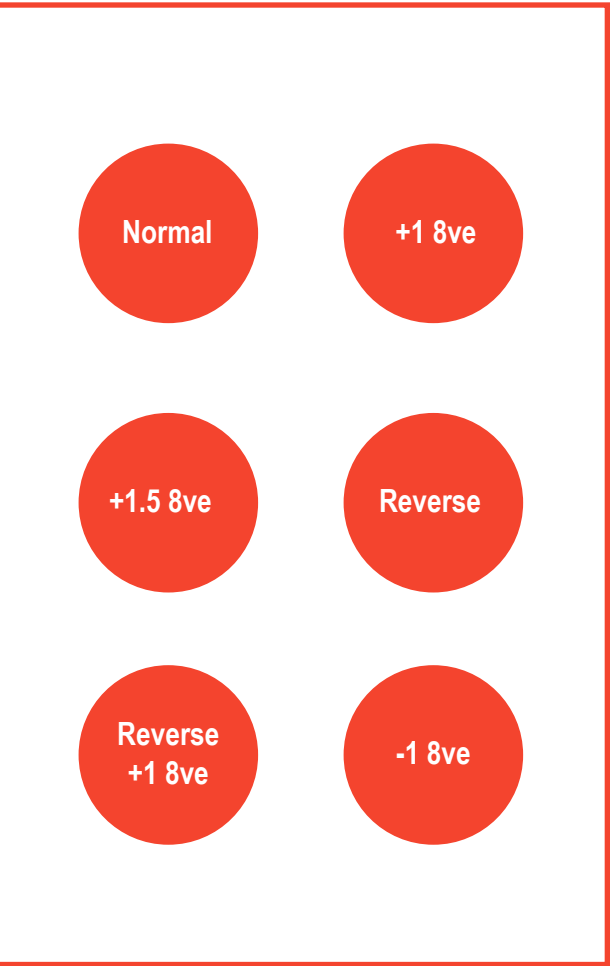

Quick Start

1. Hold Z down while pressing the boot/reset button.
2. Patch audio into either audio input.
3. Send a gate to Pulse In 2 to record one long sample, up to 1.5 seconds.
4. Send a clock to Pulse In 1.
5. Move Main to select a pattern. Each step plays a different variation of the same sample.
6. Move X to shift the variation order and Y to set the repeat division.
7. Move Z up to edit the sample performance controls: Main adjusts pitch, X sets the sample start point, and Y sets the sample end point.