


Diagnosing Connection Issues with the Arduino Nano

If you are on Windows and have already connected your Arduino Nano via the blue USB cable, and have noticed that no new **COM# Serial Port (USB)** appears, please follow this guide. If you are on Mac and no new **/dev/cu.usbserial-XXXX** appears, please also follow this guide.

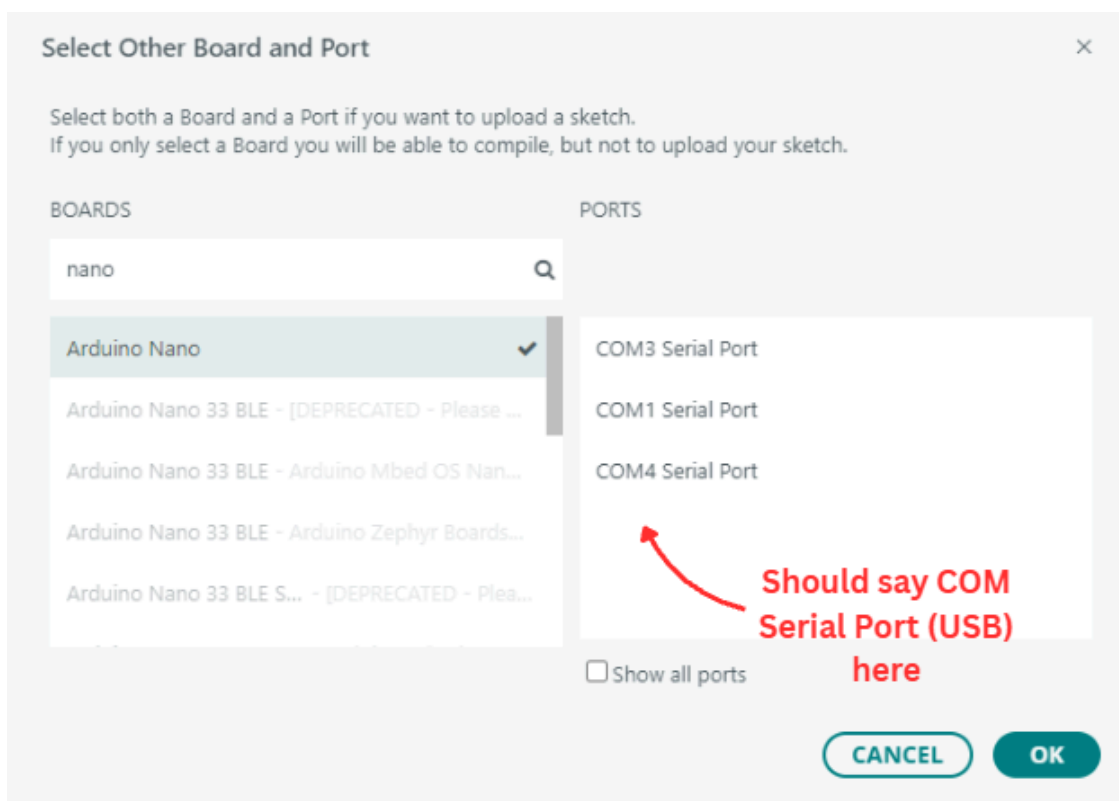

Before continuing double check simple things like:

- Closing and reopening ArduinoIDE
- Pushing the USB cable all the way into the bot's USB port
- Connecting the USB cable to a different port
- Restarting your laptop

Windows Laptops:


Almost all older generation Windows laptops run on a x64 processor. However some new generation Windows laptops run on an ARM processor (check if your laptop is included in this list [🌐 Laptop Finder](#)). Laptops that run on ARM do not have the correct USB drivers already pre-installed on their system, hence you will need to install it manually. Please follow this guide:

Step 1: Download the driver found here [CDM-v2.12.36.4-for-ARM64-Signed-Distributable](#).


Step 2: Open File Explorer in your bottom taskbar.




Step 3: Open your Downloads folder

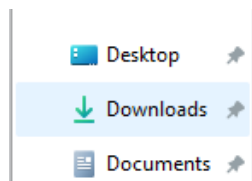


Step 4: Right click on the CDM-v2.12.36.4-for-ARM64 file, and click on Extract all.

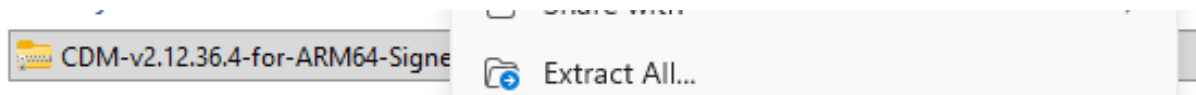

Step 5: Click on Extract

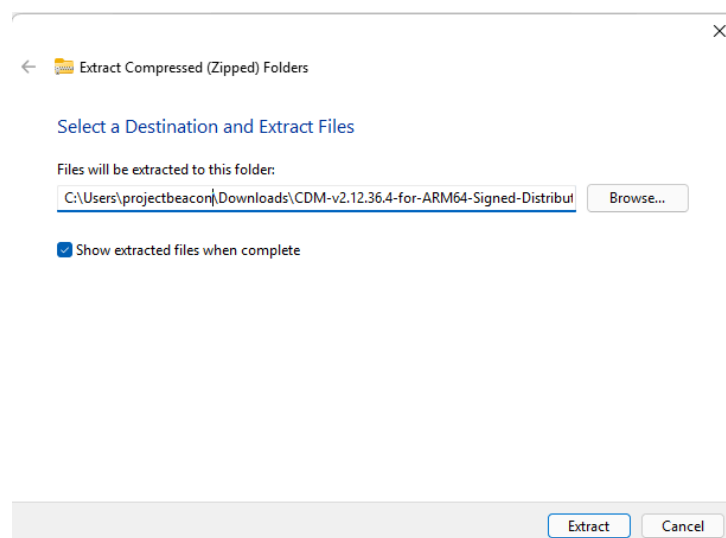

Step 6: A new folder should appear. Open the ARM64 file.

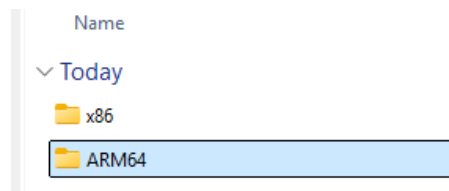

Step 7: Open the Release folder




Step 8: Right click the FTDIBUS folder (the one with the gear). Click install. Confirm any following prompts that show up. You should have a final prompt that says *“The operation completed successfully”*.



Step 9: Right click the FTDIPOINT folder (the one with the gear). Click install. Confirm any following prompts that show up. You should have a final prompt that says *“The operation completed successfully”*.



Step 10: Go back to Arduino IDE, plug in your Arduino Nano and confirm the new COM Serial Port appears.

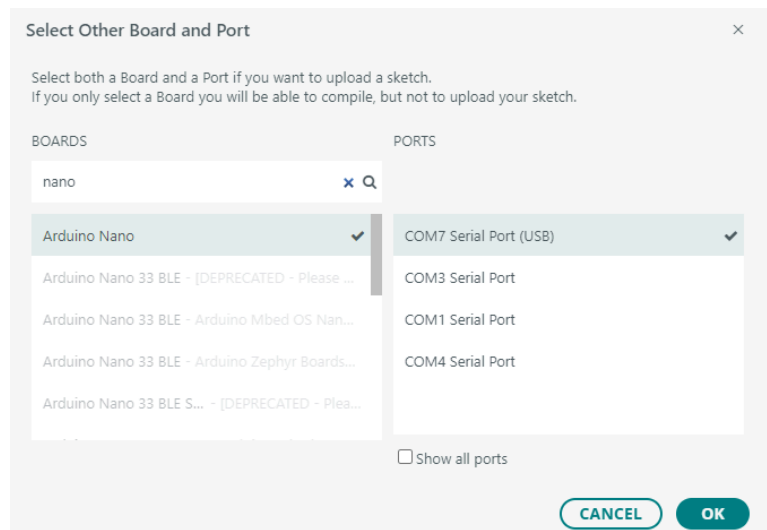


MacBooks:

Typically most MacBooks have the required FTDI drivers installed, and any issues arise from your dongle/adaptor. Please attempt to connect the Arduino with a new adapter before following the guide:


Step 1: If you are on an older Intel MacBook download this file [FTDIUSBSerialVCPDextInstaller 1.6.0 NOTARIZED](#). If you are on a newer M1/M2/M3/M4 MacBook download this file. [FTDIUSBSerialVCPDextInstaller 1.6.0 NOTARIZED](#)

Step 2: Open your downloads folder, right click the new ZIP folder, and click extract.


Step 3: Move the .app file to your Applications folder.

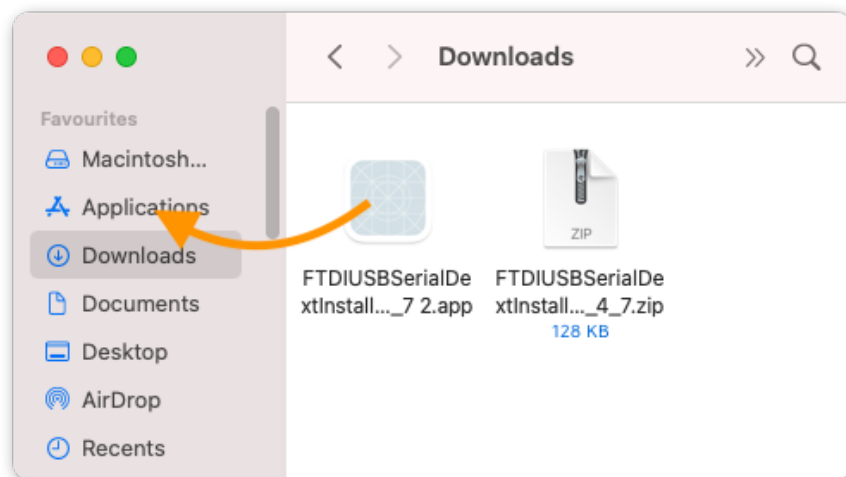

Step 4: Go to your Applications folder. Open the new app and click 'Install FTDI USB Serial Dext VCP:'

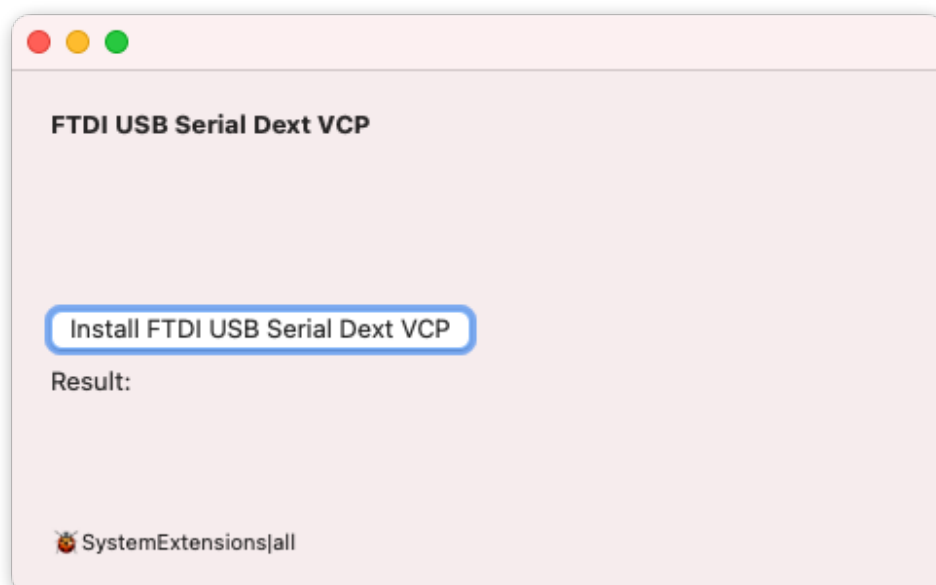

If you are prompted to set security permissions press CMD + Space, and type Security and Privacy. Click on the lock, enter your password, then click Allow.

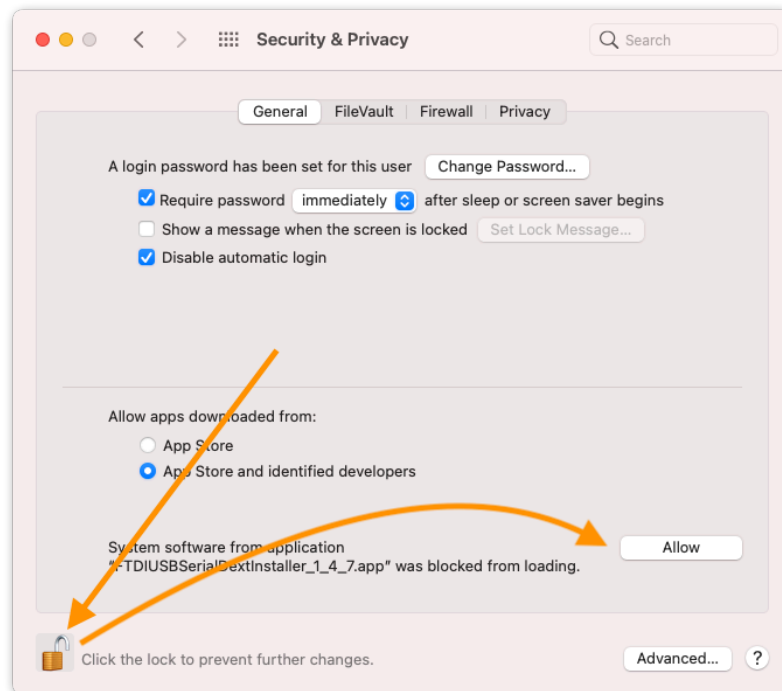

Step 5: Return to Arduino IDE. Click on ‘Select your board and port’, then connect your Arduino Nano using the blue USB cable. Confirm a new dev/cu.usbserial-XXXX appears.