SOAR EDGETX BW · GUIDE

F3K model on the Pocket and GX12

Step by step: from copying the files to the radio to the first F3K task. The template is for a discus launch glider with flaperons: the two flaperons on CH1 and CH2, the elevator on CH3 and the rudder on CH4. The brakes and the landing work from the throttle stick, without a switch.

EdgeTX 2.12 | RadioMaster Pocket | RadioMaster GX12 | November 2026

Soar EdgeTX BW brings the SoarOTX soaring scripts by Jesper Frickmann to EdgeTX radios with a 128×64 black-and-white screen. For F3K it has two parts. The **score keeper** times the flights of a task: the launch switch starts a flight and catches it, the radio calls the times, and the screen adds up the scores. It has the FAI tasks A to N, the 2026 tasks included, practice tasks and altimeter tasks. The **Configuration** menu lets you set up the model right on the radio, without a computer. The model template provides the flight modes Launch, Zoom, Cruise, Speed, Float and Landing, the timers, logical switches, global variables, curves, mixes and channels, and the scripts read and change them.

What you need

- A RadioMaster Pocket or GX12 with EdgeTX 2.12.
- An ExpressLRS 4 receiver with at least 4 channels. The template is set up for the radio's internal ExpressLRS module.
- A computer and a USB cable. The Pocket's microSD card can also go into a card reader.
- Optionally an altitude sensor with telemetry (the `Alt` sensor): for the launch height callout and the altimeter tasks.
- Optionally receiver voltage telemetry (`Cels`, `RxBt`, `A1` or `A2`) for the low battery warning.
- Optionally EdgeTX Companion, to try everything in the simulator first.

Safety

- The Configuration pages write changes to the model **at once** and move the control surfaces.
- Set up a copy of the model or work in the simulator first. Keep your fingers away from the surfaces and linkages while the receiver is on.
- After setup, check the channel order, directions, endpoints and failsafe.
- Before each launch, check the flight mode and that the brakes are in.

CONTENTS

1. Update EdgeTX and download the files
2. Copy the files to the radio
3. Create a model from the template
4. Connect the servos
5. Screens, keys and switches
6. Model setup step by step
7. Flying F3K
8. Troubleshooting
9. Checklist before the first flight

1 Update EdgeTX and download the files

1. Check the EdgeTX version: press **SYS**, then **PAGE<**: the **VERSION** page opens. You need EdgeTX 2.12 (the latest is 2.12.5). If your version is older, update the firmware as the EdgeTX manual describes (manual.edgetx.org), for example with EdgeTX Buddy.
2. Download the official SD card content for EdgeTX 2.12. From the latest 2.12 release at github.com/EdgeTX/edgetx-sdcard/releases (now v2.12.3), take `bw128x64.zip`: the Pocket and the GX12 both have a 128×64 screen.
3. Download the voice pack of the same version from github.com/EdgeTX/edgetx-sdcard-sounds/releases, for example `edgetx-sdcard-sounds-en-2.12.3.zip` for English. Without it the radio does not speak numbers: times, heights and voltage.
4. Open the project page github.com/vitas/soar-edgetx-bw, press **Code** → **Download ZIP** and unzip it. The `dist/SDCARD` folder is not a clean SD card: it also holds models, radio settings and other files from the author's radio. Copy from it only the four items listed in section 2.

2 Copy the files to the radio

1. Connect the radio to the computer with a USB cable and choose **USB Storage (SD)**: the card shows up as a drive. The GX12 has no SD card: its internal memory shows up as the drive in the same way. The Pocket's card can also go into a card reader.
2. Back up the card (on the GX12, the internal memory), at least the `MODELS` and `RADIO` folders.
3. The official content first: unzip `bw128x64.zip` and the voice pack to the root of the card and agree to replace the files. Your models and the files you added yourself stay.
4. Then copy only these four items from `dist/SDCARD`:

What (from dist/SDCARD)	Where on the card	What for
`SCRIPTS/TELEMETRY` (the whole folder)	`/SCRIPTS/TELEMETRY`	the score keeper and the Configuration menu
`SCRIPTS/FUNCTIONS/JFutil.lua`	`/SCRIPTS/FUNCTIONS`	shared functions that the scripts load
`TEMPLATES/3.SoarEdgeTx/*.yml`	`/BACKUP`	the model templates; section 3 restores one of them as a model (create the folder if there is none)
`SOUNDS/en/*.wav`	`/SOUNDS/en`	the template's voice prompts: flight modes, launch, landing, crow off and “Flaps up”

5. Eject the drive safely, unplug the cable and restart the radio.

> **Do not copy the whole dist/SDCARD folder**
> Besides the package it holds models (`MODELS`), radio settings (`RADIO`), firmware and other files from the author's radio. Copied to your card, they replace your models and settings.

Updating from an earlier package

Delete these old compiled files if they are on the card: `JFXKcf.luac` and `JF3Ksk.luac` in `/SCRIPTS/TELEMETRY`, and `JFutil.luac` and `MENU.luac` in `/SCRIPTS/TELEMETRY/128x64`. EdgeTX runs a `.luac` file instead of its `.lua` unless the `.lua` is newer, so the old files keep the old menu (without **1. Switches**) or stop the screens from opening. The radio makes new ones by itself.


Radio voice in another language?

The template prompts are recorded in English and live in `/SOUNDS/en`. Copy the same `.wav` files into the folder of your radio's voice language too, for example `/SOUNDS/de`, or they may not play.

3 Create a model from the template

On black-and-white radios EdgeTX has no template list for new models: **Create model** at once makes an empty model named after its slot, such as MODEL02. The template is restored like a model backup with **Restore model**, which lists the files in the `/BACKUP` folder. EdgeTX on black-and-white radios does not read the `/TEMPLATES` folder: with the templates there and an empty or missing `/BACKUP`, **Restore model** shows "No models on SD".

1. Press **MDL**: the model list opens. Select an empty slot with the roller and press **ENTER**. The menu offers **Create model** and **Restore model**; a slot that holds a model has no **Restore model**.
2. Choose **Restore model**, select the template for your radio and press **ENTER**: `pocket-F3K` for the Pocket, `gx12-F3K` for the GX12. The two differ only in the model name and the switches (section 5).
3. Select the new model: **ENTER** on it, then **Select model**.
4. Rename the model if you like: **MDL**, **PAGE>** to **SETUP**, the **Name** field.
5. Check the RF module: the template uses the internal ExpressLRS module (CRSF, 16 channels). For ExpressLRS, first do the steps in "ExpressLRS" below. Bind the receiver.
6. Set the failsafe: the surface positions for a lost signal, for example neutral. With ExpressLRS the failsafe is set in the receiver. Check it before the first flight (section 9).

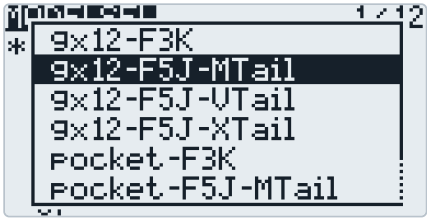

Restore model: the templates from `/BACKUP`.

Made an empty model with Create model?

Restore the template into another empty slot and select that model: **ENTER** on it, **Select model**. EdgeTX does not delete the selected model, so only then delete the empty one: **ENTER** on it, **Delete model**, and **ENTER** to confirm.

ExpressLRS

1. Update ExpressLRS in the radio's internal module and in the receiver to the same version 4, preferably the latest stable release. Versions 3 and 4 do not work together. Flash with ExpressLRS Configurator and use the same **Binding Phrase** for the module and the receiver. More at expresslrs.org.
2. Download the `elrs.lua` script and put it in `/SCRIPTS/TOOLS`. Delete the old `elrsV3.lua` and `elrsV3.luac` if they are there.
3. The template uses only CH1–CH4, which ExpressLRS sends at full resolution at every packet rate, so it needs no particular **Packet Rate** or **Switch Mode**. Set them in **SYS** → **TOOLS** → **ExpressLRS** as you prefer.

4. In the model settings (MDL, PAGE> to **SETUP**, the **Internal RF** block) the template has **Arm using** set to "Switch" and the **Switch** line below it empty (---): the model is not armed, so the ExpressLRS settings can be changed. The **Arm using** line appears once the module runs ExpressLRS 4.
5. When the settings are done, set the **Switch** line to "ON". The model is then always armed, and dynamic power, if it is on, goes to maximum when telemetry or the link is lost. To change ExpressLRS settings later, set it to "---" for that time.
6. If the receiver outputs were remapped, set them back to the defaults: output 1 to channel 1 and so on.

4 Connect the servos

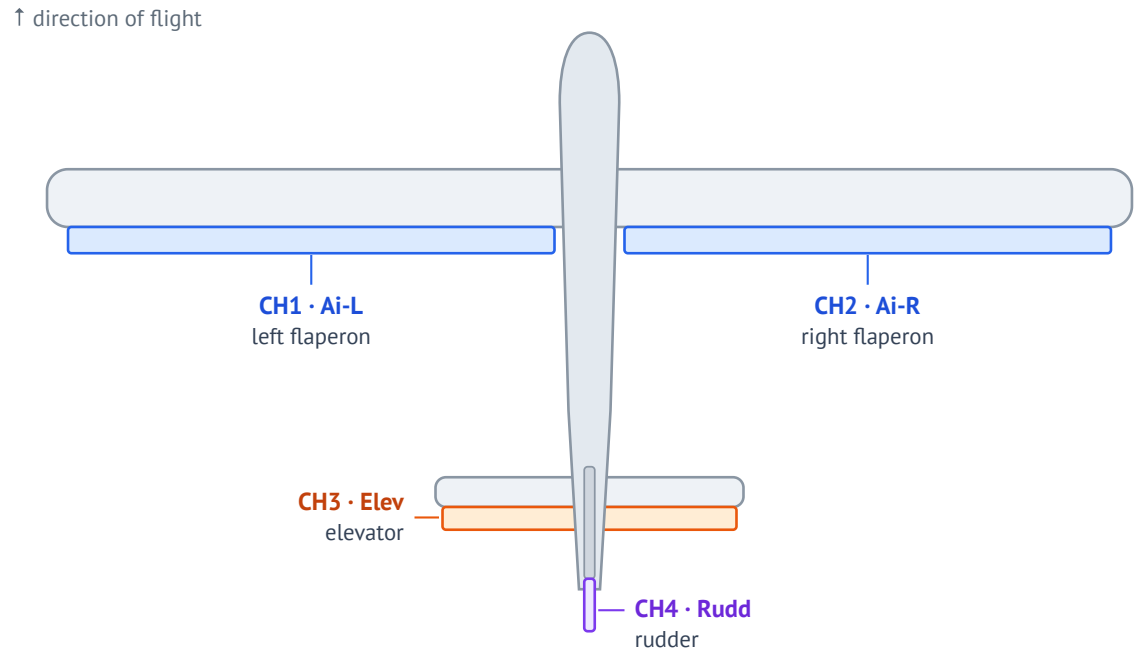



Fig. 1. Wiring for the F3K template, top view. Next to each channel number is the output name in the model.

Channel	Name in the model	What to connect
CH1	`Ai-L`	left flaperon
CH2	`Ai-R`	right flaperon
CH3	`Elev`	elevator
CH4	`Rudd`	rudder


The flaperons do three jobs: ailerons, camber and brakes. The template is neutral: centers, travels and reverses are not fitted to any particular glider; that is done in section 6. The alignment curves `Lft` and `Rgt` (CV1, CV2) start linear. With the brakes in, the template puts the flaperons at about ±20 %: most of the servo travel below that goes to the brakes, the travel above it to the ailerons. Channels 25 to 32 are the template's internal channels for the brakes, snapflap and camber; they need no receiver output.

5 Screens, keys and switches


The template has two telemetry screens. **Screen 1** is the F3K score keeper, **screen 2** is the **Configuration** menu with six pages. TELE opens the screens, PAGE> and PAGE< switch between them.

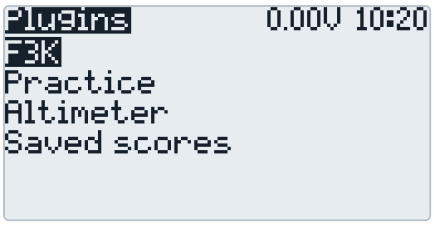

Screen 1: the score keeper starts with its plugins.

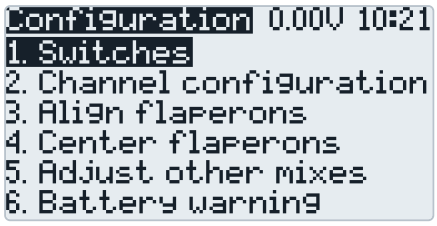

Screen 2: the Configuration menu.

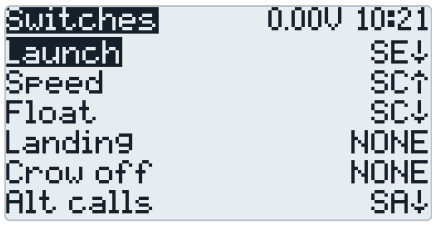

Page 1: the switches of the Pocket template.

Menu item	Page title	What it sets
1. Switches	**Switches**	the switches of the template's functions (6.1)
2. Channel configuration	**Channel Config**	channel order, direction, center and endpoints
3. Align flaperons	**Alignment**	aligning the two flaperons with each other
4. Center flaperons	**Center**	the flaperon position in Speed, and the travel for the brakes and the ailerons
5. Adjust other mixes	**Adjust mixes**	aileron to rudder, aileron differential, brake to elevator, snapflap
6. Battery warning	**Bat Warning**	receiver battery warning level

Keys

Key	In the Configuration menu and on its pages
Roller (turn)	select a menu item or a field, change a value; the help calls it **ROT**
ENTER (press the roller)	open a page, start or finish editing
RTN	leave a page or a field; the help calls it **EXIT**
MDL (short press)	show or hide the help of the page; the help calls it **MENU**
PAGE> / PAGE<	switch between the score keeper and the Configuration screens

On the score keeper screen the roller, ENTER and RTN have their own roles (section 7).

> **No need to save**
> Changes are written to the model at once; there is no Save button.

Switches and controls

The Pocket and GX12 templates differ only in these switches. The **1. Switches** page moves the functions to other switches (6.1).

Function	GX12	Pocket
Launch: hold before the throw, let go at the throw; press again to catch	**SG** button	**SE** (spring-loaded): pull
Flight mode Speed / Cruise / Float	**SF**↑ / middle / **SF**↓	**SC**↑ / middle / **SC**↓
Brakes and the Landing flight mode	throttle stick	throttle stick
Launch height callout	**SE**↓	**SA**↓
Altitude every 10 s	**SB**↓	**SB**↓
Poker target time	rudder stick	rudder stick

- **Launch:** while the launch switch is on, the flight mode is Launch. When you let go, Zoom follows and stays on until you move the elevator or aileron stick; then the flight mode follows **SC** (GX12 **SF**). The score keeper starts the flight timer when you let go and stops it at the next press (section 7).
- **Throttle stick:** the brakes. Stick up gives full brakes: both flaperons go down, and the elevator compensates. Stick down retracts them; the bottom 5 % of the travel keep the brakes fully in. After each launch the brakes stay in until the stick has been at the bottom. If it is not there, the radio says “Flaps up” 3 seconds after the launch and then every 5 seconds.
- **Landing:** half a second after the stick leaves the bottom, the flight mode Landing comes on and the radio says “landing”. When the stick returns to the bottom, Landing goes off at once and the flight mode follows the switch again.
- **Throttle trim T3** down from center adds camber in Cruise and Float; each of the two modes keeps its own T3. Up from center it does nothing, and in Speed it is off.
- **Elevator trim:** Launch keeps its own elevator trim and T3; set them on the ground with the launch switch held. Zoom, Speed and Float add their own elevator trim to the Cruise trim. In Landing the elevator trim buttons set the brake compensation `BkE` (6.5), and the Cruise trim stays.
- The radio announces the flight modes with the template's voice prompts.
- Free on the Pocket: **SD** and **P1**. Free on the GX12: **SA**, **SC**, **SD**, the **SH** button, the **S1**/**S2** sliders, **P1**, **P2** and the **SW1**–**SW6** buttons.


6 Model setup step by step

Open the Configuration screen (PAGE> from the score keeper), select a page with the roller and press ENTER; RTN returns to the menu. Do the steps in order, with the model held securely.

6.1. Switches 1. Switches

The page moves the template's functions to other switches. Each row is one function, with the switch it uses now on the right. Select a row with the roller and press ENTER: the switch blinks. Turn the roller to choose another one, then press ENTER to save it or RTN to keep the old one.

The list starts with **NONE** (the function stays off) and **ON** (always on). Then come the positions with "!", which means not: **!SB↓** is on whenever **SB** is not down. After them come the switch positions, on the GX12 also the **SW1**–**SW6** buttons. The page sets the first switch of a logical switch (see the table).

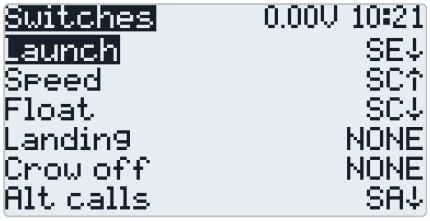

The switches of the Pocket template.

Row	What it does	Logical switch	GX12	Pocket
Launch	flight mode Launch; starts and catches the flights	`L7`	**SG↓**	**SE↓**
Speed	flight mode Speed	`L3`	**SF↑**	**SC↑**
Float	flight mode Float; with neither of the two, Cruise	`L4`	**SF↓**	**SC↓**
Landing	frees the brakes after a launch	`L8`	**NONE**	**NONE**
Crow off	keeps the brakes in	`L35`	**NONE**	**NONE**
Alt calls	the launch height callout	`L1`	**SE↓**	**SA↓**
Alt 10 sec	the altitude every 10 s, while **Alt calls** is on	`L6`	**SB↓**	**SB↓**

- On the GX12, **SG↓** is the **SG** button held. Two functions can share a switch, for example **Landing** on **SD↓** and **Crow off** on **SD↑**.
- **Alt calls** works while a flight is timed: 10 seconds after the launch the radio says the launch height, the highest altitude since the launch switch came on. **Alt 10 sec** then adds the current altitude every 10 seconds. Both need the `Alt` sensor.

Landing and Crow off at NONE (the template). The throttle stick does both jobs, as section 5 describes: after a launch the brakes stay in until the stick has been at the bottom, then the stick moves the brakes and switches the flight mode Landing. Only with both rows at **NONE** does the page turn on `L52`, which lets the stick switch Landing; with **Landing** at **NONE** it also turns on `L50`, which lets the stick free the brakes.


A switch for Landing brings back the SoarOTX way. After a launch the brakes stay in until the **Landing** switch comes on; if it was already on at the launch, switch it off and on again. The radio says "landing", and from then on the stick moves the brakes. The flight mode Landing is not used. Until then the throttle stick gives only thermal camber in Float (6.7). The template's telemetry log, which EdgeTX writes to `/LOGS`, runs only while this switch is on, so with **Landing** at **NONE** there is no log.

A switch for Crow off locks the brakes in, and the radio says "crow off". They stay in until something frees them again: the **Landing** switch, or, with **Landing** at **NONE**, the stick at the bottom once **Crow off** is off. The flight mode Landing is then not used.

To set the Pocket up as the original template was, choose **SD↓** for **Landing** and **SD↑** for **Crow off**; on the GX12 the brakes then work only while the **SD** button is held. A model made from an older template has no **Landing** and **Crow off** rows: restore it from the new template (section 3) to land with the throttle stick.

6.2. Channels and directions 2. Channel configuration

The page first warns: “Disconnect the motor!”. The F3K template has no motor: press ENTER. Each row shows the channel number, the name, the direction (> or <) and a bar with three marks (lower end, center, upper end) and a marker for the current position.

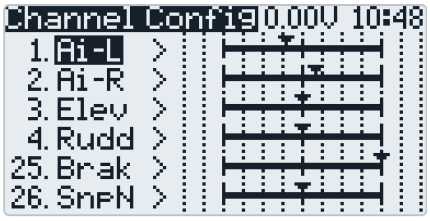


The F3K channels with their bars.

- Select a channel with the roller and press ENTER.
- Turn the roller to choose what to change: the number, the direction, all three marks together, the range, the lower end, the center or the upper end.
- ENTER on the direction reverses the channel. ENTER on a mark starts editing: the roller moves it, ENTER or RTN finishes.
- Leave the channels from 25 on as they are: they are the template's internal channels.

Action	Correct response
Elevator stick back	elevator up
Rudder stick right	rudder right
Aileron stick right	right flaperon up, left flaperon down
Throttle stick up, after it has been at the bottom	both flaperons down (brakes)

6.3. Flaperon alignment 3. Align flaperons

Aligns the two flaperons with each other over their whole travel. The changes are written to the curves `Lft` and `Rgt` (CV1, CV2) and to the centers and endpoints of the two outputs.

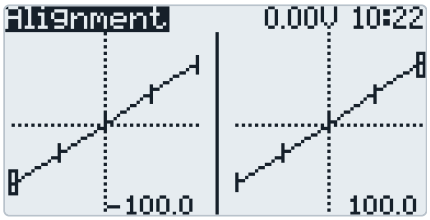

The two alignment curves.


- The throttle stick selects one of the five curve points.
- The throttle trim moves both flaperons, the aileron trim aligns the left flaperon with the right one.
- Order: the end points first, then the center, then the points between.

> **Starting over**
> ENTER on this page asks whether to reset the flaperon outputs. A second ENTER makes the curves CV1 and CV2 straight and sets the center and the ends of the two outputs back to 0 and ±100; RTN keeps everything. If the curves and outputs do not pass the page's checks, the page opens with this question; RTN then leaves the page without changes.

6.4. Flaperon center 4. Center flaperons

Sets where the flaperons sit in Speed, with the brakes in and no camber. The same setting shares out the servo travel: `Brk` is the travel from there down to full brakes, and the page sets the aileron travel `Ail` to the travel left above it.

- The throttle trim changes `Brk`, and the flaperons move with it. Set them where you want them in Speed: in line with the wing section, or with a little reflex.
- `Ail` follows by itself: the higher `Brk`, the less aileron travel is left. The template has `Brk` 60 and `Ail` 80.

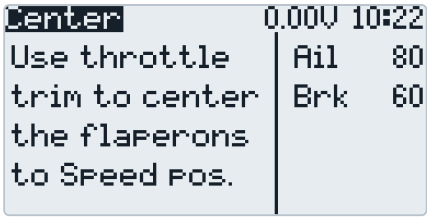


The template values.

6.5. Other mixes 5. Adjust other mixes

While the page is open, the trims change four values instead of moving:

Trim	Code	What it sets
Rudder	`AiR`	aileron to rudder
Aileron	`Dif`	aileron differential: the higher, the less the flaperons go down
Elevator	`BkE`	elevator compensation for the brakes
Throttle	`Snp`	snapflap: the flaperons follow the elevator stick

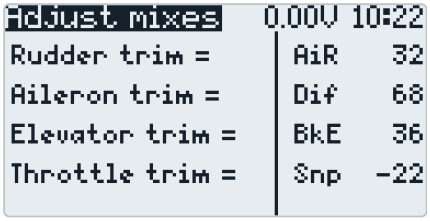


The template values.

The brake compensation goes from 0 with the brakes in to twice `BkE` at full brakes. The brake curve `BrF` (CV3) shapes it along the stick travel, together with the flaperons: the template's −100, 50, 100 moves both slowly at the start, for fine control. In flight you can also change `BkE` in Landing with the elevator trim buttons: if the model pitches as the brakes come out, click the trim against it.

6.6. Battery warning 6. Battery warning

Battery level shows the receiver voltage that the warning uses: the first sensor found of `Cels`, `RxBt`, `A1` and `A2`. Turn the roller to set the **Warning level** in steps of 0.1 V for your receiver battery. ENTER or RTN closes the page.

Below the level the radio warns about the low battery and says the voltage, at most once every 20 seconds.

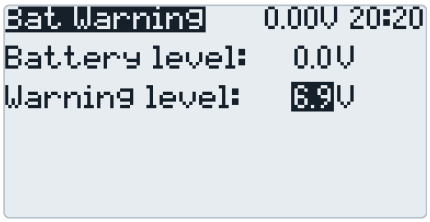

Without telemetry the voltage is 0.0 V.

6.7. Camber optional

Mode	Camber
Speed (Pocket **SC**↑, GX12 **SF**↑)	None, and T3 does nothing: the flaperons sit where 6.4 put them.
Cruise (SC or SF middle)	From T3: below center it adds camber, a little more with each click down; at center and above it adds none. The template has T3 at center.
Float (Pocket **SC**↓, GX12 **SF**↓)	From T3, kept apart from Cruise. With a **Landing** switch (6.1), also from the throttle stick: none at the bottom, 35 at the top; once that switch frees the brakes, the stick moves them too.
Landing	The camber of Cruise: its T3.

Why the stick gives no Float camber in the template. With **Landing** at **NONE**, the stick out of its bottom position means brakes and the flight mode Landing, which has no thermal camber. To have the stick camber in Float, give **Landing** a switch (6.1); otherwise use T3 or a slider.


Camber on a slider. Input `I6:Cmb` is kept for a slider or pot; its source `MAX` gives no camber. In MDL → **INPUTS**, set its source to the control: on the Pocket **P1**, on the GX12 **S1**, **S2**, **P1** or **P2**. If a control is missing from the list, enable it in the radio's hardware settings (SYS → **HARDWARE**). The control's +100 end (the last 5 % of the travel) gives no camber; toward the −100 end the camber grows to twice the flight mode's `Cmb` (GV7): 20 in Cruise and Speed and 70 in Float in the template. It works in Cruise, Speed and Float and adds to T3. To keep Speed free of it, untick FM4 (Speed) in the flight modes of the `Slider` line in the CH28 mixes.

7 Flying F3K

Screen 1 starts with the plugin list. Turn the roller to a plugin and press ENTER, then do the same for the task: its screen opens. RTN goes back. The task screen shows the task name at the top, the flights on the left, the target or flight time (**Tgt**, then **Flt** in flight) and the working time (**Win**) on the right. **QR** and **EoW** show the two options below.

Window → **Launch** → **10 s grace** → **Flight counts** → **Catch**


then the next launch, until the window or the task ends

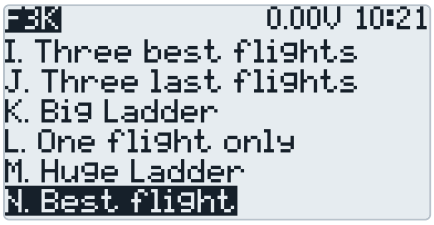

The F3K tasks, the 2026 tasks included.



Task N: ready, **EoW** on.

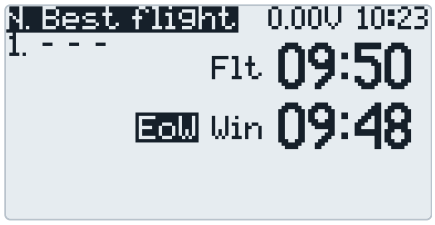

In flight: **Flt** and **Win** count down.


1. **Window:** ENTER starts the working time. You can also just launch: the first launch starts the window and the flight together. Between flights, ENTER pauses the window and shows the total score; ENTER again resumes it.
2. **Launch:** hold the launch switch (Pocket pull **SE**, GX12 press **SG**) through the run-up and let go as you throw. The flight timer starts, and the radio says the target time; a task without one beeps instead.
3. **Grace period:** for the first 10 seconds, a press of the launch switch cancels the flight, and it does not count. For the relaunch, let go and hold the switch again. After 10 seconds the flight counts, the radio says the launch height if **Alt calls** is on (6.1), and the launch counts against the task's limit.
4. **In flight: Flt** counts down the target time. The radio says the time left every minute, at 45, 30, 20 and 15 seconds, and then every second from 10.
5. **Catch:** press the launch switch: the timer stops and the time goes into the list. With **QR** (quick relaunch) on, the next flight starts when you let go, so you can hold the switch from the catch to the next throw. With **QR** off, a short beep as you let go says that no flight is timed; press and hold again for the next launch.
6. **Landed out:** RTN scores the flight zero.
7. **End of the window:** a long tone. With **EoW** on (the default), the timer of a flight still in the air stops there. Press the launch switch at the catch to score the flight, or RTN for zero. The task ends with "Done!" and the total.
8. **Save:** with the window paused or the task done, RTN asks "Save scores?": ENTER adds them to `/LOGS/JF F3K Scores.csv`, RTN leaves them out. **Saved scores** in the plugin list shows them.

Key	On the task screen
ENTER	start or pause the window; not during a flight
Roller up	**QR** on or off: the next flight starts as you let go after the catch
Roller down	**EoW** on or off: the flight timer stops at the end of the window
RTN	a flight that counts: zero score; before the window: leave the task; window paused or task done: save the scores

Tasks

Plugin	Tasks
F3K	A. Last flight · B. Two last flights 3:00 and 4:00 · C. All up last down · D. Two flights only · E. Poker 10 and 15 min. · F. Three best out of six · G. Five best flights · H. 1-2-3-4 in any order · I. Three best flights · J. Three last flights · K. Big Ladder · L. One flight only · M. Huge Ladder · N. Best flight · A2. Last flight 10:00
Practice	Just Fly! · Quick Relaunch! · Deuces
Altimeter	W. Height gain · X. Under ceiling · Y. Throw low 2:00 · Z. Height Poker; they need the `Alt` sensor
Saved scores	Score browser

- **2026 FAI rules.** L. One flight only and N. Best flight have a 10-minute window and flights up to 599 seconds. A keeps 7 minutes and 300 seconds. A2 is not an FAI task: it is A with a 10-minute window and flights up to 599 seconds, for practice or local rules.
- **Poker.** The rudder stick sets the target time. When the stick rests for a second after a move, the radio beeps and says the time. During a flight the screen shows the next call.
- The screen has room for 7 flights, so tasks with more flights stop at 7.

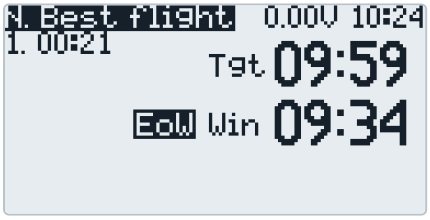

After the catch: the flight is in the list.

8 Troubleshooting

What you see	What to do
The model has no score keeper or Configuration screen	The model was made with **Create model** and is empty. Restore it from the template (section 3).
Restore model shows “No models on SD” or no templates	The templates are not in `/BACKUP`, for example they were copied to `/TEMPLATES`. Copy `TEMPLATES/3.SoarEdgeTx/*.yml` to `/BACKUP` (section 2).
The menu has no **1. Switches**, or the screens do not open after an update	Delete the old `.luac` files (section 2) and restart the radio.

What you see	What to do
After a launch the brakes stay in and the radio says “Flaps up”	Move the throttle stick to the bottom: after each launch the stick has to be there before it moves the brakes.
No camber from the throttle stick in Float	With **Landing** at **NONE** the stick lands instead. Give **Landing** a switch (6.1), or use T3 or a slider (6.7).
The brakes come out but the flaperons do not move far, or the elevator jumps	Check `Brk` (6.4) and `BkE` (6.5), and that the curve `BrF` (CV3) runs from −100 to 100.
The flight timer does not start at the launch	After a cancelled flight or a catch without **QR**, let go and hold the launch switch again before the throw. A paused window does not time flights: **ENTER** resumes it. A done task needs a new start: leave it with **RTN** and open it again.
A short flight is missing from the list	A press of the launch switch in the first 10 seconds cancels the flight (section 7).
RTN does not ask to save	The window is still running: pause it with **ENTER** first.
No launch height callout	**Alt calls** is off (Pocket **SA**↓, GX12 **SE**↓), or there is no `Alt` sensor: discover the sensors on the model's **TELEMETRY** page.
Alignment opens with “did not pass all checks”	A flaperon curve or output was changed outside this page. **ENTER** resets them; then align the flaperons again (6.3). **RTN** leaves them as they are.
The help covers the page, or does not show	Press **MDL**: it shows or hides the help.
No voice prompts for the flight modes	Copy `SOUNDS/en/*.wav` to `/SOUNDS/en`, and to the folder of your voice language (section 2).

9 Checklist before the first flight

- [ ] All control surfaces move the right way in Cruise, Speed and Float.
- [ ] The flaperons are aligned and sit where you want them in Speed.
- [ ] The launch switch gives the Launch flight mode, and Zoom follows until you move the elevator or aileron stick.
- [ ] After a launch, the brakes stay in until the throttle stick has been at the bottom; then stick up brings both flaperons down smoothly, and the elevator compensates.
- [ ] Landing comes on with the brakes and goes off with the stick at the bottom.
- [ ] The failsafe is set and checked.
- [ ] The altitude and receiver voltage telemetry show, and the voice prompts are heard.
- [ ] A range check is done.

The project page is github.com/vitas/soar-edgetx-bw; its README shows what is new compared with SoarOTX, and the F5J guide describes the F5J templates. This guide describes the templates and scripts as of November 2026.