SOARF5J FOR EDGETX · GUIDE

# Installing and setting up an M-tail model

Step by step: from copying the files to the SD card to checking the controls and the first F5J flight. The example is the **MTail** template: the rudder on CH6 and an elevator in two halves, each with its own servo (CH7 and CH8).

EdgeTX 2.12 | TX15 | TX16S MK3 | TX16S · T16 · T18 | October 2026

SoarF5J is a single widget for EdgeTX color radios with two roles. The **competition** screen runs the F5J flight: motor run, glide, finish, start height and the voice countdown of the working time. The **setup** pages let you set up the model right on the radio, without a computer or Companion. The model template provides the flight modes, timers, logical switches, global variables, curves, mixes and channels, and the widget reads and changes them.

### What you need

- A radio with EdgeTX 2.12 and a color landscape screen of 480×272, 480×320 or 800×480. Tested on the TX15 and TX16S-class radios.
- A receiver with at least 8 channels.
- A computer and a USB cable or a card reader.
- An altitude sensor with telemetry (the `Alt` sensor) for the start height.
- Receiver voltage telemetry (`RxBt`, `Cels`, `A1` or `A2`) for the low battery warning.
- Optionally EdgeTX Companion, to try everything in the simulator first.

### Safety

- The setup pages write changes to the model **at once** and move the control surfaces.
- Before setup, **remove the propeller or disconnect the motor**. Do not rely on a switch position alone.
- Set up a copy of the model or work in the simulator first, then on the radio, with the model held securely.
- After setup, check the channel order, directions, endpoints and failsafe.

CONTENTS


1. Update EdgeTX and download the files
2. Copy the files to the SD card
3. Create a model from the template
4. Connect the servos
5. Screens and widget controls
6. Model setup step by step
7. Flying F5J with the widget
8. Troubleshooting
9. Checklist before the first flight

## 1 Update EdgeTX and download the files

1. Check the EdgeTX version: **SYS** → the last tab with the **i** icon, the **VERS** line. You need EdgeTX 2.12 (the latest is 2.12.5). If your version is older, update the firmware as the EdgeTX manual describes (manual.edgetx.org), for example with EdgeTX Buddy.
2. Download the official SD card content for EdgeTX 2.12. From the latest 2.12 release at github.com/EdgeTX/edgetx-sdcard/releases (now v2.12.3), take the archive for your radio's screen:

| Radio | Screen | Archive |
|---|---|---|
| TX16S, TX16S MK2, T16, T18 | 480×272 | `c480x272.zip` |
| TX15 | 480×320 | `c480x320.zip` |
| TX16S MK3 | 800×480 | `c800x480.zip` |

3. Download the voice pack of the same version from github.com/EdgeTX/edgetx-sdcard-sounds/releases, for example `edgetx-sdcard-sounds-en-2.12.3.zip` for English. Without it the radio does not speak numbers: time, altitude and voltage.
4. Open the project page github.com/vitas/soar-edgetx, press **Code** → **Download ZIP** and unzip it. The `dist/SDCARD` folder is not a complete SD card and has no EdgeTX voice pack, so only the three items listed in section 2 are copied from it.

## 2 Copy the files to the SD card

1. Connect the radio to the computer with a USB cable and choose **USB Storage (SD)**: the card shows up as a drive. You can also take the card out of the radio and put it in a card reader.
2. Back up the card, at least the `MODELS` and `RADIO` folders.
3. The official content first: unzip the SD card archive and the voice pack to the root of the card and agree to replace the files. Your models and the files you added yourself stay.
4. Then copy only three items from `dist/SDCARD` to the root of the card:

| What (from dist/SDCARD) | Where on the card | What for |
|---|---|---|
| `WIDGETS/SoarF5J` | `/WIDGETS/SoarF5J` | the widget: competition and setup pages |
| `TEMPLATES/3.SoarEdgeTx` | `/TEMPLATES/3.SoarEdgeTx` | the MTail, VTail and XTail model templates |
| `SOUNDS/en/*.wav` | `/SOUNDS/en` | the template's voice prompts: launch, landing, motor off and others |

5. Eject the drive safely, unplug the cable and restart the radio.

> **Updating the widget**
> Before copying a new version, delete the whole old `/WIDGETS/SoarF5J` folder. Otherwise old compiled `.luac` files may stay on the card.

> **Radio voice in another language?**
> The template prompts are recorded in English and live in `/SOUNDS/en`. Copy the same `.wav` files into the folder of your radio's voice language too, for example `/SOUNDS/de`, or they may not play.

## 3 Create a model from the template

1. Open the model list on the radio and choose **New model**.
2. Open the **3.SoarEdgeTx** template folder and choose the template for your radio:

| Radio | Template | What is inside |
|---|---|---|
| RadioMaster TX15 | `tx15-MTail` | full set, 14 global variables; CRSF module (ExpressLRS/Crossfire), 16 channels |
| RadioMaster TX16S MK3 | `tx16s-mk3-MTail` | full set, 14 variables; CRSF, 16 channels |
| TX16S, TX16S MkII, T16, T18 and similar | `tx16s-MTail` | compatible set, 9 variables; internal multiprotocol module, 8 channels |

3. Rename the model in its settings if you like.
4. Check the RF module. If you use another radio system, change the module type in the model settings. For ExpressLRS, first do the steps in "ExpressLRS" below. Bind the receiver.
5. Set the failsafe so that the motor stops when the signal is lost (CH3 at minimum).

> **The tx16s-MTail template (9 variables)**
> Some parameters are fixed in it, and the setup pages show them as **N/A**: **Elevator Travel**, **Aileron -> Elevator**, **Rudder -> Elevator**, **Flap Differential**, **Elevator Differential** and the amount of thermal camber. The elevator mixes from the ailerons and from the rudder work with a fixed value of 20, and the elevator differential is 50.

### ExpressLRS: update and full resolution

1. Update ExpressLRS in the radio module and in the receiver to the same version 4, preferably the latest stable release. Versions 3 and 4 do not work together. Flash with ExpressLRS Configurator: choose the device, the version and the same **Binding Phrase** for the module and the receiver. Flash the module over USB (choose **USB Serial (VCP)** on the radio and the **EdgeTX Passthrough** method in Configurator) or over WiFi. Flash the receiver over WiFi: power it up without the radio, and after about a minute it opens the `ExpressLRS RX` network with the password `expresslrs`. Connect to it and open `10.0.0.1`. More at expresslrs.org.
2. Download the `elrs.lua` script and put it in `/SCRIPTS/TOOLS`. It is not tied to a firmware version. Delete the old `elrsV3.lua` and `elrsV3.luac` if they are there.
3. In the model settings, in the RF module block (**Internal RF**, or **External RF** for an external module), set **Arm using** to "Switch" and leave the switch empty (---) for now. Otherwise ExpressLRS treats the model as armed while the right flap (CH5) is above center, and the module settings must not be changed then. The **Arm using** line appears once the module runs ExpressLRS 4. The TX15 and TX16S MK3 templates already have this.
4. Open **SYS** → **Tools** → **ExpressLRS** and set **Packet Rate** to "100Hz Full" and **Switch Mode** to "8ch". Of the Full modes, 100Hz has the longest range. **Switch Mode** changes only while the receiver is off: switch it off and wait for the telemetry lost alert.
5. Go back to **Arm using** and set the switch to "ON". The model is then always armed, and dynamic power, if it is on, goes to maximum when telemetry or the link is lost. To change ExpressLRS settings later, set the switch to "---" for that time.
6. If the receiver outputs were remapped, set them back to the defaults: output 1 to channel 1 and so on up to output 8 to channel 8.

**Why Full mode**

In Full mode with 8ch, ExpressLRS 4 sends channels 1–8 at full resolution, channel 5 included. In the normal modes (Hybrid, Wide) channel 5 is sent with only two positions, and channels 6–8 have low resolution. The right flap on CH5 then sits at an end, and the surfaces on CH6–CH8 move in steps. There is no need to move channels to other outputs.

## 4 Connect the servos

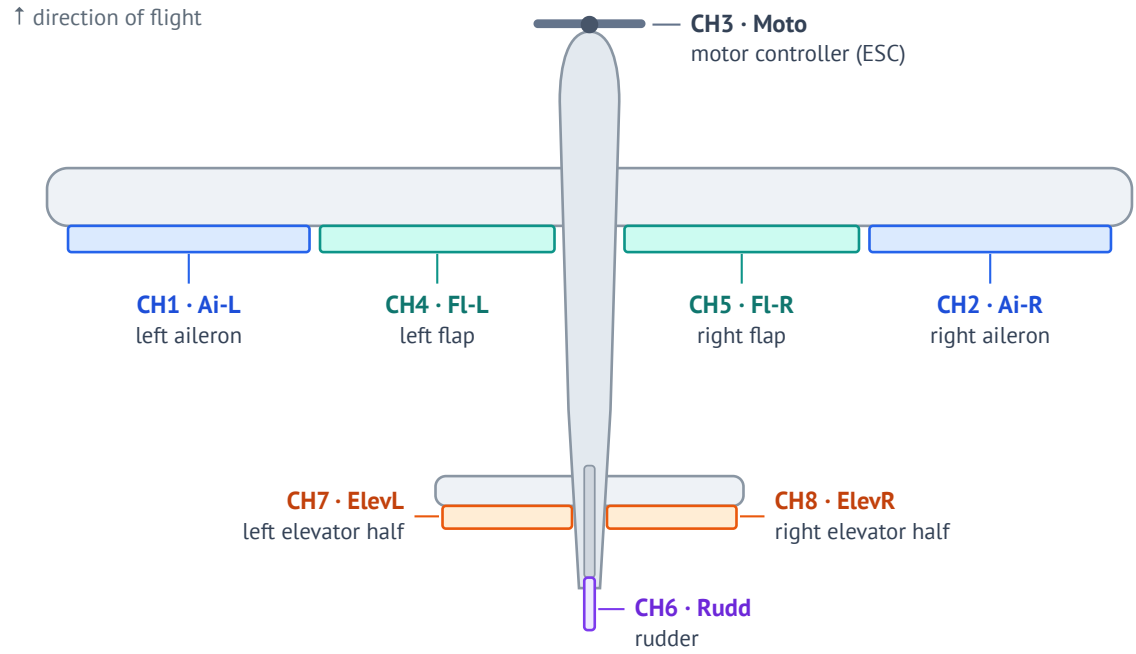



Fig. 1. Wiring for the MTail template, top view. Next to each channel number is the output name in the model.

| Channel | Name in the model | What to connect |
|---|---|---|
| CH1 | `Ai-L` | left aileron |
| CH2 | `Ai-R` | right aileron |
| CH3 | `Moto` | motor controller (ESC) |
| CH4 | `Fl-L` | left flap |
| CH5 | `Fl-R` | right flap |
| CH6 | `Rudd` | rudder |
| CH7 | `ElevL` | left elevator half |
| CH8 | `ElevR` | right elevator half |

The wing and the motor are wired the same way in all template variants (MTail, VTail, XTail); only the tail differs. The template is neutral: centers, travels, reverses and curves are not fitted to any particular glider; that is done in section 6. The alignment curves CV1–CV4 start linear: −100, −50, 0, 50, 100. The brake curves CV5, CV6 and CV14 start as after **Reset** on page 6: with the brakes off the ailerons (CH1/CH2) sit at 0 and the flaps (CH4/CH5) at −50 and +50 %, so three quarters of the flap travel stays for the brakes.

## 5 Screens and widget controls

The template already has three screens with the SoarF5J widget. **Screen 1** is the competition (Page = 1). **Screen 2** has six setup tiles (Page = 2…7) in two columns: **Switches**, **Mixes & Battery** and **Outputs** on the left, **Wing alignment**, **Airbrake curves** and **Aileron/camber** on the right. **Screen 3** is the **Motor** page (Page = 8). Switch screens with the PAGE key or by swiping.

| Page | Screen title | What it sets |
|---|---|---|
| 1 | **Ready**, **Motor ON**, **Glide**… | F5J competition: motor, glide, finish, start height, voice countdown |
| 2 | **Switches** | which switch does what |
| 3 | **Mixes & Battery** | mix values for the flight mode, receiver battery threshold |
| 4 | **Outputs** | channel order, reverse, center and endpoints |
| 5 | **Wing alignment** | aligning the ailerons and flaps |
| 6 | **Airbrake curves** | airbrake (crow) curves for the flaps, the ailerons and the elevator compensation |
| 7 | **Aileron/camber** | aileron travel, aileron to flap and camber, tuned with the trims |
| 8 | **Motor** | motor idle, with the throttle trim while the motor runs |

### How to open a page

1. Hold your finger on the tile until a menu appears and choose **Full screen**. If the tiles only get a frame, tap the tile you want once more: then the menu appears. With the keys: hold Enter, choose the tile with the wheel, press Enter and choose **Full screen**. A plain tap or Enter does not open the page: EdgeTX passes keys and touches to a widget only in full screen.
2. Pages that move the control surfaces first show a **W A R N I N G**: “Please disable the motor!”. Press Enter only after the motor is disconnected. The **Motor** page warns about the propeller (step 6.8).
3. To exit, tap the **X** at the top right or long-press RTN. On exit the temporary setup modes turn off.

| Key or gesture | Action |
|---|---|
| Next / Prev (wheel or keys) | move between fields |
| Enter | press a button, start or finish editing |
| Inc / Dec (wheel while editing) | change the value |
| Exit (RTN) | leave the field or the help |
| Tap and drag | select, move sliders, scroll a list |

> **No need to save**
> Changes are written to the model at once; there is no Save button.

> **No widget on the screen?**
> For example in a model made earlier. Open the model's screen setup, add the **SoarF5J** widget and choose the **Page** you need in its settings.

# 6 Model setup step by step

Do the steps in order. The motor is disconnected (except in step 6.8), and the model is held securely.

## 6.1. Switches Page 2 · Switches

Each row has a drop-down list with a switch position. Check the assignments and change them if needed.

| Row on the screen | Default | What it does |
|---|---|---|
| **Launch mode (Motor Arm) and flight timer control** | **SA↓** | with SE up: arms the motor (the siren sounds), resets the flight and controls the timer |
| **Start/Stop timer and Motor** | **SE↓** | flick down and up while the siren sounds: starts the motor and the timer; down while the motor runs: stops the motor |
| **Allow vario and voice reporting of altitude** | **SB↓** | allows altitude callouts (together with the last row) |
| **Variometer sound** | **NONE** | vario sound (choose its source in the model's telemetry settings); off with NONE, with ON always on except at SA↓ |
| **Speed flight mode** | **SD↑** | Speed flight mode |
| **Float flight mode** | **SD↓** | Float flight mode |
| **Landing** | **SF↓** | landing mode: airbrakes (crow) on the throttle stick |
| **Landing off / crow off** | **SF↑** | leaves landing mode |
| **Aileron -> Elevator** | **SA↑** | mix: ailerons → elevator halves |
| **Rudder -> Elevator** | **NONE** | mix: rudder → elevator halves; off with NONE |
| **Model Timer 1 report every 10 sec.** | **SC↓** | timer 1 callout every 10 s |
| **Report current altitude every 10 sec.** | **SB↑** | altitude callout every 10 s (only together with the third row) |

> **NONE and ON**
> NONE turns the function off; ON keeps it on all the time, without a switch. In a model made from an older template, a row with no switch shows ON: EdgeTX treats an empty condition as true, so the function was always on. To turn it off, choose NONE.

- **SA** has two roles: down arms the motor, up turns on the **Aileron -> Elevator** mix, and the middle does neither.
- To switch **Rudder -> Elevator** by hand, assign it a free switch.
- A spring-loaded switch works best for **Start/Stop timer and Motor**. With a normal switch, return **SE** up right after each flick and keep it up before arming: with SE down, **SA↓** does not arm the motor, and there is no siren. **SE↓** while the motor runs stops it, and returning SE does not start it again.
- Altitude callouts work only when both rows are on, the third and the last. By default they are **SB↓** and **SB↑**, which are never on together. To hear the altitude at **SB↓**, set the **Report current altitude every 10 sec.** row to ON.

### 6.2. Channels and directions Page 4 · Outputs

The page shows the named channels. Each row has the channel number, the name, a direction arrow and a bar with three points (lower end, center, upper end) and a live position marker.

- **Direction:** select the arrow and press Enter, or tap it: the channel is reversed.
- **Center and endpoints:** select the bar and press Enter, then choose what to change: **Offset** moves all three points, **Range** changes the travel symmetrically, **Lower** the lower end, **Center** the center, **Upper** the upper end. Change it with Inc/Dec or by dragging the point, and finish with Enter or Exit.
- **Channel number:** Enter on the number and Inc/Dec move the channel with its mixes to another output. You need this only if the servos are not wired as in the table in section 4.

| Action | Correct response |
|---|---|
| Elevator stick back | both elevator halves up |
| Rudder stick right | rudder right |
| Aileron stick right | right aileron up, left aileron down |

**For an M-tail**, first make both elevator halves move together: reverse `ElevL` or `ElevR` if needed. Then adjust **Center**, **Lower** and **Upper**: at neutral the halves should be level, with equal travel up and down. If the **Aileron -> Elevator** and **Rudder -> Elevator** mixes are on, the elevator halves move in opposite directions with the aileron and rudder sticks; that is normal (step 6.6).

### 6.3. Wing alignment Page 5 · Wing alignment

Aligns the four wing surfaces: **Lft ail**, **Lft flp**, **Rgt flp**, **Rgt ail**. The changes are written to the curves and to the channel centers and endpoints.

- The throttle stick selects one of the five curve points.
- The throttle trim moves the pair of flaps, the elevator trim the pair of ailerons.
- The rudder trim aligns the left flap with the right one, the aileron trim the left aileron with the right one.
- The on-screen sliders move single surfaces.
- Order: the end points first, then the center, then ±50 %.
- The neutral is where the surfaces sit in Speed: for the ailerons the center point (throttle stick in the middle), for the flaps the second point from the right (throttle stick a quarter up from the bottom). Reflex is set through it (6.5).
- **Reset** returns the alignment to the start; press it only if you want to start over.

### 6.4. Airbrakes Page 6 · Airbrake curves

- The throttle stick selects a curve point, and the surfaces move live.
- The throttle trim changes the flap point (**Flaps**), the aileron trim the aileron point (**Aileron**), and the elevator trim the elevator compensation at this point of the brake travel (**Elevator**). The on-screen sliders also work. The trims themselves do not move while the page is open.
- **Brake -> Elevator** on page 3 sets the amount of compensation, separately for each flight mode, and the **Elevator** curve sets how it builds up along the brake travel: at the bottom of the plot there is none, on the middle line it equals **Brake -> Elevator**, and at the top it is twice as much.
- The last point (brakes off) always stays at the bottom and has no slider, so in normal flight the elevator stays where the trim puts it.
- Usually, with full brakes the flaps are down and the ailerons up. If the model pitches its nose up or down as the brakes come out, note at what travel it happens and adjust that point of the **Elevator** curve.

- **Reset** returns the curves to their starting shape.
- Models made from older templates have no CV14 curve: the page shows N/A, the compensation follows the flap curve, and the trims move as usual.

### 6.5. Ailerons and camber Page 7 · Aileron/camber

- The page shows four parameters: for each, its code, the trim that changes it and the current value.
- While the page is open, the trims change the parameters: the aileron trim the aileron travel (`Ail`), the rudder trim aileron → flap (`AiF`), the elevator trim camber → aileron (`CbA`), and the throttle trim the amount of thermal camber (`CbX`; N/A in tx16s). After you leave the page, the trims work as usual again.

**In flight, camber** comes from trim T3 (input `CbP`; in Mode 2 usually the throttle trim), and in Float also from the throttle stick. T3 is kept separately for Cruise and Float, while `CbX` and `CbA` are shared by all modes.

| Mode | Position of the flaps and ailerons |
|---|---|
| Speed (**SD**↑) | No camber, and T3 does nothing: the surfaces sit exactly at the neutral set on the **Wing alignment** page. |
| Cruise (SD middle) | Only T3 gives camber: below center it adds camber, a little more with each click down; at center the camber is zero; above center T3 changes nothing. The template sets T3 a little below center, for light camber. |
| Float (**SD**↓) | Thermal camber from the throttle stick plus T3. Stick at the bottom: no thermal camber; at the top: `CbX` (33 in the template); in between: in proportion. T3: each click down adds a little more camber. |

In camber the ailerons follow the flaps by `CbA`. The template has 153 %, so in thermal mode the ailerons drop more than the flaps. If that is too much, lower `CbA`.

**Setting the camber** (motor disconnected):

1. Leave landing mode (**SF**↑), select Float (**SD**↓) and put the throttle stick up. Open **Aileron/camber**: while the page is open, the surfaces show the full Float camber.
2. Throttle trim up raises `CbX`: the flaps and ailerons go lower (in tx16s `CbX` is fixed in the template). Note: on the page, trim up gives more camber; in flight, T3 down does.
3. The elevator trim changes only `CbA`: up makes the ailerons drop more, down less.
4. Leave the page, select Cruise and set the camber with T3 (down for more). In Float, T3 adds camber to the camber from the throttle stick the same way.

**Reflex for Speed.** In Speed the surfaces sit at the alignment neutral, so reflex is set on the **Wing alignment** page (6.3), with the motor disconnected:

1. Put the throttle stick in the middle: the center point, the aileron neutral, is selected. Raise both ailerons by the reflex you want with the elevator trim.
2. Put the throttle stick a quarter up from the bottom: the second point from the right, the flap neutral, is selected. Raise both flaps by the same amount with the throttle trim.
3. Close the page and check in Speed (**SD**↑): the surfaces sit with reflex.
4. Cruise and Float count their camber from the same neutral. In Cruise, bring the surfaces down with T3 to where you want them, for example to zero; in Float, raise `CbX` a little or lower T3 if needed.

### 6.6. M-tail mixes and battery Page 3 · Mixes & Battery

The values are stored separately for each flight mode. First select the mode with its switch, Cruise (the default), Speed (**SD**↑) or Float (**SD**↓), then change the values. The current mode shows at the top right, for example **FM0:Cruise**. While the page is open, the trims also change the mix values.

| Field | In the template | When it works |
|---|---|---|
| **Aileron -> Elevator** | 20 (Cruise) | in Cruise, Speed and Float, when the mix switch is on (by default **SA**↑) |
| **Rudder -> Elevator** | 20 (Cruise) | in Cruise, Speed and Float, when the mix switch is on; off with NONE (the default) |
| **Elevator Differential** | 50 (Cruise) | together with **Aileron -> Elevator** |

Both mixes move the elevator halves in opposite directions, so the elevator helps the roll. The sign of the value sets the direction, and 0 turns the mix off. Check the values in each mode: Cruise, Speed and Float.

**Elevator Differential** reduces the travel of the half going down in the **Aileron -> Elevator** mix: at 50 by half, for example 6° up and 3° down; at 0 the travel is equal, and a negative value reduces the travel up.

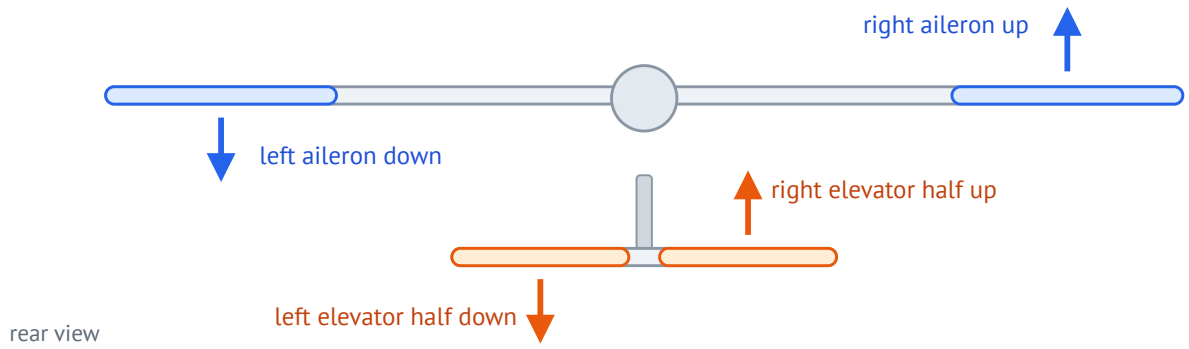



Fig. 2. Aileron stick right with the **Aileron -> Elevator** mix on: each elevator half works like the aileron on its side.

### Direction check

1. Turn the mix on with its switch (for **Aileron -> Elevator** by default **SA**↑).
2. Aileron stick right: the right elevator half should go up and the left one down, like the ailerons (Fig. 2). The half going down moves less.
3. If it is the other way round, change the sign: 20 → −20.
4. **Rudder -> Elevator** with the same sign moves the halves with the rudder stick right the same way as the aileron stick right does. If you changed the sign of **Aileron -> Elevator**, change it here too.
5. Start with small values and check them in flight at a safe height.

> **Rudder -> Elevator is off by default**
> In the template this mix has no switch (NONE), so it does not work even though the value 20 is set. To switch it, assign a switch on the **Switches** page (step 6.1); ON keeps the mix on all the time.

> **The tx16s-MTail template**
> Here both fields and **Elevator Differential** show N/A: the amount is set directly in the CH7 and CH8 mixes, the `AilEle` and `RudEle` lines with weight +20 on CH7 and −20 on CH8. To change the direction, swap the signs in these lines in the model's mixer menu. To turn a mix off, set its weight to 0. The differential is set in the `AilEle` lines: Diff −50 on both CH7 and CH8. Change it the same way in both lines.

**Battery warning level (V)** is the receiver battery voltage threshold. Below it the radio vibrates and says the voltage, at most once every 20 seconds.

## 6.7. Motor check propeller off!

1. Open the radio's channel monitor.
2. Without arming (SA not down), CH3 stays at −100 at any throttle stick position.

3. With SE up, arm with **SA**↓: the siren sounds every 5 seconds. Start with **SE**↓ and right back: the motor starts when the switch returns, and the siren stops. The Motor flight mode comes on, and CH3 follows the throttle stick.
4. Stick fully down: CH3 = +100 (full throttle). In the top 5 % of the stick travel the motor is at idle: with the default idle of 37, CH3 = −63. The motor input in the template is reversed (`I4:Mot`: source `Thr`, weight −100). At the start the motor gets the throttle that matches the stick position right away.
5. Stopping: **SE**↓ again, moving SA out of the down position, or automatically after 30 seconds of motor run. When SE returns, the motor does not start again: the next start needs **SA**↑, then **SA**↓ and a new SE flick.
6. Only after this check, connect the motor and fit the propeller.

> **Full throttle with the stick up**
> If you want full throttle with the stick up, open the `On` line of `I4:Mot` in the model's inputs and change its curve from `Mot` to `!Mot`, the same curve inverted. Keep the weight −100 and do not change the `Off` line. Check with the propeller off: in the Motor mode, the stick down now gives idle (the bottom 5 % of the travel) and the stick up gives full throttle. Do not set the weight to +100 instead: full throttle then comes as a jump in the top 5 %, and idle is only at the very bottom. The stick up also gives full thermal camber in Float and full brakes in landing mode (**SF**↓), so move the stick back down after the motor stops, or turn the brakes and the camber around as well (6.9).

## 6.8. Motor idle Page 8 · Motor

The idle is the minimum motor throttle in the Motor mode. Set it by ear with the motor running: at minimum the motor should turn slowly but steadily. This is the only step with the motor connected and the propeller on: hold the model and do not stand in front of the propeller.

1. Open screen 3, the **Motor** tile in full screen, and confirm the warning with Enter. The page itself does not start the motor.
2. Throttle stick in the idle position: fully up, or fully down if you set full throttle with the stick up (6.7). Start the motor as usual: with SE up, **SA**↓, then **SE**↓ and right back. **FM2:Motor** appears in the title.
3. Throttle trim (T3) up or down: each click changes the idle by 1, holding repeats, and the motor changes speed at once.
4. Stop the motor as usual and close the page. The value stays in the model.

- Range 0…60, default 37. At 0 the motor stops at minimum throttle.
- The value is the first point of the CV13 `Pot` curve. The page keeps the middle point at half the value; full throttle does not change.
- While the page is open, the throttle trim does not move the camber. In a model made from an older template (without `L49` and `SF39`) the trim works as usual and does not change the idle: select the value and turn the wheel, or touch it and drag your finger.

## 6.9. Stick direction and a camber slider optional

The throttle stick has three jobs: the motor in the Motor mode, the thermal camber in Float and the brakes in landing mode. In the template the stick down gives full throttle, and the stick up gives full thermal camber and full brakes. Each job can be turned around in the model's inputs and mixes, and the camber can move from T3 to a slider. Check each change in the channel monitor with the propeller off.

| What you want | Where | Change |
|---|---|---|
| Full throttle with the stick up | input `I4:Mot`, line `On` | curve `Mot` → `!Mot` (6.7) |
| Full brakes and full thermal camber with the stick down | input `I5:Brk` | weight −100 → +100 |
| Only the thermal camber with the stick down | CH25 mixes, line `CambrX` | curve `LSl` → `!LSl` |

- The brakes and the thermal camber both come from `I5:Brk`, so its weight turns both around at once. The stick up then gives neither, and the top 5 % of the travel keep the brakes fully in, as the bottom 5 % did before. Nothing else needs changing: the brake curves follow the brake channel, and in the Motor mode the brakes stay in.
- With the motor and `I5:Brk` both turned around, the stick up gives full throttle with the brakes in and no thermal camber, and the stick down gives idle, full brakes and full thermal camber. The warning in the 6.7 note then no longer applies, and the idle position in 6.8 is the stick down.
- Leave `I8:Adj` as it is: it selects the points on the setup pages (6.3, 6.4), and they keep the stick directions given in this guide. If you want them to follow the new direction too, set the weight of `I8:Adj` to +100 as well; then read the stick positions in 6.3 and 6.5 the other way round, for example a quarter down from the top instead of a quarter up from the bottom.
- Leave the throttle reverse option in the model setup off: it turns the whole stick around at once, the setup pages included, and the directions in this guide no longer match.

**Camber on a slider.** If it is a TX16S side slider (`LS` or `RS`), first enable it in the radio's hardware settings (**SYS** → **Hardware**); otherwise Companion may clear the source. There are two ways:

- **In addition to T3: input `I7:Cmb`.** The template keeps it for a slider; its source `MAX` gives no camber. Set the source to the slider: fully up (the top 5 %) gives no camber, fully down gives 20, on the same scale as `CbX` (33 in the template). T3 works as before and adds to it. This camber works in every flight mode and stays while the motor runs, so in the CH25 mixes open the `Slider` line and untick FM1–FM4 (Adjust, Motor, KAPOW, Speed) in its flight modes: the slider then works only in Cruise and Float. Untick them in the mix line, not in the input: a switched-off input does not bring this camber to zero.
- **Instead of T3: input `I6:CbP`.** Change its source from `T3` to the slider. The slider then works like T3: below center it adds camber, at center and above it adds none. One slider position serves all modes, so Cruise and Float no longer keep their own camber. To keep Speed without camber, open the first line in the CH23 mixes (source `I6:CbP`) and untick FM1, FM3 and FM4 (Adjust, KAPOW, Speed) in its flight modes. As with T3, full motor power takes this camber away. T3 no longer moves the camber in flight, and the setup pages still use its buttons.

## 7 Flying F5J with the widget

Screen 1 (Page = 1) shows the flight state, the working time, the motor time and the start height.

**Ready** → **Motor ON** → **Glide** → **Finished**

1. **Ready**: the screen shows the working time from timer 1, 10:00 by default. To change it, open the widget in full screen and press **Inc** / **Dec** (1 minute per step), or change **Start** of timer 1 in the model settings.
2. With SE up, **SA↓** arms: the siren sounds every 5 seconds, and the flight, the timers and the height are reset.
3. **SE↓** and back starts the motor: state **Motor ON**. The voice calls 10 and 15 seconds of motor run and counts 10…1 from the 20th second to 30 seconds.
4. The motor stops (**SE↓**, SA out of the down position, or automatically at 30 seconds): state **Glide**. The start height (the `Alt+` sensor) is captured while the motor runs and for 10 more seconds after it stops.

5. Move SA up (**SA↑**) right away: this disarms and turns on the **Aileron -> Elevator** mix. The motor does not start again when SE returns.
6. In the glide the voice calls the remaining working time: every minute while more than 2 minutes remain; every 15 seconds from 2 to 1 minute; every 5 seconds from 1 minute to 10 seconds; then every second 10…1.
7. Landing: **SF↓** enters landing mode, and the throttle stick deploys the brakes; **SF↑** leaves it.
8. Finish: an **SE** flick (SA not down) gives the state **Finished** and stops the time. With the widget in full screen, Enter or a tap also works. The next press resets to **Ready** for a new flight.

> **Restart in the air**
> The motor starts again only after a new arming: **SA↑**, then **SA↓** (the siren sounds) and an SE flick. The arming resets the flight, and the screen starts a new flight; by the F5J rules, that flight scores zero. So do not move SA down during the flight unless you have to restart the motor.

The widget does not keep a flight log.

# 8 Troubleshooting

| What you see | What to do |
|---|---|
| SoarF5J is not in the widget list | Check that the card has `/WIDGETS/SoarF5J/main.lua` and restart the radio. |
| The message “Curve #32 is missing” | The model was not made from the template. Create it from a template in the **3.SoarEdgeTx** folder. |
| A page says `input8`, a curve or a channel is missing | The model does not match the template; start from the template. |
| The tile does not open and shows only its title | That is how it works: the page works only in full screen. Hold your finger on the tile and choose **Full screen** (section 5). |
| No screen with the setup tiles | Create the model from the template. If your EdgeTX is older than 2.12, update it or take the new package: in older templates screen 2 had a 1×6 layout that EdgeTX before 2.12 does not load. |
| The throttle trim on the **Motor** page does not change the idle | The model was made from an older template, without `L49` and `SF39`. Change the value with the wheel or by touch, or create the model from the new template. |
| No siren after **SA**↓, and the motor does not start | SE was down when SA went down, so the motor is not armed. Move SE up, then SA up and down again. |
| The motor starts again when SE returns after a stop | The model was made from an older template. In the model's logical switches, change the AND switch of `L24` to `L23`, or create the model from the new template. |
| At full throttle CH3 reaches only about +75 | The model was made from an older template, where the first point of the CV9 `Mot` curve is −70. Set it to −100 in the model's curves, or create the model from the new template. |
| N/A in some fields | The tx16s template: these values are fixed in the template (section 3). |
| Values changed in the wrong mode | Select the flight mode first, then change the values. |
| T3 above center does nothing, no reflex | That is by design: T3 only adds camber. Reflex is the neutral on the **Wing alignment** page (6.5). |
| No camber in Float | In Float the thermal camber comes from the throttle stick: at the bottom there is none. Raise the stick or lower T3 (6.5). |
| The right flap (CH5) sits at an end, or CH6–CH8 move in steps | Update the module and the receiver to ExpressLRS 4 and set **Packet Rate** to “100Hz Full” and **Switch Mode** to “8ch” (section 3). Do not move channels. |
| The ExpressLRS script will not change a setting | The model is armed: set **Arm using** to “Switch” and the switch to “---” while you change settings, then back to “ON”. **Switch Mode** changes only while the receiver is off (section 3). |
| After an update everything works the old way | Delete `/WIDGETS/SoarF5J`, copy the new folder and restart the radio. If that does not help, remove the widget from the screen and add it again. |

## 9 Checklist before the first flight

- [ ] All control surfaces move the right way in Cruise, Speed and Float.
- [ ] The elevator halves are level at neutral and have equal travel.
- [ ] The **Aileron -> Elevator** and **Rudder -> Elevator** mixes help the roll in the right direction with small values; **Rudder -> Elevator** is on deliberately or set to 0.
- [ ] Without arming, CH3 is at minimum; the failsafe stops the motor.
- [ ] With SE up, **SA**↓ gives the siren. The motor stops with **SE**↓ and automatically after 30 seconds, and it does not start again when SE returns.
- [ ] Landing mode (**SF**↓): flaps down, ailerons up, and the throttle stick controls the brakes smoothly.
- [ ] The altitude and receiver voltage telemetry show, and the voice prompts are heard.
- [ ] A range check is done.

---

The full documentation is in the `docs` folder of the repository github.com/vitas/soar-edgetx. This guide describes the templates and the widget as of November 2026.