SR series/TS2000

Industrial Robot

INSTRUCTION MANUAL

INDUSTRIAL ROBOT

TRANSPORTATION AND INSTALLATION MANUAL

Notice

- Make sure that this instruction manual is delivered to the final user of SHIBAURA MACHINE's industrial robot.
- Before operating the industrial robot, read through and completely understand this manual.
- After reading through this manual, keep it nearby for future reference.

Rev.4
April 1, 2020

Shibaura Machine

TOKYO, JAPAN

Copyright 2020 by SHIBAURA MACHINE CO.,LTD.
All rights reserved.

No part of this document may be reproduced in any form without obtaining prior written permission from SHIBAURA MACHINE CO.,LTD.

The information contained in this manual is subject to change without prior notice to effect improvements.

Preface

This manual describes how to unpack and install the SR–HSP series industrial robot and controller. Specifically, it describes how to unpack a shipment containing the equipment, how to connect wiring and air piping, and how to attach tools. Be sure to look through this manual before unpacking the shipment.

Before beginning the work according to this manual, read through the Setup Manual and Safety Manual so that you can learn the names and functions of various components and the safety measures.

This manual is divided into the following four (4) sections:

Section 1 Transportation
This section describes how to remove the robot and controller from their boxes and how to transport them to the installation site. This section also discusses how to temporarily store the equipment after unpacking the shipment.

Section 2 Installation
This section discusses the equipment installation environment, space requirements, and how to install the equipment.

Section 3 System Connections
This section describes how to connect the robot, controller and peripheral equipment.

Section 4 Tool Interlace
This section describes how to connect the tool to the robot arm and how to connect pipes and wires to the tool. This section also discusses maximum permissible loads of the tool.

Precautions on Safety

Important information on the robot and controller is noted in the instruction manual to prevent injury to the user and persons nearby, prevent damage to assets and to ensure correct use.
Make sure that the following details (indications and symbols) are well understood before reading this manual. Always observe the information that is noted.

[Explanation of indications]

Indication	Meaning of indication
 Danger	This means that "incorrect handling will lead to fatalities or major injuries".
 Caution	This means that "incorrect handling may lead to personal injuries *1) or physical damage *2)".

*1) Injuries refer to injuries, burns and electric shocks, etc., which do not require hospitalization or long term treatment.

*2) Physical damage refers to major fires due to destruction of assets or resources.

[Explanation of symbols]

Symbol	Meaning of symbol
	This means that the action is prohibited(must not be done). The details of the actions actually prohibited are indicated with pictures or words in or near the symbol.
	This means that the action is mandatory(must be done). The details of the actions that must be done are indicated with pictures or words in or near the symbol.
	This means danger. The details of the actual danger are indicated with pictures or words in or near the symbol.
	This means caution. The details of the actual caution are indicated with pictures or words in or near the symbol.

Caution

- Always read through the Safety Manual provided separately before starting actual work to ensure safety work covering from the robot installation to operation.

[Installation and transportation]

Always observe the following items to safely use the robot.

Danger	
 Prohibited	• DO NOT install or operate if any parts are damaged or missing. Doing so could lead to electric shocks, fires or faults. • DO NOT install the robot where it may be subject to fluids such as water. Doing so could lead to electric shocks, fires or faults. • Do not place the robot near combustible matters. Doing so could lead to fires if the matter ignites due to a fault, etc.
 Mandatory	• Always secure the robot with the attached clamps before transporting it. Failure to do so could lead to injuries if the arm moves when the robot is suspended. • Wire the robot after installation. Wiring the robot before installation could lead to electric shocks or injuries. • Always use the power voltage and power capacity designated by SHIBAURA MACHINE. Failure to do so could lead to device faults or fires. • Always use the designated power cable. Using a cable other than that designated could lead to fires or faults.
 Always ground	• Completely connect the grounding cable. Failure to do so could lead to electric shocks or fires if a fault or fault current occurs. Noise could lead to malfunction. Also, it could cause mis-operation by noise.

Caution	
 Prohibited	• NEVER lift the robot by the arm 2 cover or arm 2. Doing so will apply an excessive force on the robot's mechanism section and could lead to faults. • For the controller, secure the ample space for air vent. Heating of controller could lead to malfunction.
 Mandatory	• When lifting the robot, lift it up slowly. The robot will tilt slightly, so lifting it up suddenly could be hazardous. • When storing the robot, securely fix it on the base. The robot will be unstable if just set down, and it could tilt over.

Table of Contents

Page

Section 1 Transportation 1-1
1.1 Unpacking 1-1
1.2 Transportation 1-3
1.2.1 Mass and Dimensions 1-3
1.2.2 Transporting the Robot 1-3
1.2.3 Transporting the Controller 1-8
1.3 Storage 1-9
1.3.1 Storage Precautions for the Robot 1-9
1.3.2 Storage Precautions for the Controller 1-9

Section 2 Installation 2-1
2.1 Installation Environment 2-1
2.2 Robot Installation 2-2
2.2.1 External Dimensions 2-2
2.2.2 Working Envelope 2-9
2.2.3 Coordinate System 2-13
2.2.4 Installing the Robot 2-19
2.3 Installing the Controller 2-21
2.3.1 External Dimensions 2-21
2.3.2 Rack Mounting Dimensions 2-22
2.3.3 Precautions for Rack Mounting 2-23
2.3.4 Precautions for Direct Installation 2-25
2.4 Precautions for Handling the Teach Pendant 2-26
2.5 Safety Measures 2-27
2.6 Position Detector Backup Batteries 2-28

Section 3 System Connections 3-1
3.1 Cable Wiring 3-1
3.1.1 Connector Arrangement on the Controller 3-1
3.1.2 Connecting the Power Cable 3-2
3.1.3 Connecting the Motor Cable 3-3
3.1.4 Connecting the Encoder Cable 3-4
3.1.5 Connecting the Robot Control Signal Cable 3-5

Page

3.1.6 Inserting and Removing Cables 3-5
3.1.7 Examples of Connector Terminal Arrangement 3-7
3.2 Controller Connector Signals 3-9
3.2.1 Connector Signal Connection Diagrams 3-9
3.2.2 Jumpers for Safety Related Signals 3-9
3.3 Separating Control Panel from Controller 3-11
3.3.1 Removing the Control Panel 3-11
3.3.2 Cable between Controller and Control Panel 3-12
3.3.3 Control Panel Mounting Dimensions 3-12
3.3.4 Mounting Dummy Panel on Controller 3-13
3.3.5 Dimensions when Separating Control Panel 3-14
3.3.6 Cautions on Transport 3-15

Section 4 Tool Interface 4-1
4.1 Mounting the Tool 4-1
4.2 Tool Wiring and Piping 4-4
4.2.1 Controller's Tool Signals (TS2000) 4-4
4.2.2 Tool Wiring (SR-854HSP) 4-13
4.2.3 Tool Wiring (SR–424HSP) 4-18
4.2.4 Tool Air Piping 4-23
4.3 Permissible Load Conditions and Program Setting 4-25
4.3.1 Permissible Load Conditions 4-25
4.3.2 Load Conditions and Program Setting 4-27
4.3.3 Setting Robot Acceleration /Deceleration Time for Load Conditions 4-31

Appendix A Calculating Control Power Capacity 5-1
Appendix B Restoring Home Position Data 5-3

Section 1

Transportation

1.1 Unpacking

The robot and controller are shipped separately in wooden crates and corrugated cardboards. The packaging states are shown in Figs. 1.1 and 1.2. The teach pendant and other accessories such as the instruction manual are packaged separately.

Open the packages in a location easily accessible to where the equipment is to be installed. Take care not to damage the robot or controller. After opening the packages, check to make sure that all the accessories are present and that nothing has been damaged in transit.

Danger

- If any parts of the equipment are found damaged or any accessories are missing after the shipment containing the robot and controller have reached your office, DO NOT install and operate them. Otherwise, the equipment will malfunction. Contact SHIBAURA MACHINE immediately.
- Dispose of the wooden crate, corrugated cardboard, polyethylene shipping bag and cushion material according to your standards.

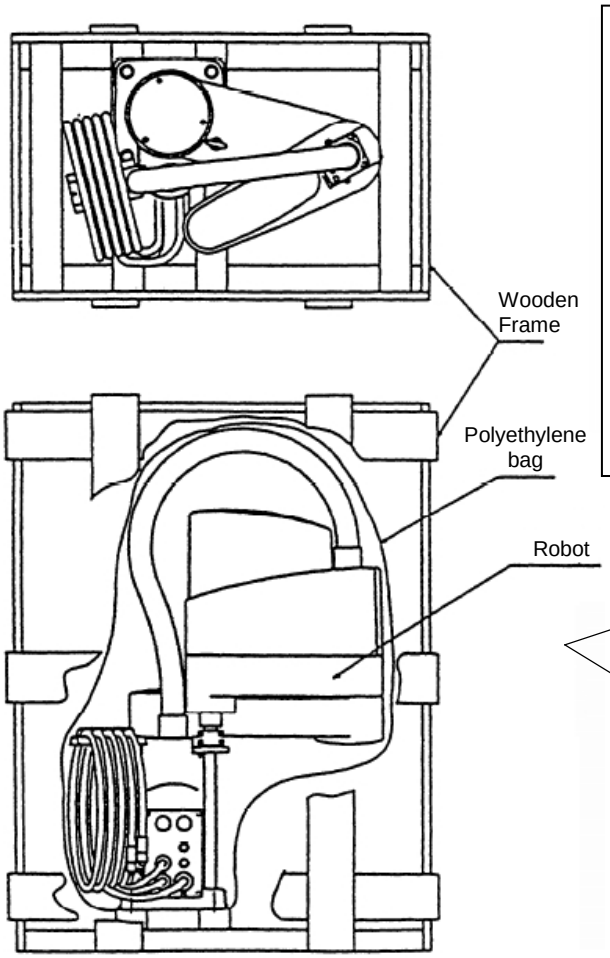


Fig. 1.1 Robot package

Danger

- If damage is discovered of the parts such as the accessories are missing when the robot is delivered to the user,do not install or operate the unit.
  Doing so could lead to faults,so always Contact our distributor's.
- Dispose of the wooden frame,corrugated cardboard,polyethylene shipping bag and cushion material according to your standards.

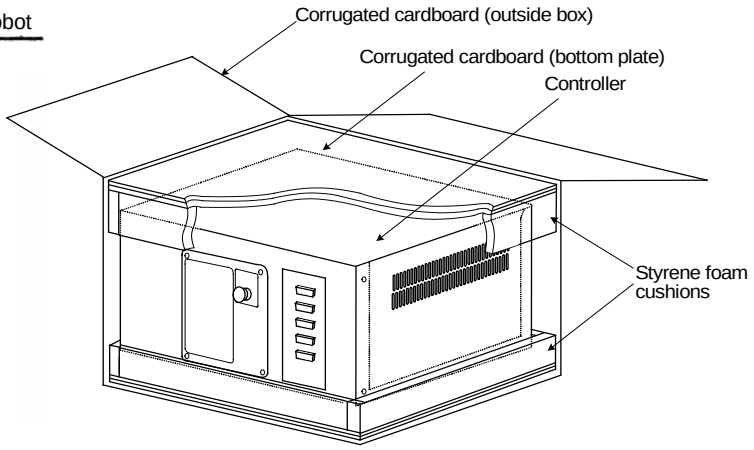


Fig. 1.2 Controller package

1.2 Transportation

Move the robot and controller very carefully. Make sure that no excessive impact ($9.8m/s^2$ or more) or vibration is applied on the equipment. If the equipment is to be subject to vibration over a long period, be sure to tighten all the nuts and screws. If the equipment is to be moved to a location some distance from where it was unpacked, put the equipment back into the wooden crates and corrugated cardboards and reposition the cushions as they were.

1.2.1 Mass and Dimensions

The mass and dimensions of the robot and controller are shown in Table 1.1.

Table 1.1

Type	Mass	Outer dimensions (during transport)
Robot SR–424HSP	22 kg	See Fig. 1.7A.
Robot SR–504HSP	38 kg	See Fig. 1.3.
Robot SR–554HSP	55 kg	See Fig. 1.4.
Robot SR–654HSP	60 kg	See Fig. 1.5.
Robot SR–854HSP	70 kg	See Fig. 1.6.
Robot SR–1054HSP	90 kg	See Fig. 1.7.
Controller TS2000	12 kg	See Fig. 2.19.

1.2.2 Transporting the Robot

In principle, transport the robot in the posture as shown in Figs. 1.3 to Fig. 1.7A. The robot is shipped with the arm folded back and secured with a clamp. (After you have unpacked the shipment, you can move it as it is.)

Danger

- Be sure to secure the arm with the attached clamp before transporting the robot. Failure to do so could cause a hazardous situation as the arm will move when the robot is suspended.

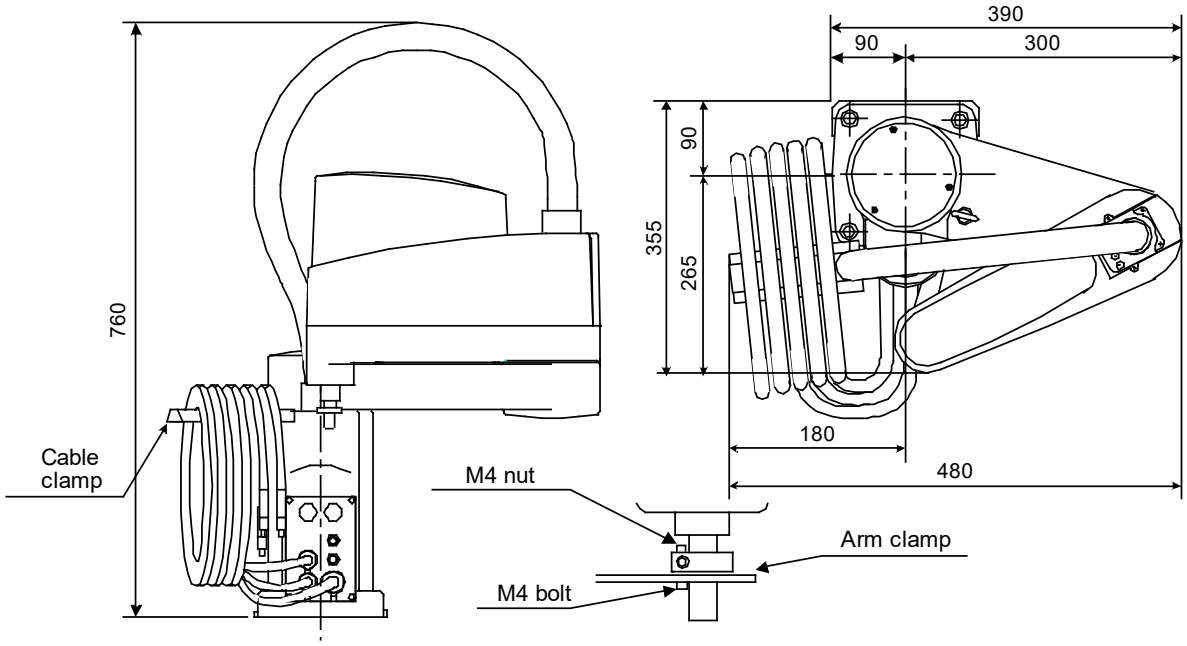


Fig. 1.3 Securing the robot SR–504HSP for transportation

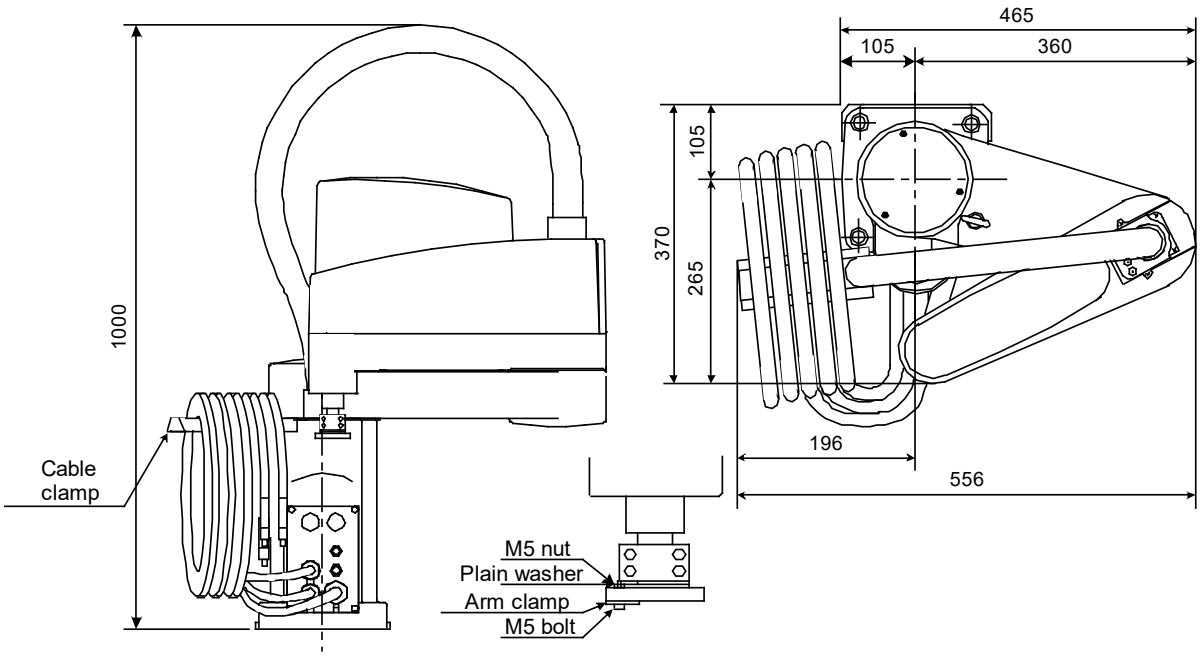


Fig. 1.4 Securing the robot SR–554HSP for transportation

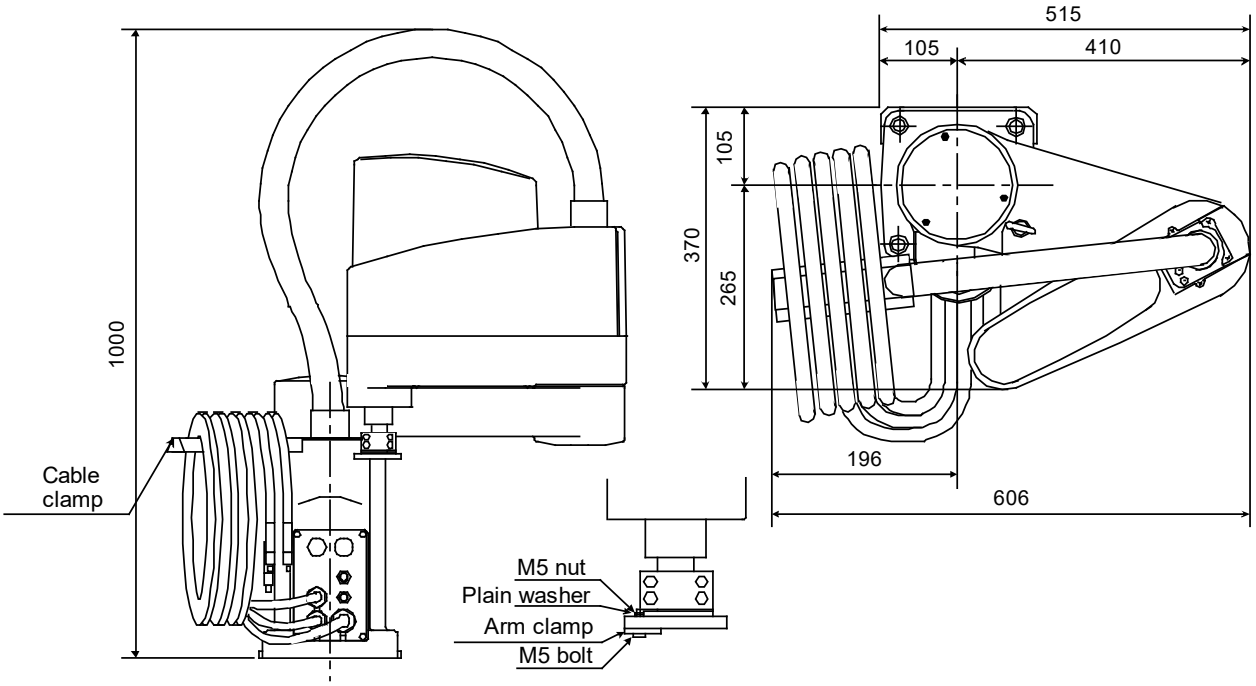


Fig. 1.5 Securing the robot SR–654HSP for transportation

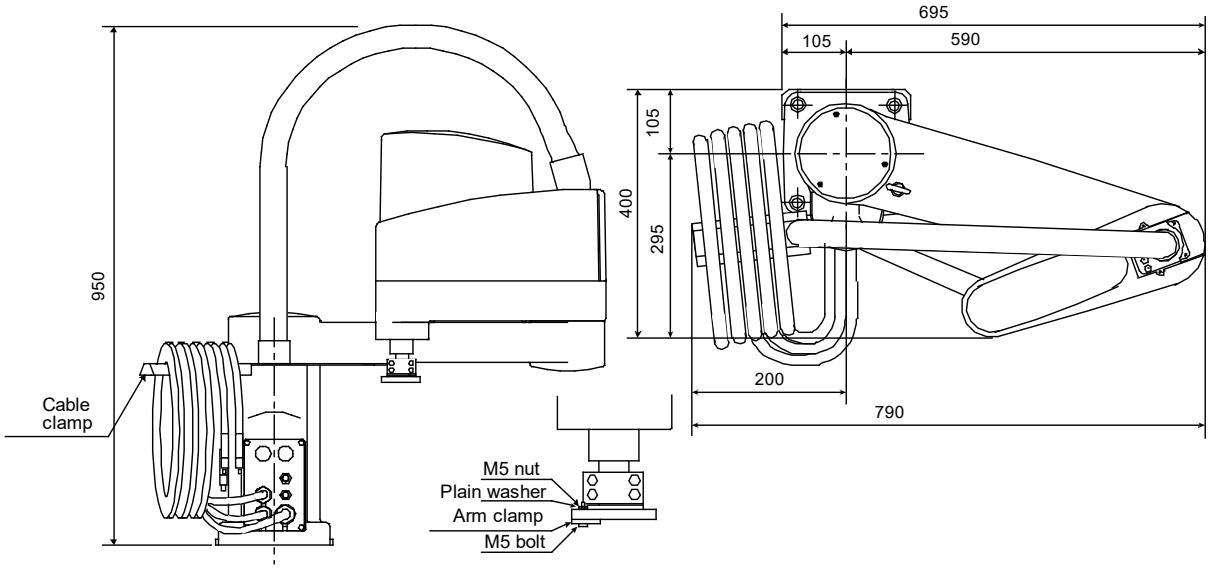


Fig. 1.6 Securing the robot SR–854HSP for transportation

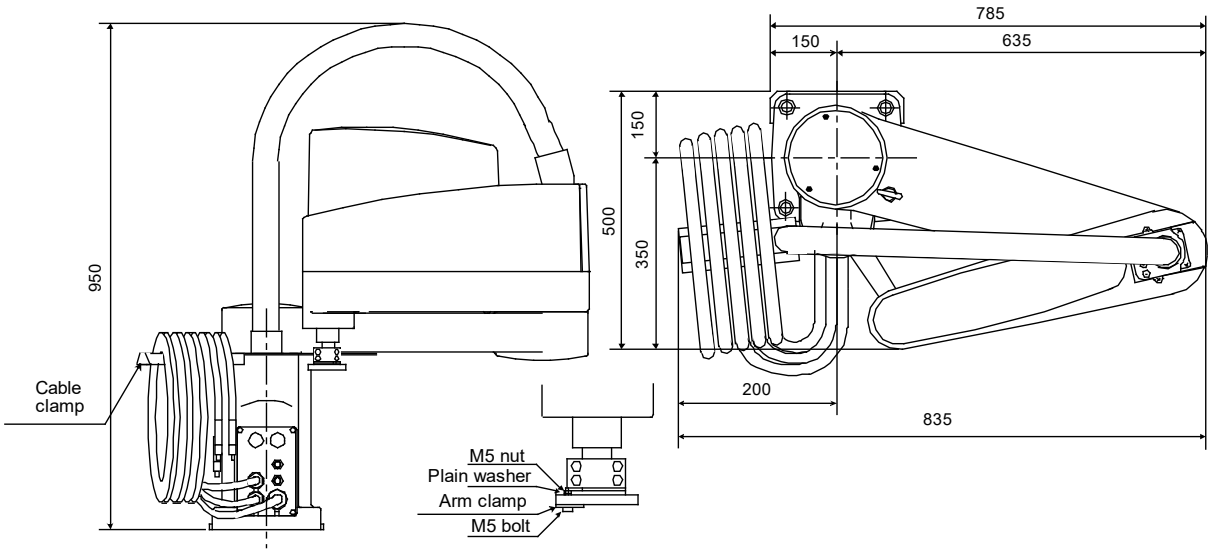


Fig. 1.7 Securing the robot SR–1054HSP for transportation


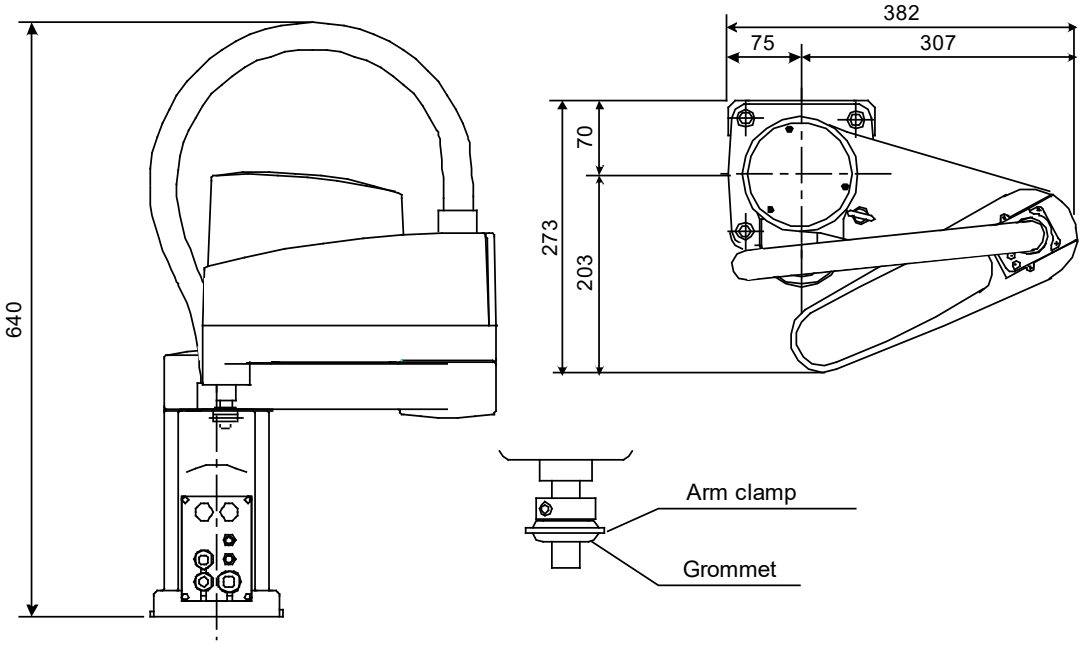


Fig. 1.7A Securing the robot SR–424HSP for transportation

It is also possible to move the robot by crane. As shown in Fig. 1.8, pass a wire to the attached eyebolt, then lift up the robot carefully. No eyebolt is provided for the SR–424HSP. Lift up the robot by holding the handling locations shown in Fig. 1.9 by hands.

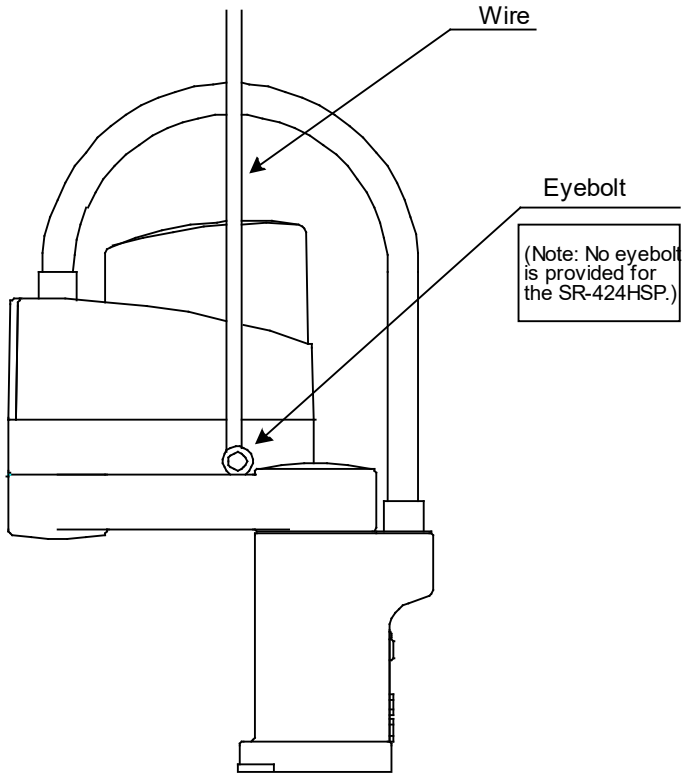

Robot mass
SR-424HSP : 22 kg
SR-504HSP : 38 kg
SR-554HSP : 55 kg
SR-654HSP : 60 kg
SR-854HSP : 70 kg
SR-1054HSP : 90 kg

Fig. 1.8 Lifting up the robot by crane

Caution

- Use a wire with a limit load that can sufficiently withstand the robot mass.
- The robot will tilt somewhat when lifted. Lift it up carefully and slowly.
- When raising and lowering the robot, DO NOT exert any excessive impact (9.8 m/s^2 or over) on it. Carefully treat the robot.
- When lifting the robot by workers, hold the positions shown in Fig. 1.9 by hands. If the arm 2 or cover is held by hands, an unusually large force is exerted, resulting in a trouble.
- If the robot has been carried manually by the workers, take utmost care to prevent their hand or leg from being caught in the robot when placing it on the floor.

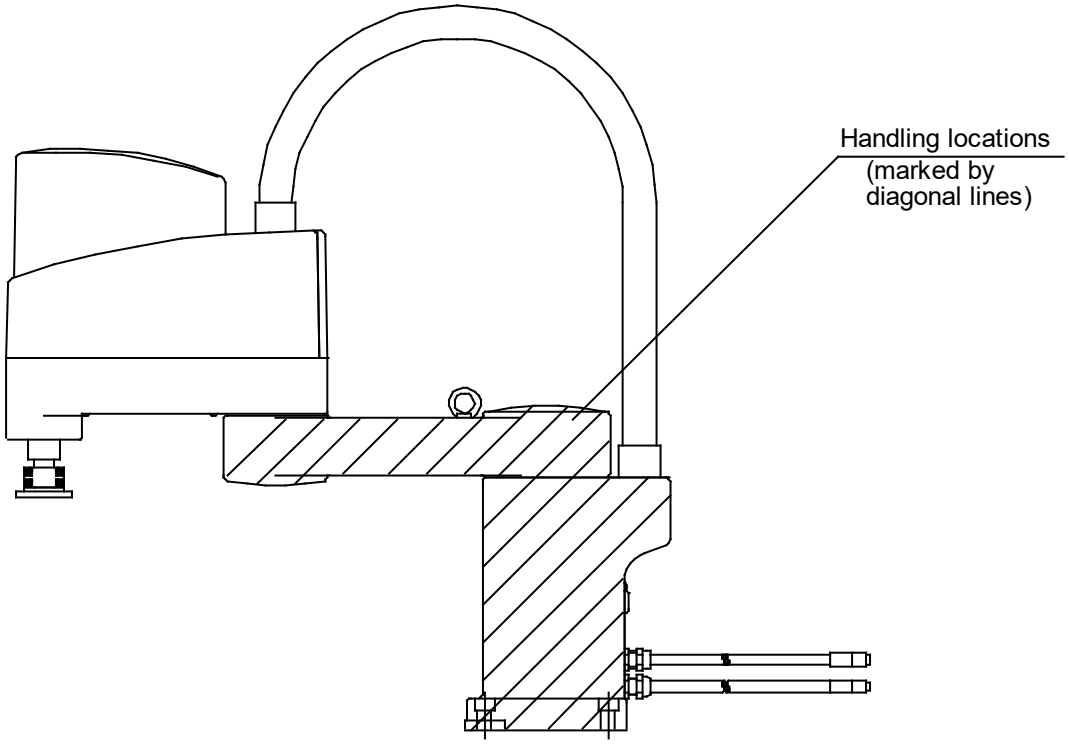


Fig. 1.9 Robot handling areas

After installing the robot, remove the clamps and eyebolt.

1.2.3 Transporting the Controller

Disconnect all cables, teach pendant and FD unit before transporting the controller.

Danger

- When placing the controller on the floor, etc., make sure not to catch your hands or feet.

1.3 Storage

We do not recommend storing the robot and controller for long periods of time after unpacking them. If this is unavoidable, however, strictly observe the following precautions for storage.

1.3.1 Storage Precautions for the Robot

Caution

- Secure the base completely to prevent the robot from falling over. When placed directly, the robot is unstable and will fall over.
- Keep the robot out of direct sunlight. The timing belts and resin covers may deteriorate.
- Seal the robot in a vinyl bag to prevent rust development and contaminant. Put a desiccant in the bag to absorb moisture. As the base bottom and tool shaft are susceptible to rust development, coat the tool shaft with grease and the other surfaces with rust-preventive agent.
- Grease the robot before use.
- When the robot power cable was disconnected from the controller, connect the short-circuit connector (or CN2 connector of the SR–424HSP robot) to the same cable.

1.3.2 Storage Precautions for the Controller

Caution

- Keep the controller out of direct sunlight. Otherwise, the controller interior will be excessively heated up, causing a trouble.

Section 2

Installation

2.1 Installation Environment

Table 2.1 shows the environmental conditions for the location in which the SR–HSP series Robot and TS2000 controller are to be installed.

Table 2.1 Environmental Conditions for the Robot and Controller

Item	Specifications
Temperature	In operation : 0 to 40 °C In storage : –10 to 50 °C
Humidity	20 to 90 % (Non-condensing) DO NOT install the robot where it may be subject to fluids such as water.
Altitude	1000 m or less
Vibration	In operation : 0.98m/s^2 or less In transport : 9.8m/ s^2 or less
Dust	No inductive dust should exists. Consult with SHIBAURA MACHINE first should you wish to use the robot and controller in an especially dusty environment.
Gas	No corrosive or combustible gas should exist.
Sunlight	The robot must not be subject to direct sunlight.
Electromagnetic noise	A heavy noise source should not exist nearby.
Magnetic field	A heavy magnetic field source should not exist nearby.

Danger

- Do not place the robot or controller near combustible. Doing so could lead to fires if it ignites due to a fault, etc.

2.2 Robot Installation

Before installing the robot, you should plan a layout, fully considering the working envelope, coordinate system and space for maintenance.

2.2.1 External Dimensions

External view drawings of the robot are shown in Figs. 2.1 to 2.6.

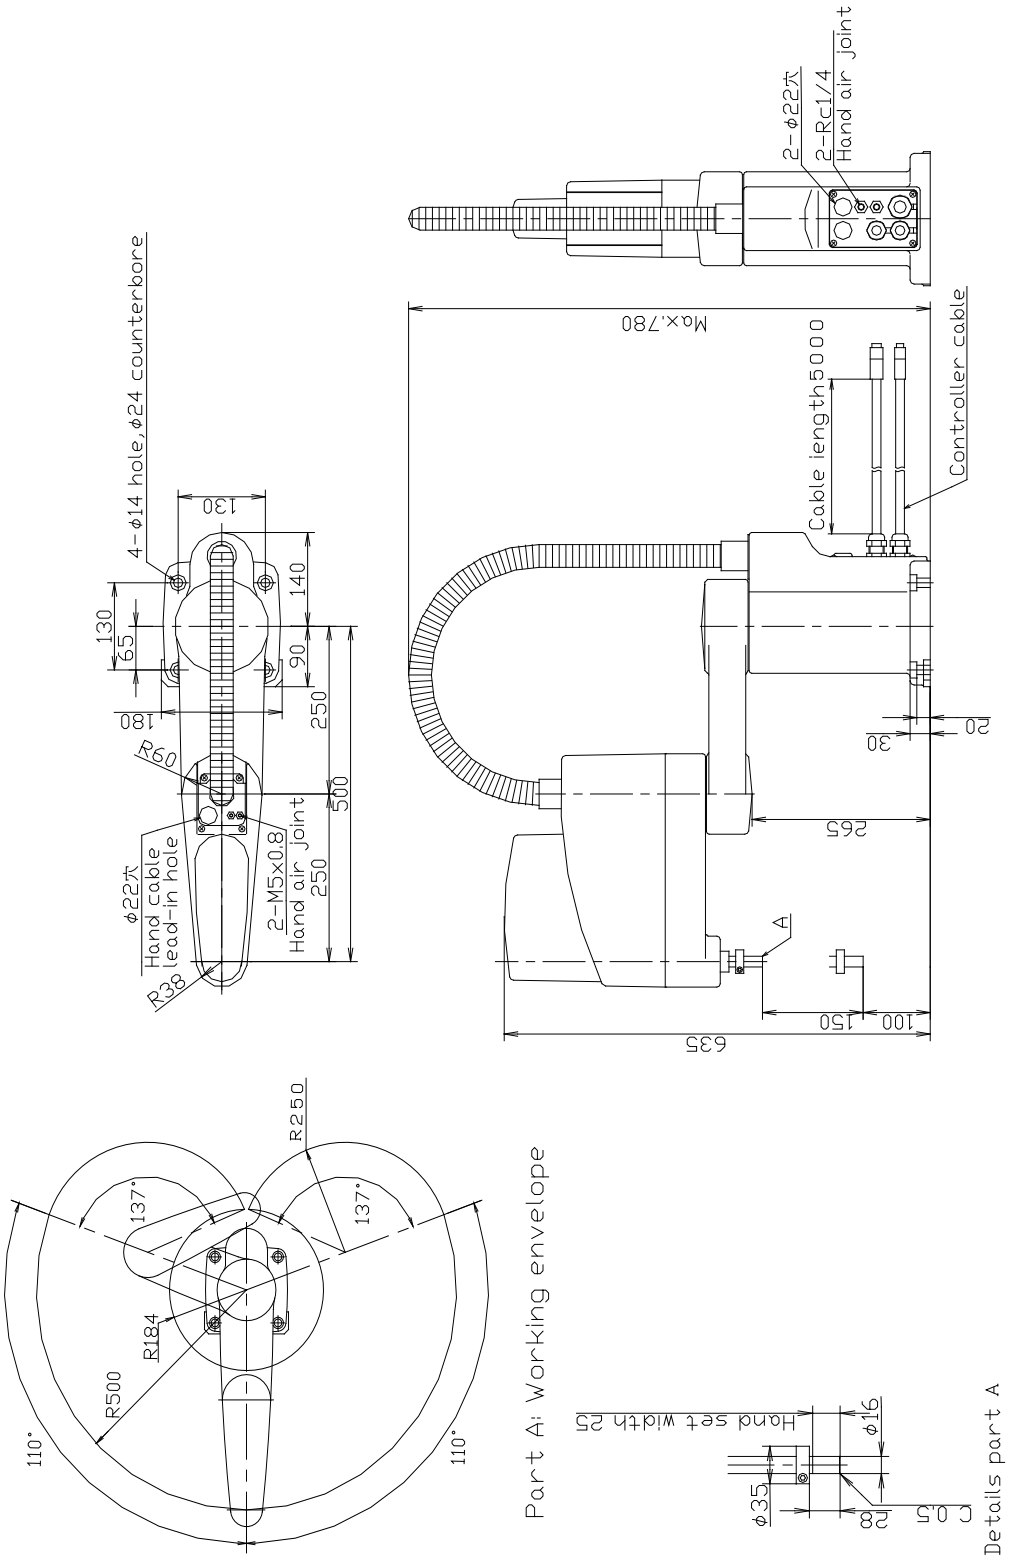


Fig. 2.1 External view of SR–504HSP robot

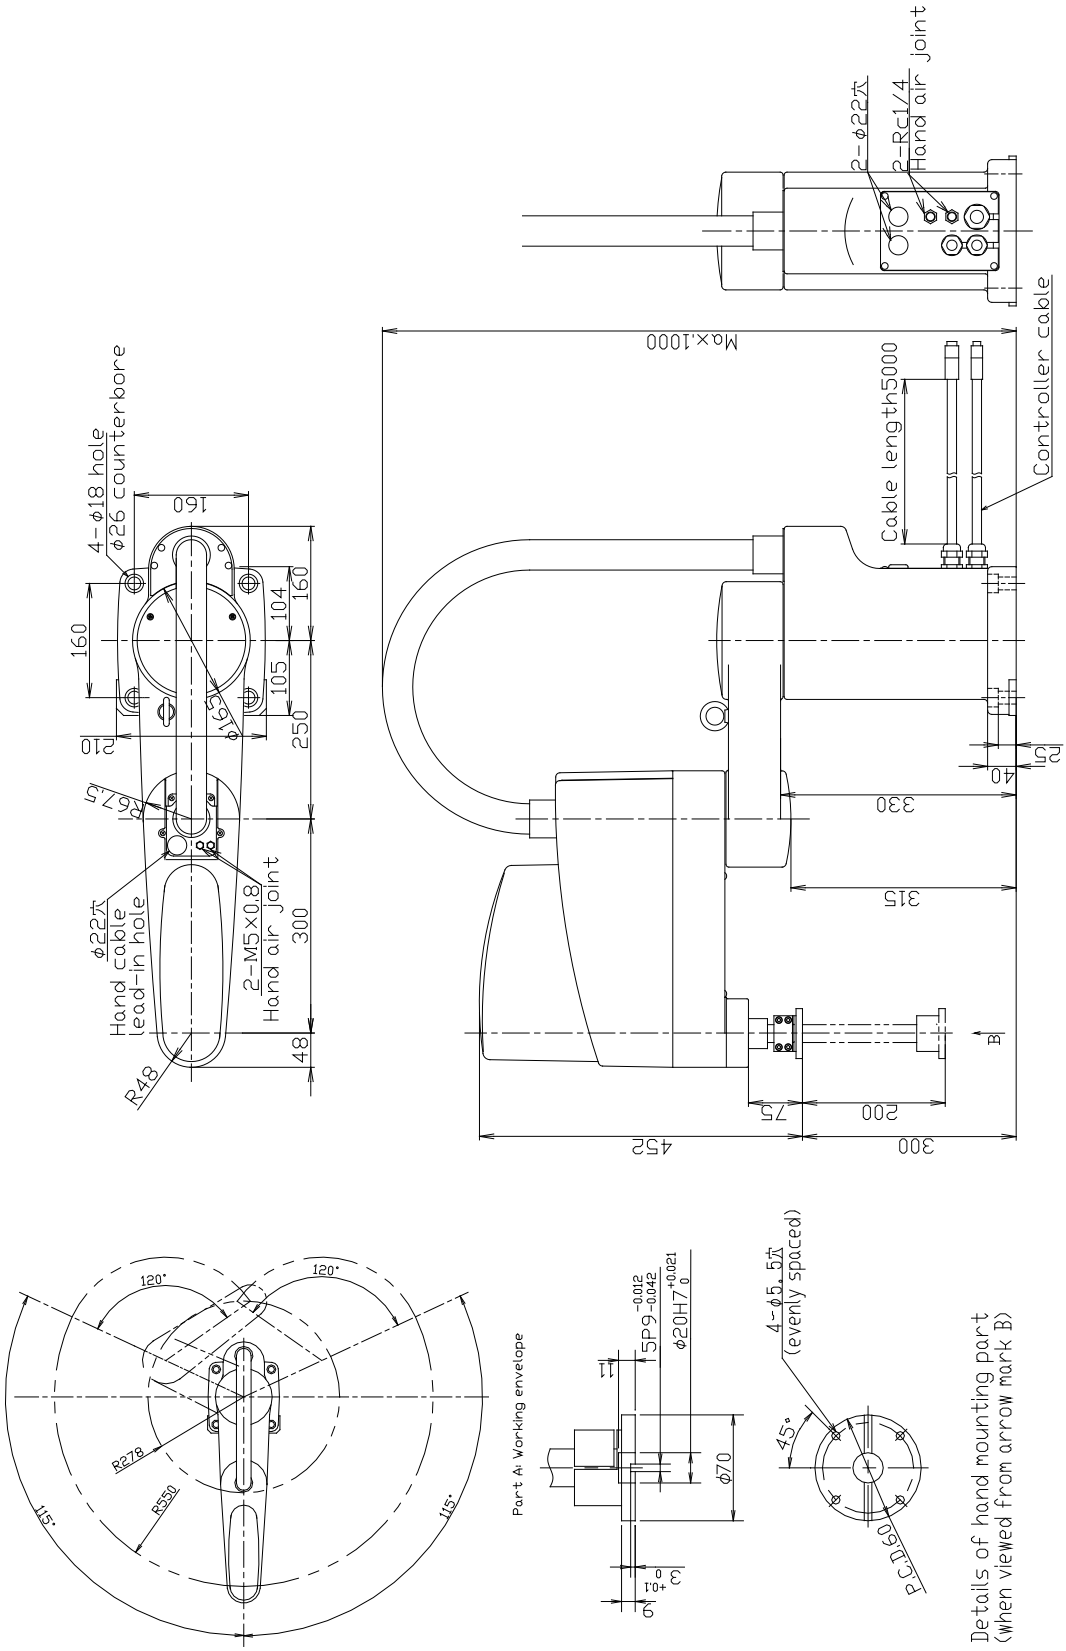


Fig. 2.2 External view of SR–554HSP robot

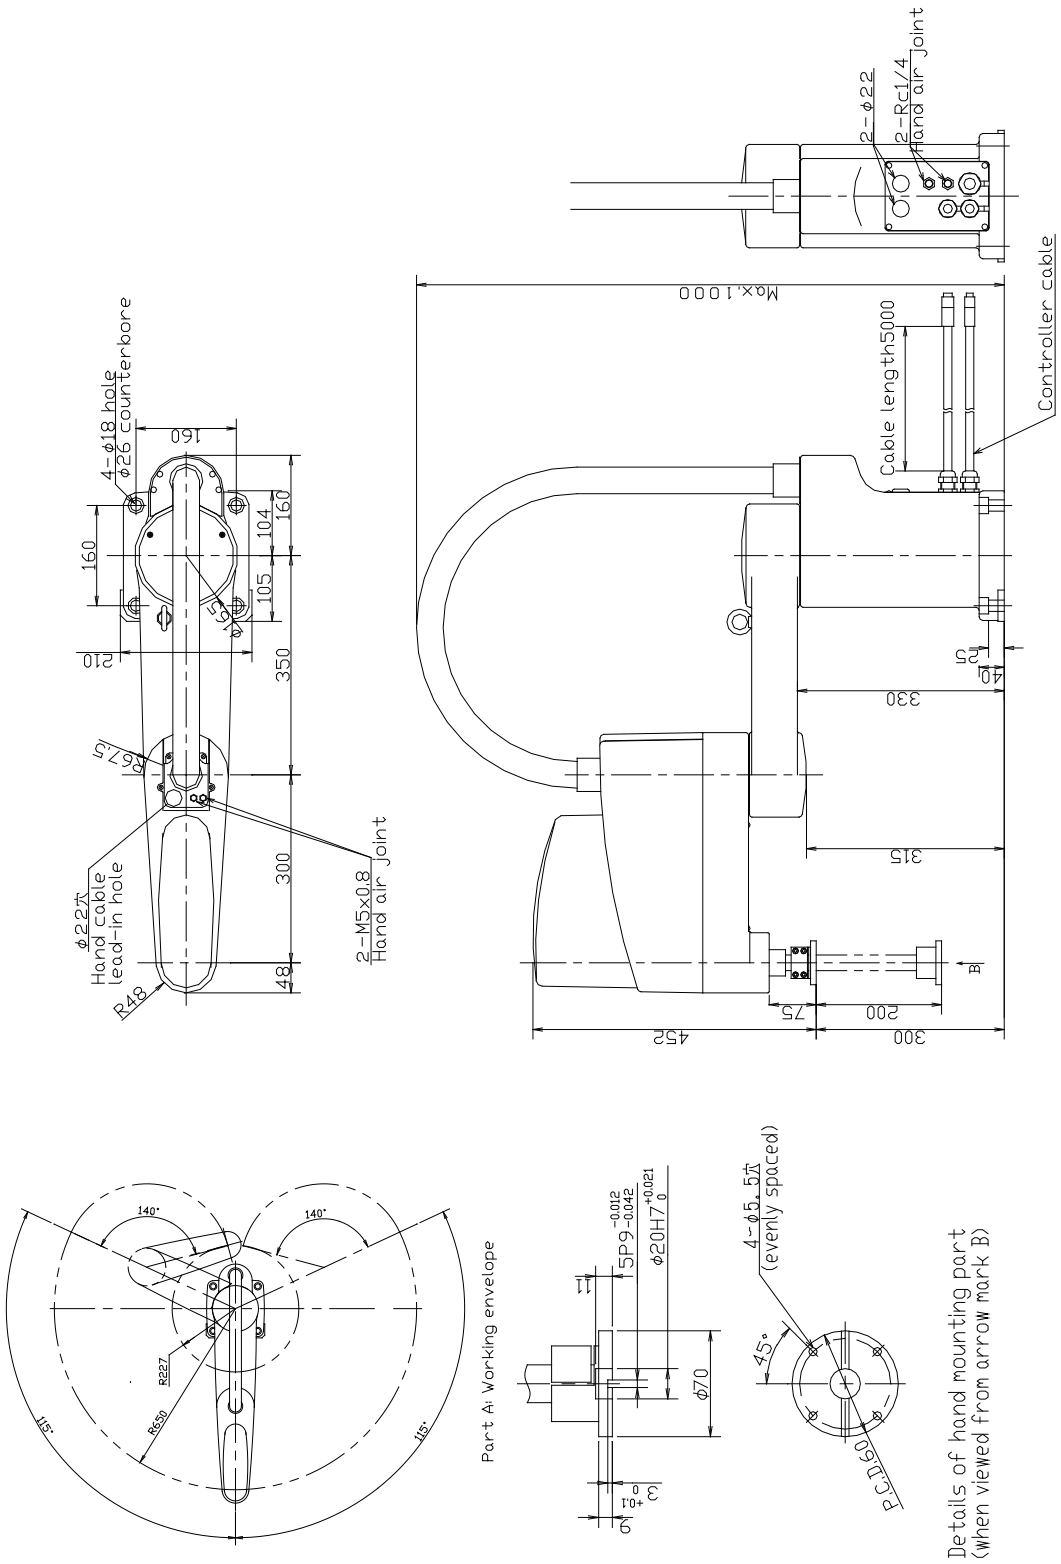


Fig. 2.3 External view of SR–654HSP robot

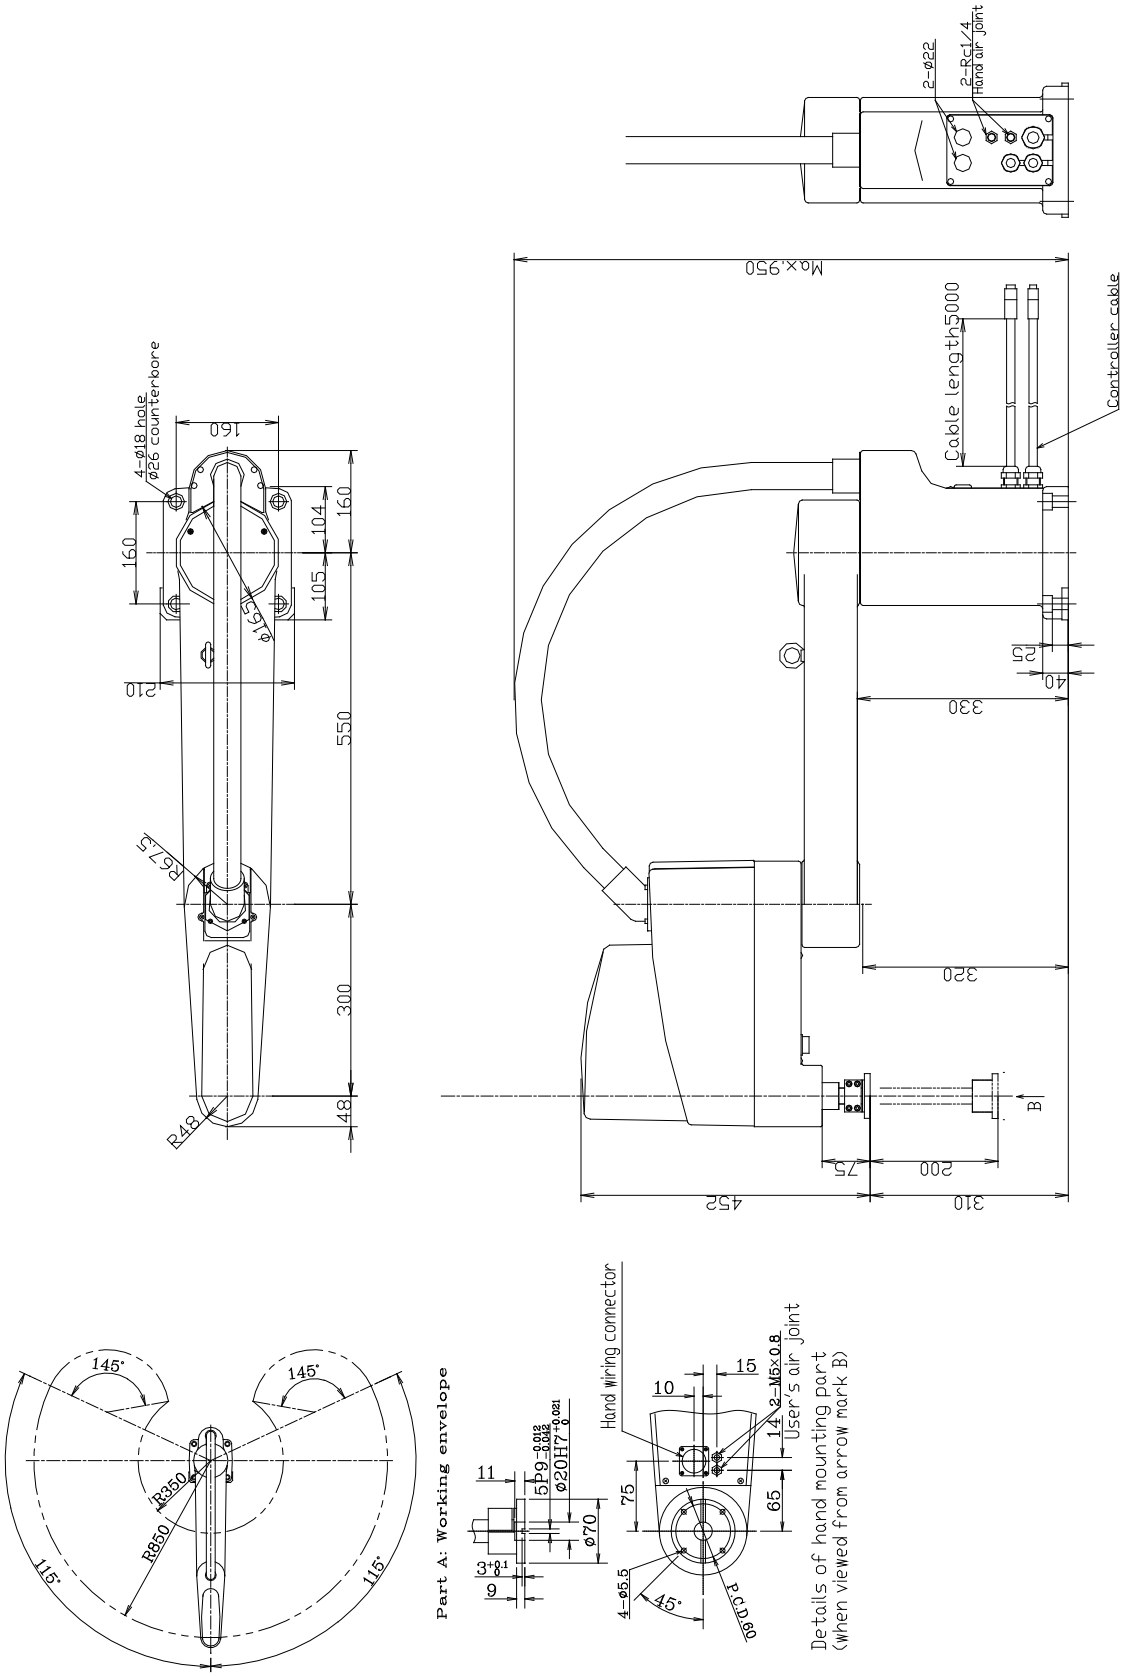


Fig. 2.4 External view of SR–854HSP robot

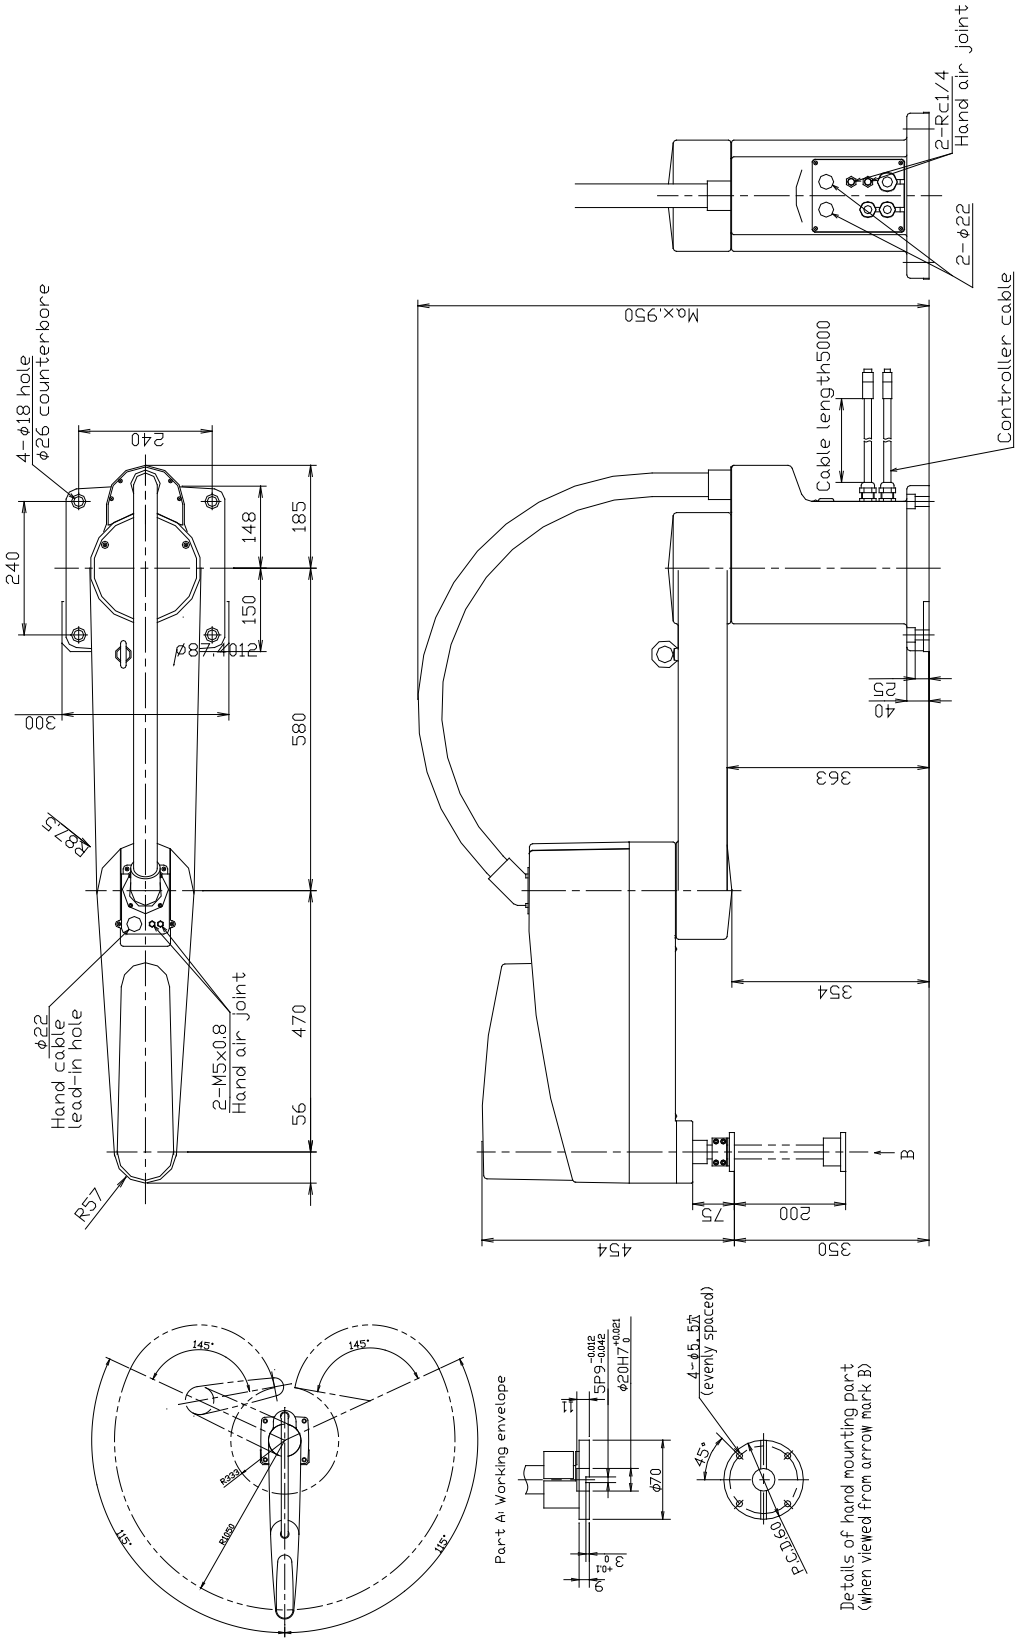


Fig. 2.5 External view of SR–1054HSP robot

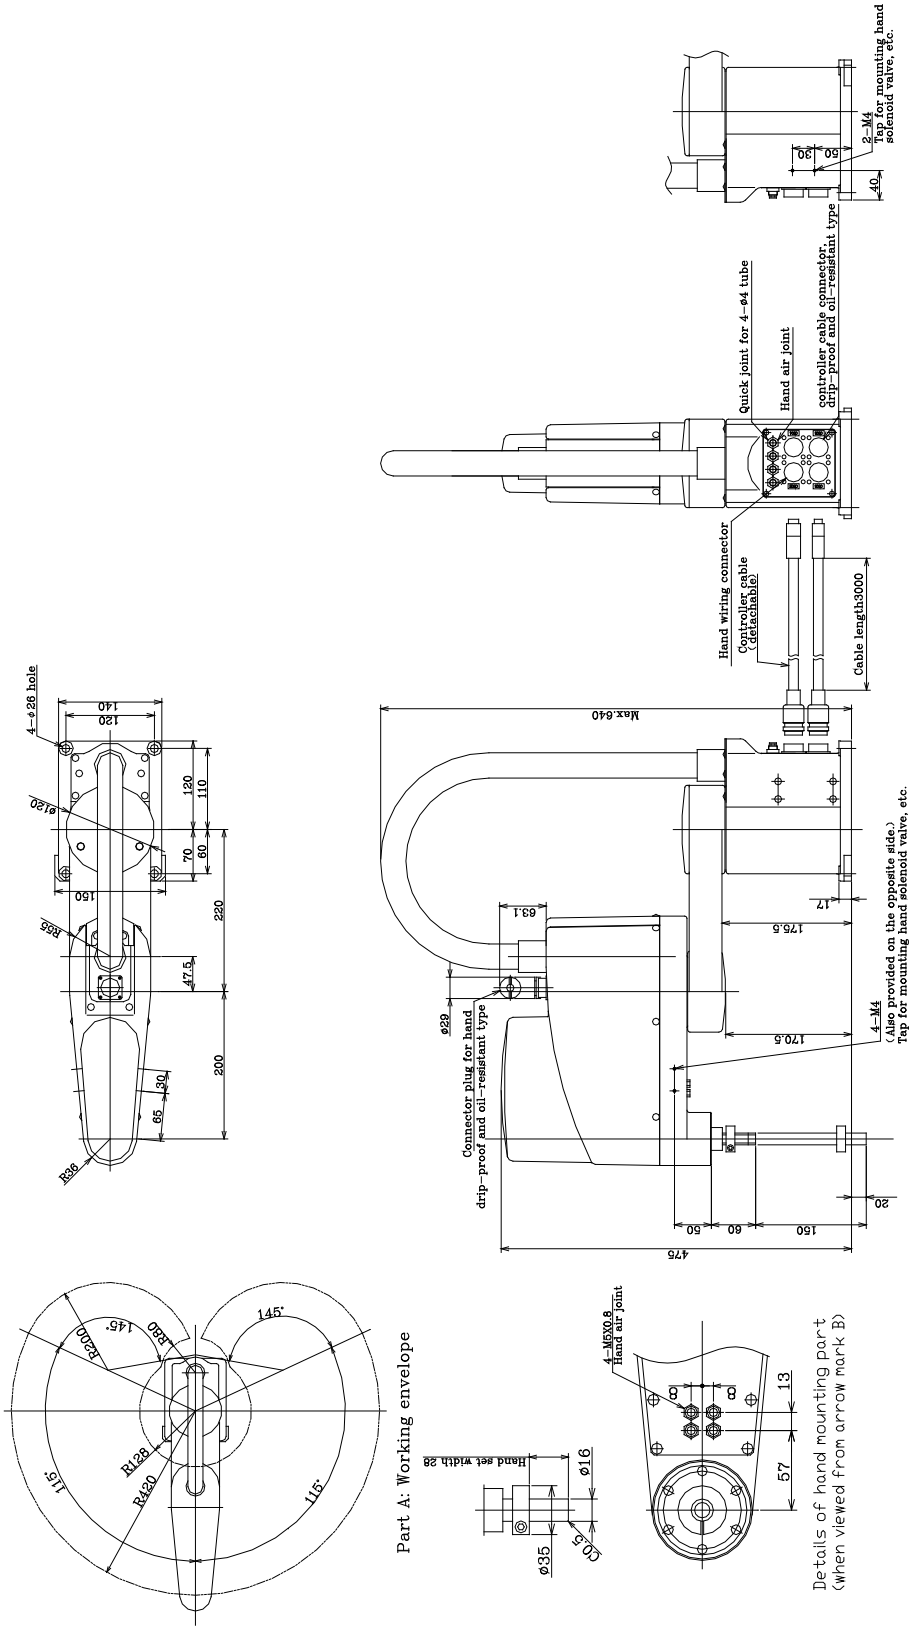


Fig. 2.6 External view of SR–424HSP robot

2.2.2 Working Envelope

Figs. 2.7 through 2.12 show the working envelope of the robot. Each axis can operate within the working envelope. To keep the robot from moving out of the working envelope by mis-operation, the robot is equipped with mechanical stoppers outside the working envelope. Additionally, soft limits are provided which may be set as desired by the user.

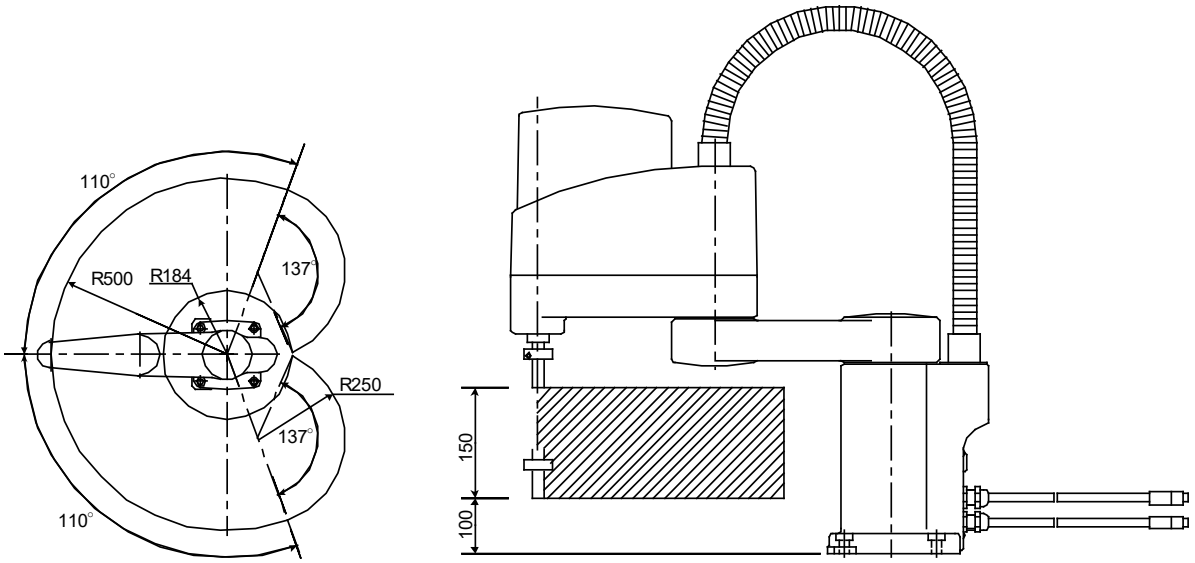


Fig. 2.7 SR–504HSP robot working envelope

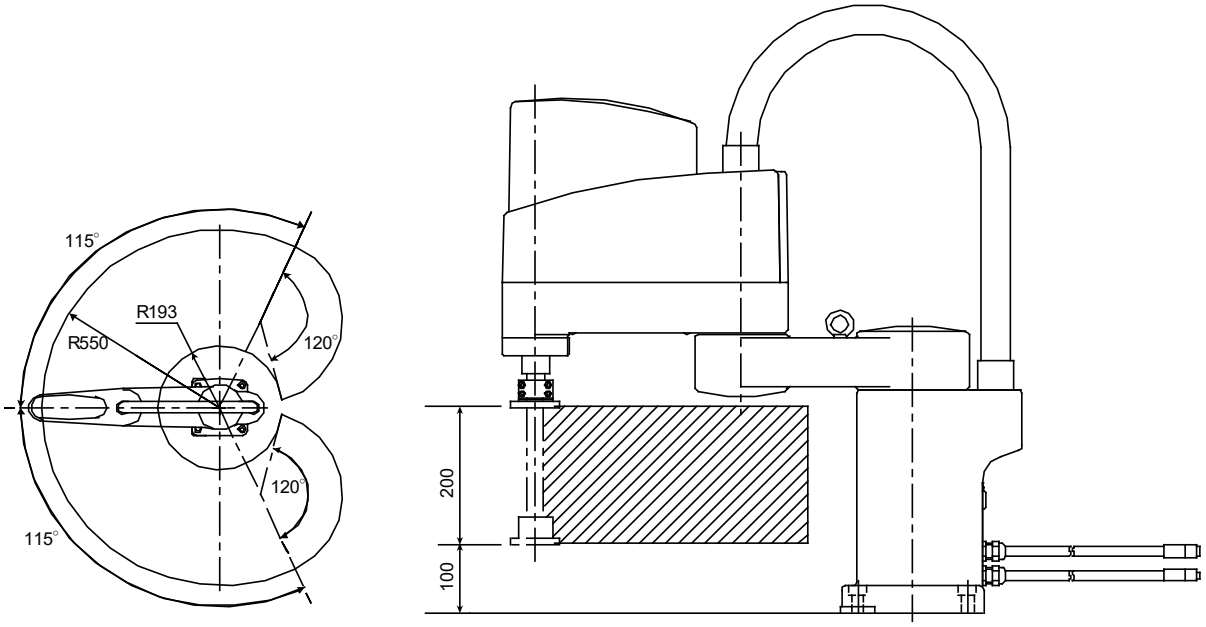


Fig. 2.8 SR–554HSP robot working envelope

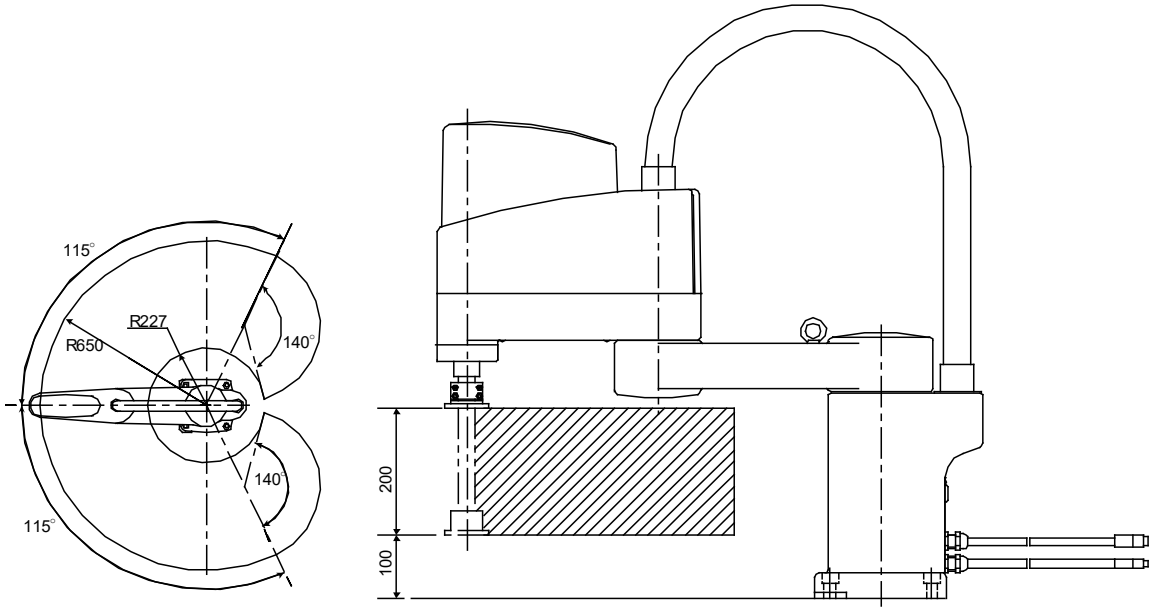


Fig. 2.9 SR–654HSP robot working envelope

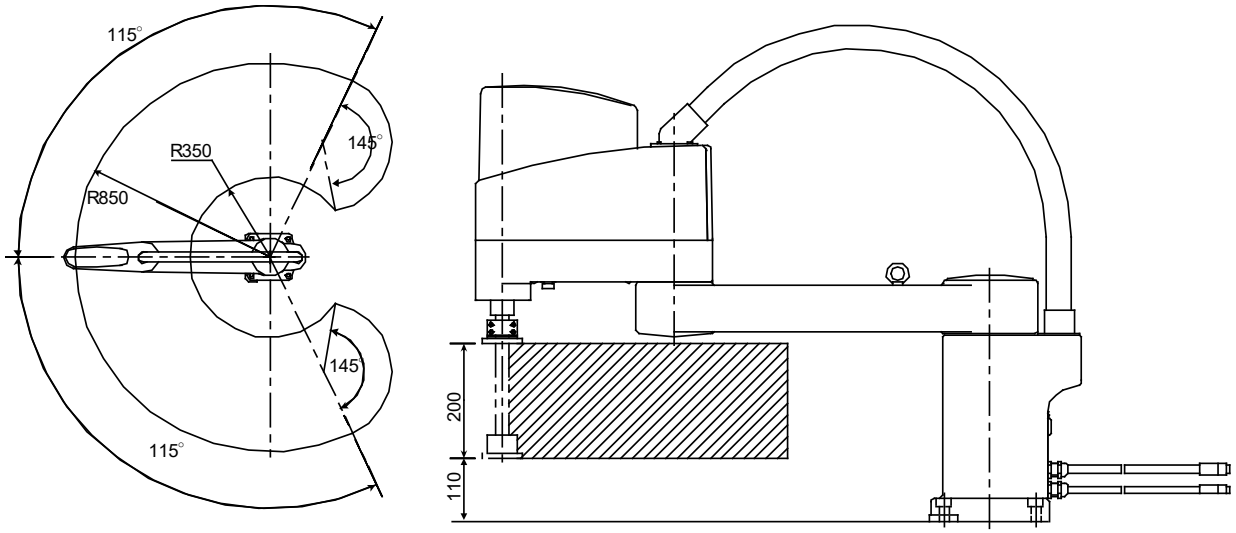


Fig. 2.10 SR–854HSP robot working envelope

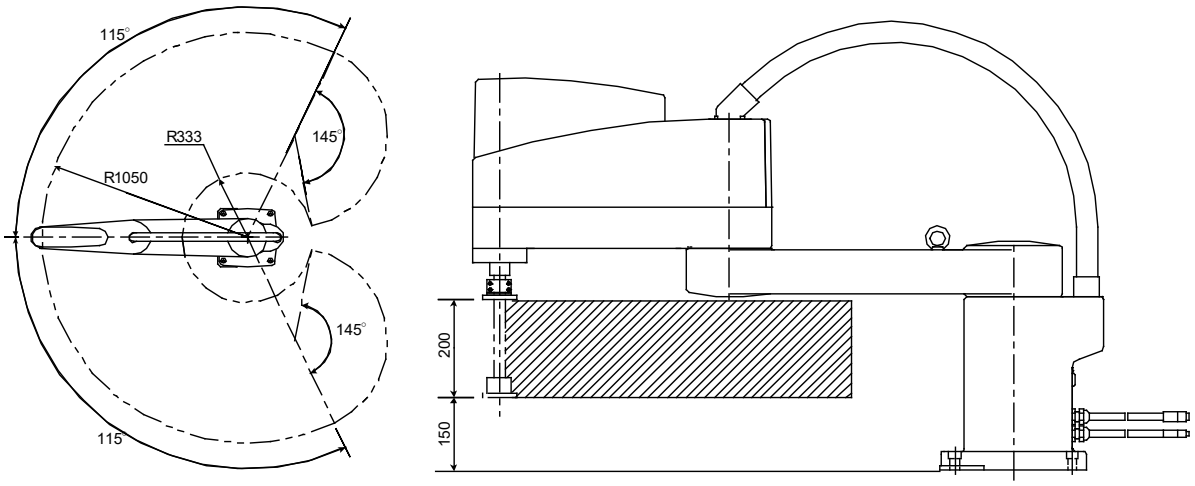


Fig. 2.11 SR–1054HSP robot working envelope

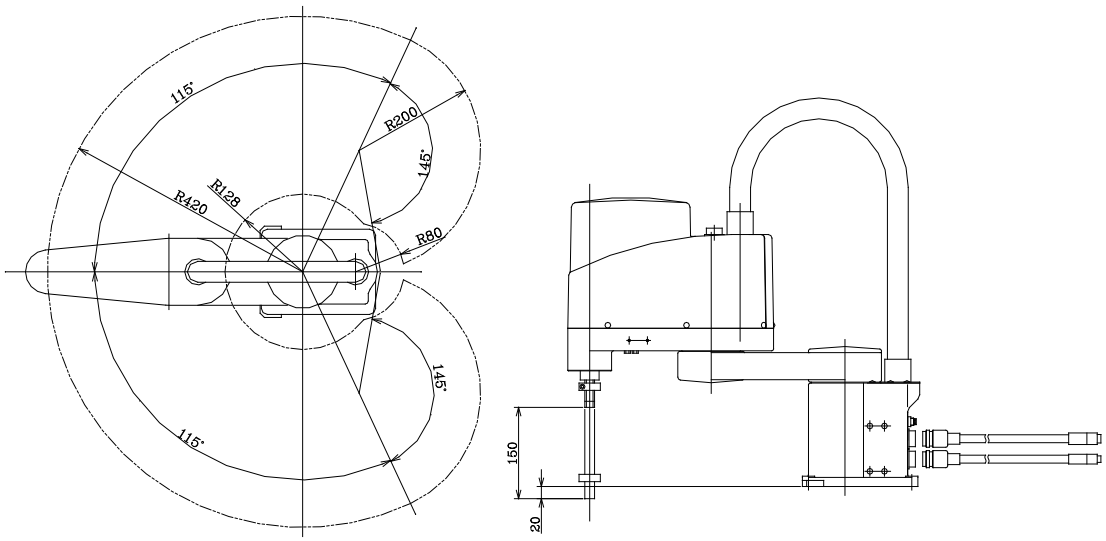


Fig. 2.12 SR–424HSP robot working envelope

2.2.3 Coordinate System

The robot's joint angle zero point (0° or 0mm position) is factory-calibrated according to the base reference planes. The base coordinate system is determined according to this calibration. Figs. 2.13 to 2.18 show the base coordinate system and zero position of each axis joint angle.

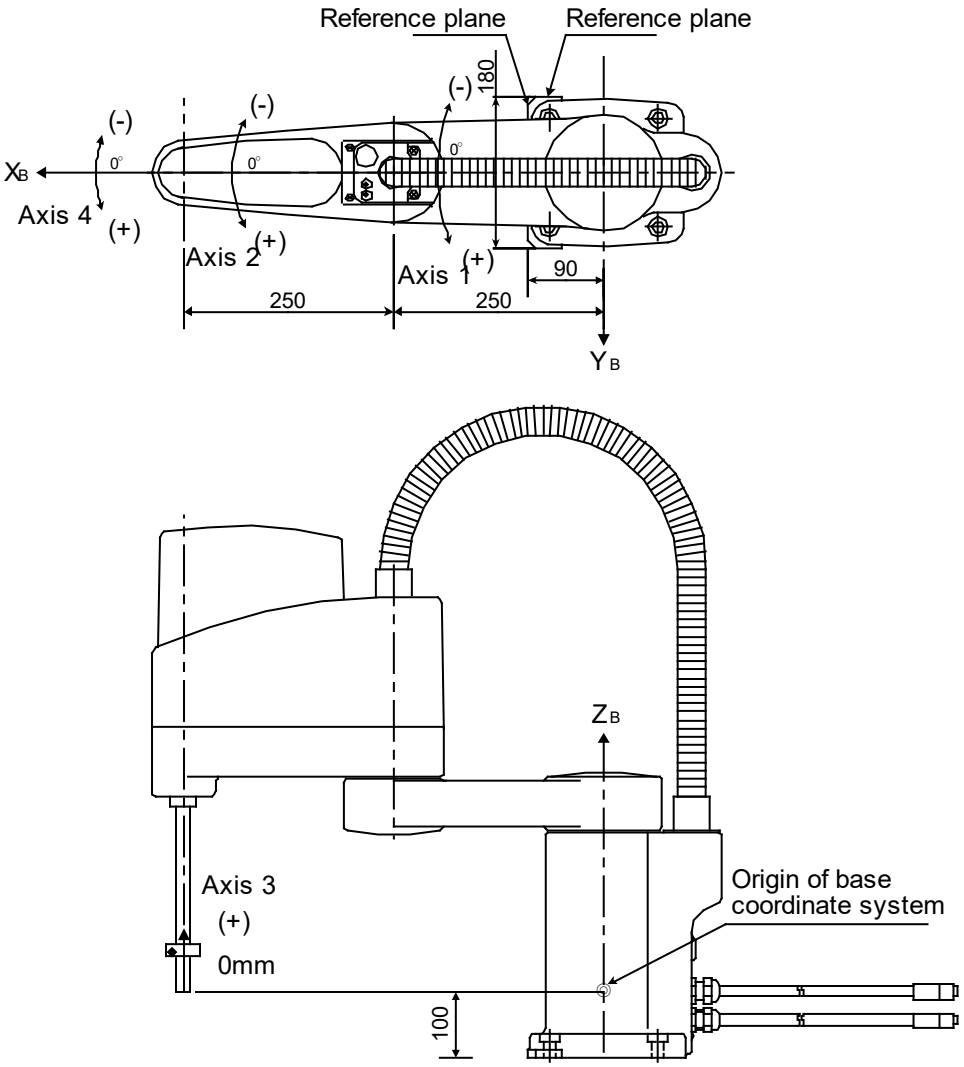


Fig. 2.13 SR–504HSP base coordinate system and joint angle zero point

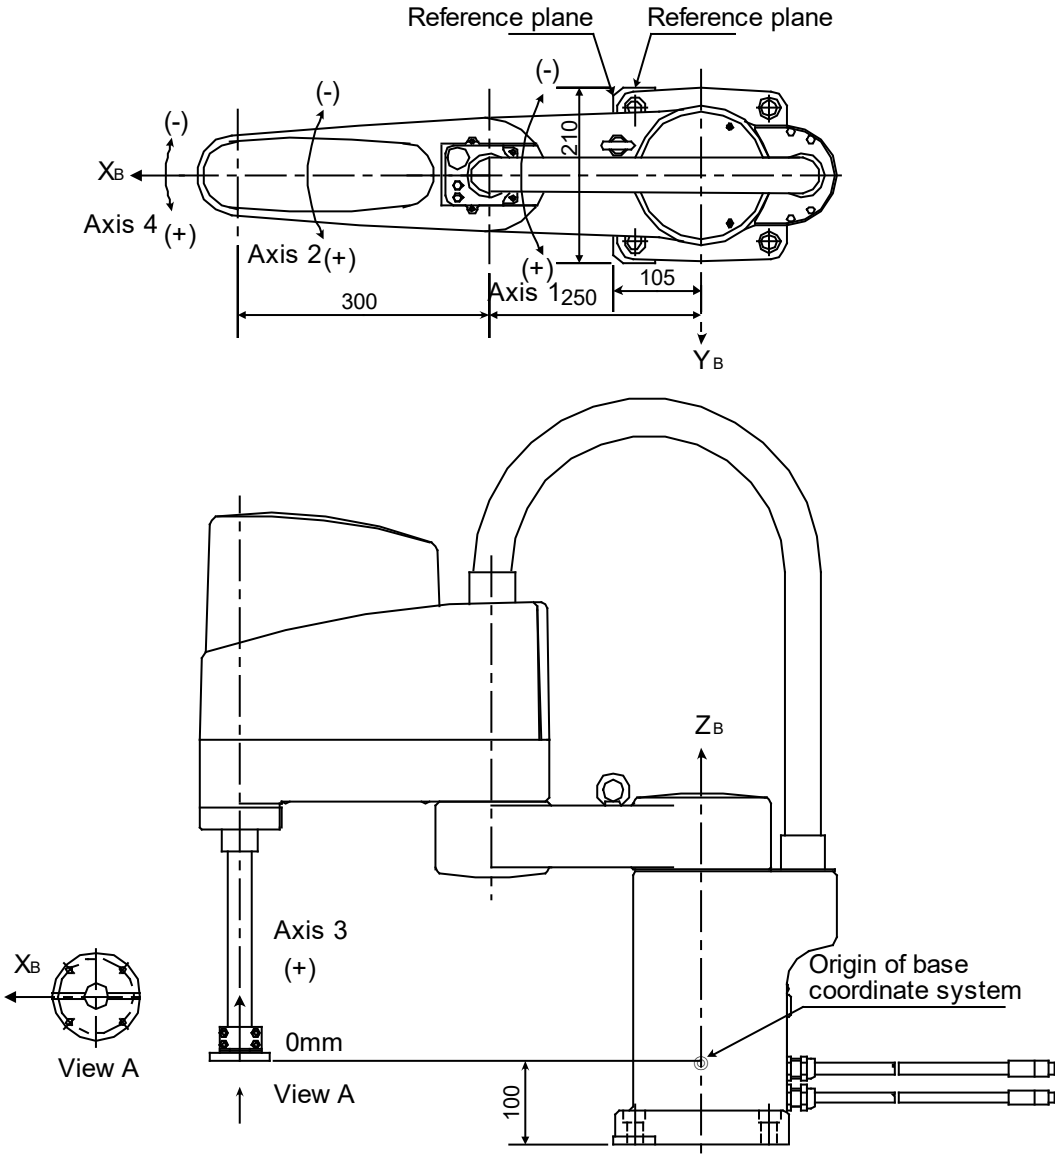


Fig. 2.14 SR–554HSP base coordinate system and joint angle zero point

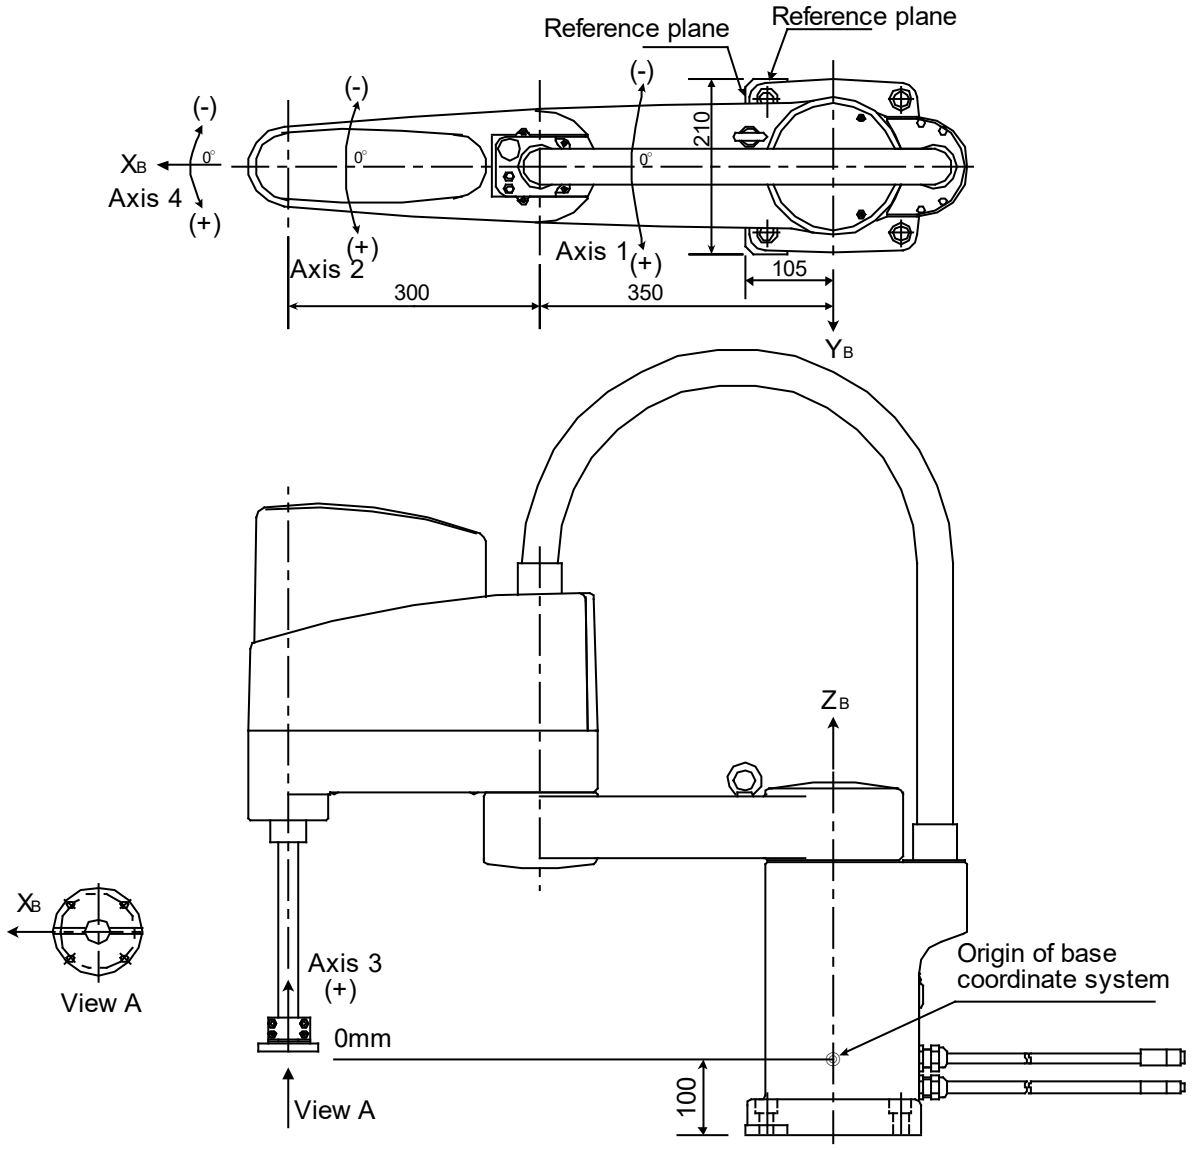


Fig. 2.15 SR–654HSP base coordinate system and joint angle zero point

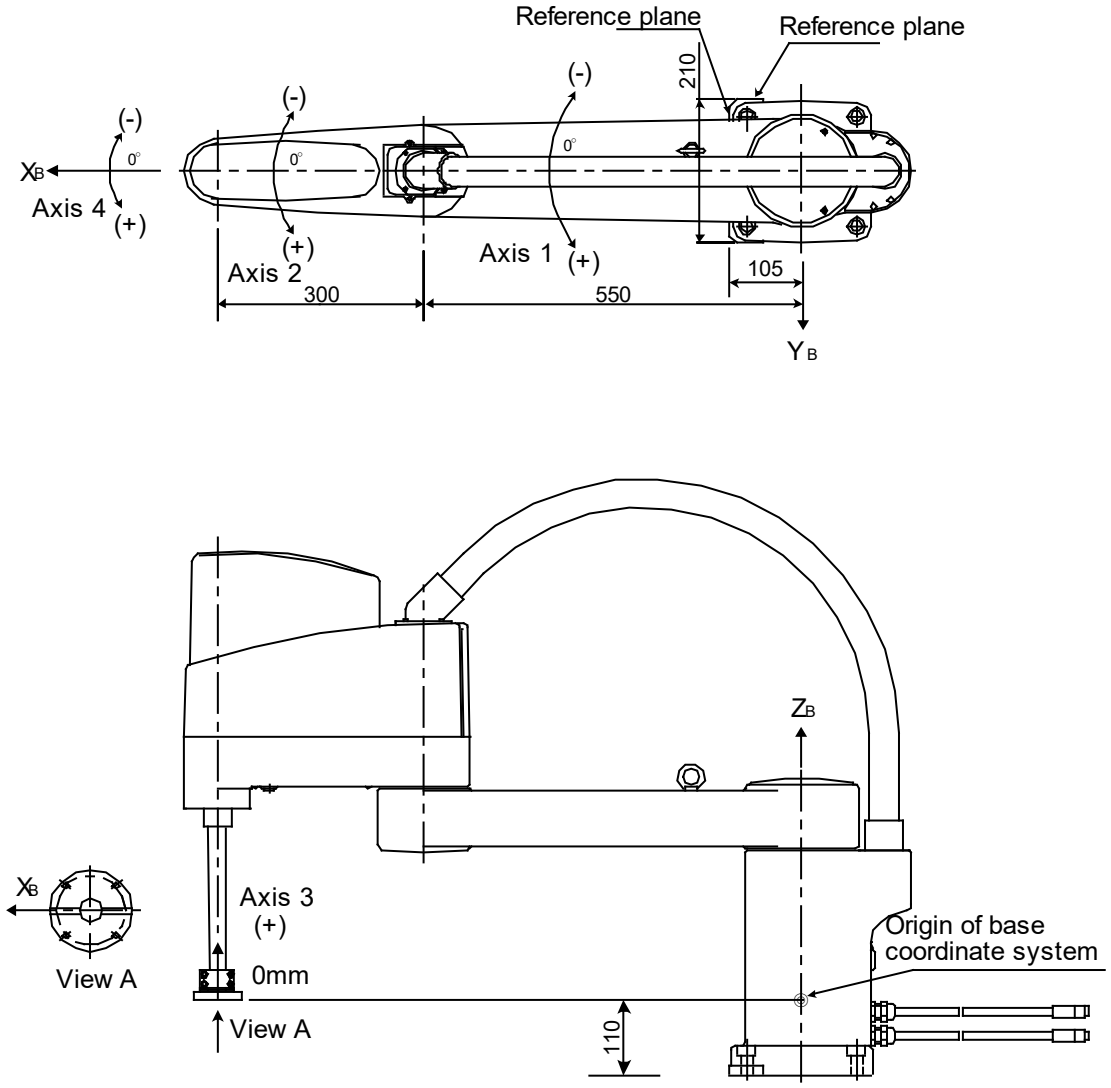


Fig. 2.16 SR–854HSP base coordinate system and joint angle zero point

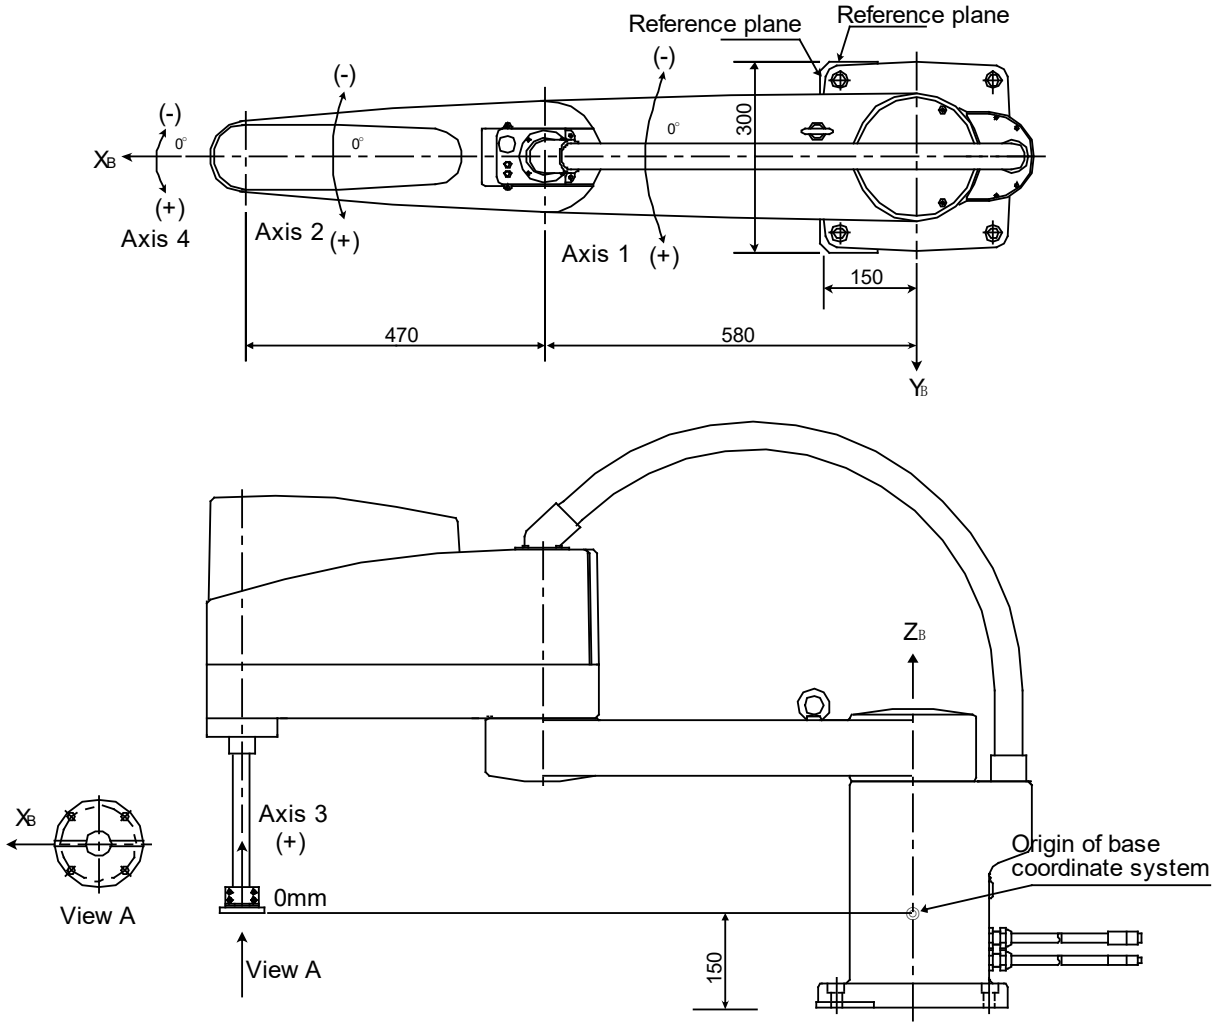


Fig. 2.17 SR–1054HSP base coordinate system and joint angle zero point

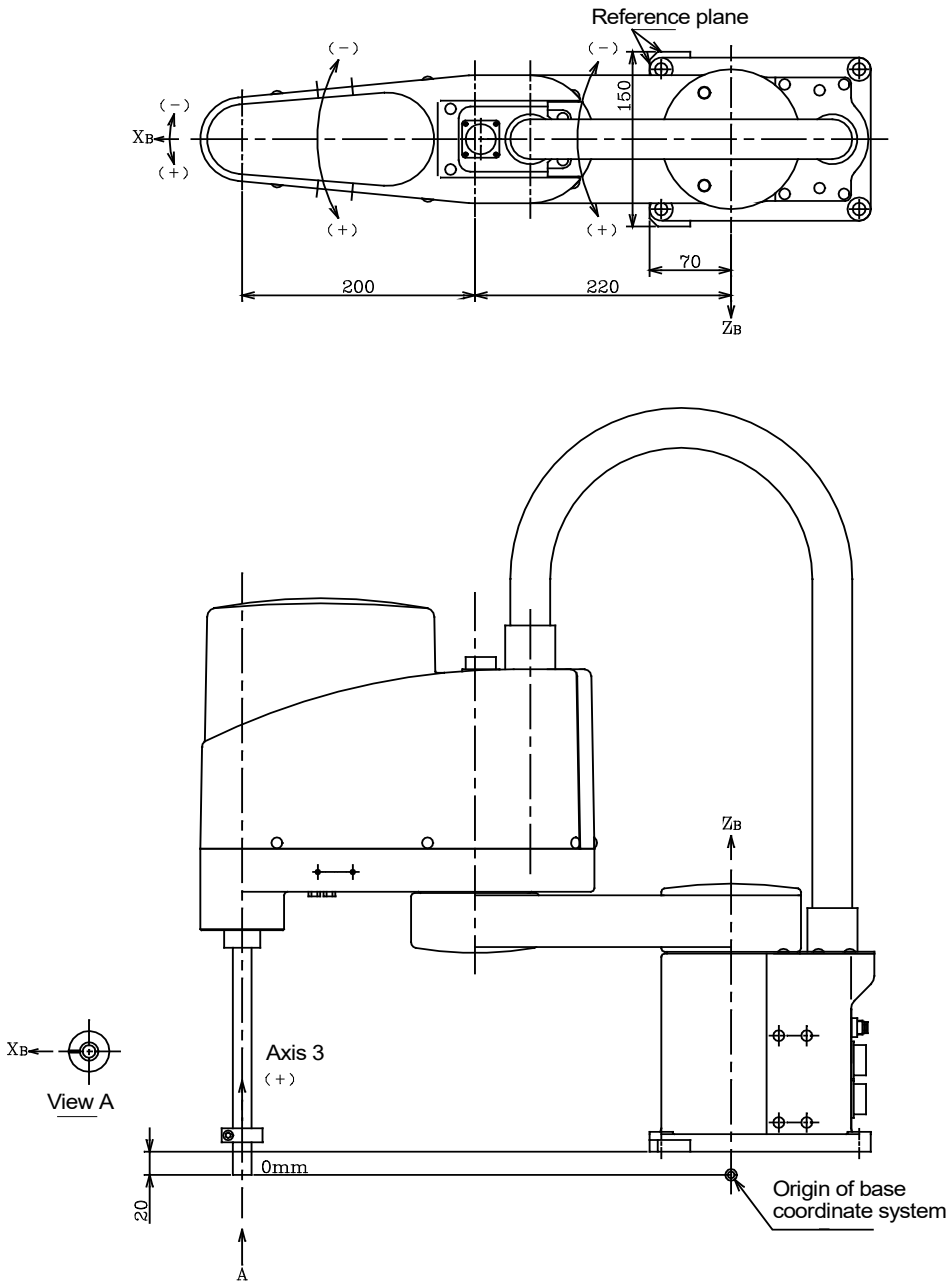


Fig. 2.18 SR–424HSP base coordinate system and joint angle zero point

2.2.4 Installing the Robot

The robot is secured, using the set holes on the base. Use M10 hexagon socket head cap bolts for the SR–424HSP, M12 hexagon socket head cap bolts for the SR–504HSP and M16 hexagon socket head cap bolts for the SR–554HSP, SR–654HSP, SR–854HSP and SR–1054HSP.
The robot installation method is shown in Figs. 2.19 to 2.22. Reference planes are provided on the base section and marked with "xxx".
To align the robot position in the base coordinate system, or to replace the robot, provide adequate reference planes. Then, contact such reference planes to the base reference planes and secure the robot.
The reference planes are factory-coated with anticorrosive agent. Before use, wipe out the agent with thinner.

Caution

- The robot will suddenly accelerate and decelerate during operation. When installing it on a frame, make sure that the frame has sufficient strength and rigidity.

  If the robot is installed on a frame that does not have sufficient rigidity, the vibration will occur while the robot is operating, and could lead to faults.

  When installing the robot on the floor, secure the robot with anchor bolts, etc.
- Install the robot on a level place. Failure to do so could lead to a drop in performance or faults.

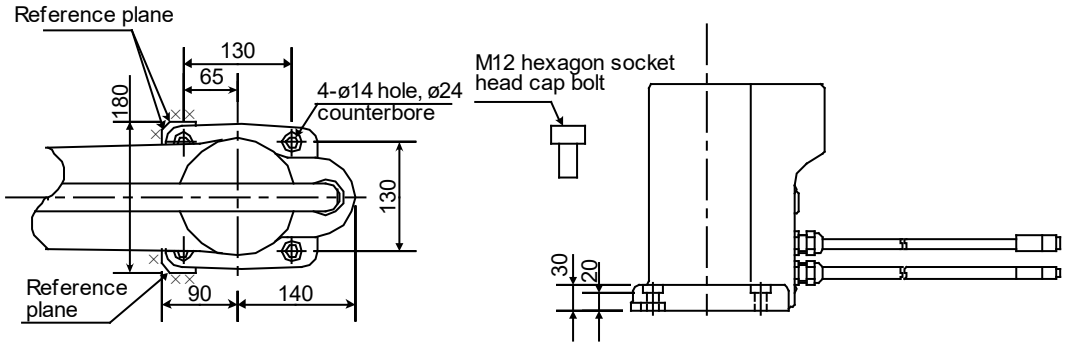


Fig. 2.19 Installing the SR–504HSP robot

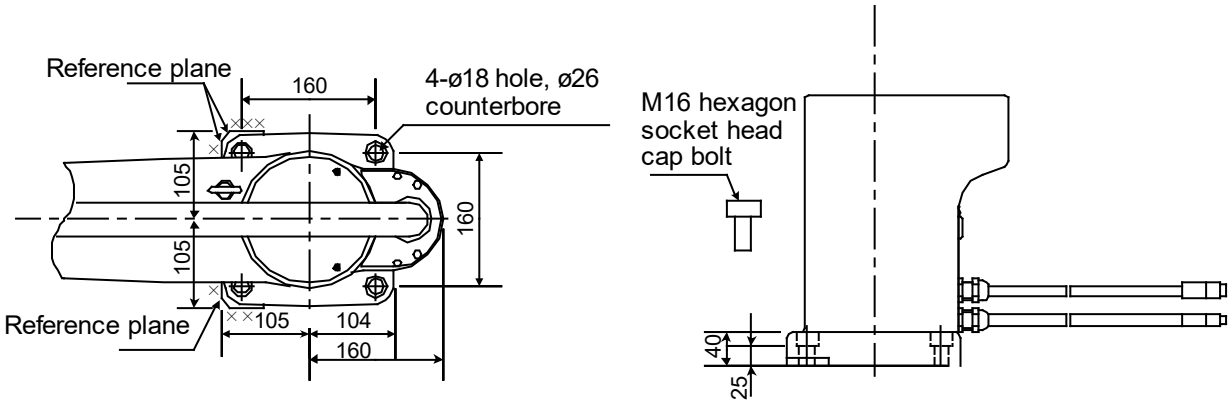


Fig. 2.20 Installing the SR–554HSP, SR–654HSP and SR–854HSP robots

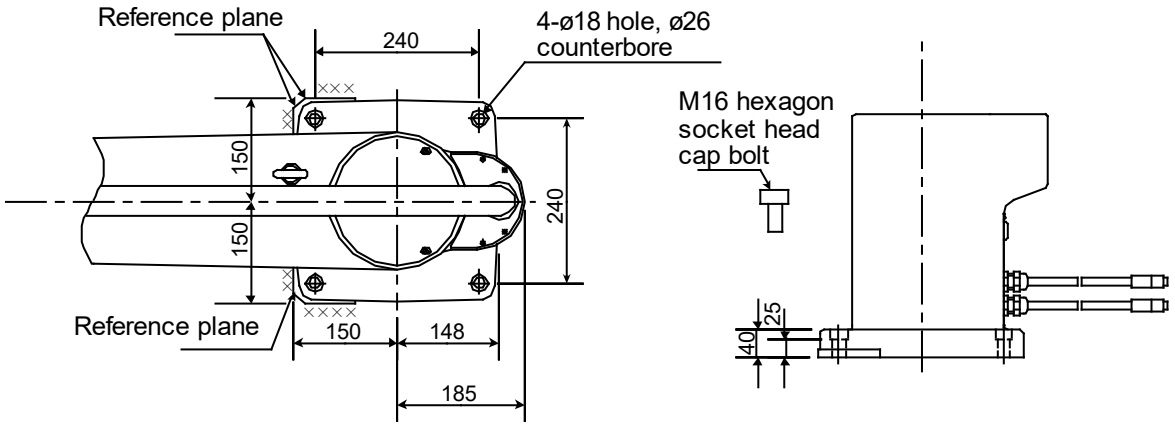


Fig. 2.21 Installing the SR–1054HSP robot


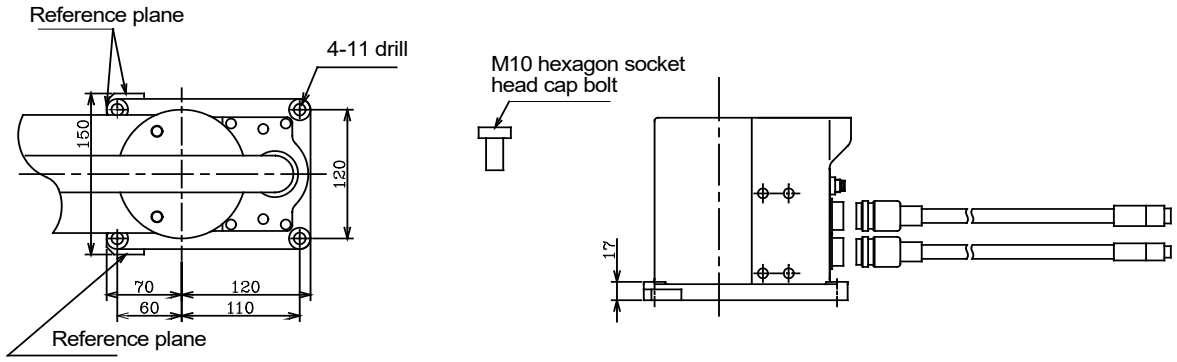


Fig. 2.22 Installing the SR–424HSP robot

2.3 Installing the Controller

2.3.1 External Dimensions

An external view of the controller is shown in Fig 2.23.

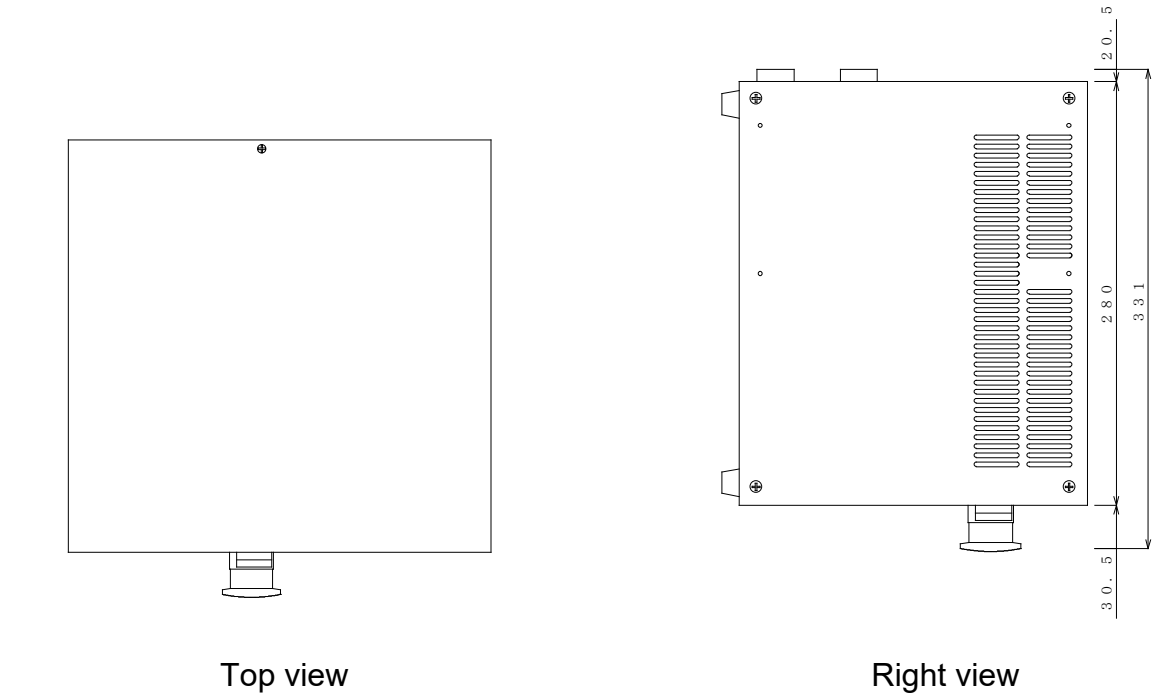

Top view　　Right view

Front view　　Rear view

Fig. 2.23　External view of TS2000 controller

2.3.2 Rack Mounting Dimensions

When mounting the TS2000 robot controller in a rack, set the side brackets using the screw holes provided on both ends of the front panel, and secure the controller to the rack. The side brackets [1] in Fig. 2.24 are optional.

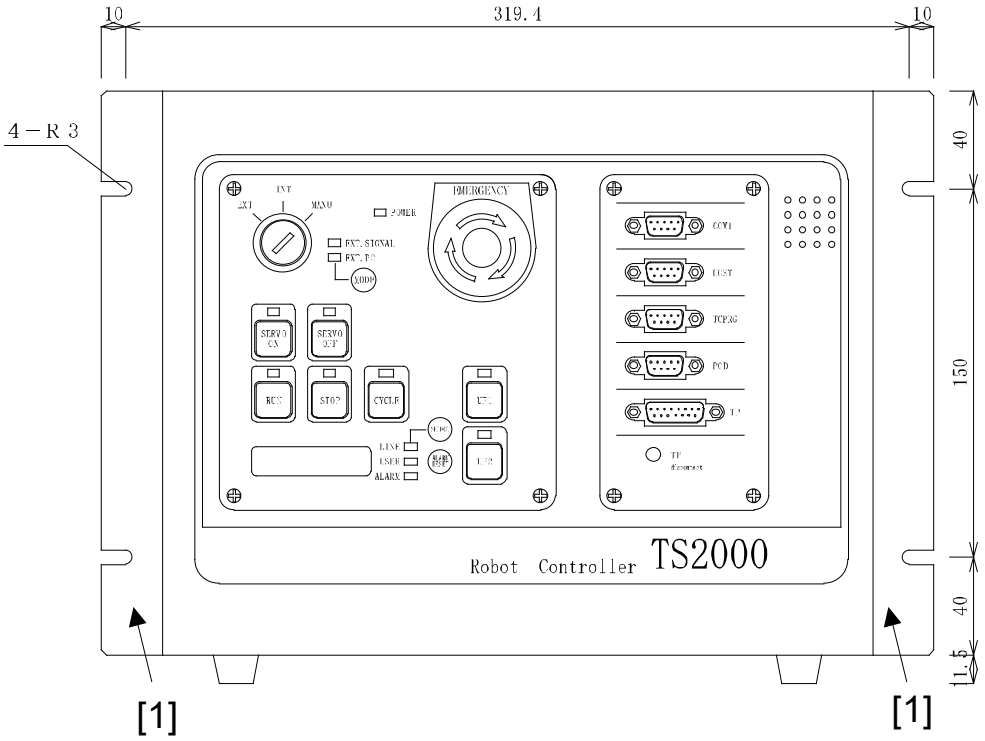


Fig. 2.24 Dimensions of controller rack mounting holes

2.3.3 Precautions for Rack Mounting

Pay attention to the following matters when rack-mounting the TS2000 robot controller.

(a) When mounting the controller in a rack, use the screw holes provided at both ends of the front panel, and secure the controller. (Optional side brackets are required.)

⚠ Caution

- If the rack is completely sealed, provide holes to allow the air to be let out, force-ventilate the rack with a fan, or cool it indirectly so that the heat will not be trapped in the rack.

  If the heat is trapped in the rack or controller, faults could occur.

(b) As the cable connectors are connected to the rear side of the controller, provide a space of 110 mm on the rear side.
For maintenance, the upper cover should be removed. (See Fig. 2.25.)

Keep this in mind when installing the controller. Specifically, the controller should be easily removable from the rack. Practically, be careful of the following points.

1) Arrange the cables around the rear side of the controller (so that the controller can be removed).
2) Arrange the cables between the controller and control panel when the control panel is separated.
3) Connect all cables in such a manner that the robot can be operated even if the controller is removed from the rack.

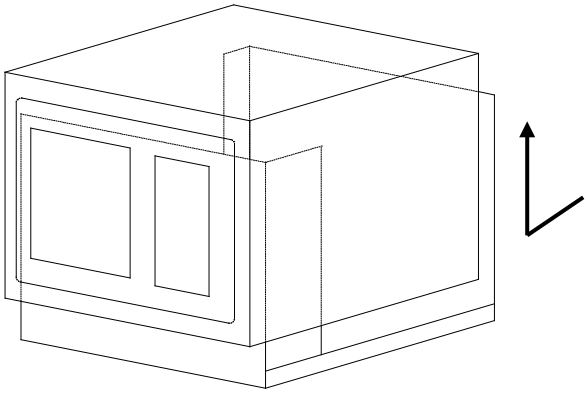


Fig. 2.25 Removing upper cover

(c) When the controller is mounted on the rack, the weight of the controller should be supported with the legs of the controller. Screw holes for rack-mounting the controller are used for securing the controller panel, and the weight of the controller cannot be supported only with the screws.

(d) On the front of the controller, a clearance of approx. 90 mm should be provided for connecting the connector of the teach pendant. Even if the teach pendant is not used, a clearance of approx. 50 mm is required for connecting a dummy plug.

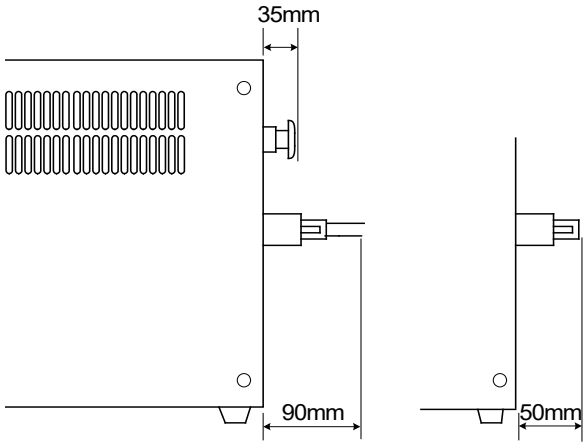


Fig. 2.26 Clearance of controller front panel

2.3.4 Precautions for Direct Installation

When two (2) or more controllers are used, it is necessary to provide a clearance of 50 mm or more in the horizontal direction and a clearance of 100 mm or more in the vertical direction between the controllers.

Caution

- Provide a ventilation space at the side of the controller so that the air vent holes are not blocked. The space equal to the length of the legs should be kept below the lower surface.

  Failure to do so could cause the cooling performance to drop or to faults.
- DO NOT stack the controllers. DO NOT place any object on top of them.

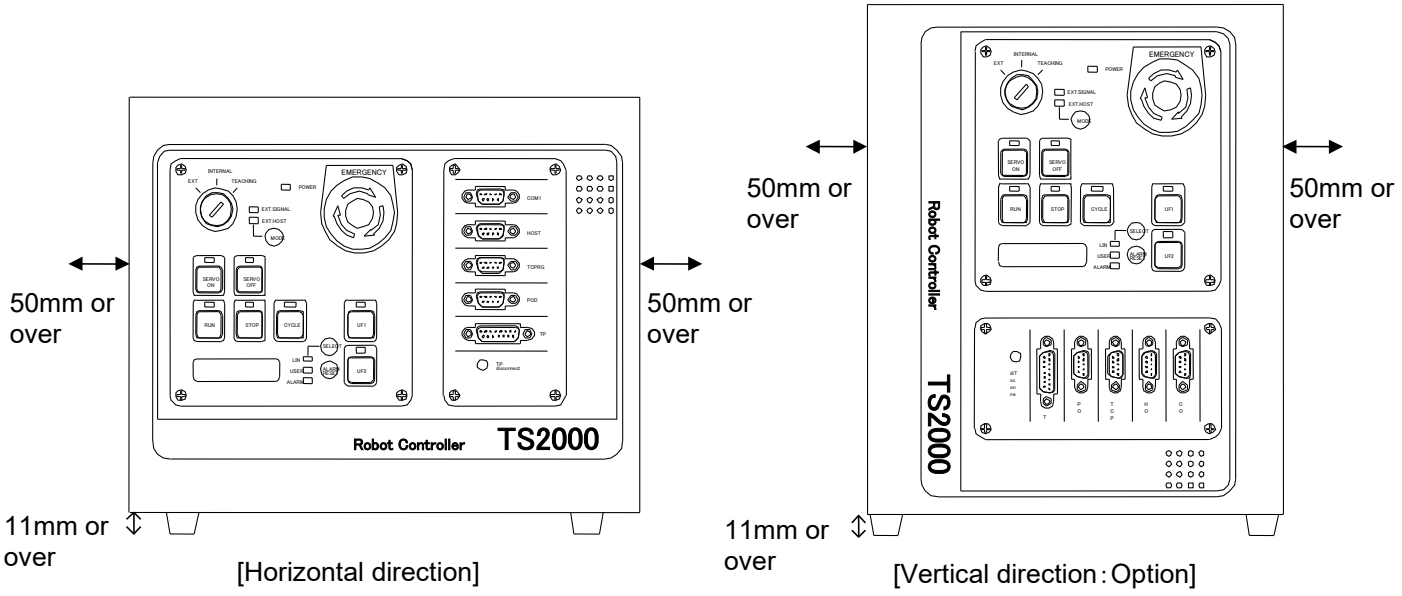


Fig. 2.27 Controller ventilation space

2.4 Precautions for Handling the Teach Pendant

Be careful of the following matters when handling the teach pendant.

Caution


- DO NOT drop the teach pendant or hit it against anything.
- DO NOT pull the cable running from the teach pendant.
- DO NOT press the switches on the teach pendant with anything sharp (like the tip of a knife, pencil, ball-point pen, etc.).
- DO NOT place or use the teach pendant near open flames.
- DO NOT leave the teach pendant in direct sunlight for a long period of time.

2.5 Safety Measures

a) When installing the robot, provide sufficient space to carry out the work safely.

b) Clarify the hazard zone, and provide a safety fence so that other persons cannot enter the zone easily. The hazard zone is the zone near the robot's working space where a hazardous state could occur if a person enters.

c) Provide a limit switch, photo switch or foot switch, etc., at the entrance of the safety fence to provide an emergency stop function that will stop the robot if a person enters the hazard zone. The emergency stop function should be an electrically independent close contact (closed in normal operation) with compulsive opening function and must not be automatically recovered.

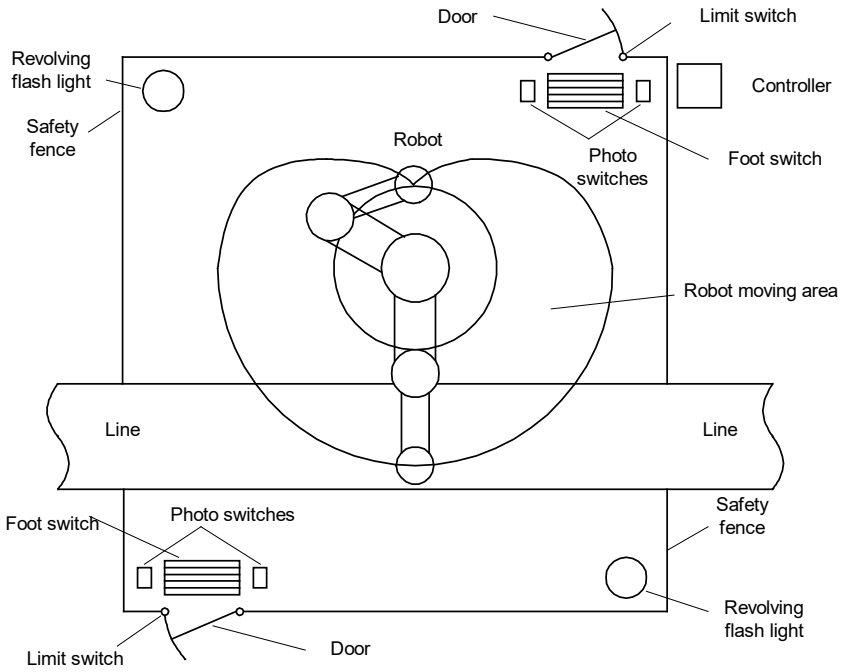

d) The controller should be installed at a place outside the hazard zone where the operator can view the robot movement.

2.6 Position Detector Backup Batteries

The robot has batteries to back up positional information on position detectors in its base. Unless the robot is used for a long period of time, the battery voltage will drop and the positional data of zero point will be lost.
Also, if the battery voltage for backup of the X8HC printed board SRAM of controller has dropped, absolute position data set by the user will be lost. To avoid this, replace each battery on a regular basis.

If the battery line voltage has dropped, an alarm of level 1 as shown below occurs. When this happens, replace the battery immediately.

Error code	Descriptions
1–049	Axis1 Battery alarm
1–065	Axis2 Battery alarm
1–081	Axis3 Battery alarm
1–097	Axis4 Battery alarm
1–113	Axis5 Battery alarm
1–129	Axis6 Battery alarm
1–145	MAIN Battery alarm

If the line voltage has dropped, an alarm of level 8 as shown below occurs. When this happens, replace the battery with a new one and adjust the zero point of the robot, if shifted, because there is a fear that the position encoder backup data has been lost. For the adjustment, see the Maintenance Manual.

Error code	Descriptions
8–065	Axis1 Encoder abnormal
8–097	Axis2 Encoder abnormal
8–129	Axis3 Encoder abnormal
8–161	Axis4 Encoder abnormal
8–193	Axis5 Encoder abnormal
8–225	Axis6 Encoder abnormal

Section 3

System Connections

3.1 Cable Wiring

This section describes the various types of cables and connectors and explains how these are to be connected.

3.1.1 Connector Arrangement on the Controller

The cables connected to the TS2000 robot controller are shown in Fig. 3.1.

[1] Power cable
[2] Motor cable
[3] Encoder cable
[4] Robot control signal cable (HANDi/o)
[5] External I/O signal cables
[6] Brake signal cable
[7] Distribution I/O signal cable

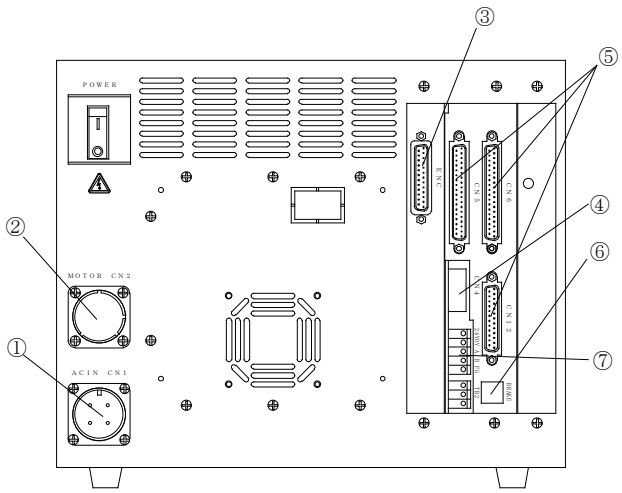


Fig. 3.1 Robot controller connector layout

In this Section, we explain how to connect cables [1] to [4]. For information on how to connect cables [5] to [7], refer to the Interface Manual.

3.1.2 Connecting the Power Cable "CN1"

([1] of Fig. 3.1; plug connector attached)

The power cable is used to supply the main AC power to the controller.

Table 3.1 Power supply specifications

Item	Specifications
Power supply	Single phase, AC 180 ~ 250 V, 50/60 Hz±1 Hz
Power supply capacity	SR–424HSP (1.3 kVA) SR–504HSP (1.5 kVA) SR–554HSP (2.4 kVA) SR–654HSP (2.4 kVA) SR–854HSP (2.4 kVA) SR–1054HSP (2.6 kVA)
Instantaneous power failure	40 msec or less
Grounding	Grounding with grounding resistance of 100 Ω or less

The connector is CN1 ([1] of Fig. 3.1)
The cable is not an accessory, so use the attached plug connector connected to CN1 on the controller side to manufacture a cable.

CN1 plug connector	Type: JL04V–6A18–10SE–EB	Maker:	Japan Aviation Electronics Industry
CN1 cable clamp	Type: JL04–18CK	Maker:	Japan Aviation Electronics Industry
Wire	3.5 mm^2 ~ 5.5 mm^2		

Wires are to be soldered to the connector (JL04V–6A18–10SE–EB).

Danger

- Always use the designated wire. Failure to do so could lead to fires or faults.
- When connecting the connector and wires, make sure not to mistake the terminal arrangement.
- After making the connection, use a tester, etc., to confirm the connection.

For the terminal arrangement, see Para. 3.1.7.

Caution

- Unless the main power is normally supplied to the controller due to phase defect or voltage drop, an error of 8–027 “Slow Charge error” occurs. When this happens, make sure that the line voltage at the controller power connector satisfies the specified input power of the controller, and that the same line voltage is stabilized.
- For details of the 8–027 error, see Para. 13.8 of the Operator’s Manual.

3.1.3 Connecting the Motor Cable "CN2"

([2] of Fig. 3.1) (Cable attached)

The motor cable connects the controller and robot and supplies the power required to rotate the motor from the controller servo driver to each robot motor. The connector for connecting the motor cable is CN2 ([2] of Fig. 3.1). Location of the motor cable on the robot side is [1] in Fig. 3.2 or [1] in Fig. 3.3.

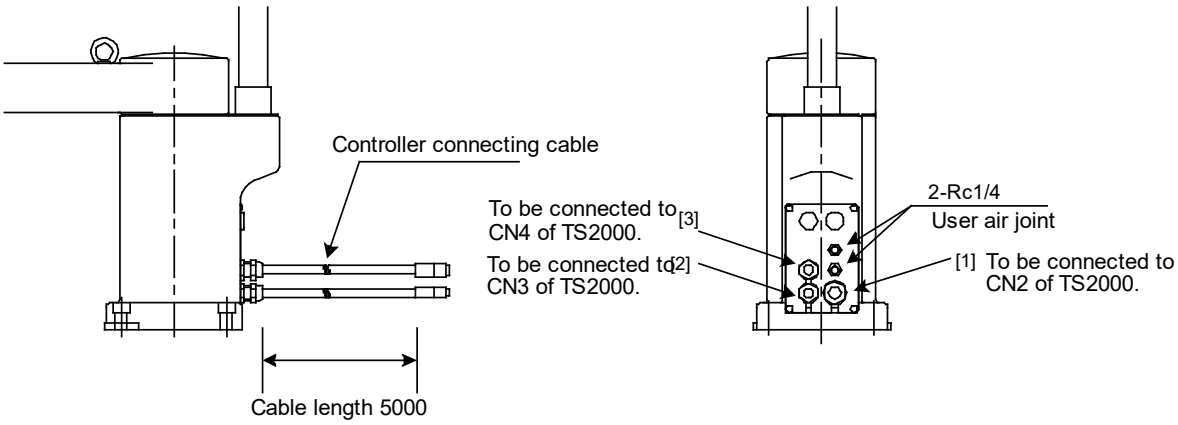


Fig. 3.2 Robot side connector arrangement

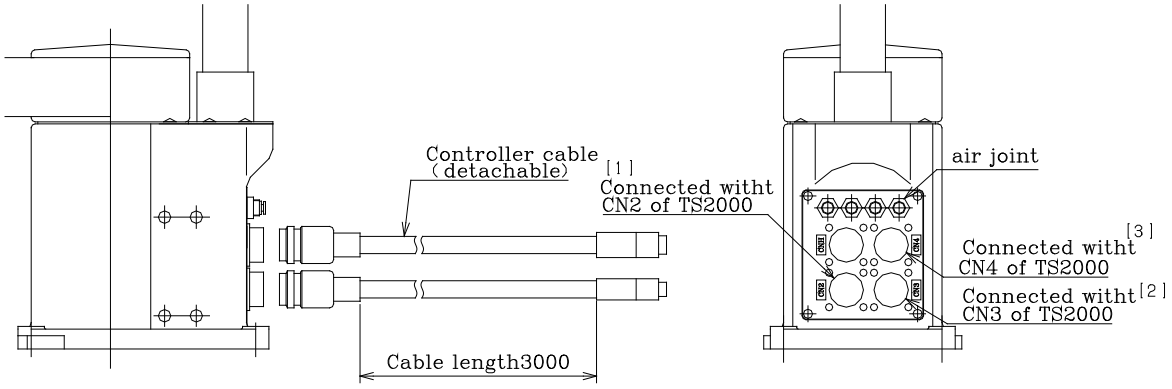


Fig. 3.3 Robot side connector arrangement (SR–424HSP)

3.1.4 Connecting the Encoder Cable "CN3"

([3] of Fig. 3.1) (Cable attached)

The encoder cable is a signal line used to transmit a signal from the rotation angle detecting encoder of each robot axis to the controller.
The connector for connecting the encoder cable is CN3 ([3] of Fig. 3.1). Location of the encoder cable on the robot side is [2] in Fig. 3.2 or [2] in Fig. 3.3.

3.1.5 Connecting the Robot Control Signal Cable "CN4"

([4] of Fig. 3.1) (Cable attached)

The robot control signal cable is used for the brake ON/OFF signals for locking the motor shaft, hand control signals and others.
The connector for connecting the robot control signal cable is CN4 ([4] of Fig. 3.1).
Location of the robot control signal cable on the robot side is [3] in Fig. 3.2 or [3] in Fig. 3.3.

3.1.6 Inserting and Removing Cables

Caution

- Before inserting or removing any controller cable, be sure to turn off the "POWER" switch.
- When removing a cable, be sure to pull the plug and not the cord. Otherwise, you may damage the cable.

a) Circular connectors: CN1, CN2
First, completely insert the connector on the cable side into the controller connector. Then, turn the cable side lock screw to the right to clamp the cable. A loose plug can cause an accident or failure, so be careful and do the job right. To remove a connector, turn the lock screw to the left and pull out the cable side connector.

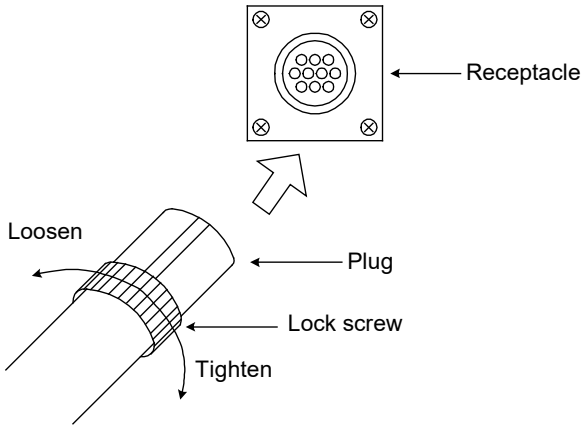


Fig. 3.4 Inserting and removing a circular connector

b) Square connectors: CN3, CN4, CN5, CN6, CN12
First, completely insert the cable side connector into the controller connector. Then, tighten the lock screws on both ends of the cable side connector with a screwdriver. A loose plug can cause a contact failure or other accident, so be careful and do the job right.
To remove the connectors, first loosen the lock screws, then pull out the cable side connector. CN4 is the quick-operated lock type connector.


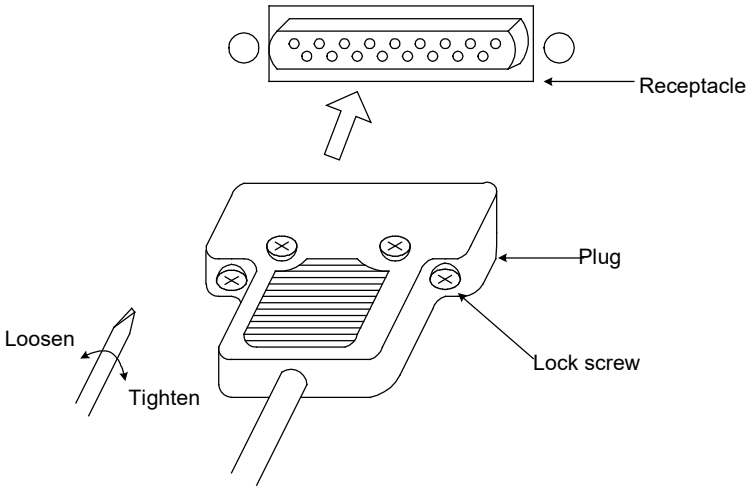


Fig. 3.5 Inserting and removing a square connector

3.1.7 Examples of Connector Terminal Arrangement


a) Power cable connector CN1

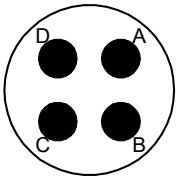

Connects to controller.

Type: JL04V–2E18–10PE–B

Manufacturer:
Japan Aviation
Electronics Industry




Single phase, AC 180~250 V, 50/60 Hz

Danger

- Completely connect the grounding cable.
  Failure to do so could lead to electric shocks or fires if a fault or fault current occurs.


Grounding with grounding resistance of 100 Ω or less.

b) Motor cable connector CN2

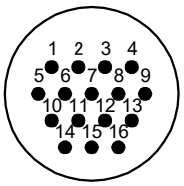


Connects to controller.
Type: JR25RK-16S
Manufacturer: Hirose Electric

c) Encoder cable connector CN3

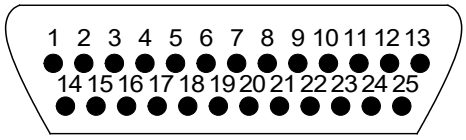


Connects to controller.
Type: XM2A–2501
Manufacturer: OMRON

d) Robot control signal cable connector CN4

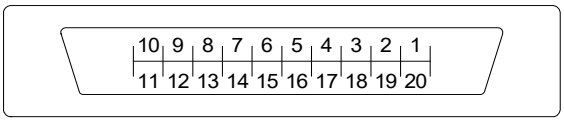


Connects to controller.
Type: PCR–E20LMD
Manufacturer: Honda Tsushin Kogyo

e) External input signal cable connector CN5

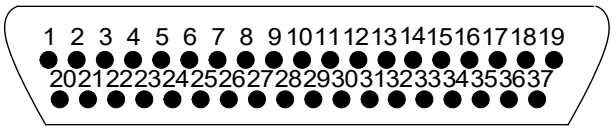


Connects to controller.
Type: XM2C–3712–112
Manufacturer: OMRON

f) External output signal cable connector CN6

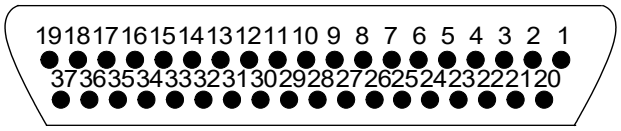

Connects to controller.
Type: XM3B–3722–112
Manufacturer: OMRON

g) External I/O signal cable connector CN12

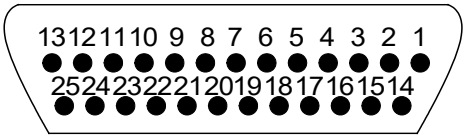

Connects to controller.
Type: XM3B–2522–112
Manufacturer: OMRON

3.2 Controller Connector Signals

3.2.1 Connector Signal Connection Diagrams

Diagrams showing which signals correspond to which terminals are shown in Section 2 of the Interface Manual.

3.2.2 Jumpers for Safety Related Signals

The following system input signals are provided to serve for the safety purpose.

System input signals	CN5–16	(STOP)
	CN6–34	(SVOFF)
	CN5–17	(BREAK)
	CN6–16, 35	(EMS1B ~ EMS1C)
	CN6–17, 36	(EMS2B ~ EMS2C)

These signals are already jumpered for the connectors provided for the TS2000 controller. If you wish to use or change them, therefore, you should remove the jumpers and rewire as appropriate. If you plan to use the robot without using system input signals, be sure to connect the attached connectors to the controller side CN5, CN6 connectors.
Also, if the following signals are not used as the system signals, be sure to jumper them.

CN5–36 (LOW_SPD)
CN5–35 (CYCLE)

Connector jumpers

CN5		CN6	
16–18	17–18	18–34	—
(35–37)	(36–19)	16–35	17–36

Caution

1. If the signals of SVOFF and emergency stop contacts 1, 2 are jumpered, the controller servo power cannot be turned on.
2. Unless the CYCLE signal is jumpered, the controller enters the cycle operation mode.
3. Unless the LOW_SPD signal is jumpered, the robot is operated at low speed during automatic operation.
4. Unless the STOP signal is jumpered, automatic operation of the robot is not possible.

3.3 Separating Control Panel from Controller

3.3.1 Removing Control Panel

Remove the control panel in the following manner.

a) Loosen the four (4) screws at the four (4) corners, which secure the control panel.

b) Remove these screws, then carefully draw out the control panel toward your side. (Be careful of the cable connected on the rear side.)

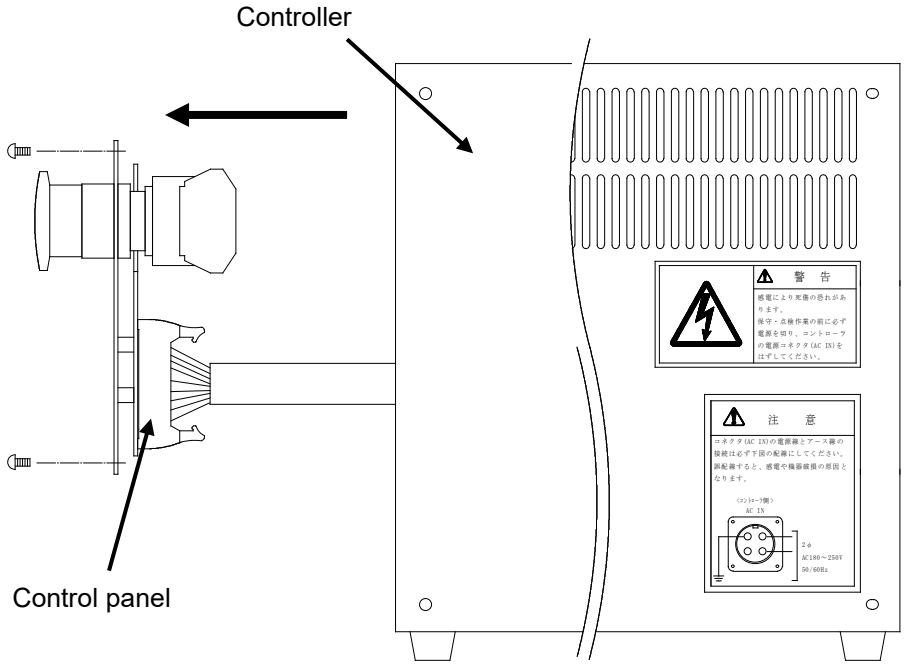


Fig. 3.6 Removing control panel

3.3.2 Cable between Controller and Control Panel

The cable required to connect the control panel and controller when they are installed separately can be provided optionally.

3.3.3 Control Panel Mounting Dimensions

The dimensions of mounting the control panel are shown in Fig. 3.6.
Cross truss head screws (ø3×6, ZN3–B) are used.

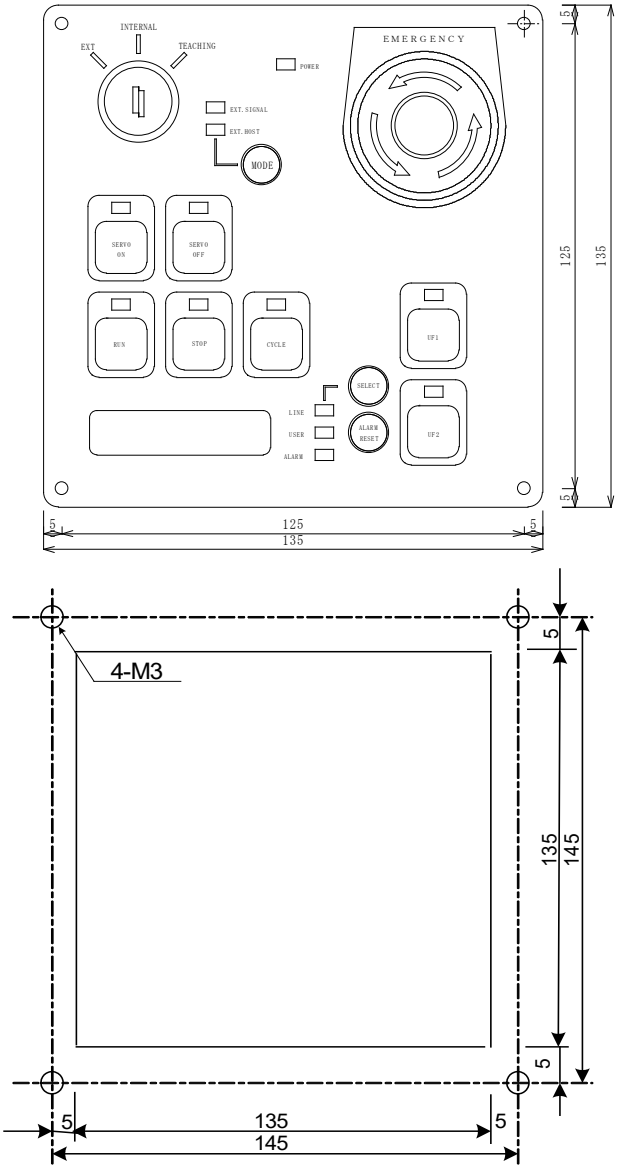


Fig. 3.7 Control panel mounting dimensions

3.3.4 Mounting Dummy Panel on Controller

When the control panel has been disengaged from the controller, mount a dummy panel on the place where the control panel was set before. The dummy panel, set parts, etc. are provided optionally.

a) Connect the cable connector which was disconnected when separating the controller from the control panel, to the rear side of the dummy panel, then screw both ends of the connector. When mounting the connector, use the cross truss screws (ø3×6, ZN3–B).

b) Screw the dummy panel into the controller.

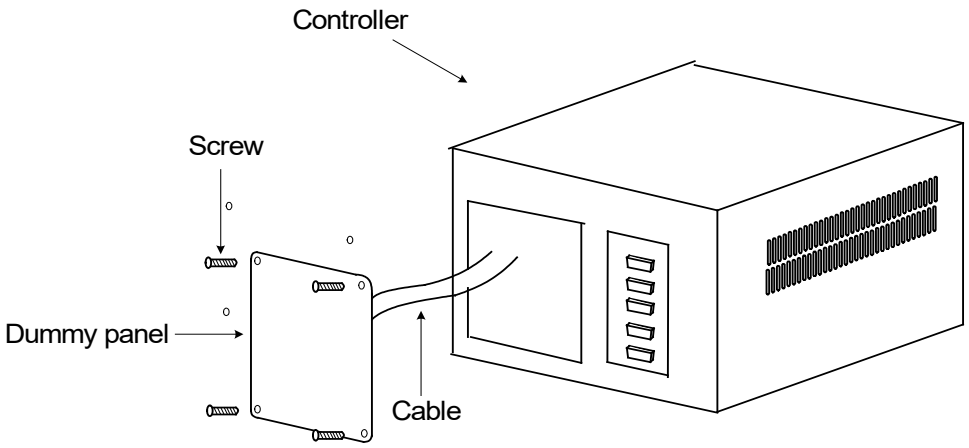


Fig. 3.8 Mounting dummy panel

3.3.5 Dimensions when Separating Control Panel

Fig. 3.9 shows the connections of the control panel and dummy panel. Provide a clearance of about 50.6 mm on the rear side of the separated control panel. When the cable is connected to the dummy panel of the controller, provide a clearance of 80 mm or so in front of the controller as the cable connector sticks out of the panel surface.


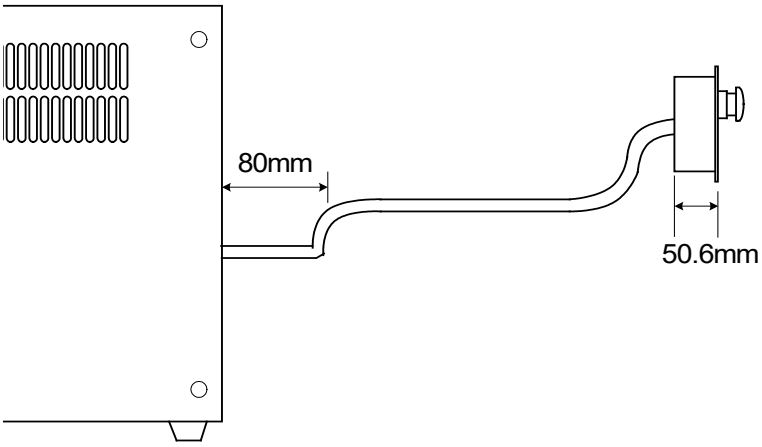



Fig. 3.9 Cable connections of dummy panel and control panel

3.3.6 Cautions on Transport

When the robot power cable has been disconnected from the controller, attach the following short-circuit connector (accessory) to the robot power cable (or CN2 connector of the SR–424HSP robot).
If the robot has been moved suddenly or heavy vibration has been imposed on the robot at power OFF, without connecting the short-circuit connector, the absolute coordinate counter of the encoder cannot trace any further, resulting in generation of a position sensor error or loss of origin position data.

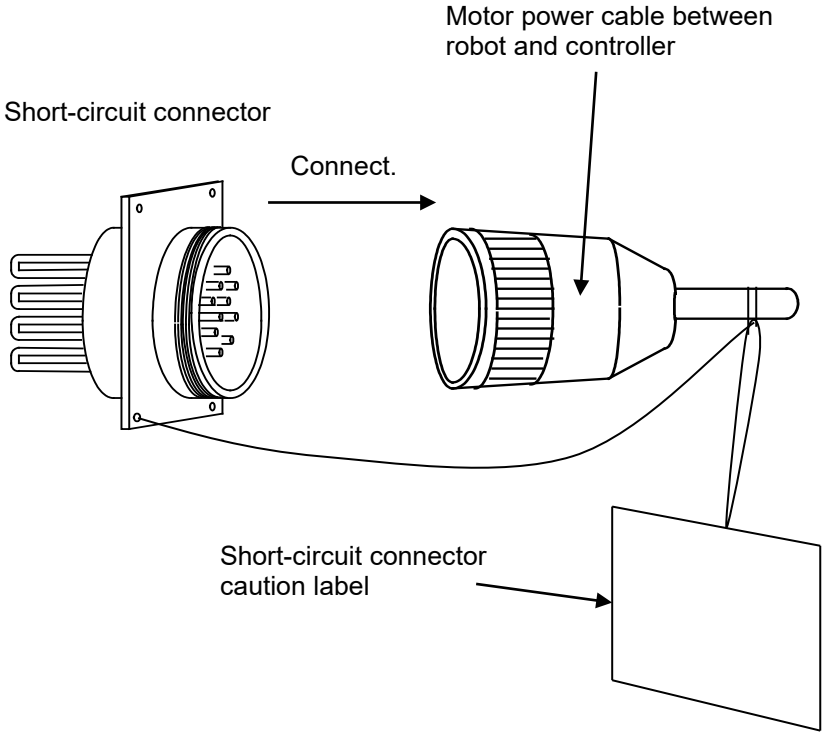

[SR–424HSP]

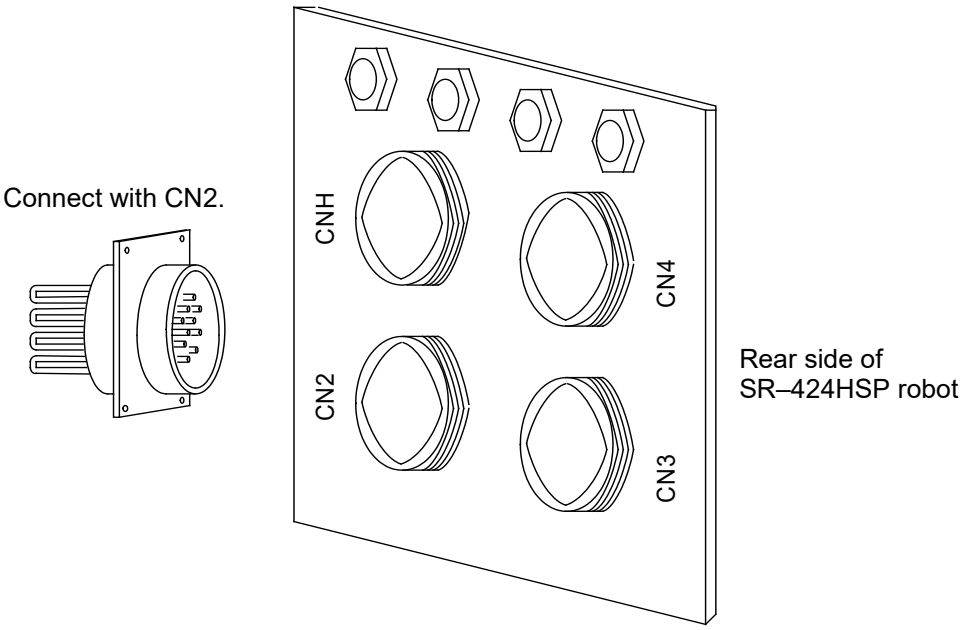

Section 4


Tool Interface

4.1 Mounting Tool


a) SR–424HSP and SR–504HSP

The tool is mounted on the end of the tool shaft (ø16). The tool shaft has a dog for the stopper, and the section in front of the dog is used for mounting the tool. At this time, the dog should not be removed. Dimensions of the tool shaft section are shown in Fig. 4.1 (a).

As shown in Fig. 4.1, the tool is secured to the tool shaft with split clamp. As there is not a reference such as keyway on the tool shaft, however, take care of the tool direction when mounting.

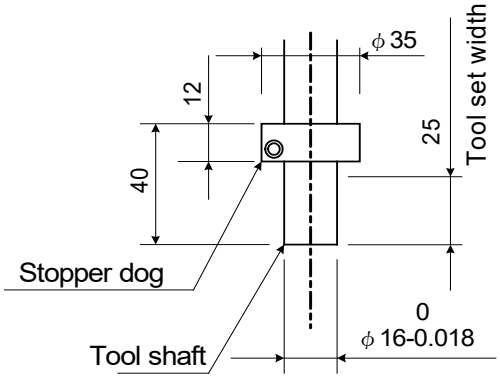


a) Dimensions of tool shaft section

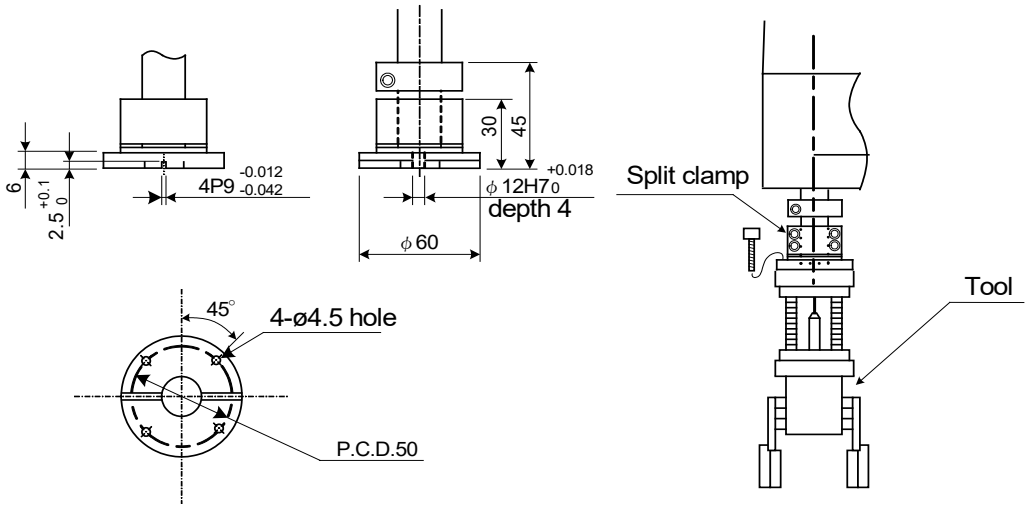

b) Dimensions of tool mounting flange (option)

Fig. 4.1 Mounting SR–424HSP and SR–504HSP tools

b) SR–554HSP, SR–654HSP, SR–854HSP and SR–1054HSP
The tool is mounted on the tool mounting flange located at the end of the tool shaft. Dimensions of the tool mounting flange are shown in Fig. 4.2.
The tool is centered with the ø20H7 mating section. The tool direction is adjusted by means of the 5 × 5 keys and secured with four (4) M5 bolts.

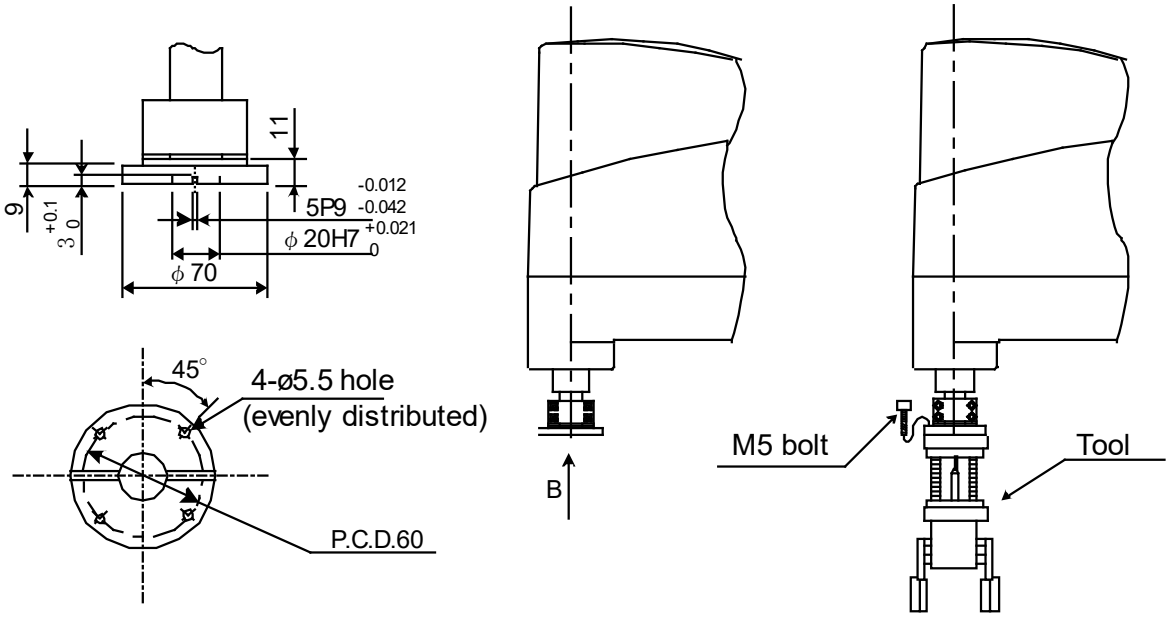

Details of tool mounting (View B)

Fig. 4.2 Mounting SR–554HSP, SR–654HSP, SR–854HSP and SR–1054HSP tools

Cautions on mounting and using tool:

The SR–504HSP, SR–554HSP, SR–654HSP and SR–854HSP use a taper-coupled clamp for the axis 4 drive system. If a large torque is exerted, position shift, etc. may be caused. To avoid this, when exerting the torque on the axis 4, it should be smaller than the values specified below.

Permissible torque on axis 4:

SR–504HSP	····· 20.7 Nm
SR–554HSP, SR–654HSP, SR–854HSP	····· 26.1 Nm


4.2 Tool Wiring and Piping

The robot is provided with wiring and air piping for the tool. These wiring and piping extend to the arm 2 and are used as follows:

4.2.1 Controller's Tool Signals (TS2000)

The controller is provided with tool signals (i.e., five (5) input signals for sensor, etc., four (4) control signals for solenoid valve, etc., DC 24V and DC 24 VGND signals), which can be connected also from the controller side. (A cable between the controller and cable is an option.) The relevant signals are described below.

a) Input signal connector CN4

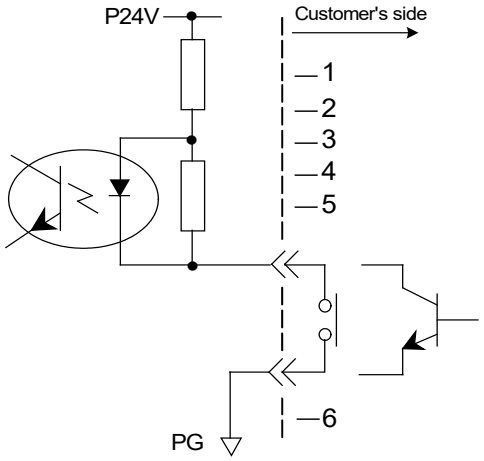Pin	Signal name		Signal No.	Input circuit and example of connections
5	GRP1 OPN	Grip 1 open	201	
6	GRP1 CLS	Grip 1 close	202	
7	GRP2 OPN	Grip 2 open	203	
8	GRP2 CLS	Grip 2 close	204	
9	WORK	Workpiece	205	
20	PG	0 V		
Case	Shield			

As input signals, no-voltage contacts or transistor open collector inputs are used.

No-voltage contact specifications:

Contact rating: DC24 V, 10 mA or over (circuit current: approx. 7 mA)
Minimum contact current: DC24 V, 1 mA
Contact impedance: 100 Ω or less

Transistor specifications:


Withhold voltage between controller and emitter: 30 V or over


Current between collector and emitter: 10 mA or over (circuit current: approx. 7 mA)

Leak current between collector and emitter: 100 μA or less

b) Output signal connector CN4

Pin	Signal name		Signal No.	Output circuit and example of connections
11	GRP1	Grip 1	201	
12	$\overline{\text{GRP1}}$	– Grip 1	202	
13	GRP2	Grip 2	203	
14	$\overline{\text{GRP2}}$	– Grip 2	204	
17	P24V		DC24 V power	
18	P24V		DC24 V power	
19	P24V		DC24 V power	

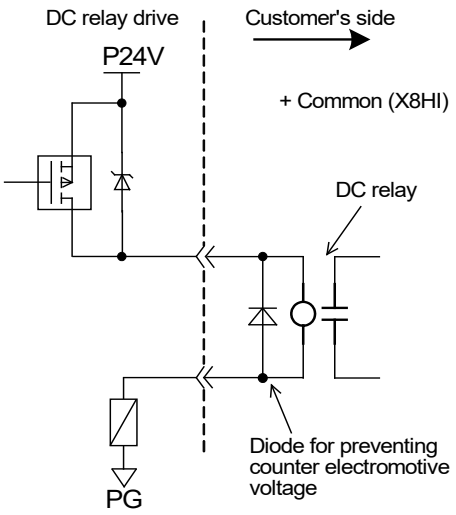

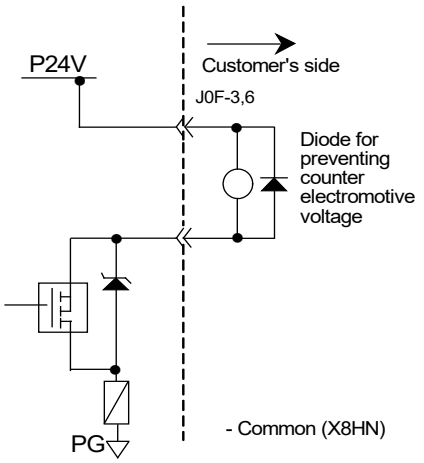

By using the DC24 V power of the controller, a relay, solenoid valve, etc., can be driven. When the external power is used, GND of the external power should be common to GND (PG) of the TS2000 robot controller. NEVER connect +24 V with P24 V. Otherwise, the power supply may be damaged.


Output specifications:

Rated voltage	:	DC24 V (max. DC30 V)
Rated current	:	1 A (1.2 A or less including other I/Os when the internal power supply is used.)
Leak current	:	100 μA or less


- If the DC24 V power supplied from the robot controller is used, the total current should be 2 A or less.
- When a relay or solenoid valve, etc., is connected, it is necessary to use a surge killer or diode to absorb the surge voltage.
- When a double solenoid is used, HO_1 and HO_2, and HO_3 and HO_4 are used as pairs.


The following figure shows the DC relay circuit when the external power is used.

– Common (X8HN):

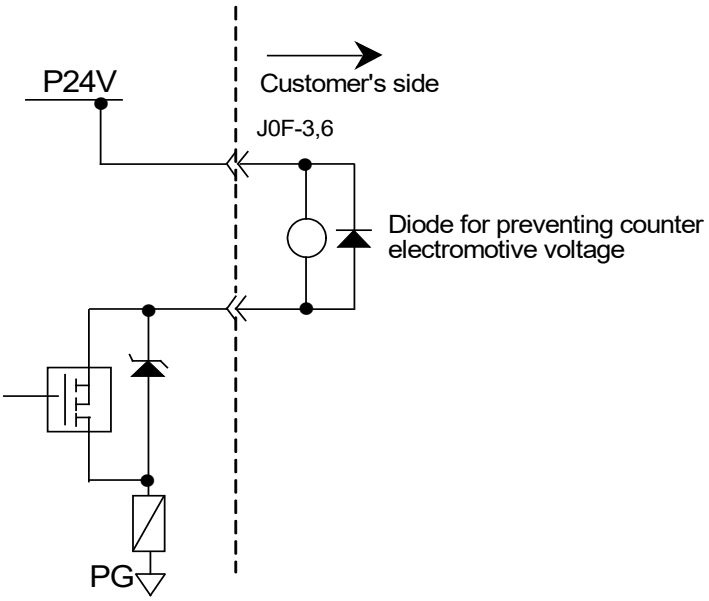

+ Common (X8HI):

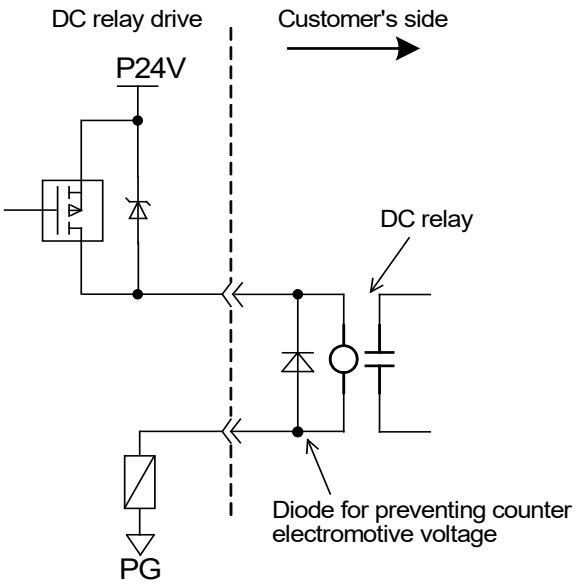

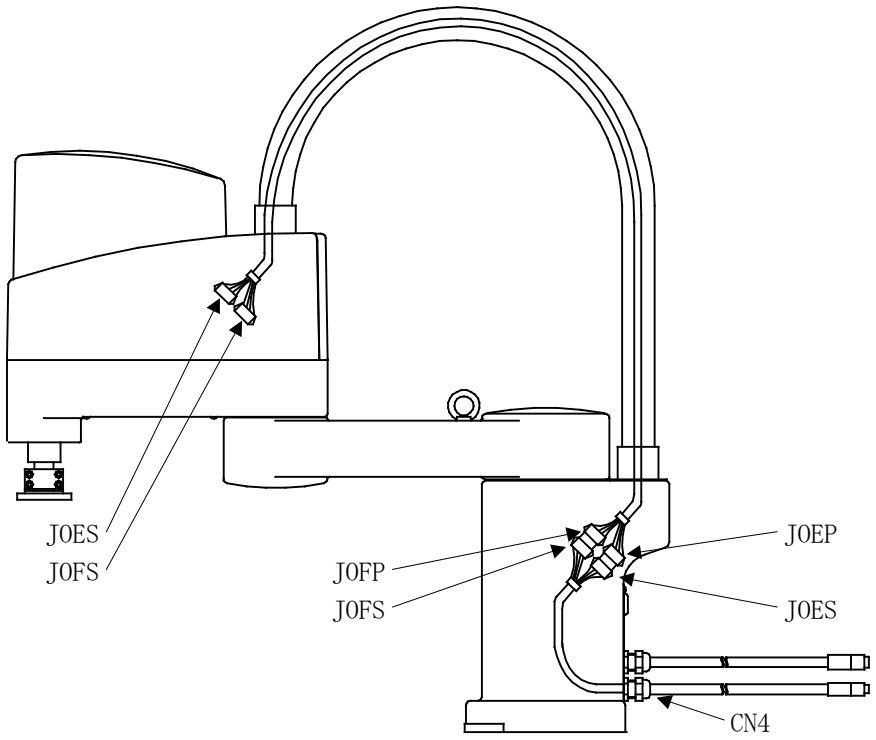

JOES SM connector 7 poles

Pin	Signal name	Color
1	GRP1 OPN	Yellow
2	GRP1 CLS	White/(Yellow)
3	GRP2 OPN	Green
4	GRP2 CLS	White/(Green)
5	WORK	Red
6	PG	White/(Red)
7	Shield	Green

JOFS SM connector 6 poles

Pin	Signal name	Color
1	GRP1	Purple
2	$\overline{\text{GRP1}}$	White/(Purple)
3	P24V	Blue
4	GRP2	Brown
5	$\overline{\text{GRP2}}$	Yellow
6	P24V	Brown

Sensor

Solenoid valve, etc.

JOEP SM connector 7 poles JOES

Color	Pin	Signal name	Color
Yellow	1	GRP1 OPN	Red
White/(Yellow)	2	GRP1 CLS	Green
Green	3	GRP2 OPN	Yellow
White/(Green)	4	GRP2 CLS	Brown
Red	5	WORK	Blue
White/(Red)	6	PG	Gray
Green	7	Shield	Green

JOFP SM connector 6 poles JOFS

Color	Pin	Signal name	Color
Purple	1	GRP1	Orange
White/(Purple)	2	$\overline{\text{GRP1}}$	Purple
Blue	3	P24V	Peach
Brown	4	GRP2	Light green
Yellow	5	$\overline{\text{GRP2}}$	Sky blue
Brown	6	P24V	Black/White

Controller

Connector type	JOES	·····	SMP–07V–BC (J.S.T. Corporation)
	JOEP	·····	SMR–07V–B (J.S.T. Corporation)
	JOFS	·····	SMP–06V–BC (J.S.T. Corporation)
	JOFP	·····	SMR–06V–B (J.S.T. Corporation)

Fig. 4.3 SR–504HSP, SR–554HSP, SR–654HSP and SR–1054HSP tool wiring

The wires are connected to the connectors in the cover of the arm 2. The tool cables must be drawn out through the cable outlet on top of the cover and connected to the tool.
The dimensions of the user cable outlet and wiring procedures are shown in Figs. 4.4 through 4.6.

Caution

- Always use a highly flexible robot cable, which should be secured below the arm with a cable clamp, etc. Unless a robot cable is used, the wire may be broken.

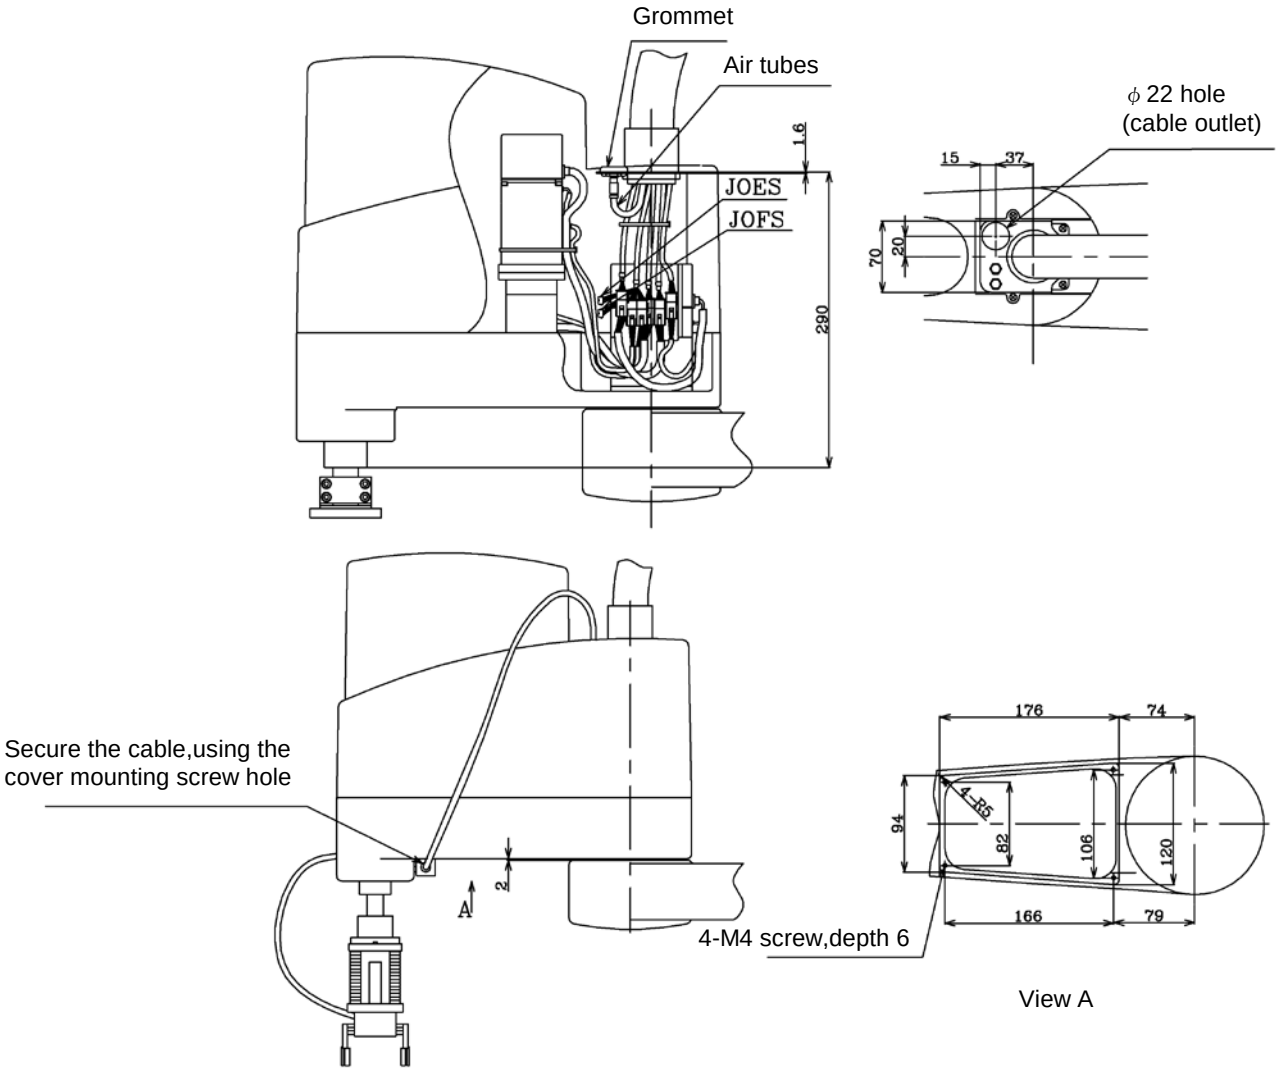


Fig. 4.4 SR–504HSP, SR–554HSP and SR–654HSP wiring method

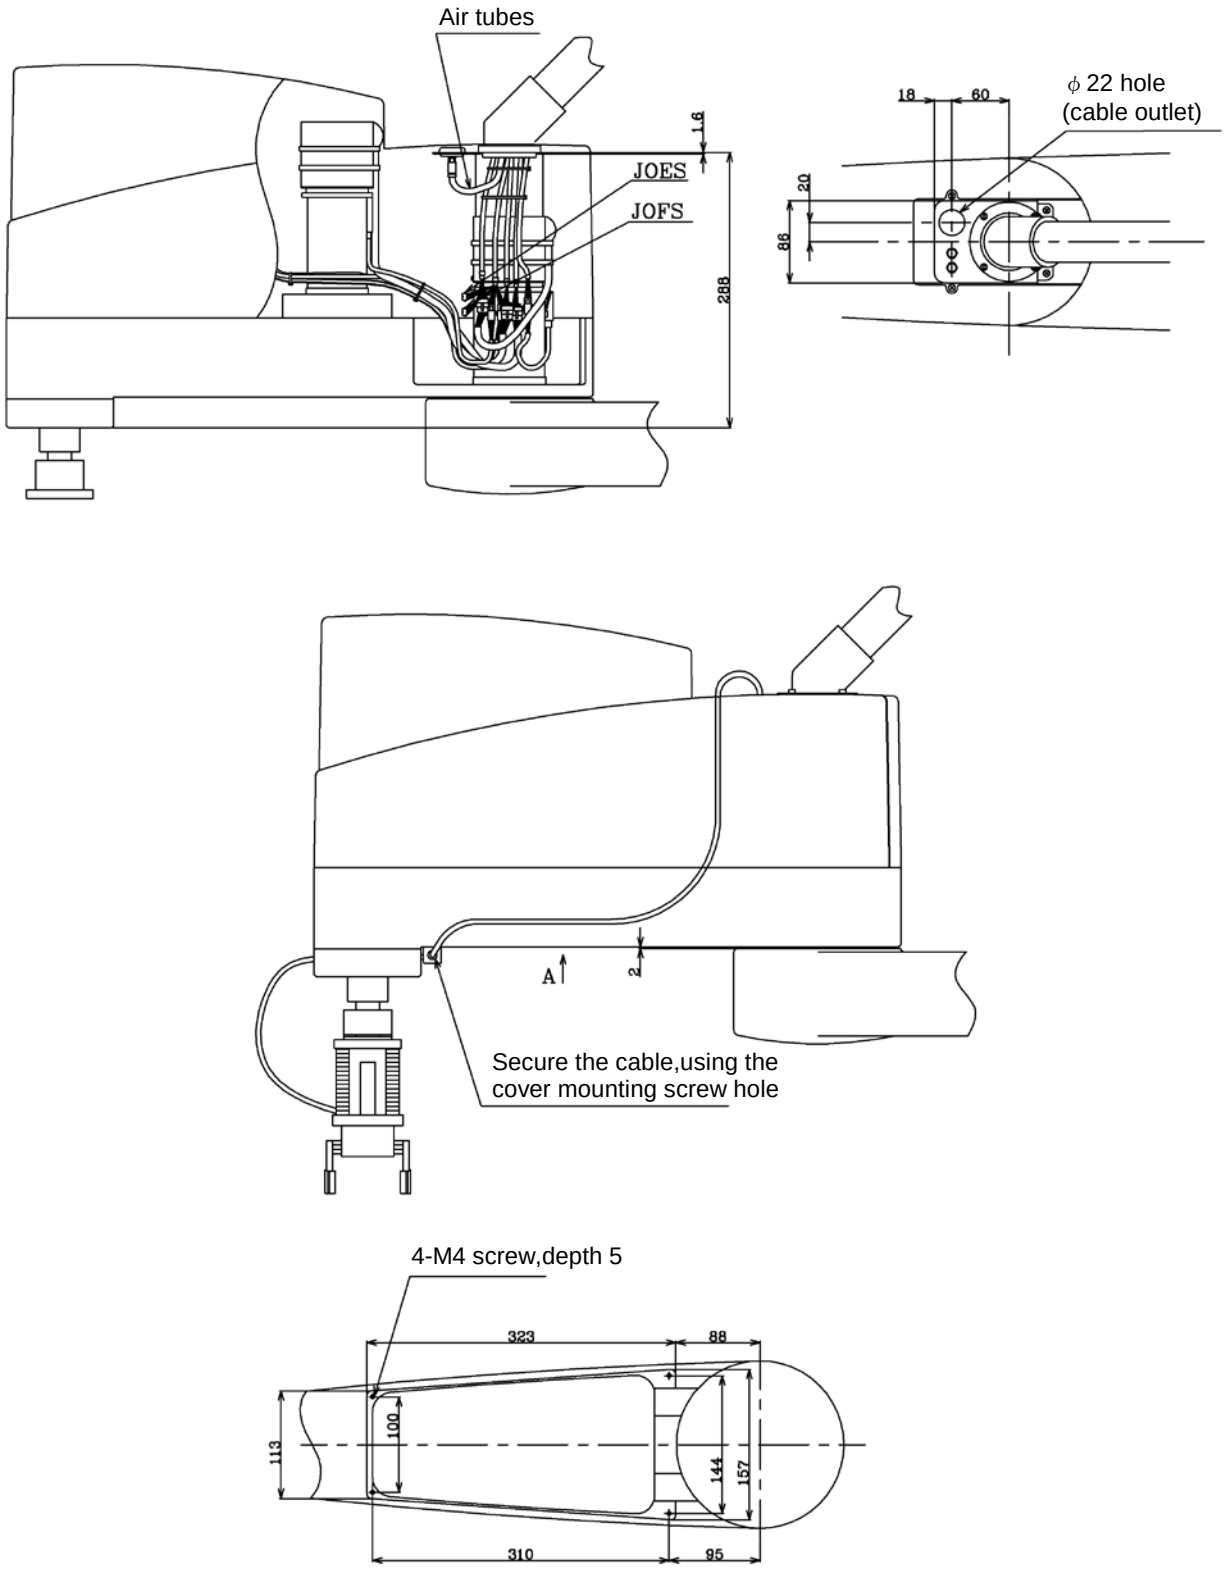


Fig. 4.5 SR–1054HSP wiring method

In the above, we have assumed that the tool is controlled by the robot program from the controller. To control the tool by means of a separately installed sequencer, however, observe the following procedures.
First, remove the connector set board at the base of the robot and disconnect the JOES and JOFS connectors on the rear side. Then lead the cable from the sequencer through the user cable inlet at the connector bases and connect as appropriate. (See Fig. 4.6.) Keep the current to 1 A or less per line.

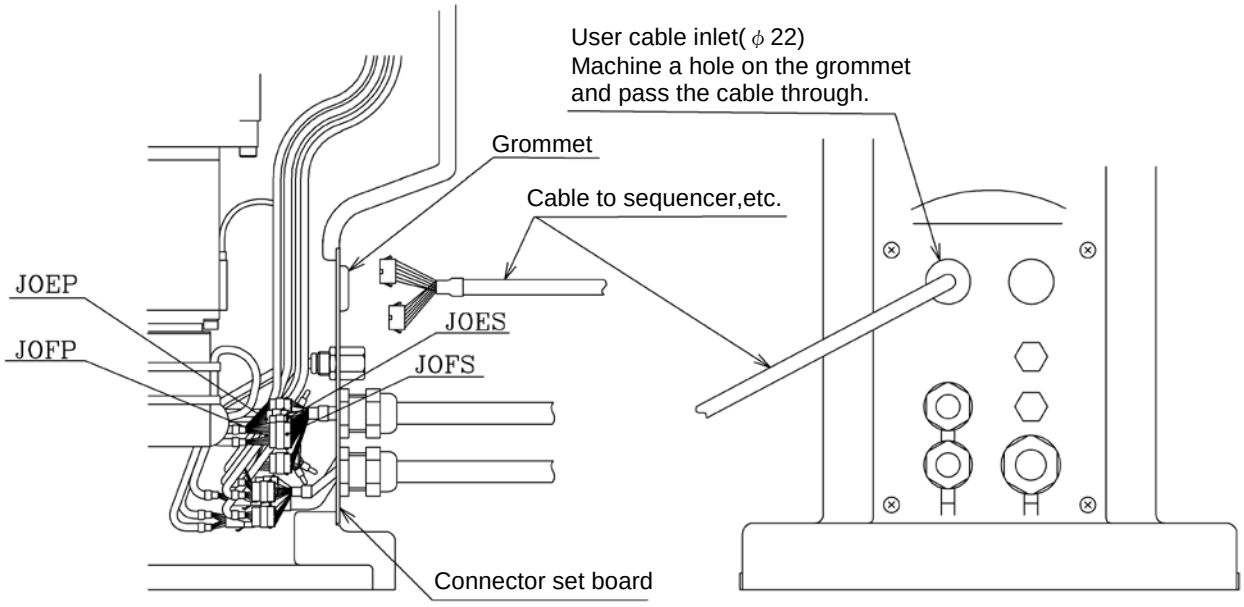


Fig. 4.6

4.2.2 Tool Wiring (SR–854HSP)

Five (5) input signals are provided for sensors and four (4) control signals for solenoid valves, etc. A supply power signal of DC24 V is also provided. All are connected to the controller. The wiring arrangement for these cables is shown in Fig. 4.7. The wires are connected to the connectors underneath the arm 2. The connector set position is shown in Fig. 4.8.

Use the attached plug connectors to connect the cables.


CN0 plug connector	Type: JMSP2116F (Maker: Daiichi Denshi Kogyo)
Adaptive cable	Conductive cross section area: 0.2 mm^2 ~ 0.5 mm^2


JMSP2116F and cable are connected by soldering.


Danger

- Be sure to use the designated wire. Otherwise, fires or faults may be caused.
- When connecting the connector and wires, make sure not to mistake the terminal arrangement.
  After the connection, use a tester, etc., to confirm the connection.

Input/output signal connector CN0

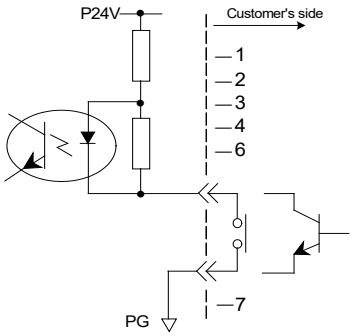Pin	Signal name		Signal No.	Input/output circuit and example of connections
1	GRP1 OPN	Grip 1 open	201	
2	GRP1 CLS	Grip 1 close	202	
3	GRP2 OPN	Grip 2 open	203	
4	GRP2 CLS	Grip 2 close	204	
5	Not used			
6	WORK	Workpiece	205	
7	PG	0 V		
8	Not used			
9	Not used			– Common (X8HN) / + Common (X8HI)
10	GRP1	Grip 1	201	
11	$\overline{\text{GRP1}}$	– Grip 1	202	
12	GRP2	Grip 2	203	
13	$\overline{\text{GRP2}}$	– Grip 2	204	
14	P24V	DC24 V power		
15	P24V	DC24 V power		
16	Shied			

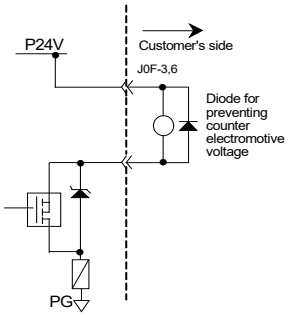

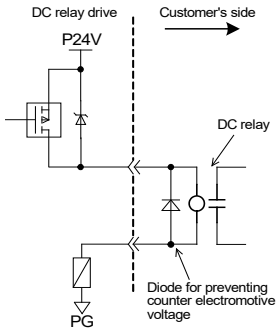

As input signals, no-voltage contacts or transistor open collector inputs are used.

No-voltage contact specifications:

Contact rating: DC24 V, 10 mA or over (circuit current: approx. 7 mA)

Minimum contact current: DC24 V, 1 mA

Contact impedance: 100 Ω or less

Transistor specifications:

Withhold voltage between controller and emitter: 30 V or over

Current between collector and emitter: 10 mA or over (circuit current: approx. 7 mA)


Leak current between collector and emitter: 100 μA or less


By using the DC24 V power of the controller, a relay, solenoid valve, etc., can be driven. When the external power is used, GND of the external power should be common to GND (PG) of the TS2000 robot controller.

Output specifications:

Rated voltage	:	DC24 V (max. DC30 V)
Rated current	:	1 A
Leak current	:	100 μA or less

- If the DC24 V power supplied from the robot controller is used, the total current should be 2 A or less.
- When the external power is used, the total current should also be 2 A or less.
- When a relay or solenoid valve, etc., is connected, it is necessary to use a surge killer or diode to absorb the surge voltage.

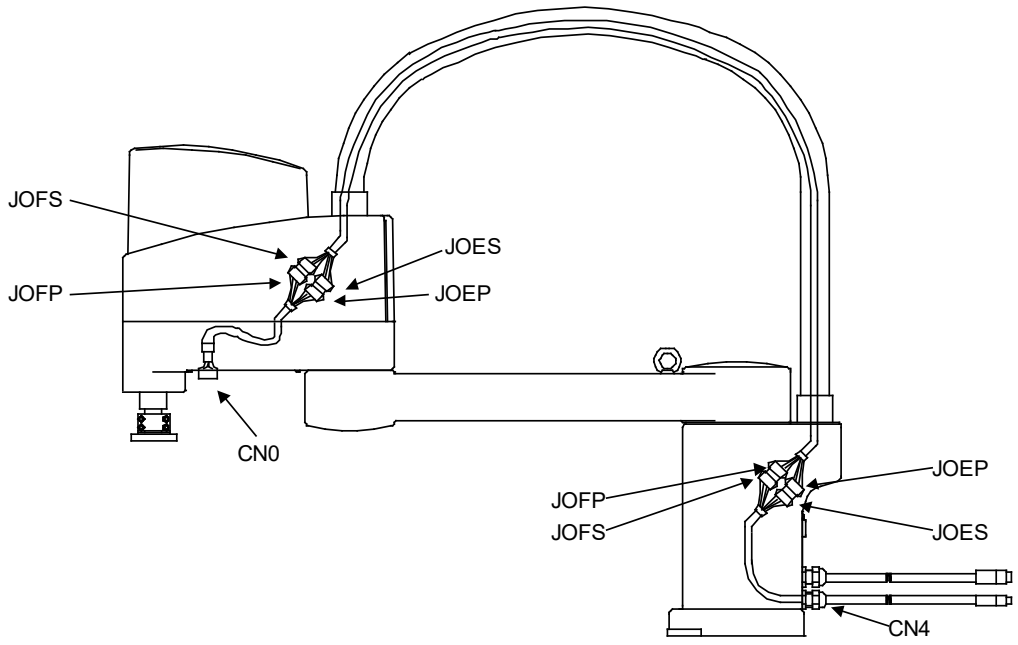


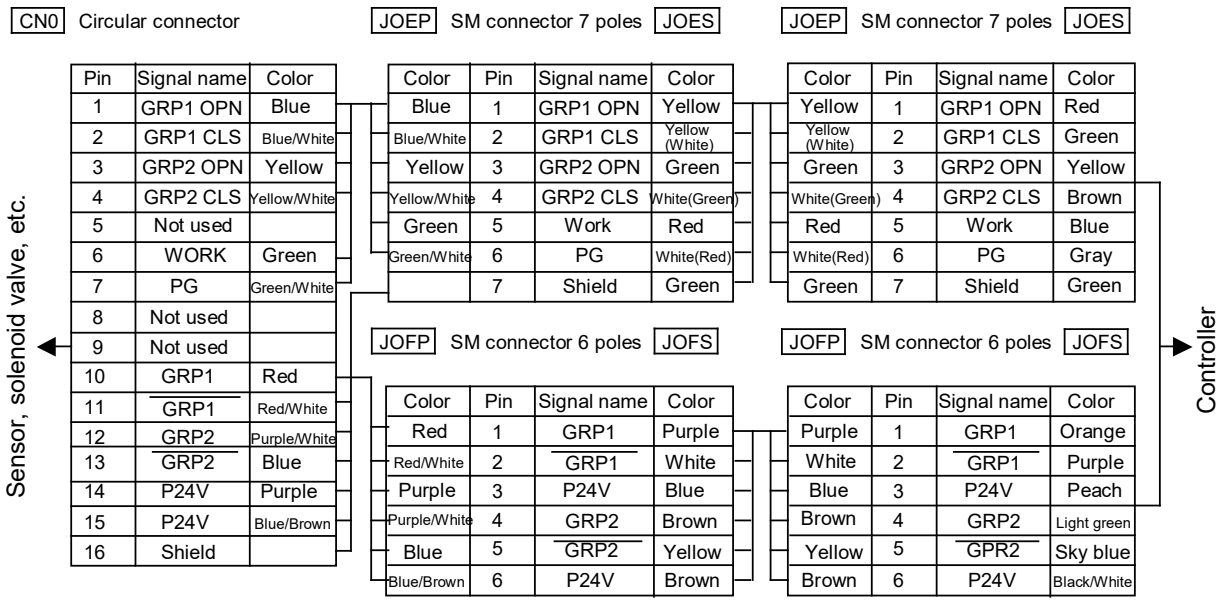

Connector type

JOES	·····	SMP–07V–BC (J.S.T. Corporation)
JOEP	·····	SMR–07V–B (J.S.T. Corporation)
JOFS	·····	SMP–06V–BC (J.S.T. Corporation)
JOFP	·····	SMR–06V–B (J.S.T. Corporation)
CN0	·····	JMR2116M (Daiichi Denshi Kogyo)

Fig. 4.7 SR–854HSP tool wiring

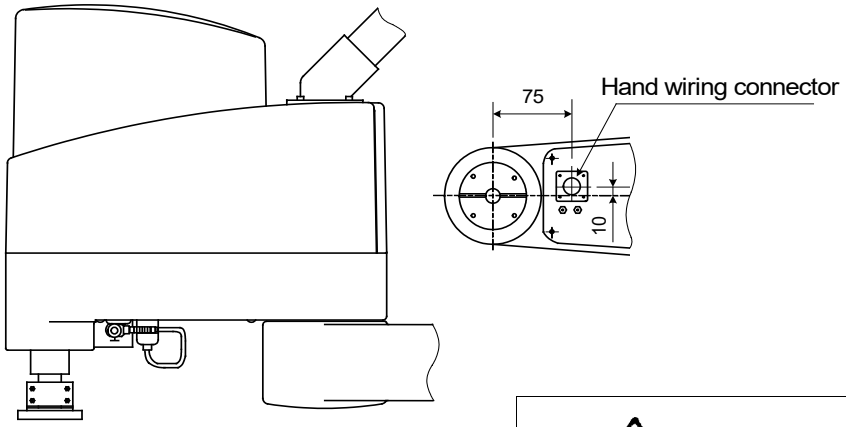

Caution

- Always use a highly flexible robot cable, which should be secured below the arm with a cable clamp, etc. Unless a robot cable is used, the wire may be broken.

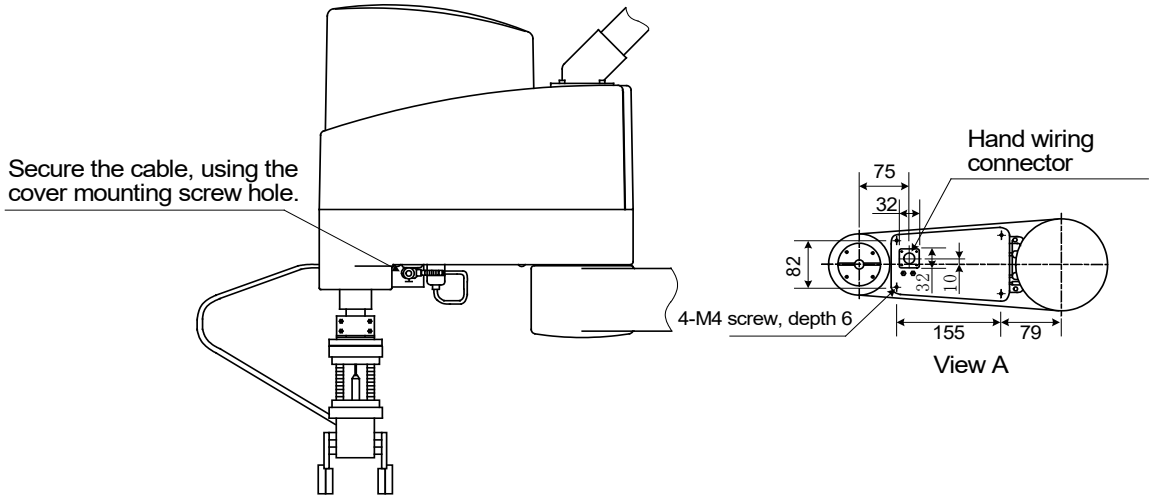


Fig. 4.8 SR–854HSP wiring method

To control the tool by means of a separately installed sequencer, disconnect the JOES and JOFS connectors in the base and connect the cable running from the sequencer, etc., referring to Fig. 4.6 of Para. 4.2.1.

4.2.3 Tool Wiring (SR–424HSP)

Five (5) input signals are provided for sensors and four (4) control signals for solenoid valves, etc. A supply power signal of DC24 V is also provided. All are connected to the controller. The wiring arrangement for these cables is shown in Fig. 4.9. The wires are connected to the connectors above the arm 2. The connector set position is shown in Fig. 4.10.

Use the attached plug connectors to connect the cables.


CN0 plug connector	Type: SMLP2119M (Maker: Daiichi Denshi Kogyo)
Adaptive cable	Conductive cross section area: 0.2 mm^2 ~ 0.5 mm^2


SMLP2119M and cable are connected by soldering.


Danger

- Be sure to use the designated wire. Otherwise, fires or faults may be caused.
- When connecting the connector and wires, make sure not to mistake the terminal arrangement.
  After the connection, use a tester, etc., to confirm the connection.

Input/output signal connector CN0

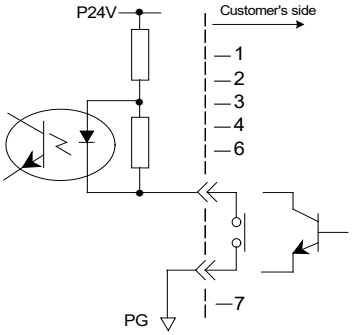Pin	Signal name		Signal No.	Input/output circuit and example of connections
1	GRP1 OPN	Grip 1 open	201	
2	GRP1 CLS	Grip 1 close	202	
3	GRP2 OPN	Grip 2 open	203	
4	GRP2 CLS	Grip 2 close	204	
5	Not used			
6	WORK	Workpiece	205	
7	PG	0 V		
8	Not used			
9	Not used			– Common (X8HN) / + Common (X8HI)
10	GRP1	Grip 1	201	
11	$\overline{\text{GRP1}}$	– Grip 1	202	
12	GRP2	Grip 2	203	
13	$\overline{\text{GRP2}}$	– Grip 2	204	
14	P24V	DC24 V power		
15	P24V	DC24 V power		
16	Shied			

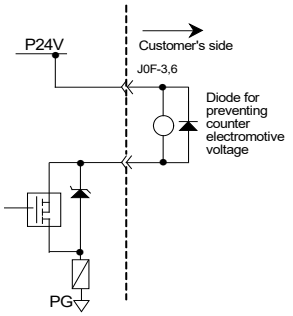

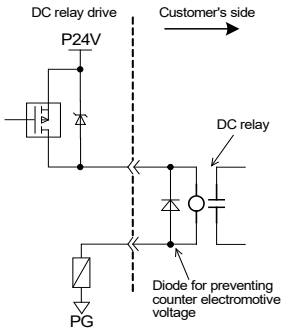

As input signals, no-voltage contacts or transistor open collector inputs are used.

No-voltage contact specifications:

Contact rating: DC24 V, 10 mA or over (circuit current: approx. 7 mA)

Minimum contact current: DC24 V, 1 mA

Contact impedance: 100 Ω or less

Transistor specifications:

Withhold voltage between controller and emitter: 30 V or over

Current between collector and emitter: 10 mA or over (circuit current: approx. 7 mA)


Leak current between collector and emitter: 100 μA or less

By using the DC24 V power of the controller, a relay, solenoid valve, etc., can be driven. When the external power is used, GND of the external power should be common to GND (PG) of the TS2000 robot controller.

Output specifications:

Rated voltage	:	DC24 V (max. DC30 V)
Rated current	:	1 A
Leak current	:	100 μA or less

- If the DC24 V power supplied from the robot controller is used, the total current should be 2 A or less.
- When the external power is used, the total current should also be 2 A or less.
- When a relay or solenoid valve, etc., is connected, it is necessary to use a surge killer or diode to absorb the surge voltage.

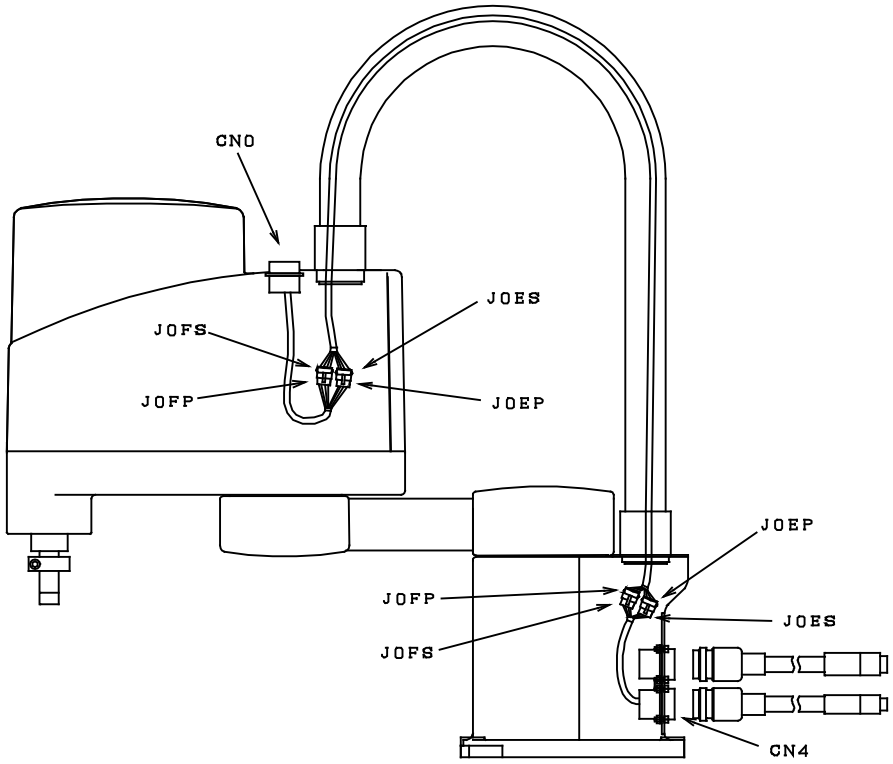

CN0 Round connector

Pin	Signal name	Color
1	GRP1 OPN	Blue
2	GRP1 CLS	Blue/white
3	GRP2 OPN	Yellow
4	GRP2 CLS	Yellow/white
5	Not used	
6	WORK	Green
7	PG	Green/white
8	Not used	
9	Not used	
10	GRP1	Red
11	$\overline{\text{GRP1}}$	Red/white
12	GRP2	Purple/white
13	$\overline{\text{GRP2}}$	Blue
14	P24V	Purple
15	P24V	Blue/brown
16	Shield	

JOEP SM connector 7 poles JOES

Color	Pin	Signal name	Color
Blue	1	GRP1 OPN	Yellow
Blue/white	2	GRP1 CLS	White (yellow)
Yellow	3	GRP2 OPN	Green
Yellow/white	4	GRP2 CLS	White (green)
Green	5	WORK	Red
Green/white	6	PG	White (red)
	7	Shield	Green

JOEP SM connector 7 poles JOES

Color	Pin	Signal name	Color
Yellow	1	GRP1 OPN	Red
White (yellow)	2	GRP1 CLS	Green
Green	3	GRP2 OPN	Yellow
White (green)	4	GRP2 CLS	Brown
Red	5	WORK	Blue
White (red)	6	PG	Gray
Green	7	Shield	Green

JOFP SM connector 6 poles JOFS

Color	Pin	Signal name	Color
Red	1	GRP1	Purple
Red/white	2	$\overline{\text{GRP1}}$	White
Purple	3	P24V	Blue
Purple/white	4	GRP2	Brown
Blue	5	$\overline{\text{GRP2}}$	Yellow
Blue/brown	6	P24V	Brown

JOFP SM connector 6 poles JOFS

Color	Pin	Signal name	Color
Purple	1	GRP1	Orange
White	2	$\overline{\text{GRP1}}$	Purple
Blue	3	P24V	Pink
Brown	4	GRP2	Light green
Yellow	5	$\overline{\text{GRP2}}$	Light blue
Brown	6	P24V	Black/white

Sensor, solenoid valve, etc.

Controller

Connector types

JOES	SMP–07V–BC (J.S.T. Corporation)
JOEP	SMP–07V–B (J.S.T. Corporation)
JOFS	SMP–06V–BC (J.S.T. Corporation)
JOFP	SMR–06V–B (J.S.T. Corporation)
CN0	EBR2119FS (Daiichi Denshi Kogyo)

Fig. 4.9 SR–424HSP tool wiring

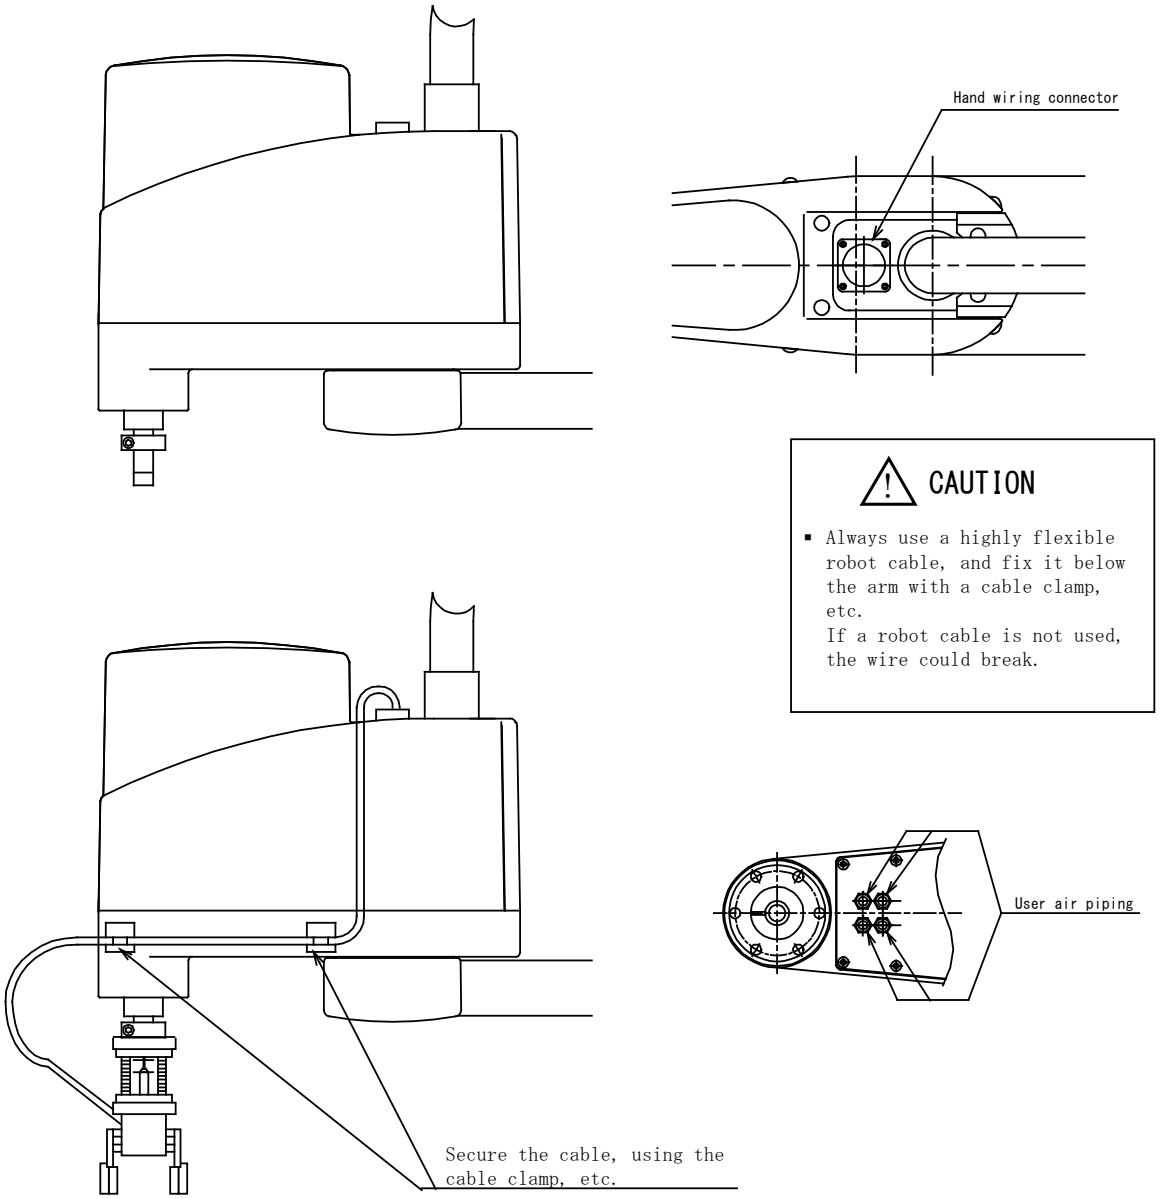


Fig. 4.10 SR–424HSP wiring method

4.2.4 Tool Air Piping

The robot is provided with two (2) air lines (ø6 × 4) for the tool as shown in Figs. 4.11 to 4.13. The air control unit (oiler, regulator with gage and filter) for the solenoid valves should be provided by the user.

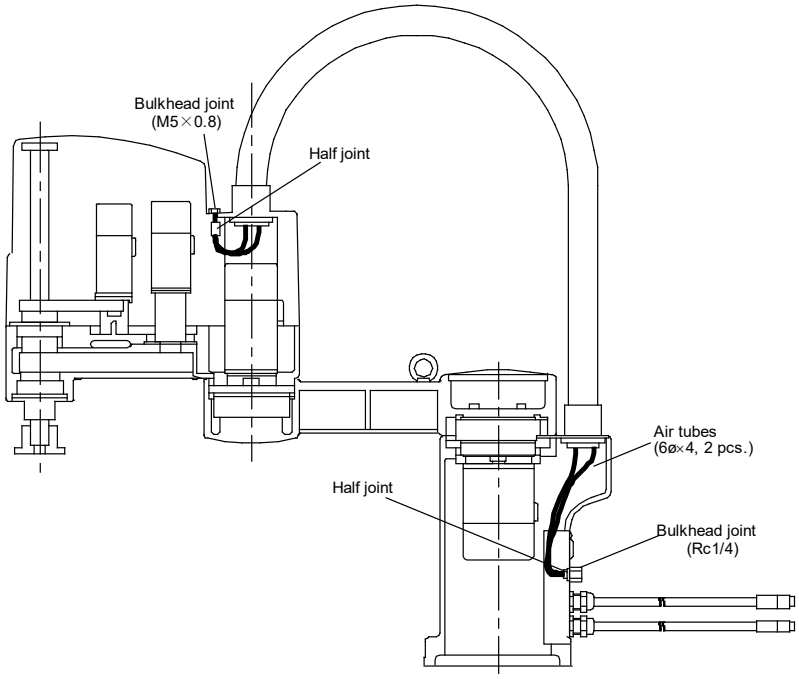


Fig. 4.11 SR–504HSP, SR–554HSP, SR–654HSP and SR–1054HSP tool air piping

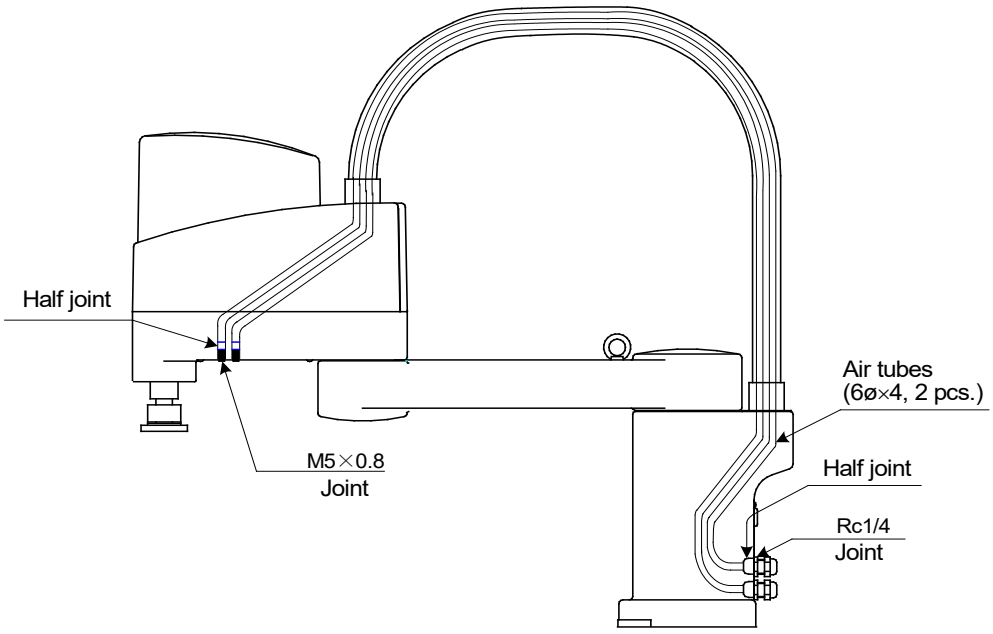


Fig. 4.12 SR–854HSP tool air piping

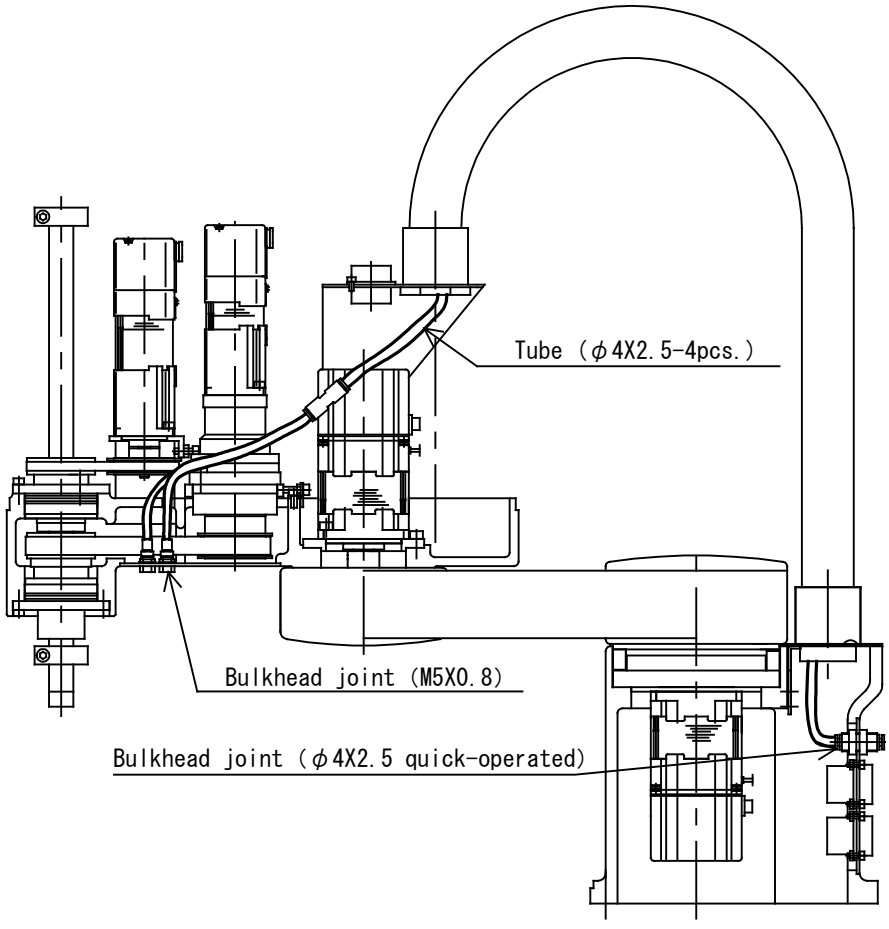


Fig. 4.13 SR–424HSP tool air piping

4.3 Permissible Load Conditions and Program Setting

This paragraph describes the permissible load conditions of the robot and how to set up the program according to the load.

4.3.1 Permissible Load Conditions

The robot load conditions are defined by the tool mass, moment of inertia and offset value of tool center of gravity from the center of the tool shaft, as shown in Fig. 4.14. The load conditions permitted for the SR_HSP series are shown in Table 4.1.

Table 4.1 Permissible load conditions

Model	Conditions	Permissible values
SR–424HSP	Load mass	Rating 2 kg (max. 3 kg) Set the maximum acceleration for 1 kg or less.
	Moment of inertia	Max. 0.0170 kg·m^2
	Load center of gravity offset	Max. 100 mm (Load mass ≤ 1 kg) Max. 70 mm (Load mass > 1 kg)
SR–504HSP	Load mass	Rating 2 kg (max. 4 kg) Set the maximum acceleration for 2 kg or less.
	Moment of inertia	Max. 0.0225 kg·m^2
	Load center of gravity offset	Max. 100 mm (Load mass ≤ 2 kg) Max. 70 mm (Load mass > 2 kg)
SR–554HSP SR–654HSP	Load mass	Rating 5 kg (max. 10 kg) Set the maximum acceleration for 2 kg or less.
	Moment of inertia	Max. 0.0663 kg·m^2
	Load center of gravity offset	Max. 100 mm (Load mass ≤ 5 kg) Max. 70 mm (Load mass > 5 kg)

Model	Conditions	Permissible values
SR–854HSP	Load mass	Rating 5 kg (max. 10 kg) Set the maximum acceleration for 5 kg or less.
	Moment of inertia	Max. 0.0663 kg·m^2
	Load center of gravity offset	Max. 100 mm (Load mass ≤ 5 kg) Max. 70 mm (Load mass > 5 kg)
SR–1054HSP	Load mass	Rating 10 kg (max. 20 kg) Set the maximum acceleration for 10 kg or less.
	Moment of inertia	Max. 0.1 kg·m^2
	Load center of gravity offset	Max. 100 mm (Load mass ≤ 10 kg) Max. 70 mm (Load mass > 10 kg)

Caution

- The robot life and safety cannot be guaranteed if the robot is operated under the load conditions exceeding the permissible values.

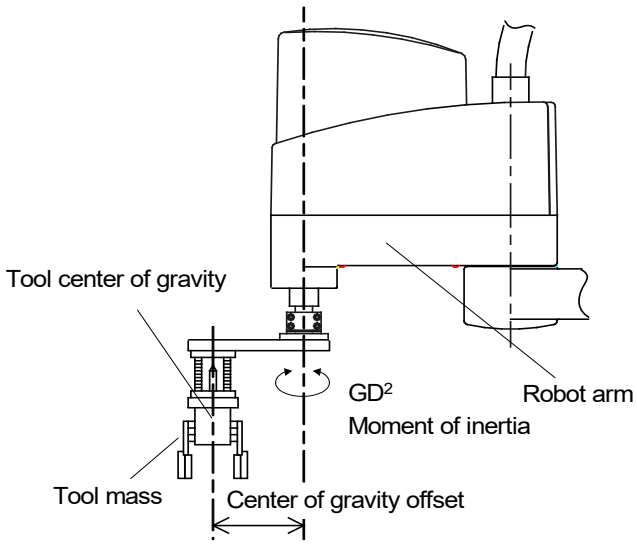


Fig. 4.14 Robot tool

4.3.2 Load Conditions and Program Setting

Even if the tool load conditions are within the permissible values listed in Table 4.1, the acceleration/deceleration time and servo gain that are adequate for the load conditions should be set. If this setting is inadequate, the robot may vibrate or overshoot, resulting in reduction of the robot life.
The SR–HSP series can automatically change the acceleration/deceleration time and servo gain by using the PAYLOAD command in the program according to the load conditions. The specific method for using this function is explained below.

a) PAYLOAD command
The PAYLOAD command format is written as shown below if the tool mass is M kg and the center of gravity is L mm.

PAYLOAD = {M, L}

M : Load mass (unit: kg)
L : Center of gravity offset (unit: mm)

The PAYLOAD command has the following functions.

- The acceleration/deceleration time of each robot axis is automatically changed according to the set load conditions.
- The servo gain of each robot axis is automatically changed according to the set load conditions.

b) Program examples
Basic program examples using the PAYLOAD command are shown below.
For further information, see the Robot Language Manual.

(Program example 1)
The robot is moved under the load conditions of 5 kg mass and 100 mm center of gravity offset.

```
PROGRAM SAMPLE
   SPEED= 100
   PAYLOAD={5,100}
  MOVE A
MOVE B
STOP
END
```

(Program example 2)

When the hand mass is 3 kg and the center of gravity offset is 30 mm, and the mass is 5 kg and center of gravity is 50 mm when the workpiece is grasped. Pick-and-place operation is executed under the above conditions.

```
PROGRAM SAMPLE
   PAYLOAD={3,30}
   ACCUR=COARSE
   ENABLE NOWAIT
   RESET DOUT
   MOVE  TAIKI
DOUT(1)
WAIT DIN(1)
LOOP:
   MOVE A+POINT(0,0,100)
   IF DIN(-1)THEN GOTO FIN
   MOVE A
   WAIT MOTION>=100
   DOUT(213)
   DELAY 1
   PAYLOAD={5,50}
   MOVE A+POINT(0,0,100)
   MOVE B+POINT(0,0,100)
   MOVE B
   WAIT MOTION>=100
   DOUT(-213)
   DELAY 1
   PAYLOAD={3,30}
   MOVE B+POINT(0,0,100)
   GOTO LOOP
FIN:
   MOVE  TAIKI
   DOUT(1)
   STOP
END
```

c) Setting of PAYLOAD command

In the default state, or when the PAYLOAD command is not used, the acceleration/deceleration is set to 100 % and the servo gain is set to the value under the minimum load. (See Para. 4.3.3.)

Caution

Use the PAYLOAD command in the following occasions.

- When the load mass exceeds the rated load.
- When there is a load center of gravity offset.

Unless the PAYLOAD command is used, the robot will vibrate or overshoot, resulting in shortening of the life of the mechanisms.

Caution

The load moment of inertia should be within the tolerances given in Table 4.1. Even if there is no load center of gravity offset, if the moment of inertia is large, the robot may vibrate. When this happens, figure out the virtual center of gravity offset L mm from the following equation, using the moment of inertia J kg·m^2 and mass M kg.

$L = \sqrt{(J \times 10^6 / M)}$

Then, designate the following.

PAYLOAD = {M, L}

Caution

When guiding manually, the robot may vibrate if the load mass or center of gravity offset is large. This is because the servo gain is not appropriate. When this happens, perform the following operation while setting the load conditions in the test run mode.

DO PAYLOAD = {5, 100}

EXE

The servo gain is changed then to the value which meets the load conditions.

If the robot still vibrates or overshoots after setting the above conditions, contact SHIBAURA MACHINE. Advise us of the then load conditions and program also.

4.3.3 Setting Robot Acceleration/Deceleration Time for Load Conditions

a) SR–504HSP

The acceleration/deceleration time of the robot is automatically changed according to the load conditions when the PAYLOAD command is used. The acceleration/deceleration time changes with the load mass, as shown in Fig. 4.15. The vertical line shows the acceleration during acceleration/deceleration. If the load mass is 4 kg, for instance, the acceleration is 67 % of the maximum value.

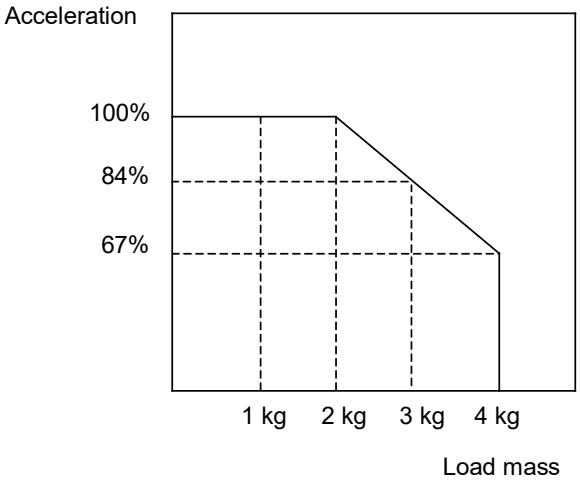


Fig. 4.15 Setting of acceleration for load mass (SR–504HSP)

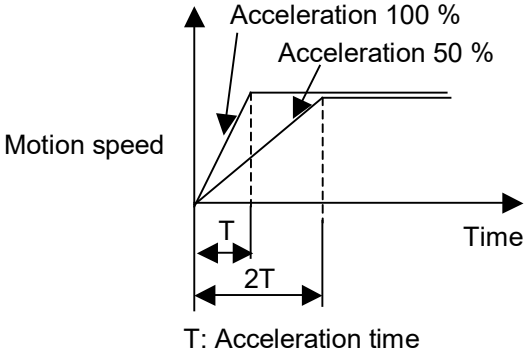


Fig. 4.16 Acceleration changes

Additionally, if there is a load center of gravity offset, the acceleration/deceleration time changes as shown in Fig. 4.17. If the load mass is 3 kg and the center of gravity offset is 100 mm, for instance, the acceleration is 55 % (= 84 % × 65 %) of the maximum value.

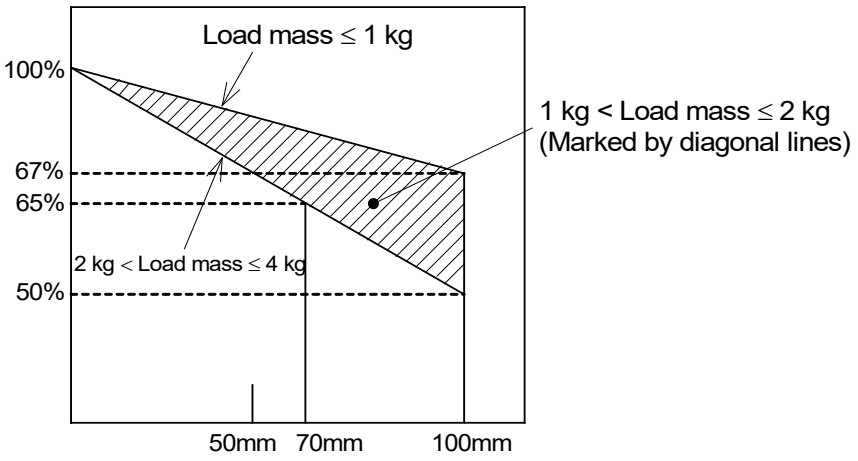


Fig. 4.17 Setting of acceleration for center of gravity offset (SR–504HSP)

b) SR–554HSP and SR–654HSP

The acceleration/deceleration time of the robot is automatically changed according to the load conditions when the PAYLOAD command is used. The acceleration/deceleration time changes with the load mass, as shown in Fig. 4.18. The vertical line shows the acceleration during acceleration/deceleration. If the load mass is 10 kg, for instance, the acceleration is 50 % of the maximum value. In other words, the set acceleration/deceleration time doubles.

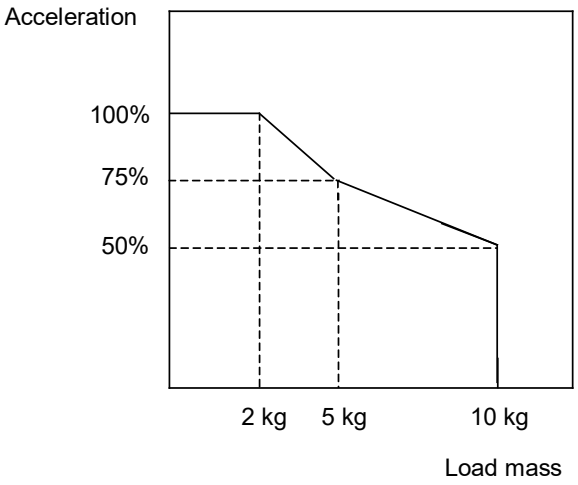


Fig. 4.18 Setting of acceleration for load mass (SR–554HSP and SR–654HSP)

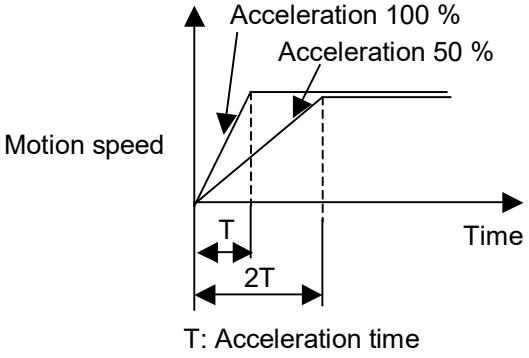


Fig. 4.19 Acceleration changes

Additionally, if there is a load center of gravity offset, the acceleration/deceleration time changes as shown in Fig. 4.20. If the load mass is 5 kg and the center of gravity offset is 100 mm, for instance, the acceleration is 50 % (= 75 % × 67 %) of the maximum value.

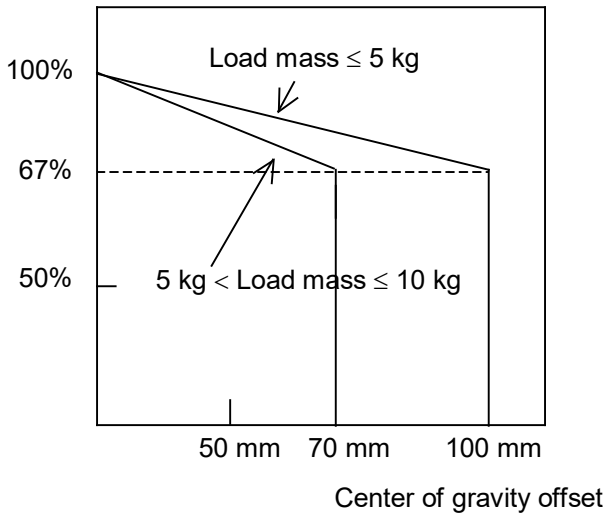


Fig. 4.20 Setting of acceleration for center of gravity offset
(SR–554HSP and SR–654HSP)

c) SR–854HSP

The acceleration/deceleration time of the robot is automatically changed according to the load conditions when the PAYLOAD command is used. The acceleration/deceleration time changes with the load mass, as shown in Fig. 4.21. The vertical line shows the acceleration during acceleration/deceleration. If the load mass is 10 kg, for instance, the acceleration is 50 % of the maximum value. In other words, the set acceleration/deceleration time doubles.

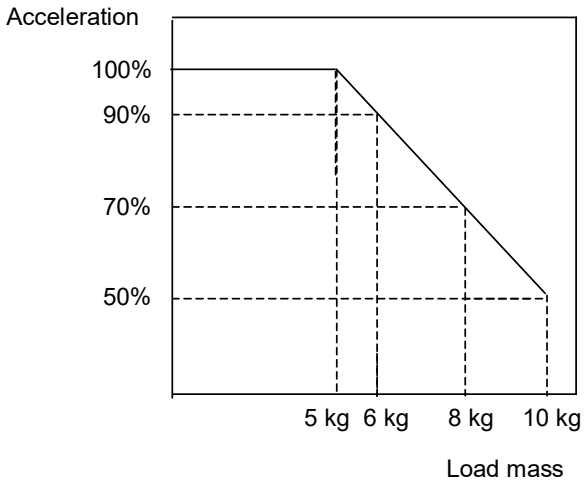


Fig. 4.21 Setting of acceleration for load mass (SR–854HSP)

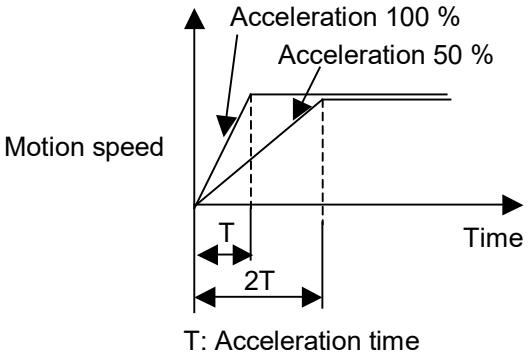


Fig. 4.22 Acceleration changes

Additionally, if there is a load center of gravity offset, the acceleration/deceleration time changes as shown in Fig. 4.23. If the load mass is 5 kg and the center of gravity offset is 70 mm, for instance, the acceleration is 67 % (= 100 % × 67 %) of the maximum value.

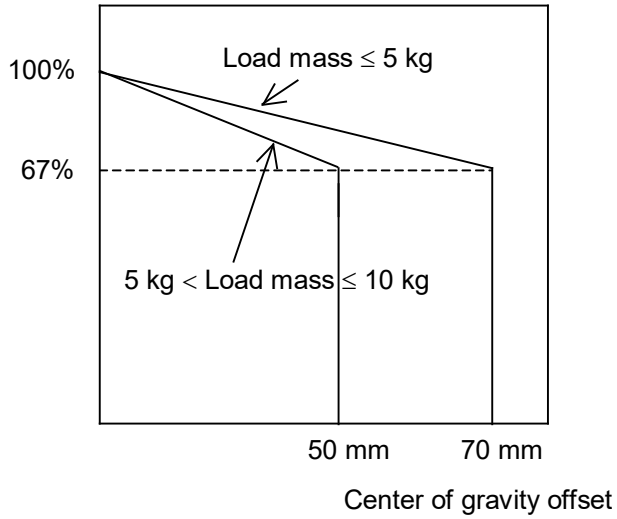


Fig. 4.23 Setting of acceleration for center of gravity offset (SR–854HSP)

d) SR–1054HSP

The acceleration/deceleration time of the robot is automatically changed according to the load conditions when the PAYLOAD command is used. The acceleration/deceleration time changes with the load mass, as shown in Fig. 4.24. The vertical line shows the acceleration during acceleration/deceleration. If the load mass is 15 kg, for instance, the acceleration is 83 % of the maximum value. In other words, the set acceleration/deceleration time is multiplied by 1.2.

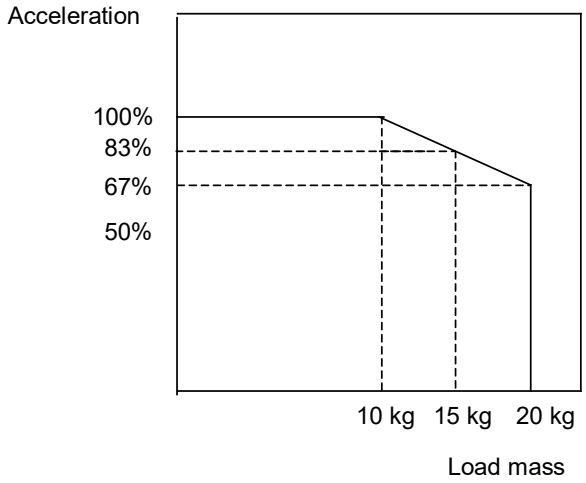


Fig. 4.24 Setting of acceleration for load mass (SR–1054HSP)

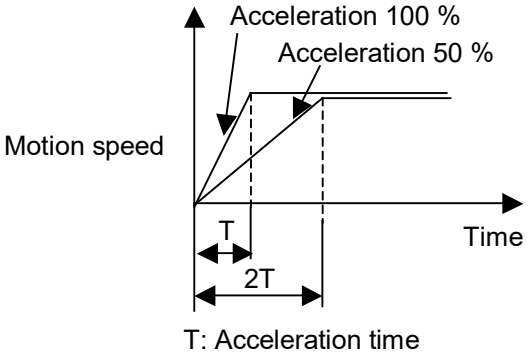


Fig. 4.25 Acceleration changes

Additionally, if there is a load center of gravity offset, the acceleration/deceleration time changes as shown in Fig. 4.26. If the load mass is 5 kg and the center of gravity offset is 100 mm, for instance, the acceleration is 75 % (= 100 % × 75 %) of the maximum value.

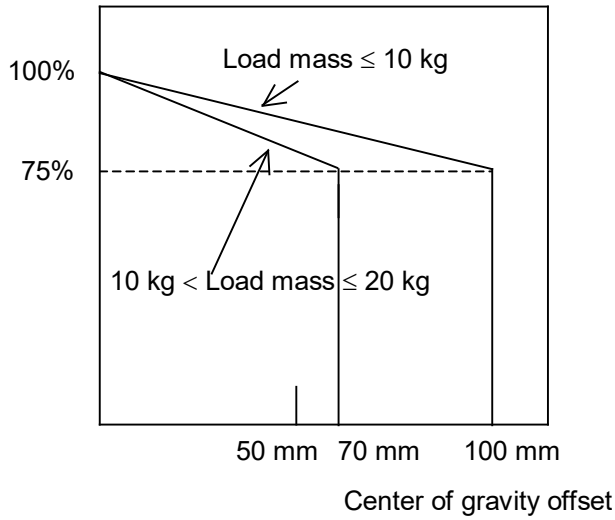


Fig. 4.26 Setting of acceleration for center of gravity offset (SR–1054HSP)

e) SR–424HSP

The acceleration/deceleration time of the robot is automatically changed according to the load conditions when the PAYLOAD command is used. The acceleration/deceleration time changes with the load mass, as shown in Fig. 4.27. The vertical line shows the acceleration during acceleration/deceleration. If the load mass is 3 kg, for instance, the acceleration is 50 % of the maximum value.

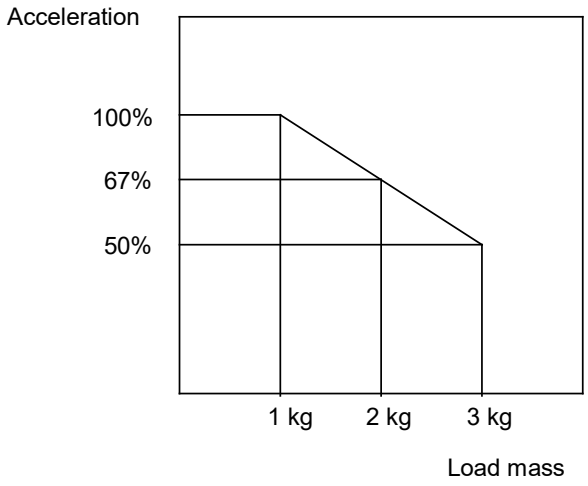


Fig. 4.27 Setting of acceleration for load mass (SR–424HSP)

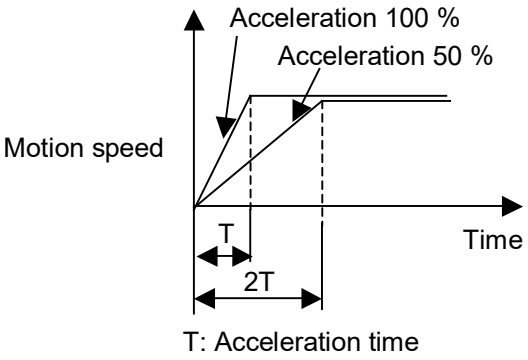


Fig. 4.28 Acceleration changes

Additionally, if there is a load center of gravity offset, the acceleration/deceleration time changes as shown in Fig. 4.29. If the load mass is 1 kg and the center of gravity offset is 100 mm, for instance, the acceleration is 50 % (= 100 % × 50 %) of the maximum value.

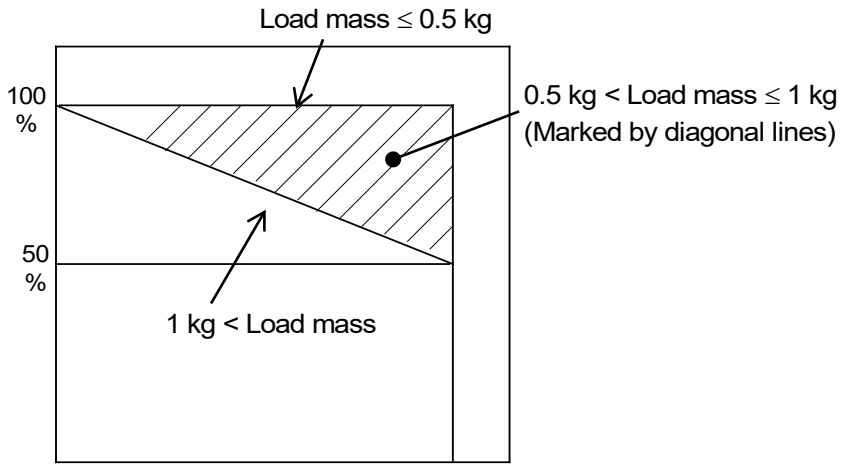


Fig. 4.29 Setting of acceleration for center of gravity offset (SR–424HSP)

Appendix A Calculating Control Power Capacity

The power capacity of the controller can be calculated in the following manner. The power connected to the controller should exceed the capacity obtained from the following equation:

(Power capacity) = (Power capacity of control section) + (Power capacity of servo driver)

a) Power capacity of control section
The power capacity of the controller excluding the servo driver is as follows:
Power capacity of control section ..... 306 VA

b) Power capacity of servo driver
The power capacity of the servo driver is the total of the power capacities of the servomotors used in the robot. The following table lists the power capacity of each motor.

Motor capacity (W)	Power capacity (VA)
50	89
100	179
200	356
400	577
600	963

Example: The servo motor capacity and servo driver power capacity of the SR–HSP series robots are as follows:

Type of robot	Axis 1	Axis 2	Axis 3	Axis 4	Power capacity of servo driver (VA)
SR–424HSP	200	200	100	50	356 + 356 + 179 + 89 = 980
SR–504HSP	400	200	100	50	577 + 356 + 179 + 89 = 893
SR–554HSP SR–654HSP SR–854HSP	600	400	200	100	963 + 577 + 356 + 179 = 2075
SR–1054HSP	600	400	200	200	963 + 577 + 356 + 356 = 2252

Reference: The power capacity of each servo motor is calculated by the following equation.

(Power capacity of servo driver) = $\sqrt{3 * (E * I)/(\cos\theta * \eta)}$

where,

E : Motor rated voltage

I : Motor rated current

Cos θ : Servo driver power factor (0.7)

η : Servo driver power factor (0.85)

c) Example of calculating power capacity

The power capacity of SR–HSP series robot is listed in the following table.

Type of robot	Power capacity of control section (VA)	Power capacity of servo driver (VA)	Power capacity of controller (VA)
SR–424HSP	306	980	1286
SR–504HSP	306	1201	1507
SR–554HSP SR–654HSP SR–854HSP	306	2075	2381
SR–1054HSP	306	2252	2558

Note: With respect to the power capacity required, it is assumed that all axes are continuously operated at 100% load. If the power capacity is insufficient when the robot is operated, troubles such as a drop in power voltage, a malfunction, or resetting of the control power may take place. Thus, the robot may not be correctly operated.

Also, a current three (3) times the rated current may be required at the start of the robot. Thus, it is necessary to select a power supply in which the peak current of the power is three (3) times the rated current for 100 ms.

Appendix B Restoring Home Position Data

Batteries which back up the positional information of the position detectors (i.e., encoders) are contained in the robot base unit. Unless the robot is used for a long period of time, the battery voltage drops and the home position data will be lost. Also, if the voltage of the battery which backs up the internal memory of the X8HC printed board drops, programs, parameters and absolute coordinate data set by the user will be lost. To avoid this, replace the battery on a regular basis. The yardstick of each replacement period is shown below.

- Batteries for position detectors ⋯ Two (2) and a half (2.5) years after delivery (when the operating time per day is eight (8) hours).
- Battery for X8HC printed board SRAM ⋯ Five (5) years after delivery


If the home position data has been destroyed due to battery voltage drop, etc., observe the following procedures to restore it.

a) How to restore the home positions


(1) Descriptions of HOME function

This function is useful to restore the original home position data by memorizing each axis coordinate data beforehand, if the machine home position data has been destroyed.
The set points can be assigned to HOME1 ~ 4. The plus (+) side mechanical stopper positions of axes 1 ~ 3 are factory-set in HOME3, and the minus (–) side mechanical stopper positions of axes 1 ~ 3 are factory-set in HOME4. The axis 4 is set at the 0° position according to the match-mark. In HOME1 and HOME2, the user can specify any desired positions. We recommend to set there the positions securing the robot end to prepare for the system construction.

[Page 1]

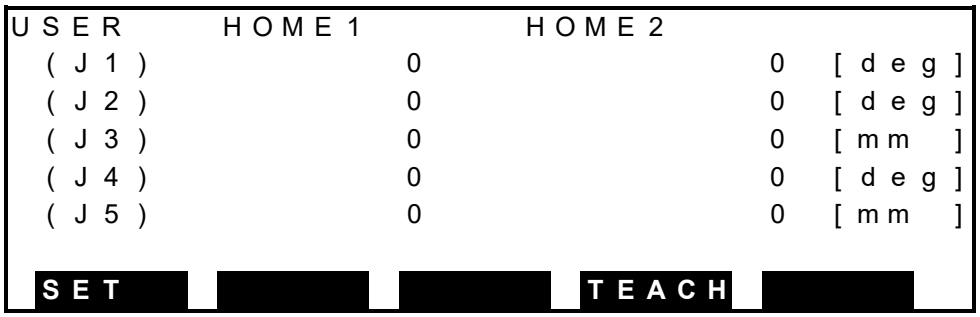

[Page 2]

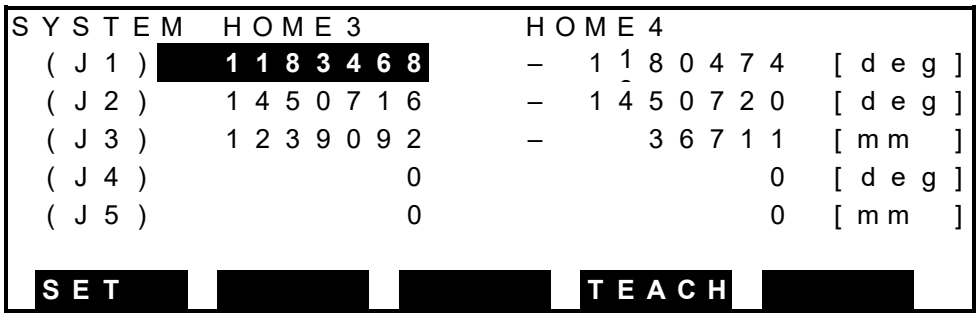


Note: The above are the screens for restoring the machine home positions. NEVER operate them at other than the restoration.

(2) Operating procedures

I. How to set the data in HOME1 and HOME2:
This paragraph describes the data setting in HOME1. (The same procedures are applied to HOME2.)

[1] Guide the robot to secure the tool shaft at a desired position.
[2] Turn off the servo power.
[3] Press the [UTILITY] key through the teach pendant.
[4] Press the NEXT key until [REORG] appears, then press the [REORG] key.

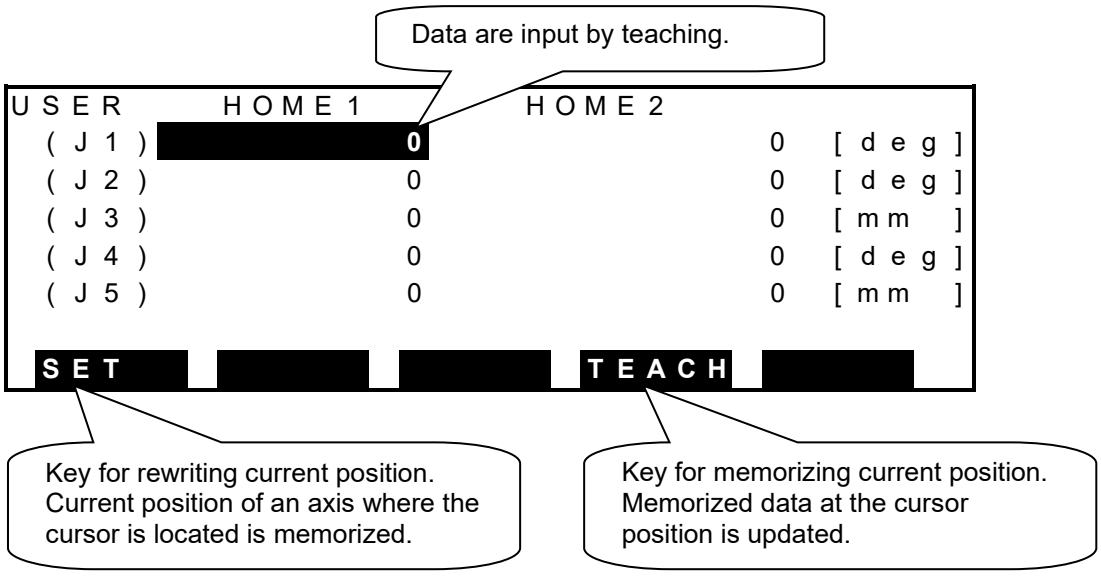


[5] When the above screen appears, memorize the position where the robot was secured in the [TEACH] mode, by moving the cursor to each axis.

II. How to restore the home position data by HOME1 (or HOME2):
If the machine home position coordinate data has been destroyed, the machine home position can be restored by means of the HOME1 function.

[1] Guide the robot to the position set by HOME1 and secure the robot there.
[2] Turn off the servo power.
[3] Press the [UTILITY] key through the teach pendant.
[4] Press the NEXT key until [REORG] appears, then press the [REORG] key.
[5] Move the cursor to each axis in the HOME1 mode of the REORG screen. Press the [SET] key and write the position where the robot was secured to the coordinate value set in HOME1. Thus, the machine home position can be restored. When you are going to set the data to axis 3 at this time, be sure to set axis 4 first.

III. How to restore the position data by HOME3 (or HOME4):
The plus (+) side mechanical stopper positions of axes 1 ~ 3 are factory-set in HOME3, and the minus (–) side mechanical stopper positions of axes 1 ~ 3 are factory-set in HOME4. The axis 4 is set at the 0° position according to the match-mark.
The machine home position can be restored, using these data.
This paragraph deals with the restoration procedures, using HOME3.

[1] Turn off the servo power.
[2] Press the [UTILITY] key through the teach pendant.
[3] Press the NEXT key until [REORG] appears, then press the [REORG] key.
[4] Press the NEXT key to display Page 2.

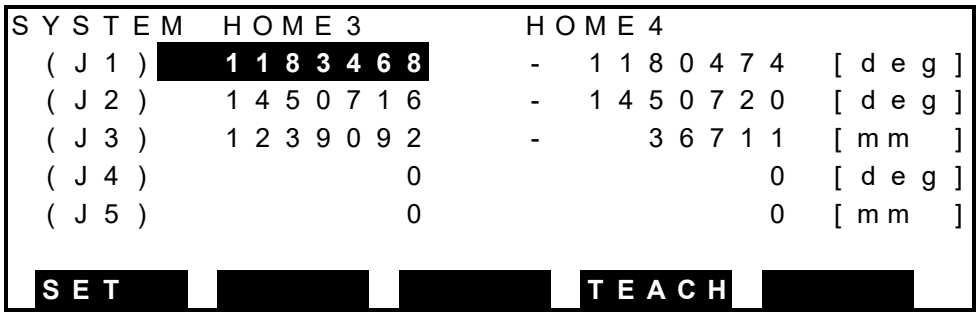

[5] Contact the axis 1 of the robot to the plus (+) side mechanical stopper by hand.
[6] Move the cursor to (J1) of HOME3, then press the [SET] key. Now, the machine home point of axis 1 is restored.
[7] Likewise, contact the axis 2 of the robot to the plus (+) side mechanical stopper by hand.
[8] Move the cursor to (J2) of HOME3, then press the [SET] key. Now, the machine home point of axis 2 is restored.
[9] Press the [ESC] key to escape from the REORG screen once.
[10] Turn on the servo power, and set the axes 3 and 4 in the servo-free state.
[11] Set the axis 4 to the match-mark.
[12] Contact the axis 3 of the robot to the plus (+) side mechanical stopper by hand.

[13] Turn off the servo power.
[14] Repeat Steps [2] to [4] inclusive to call the HOME screen again.
[15] Move the cursor to (J4) of HOME3, then press the [SET] key. Now, the machine home point of axis 4 is restored.
[16] Move the cursor to (J3) of HOME3, then press the [SET] key. Now, the machine home point of axis 3 is restored.
[17] Press the [ESC] key to escape from the HOME screen. Now, the operation has finished.