SR series/TS2000
Industrial Robot

INSTRUCTION MANUAL

CASSETTE TRANSFER ROBOT

MAINTENANCE

Notice

1. Make sure that this instruction manual is delivered to the final user of SHIBAURA MACHINE's industrial robot.
2. Before installing and operating the industrial robot, read through and completely understand this manual.
3. After reading through this manual, keep it nearby for future reference.

Rev.1
April 1, 2020

Shibaura Machine

Copyright 2020 by SHIBAURA MACHINE CO.,LTD.
All rights reserved.

No part of this document may be reproduced in any form without obtaining prior written permission from SHIBAURA MACHINE CO.,LTD.

The information contained in this manual is subject to change without prior notice to effect improvements.

PREFACE

This manual describes how to maintain the robot and controller.
Maintenance and inspection are essential to keep the robot performance for a long time, to prevent failures and to assure safety. Be sure to look through this manual and set up a maintenance program before actually starting the robot.

This manual is composed of the following sections.

Section 1: Maintenance Items
This section describes the maintenance schedule of the robot and controller and items required for inspection and maintenance.

Section 2: Maintenance of the Robot
This section refers to the robot structure and items required for inspection and maintenance of the robot.

Section 3: Maintenance of Controller
This section refers to the robot controller structure and items required for inspection and maintenance of the controller.

CAUTIONS ON SAFETY

This manual contains the important information on the robot and controller to prevent injury to the operators and persons nearby, to prevent damage to assets and to assure correct use.
Make sure that the following details (indications and symbols) are well understood before reading this manual. Always observe the information that is noted.

[Explanation of indications]

Indication	Meaning of indication
 **DANGER**	This means that "incorrect handling will lead to fatalities or serious injuries."
 **CAUTION**	This means that "incorrect handling may lead to personal injuries *1) or physical damage *2)."

*1) Injuries refer to injuries, burns and electric shocks, etc., which do not require hospitalization or long-term medical treatment.

*2) Physical damage refers to damages due to destruction of assets or resources.

[Explanation of symbols]

Symbol	Meaning of symbol
	This means that the action is prohibited (must not be done). Details of the actions actually prohibited are indicated with pictures or words in or near the symbol.
	This means that the action is mandatory (must be done). Details of the actions that must be done are indicated with pictures or words in or near the symbol.
	This means danger. Details of the actual danger are indicated with pictures or words in or near the symbol.
	This means caution. The details of the actual caution are indicated with pictures or words in or near the symbol.

CAUTION

- Be sure to read through the safety instruction manual provided separately before starting actual work to assure the safe work covering from the robot installation to operation.

[Maintenance and inspection]

Be sure to observe the following items to use the robot safely.

DANGER	
 Prohibited	• DO NOT incinerate, disassemble or charge the batteries. Otherwise, they may rupture.
 Mandatory	• Be sure to turn off the main power switch of the controller before starting inspection or maintenance. • Batteries should be disposed of according to the user's in-house regulations.

CAUTION	
 Disassembly prohibited	• The user must NEVER replace or modify parts other than those described in the instruction manual. Otherwise, the performance may deteriorate or faults or accidents will be caused.
 Mandatory	• Always use the SHIBAURA MACHINE's designated spare parts when replacing the parts. • Maintenance and inspection should be performed regularly. Otherwise, the system may malfunction or accidents will be caused.


Table of Contents

		Page
Section 1	Maintenance Items	1–1
1.1	Maintenance Schedule	1–1
1.2	Items for Maintenance and Inspection	1–2
1.3	Maintenance Tools	1–4
1.4	Maintenance Contract and Repair	1–5
Section 2	Maintenance of the Robot	2–1
2.1	Cautions on Maintenance and Inspection	2–1
2.2	Layout of Robot Components and Drive Mechanism	2–1
2.3	Robot Maintenance Procedures	2–3
2.3.1	Check for Vibration and Abnormal Noise	2–3
2.3.2	Check for Lubrication	2–4
2.3.3	Replacement of Position Detector (or Encoder) Batteries	2–6
2.3.4	Check for Stainless Belt	2–7
Section 3	Maintenance of Controller	3–1
3.1	Cautions on Maintenance and Inspection	3–1
3.2	Layout of Controller Parts	3–2
3.3	Maintenance Procedures	3–3
3.3.1	Check for Controller Air Vent Holes	3–3
3.3.2	Check of Safety Devices for Function	3–4
3.3.3	Battery Replacement	3–7
3.3.4	Replacement of Switching Power Supply Unit	3–9
3.3.5	Replacement of Fuse (X8HN, X8HI Printed Boards)	3–12
3.3.6	Replacement of Output ICs (X8HN, X8HI Printed Boards)	3–14
Appendix Table 1	List of Mechanical Replacement Parts for Maintenance	4–1
Appendix Table 2	List of Controller Replacement Parts for Maintenance	4–3
Appendix Drawing 1	Component Connection Diagram	4–4

Section 1 Maintenance Items

1.1 Maintenance Schedule

Maintenance comes in the two (2) types; daily inspection, and regular inspection and maintenance. For the regular inspection and maintenance, inspection items are added every 1,200 running hours.

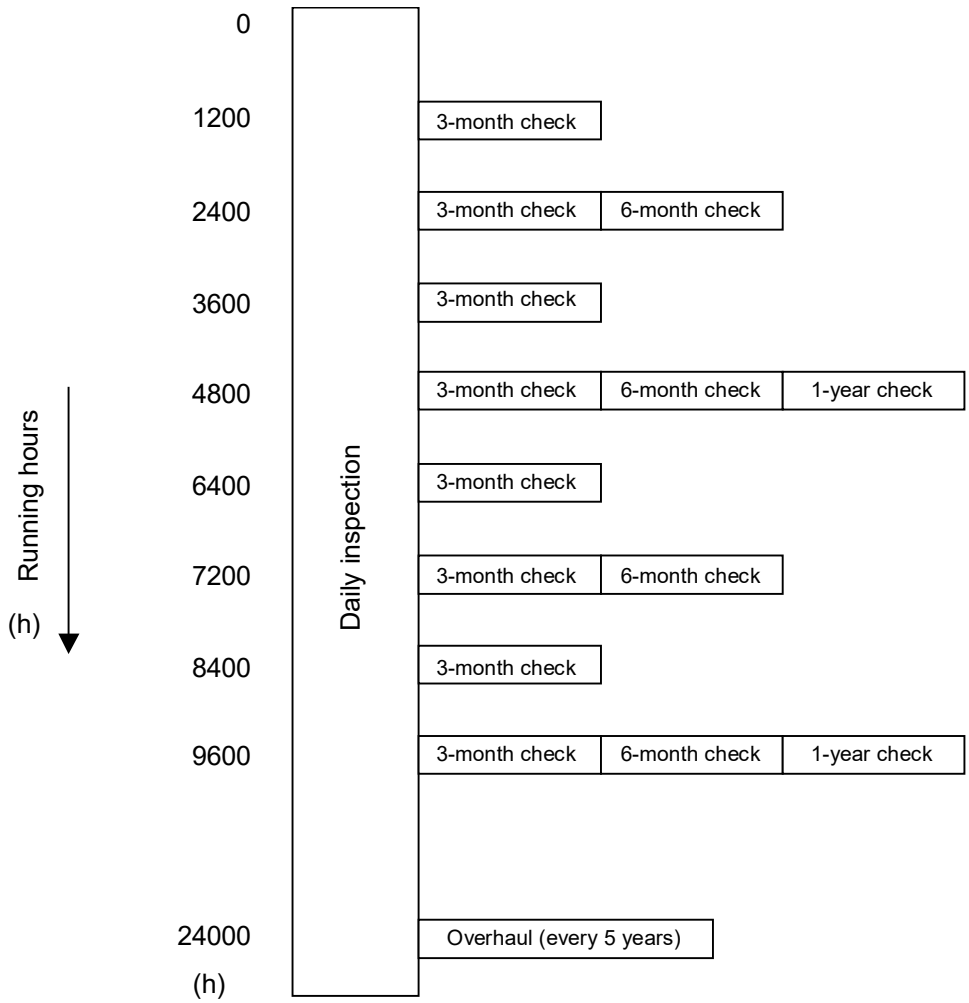

Inspection schedule

- When the system is operated for 16 hours per day:
  16 hours × 25 days × 3 months = 1,200 hours
- When the system is operated for 24 hours per day:
  24 hours × 25 days × 3 months = 1,800 hours

1.2 Items for Maintenance and Inspection

This section describes the items for maintenance and inspection. For the execution procedures, see the relevant paragraph listed in the table below.

a) Daily inspection

No.	Item	Inspection procedures	Relevant Para.
1	Robot harness and cable duct	Make sure that no local torsion or curve is caused in the robot harness and cable duct during robot operation. Also, make sure that the robot harness is tightened completely.	2.3.1
2	Robot installation bolts	Make sure that the robot base installation bolts are tightened completely.	2.3.1
3	Vibration and noise	Make sure that each axis can move smoothly.	2.3.1
4	Change in positioning accuracy	Make sure that the robot can stop at a predetermined position accurately.	
5	Controller vent holes	(1) Make sure that no obstacle stands in front of the vent holes. (2) Make sure that no contaminant is left in the vent hole.	3.3.1
6	Function of safety devices	Make sure that each safety device connected to the emergency stop pushbutton switch and external operation input signal can function properly.	3.3.2

b) Quarterly (every three (3)-month) inspection

No.	Item	Inspection procedures	Relevant Para.
1	Lubricated state of ball screw and linear guide	Make sure that the ball screw and linear guide of each axis is greased completely and that no rust is developed on them.	2.3.2

c) Semi-annual (every six (6)-month) inspection

No.	Item	Inspection procedures	Relevant Para.
1	Orthogonal axis stainless belt	Make sure that the orthogonal axis stainless belt is tightened completely and that it is not damaged and in a good shape.	2.3.4
2	Each axis drive system	Move each axis by hand and make sure that it moves smoothly.	2.3.1
3	Timing belts	(1) Make sure that each timing belt is not worn off or cracked. (2) Check each timing belt for tension.	

d) Annual (every year) inspection

No.	Item	Inspection procedures	Relevant Para.
1	Greasing	Apply the grease to each axis ball screw and linear guide.	2.3.2
2	Wiring	Check for the state of the cables and connectors.	2.3.1

e) Battery replacement

No.	Item	Inspection procedures	Relevant Para.
1	Replacement of position detector battery (Replace the battery every three (3) years.)	Replace the position detector backup batteries (housed in the pool box under the orthogonal axis). If the running time is long, battery consumption is small. If the power OFF time is long, the consumption is large. If the battery voltage drops, the battery alarm lamp flickers. Replace the battery immediately.	2.3.3

f) Overhaul (every five (5) years)

No.	Item	Inspection procedures	Relevant Para.
1	Inspection of consumable parts	Inspect the ball screws, linear guides, flexible cables, reduction gears, bearings and motors and replace them when necessary.	
2	Battery replacement (Replace the battery every five (5) years.)	Replace the RAM (controller) backup battery. If the running time is long, battery consumption is small. If the power OFF time is long, the consumption is large. If the battery voltage drops, the battery alarm lamp illuminates. Replace the battery immediately. Alarm message: "MAIN Battery alarm"	3.3.3
3	Replacement of switching power supply unit (Replace the battery every five (5) years.)	As the switching power supply unit uses an aluminum electrolytic condenser, its life is limited. Replace the switching power supply unit (DC5 V, DC24 V) for preventive maintenance. The life of the switching power supply unit differs with load current, running hours and ambient temperature. If the load current is large, the running time is long. If the ambient temperature is high, the life becomes short.	3.3.4

1.3 Maintenance Tools

We recommend to use the following tools for maintaining the robot and controller.

- Phillips screwdrivers
- Hexagonal wrench set: M3 ~ M10
- Assembly wrench set
- Water pump pliers
- Nippers
- Grease guns

1.4 Maintenance Contract and Repair

1.4.1 Maintenance Contract

With the exception of greasing and lubrication, we recommend that the user conclude with us an after-sale service contract on the inspection items for maintenance and inspection to be done semi-annually and after.

1.4.2 Repair

If a fault has occurred or if repair is necessary, turn off the controller power and contact the SHIBAURA MACHINE Service Department. At this time, advise us of the details of the fault and the following information stated on the robot and controller.

- Robot model
- Manufacture number
- Date of manufacture
- Operating time

1.4.3 Modification

This robot and controller MUST NOT be modified without the consent from SHIBAURA MACHINE.

! CAUTION

- The user must NEVER replace or modify parts other than those described in the instruction manual. Otherwise, the performance may deteriorate or faults or accidents will be caused.

Section 2 Maintenance of the Robot

2.1 Cautions on Maintenance and Inspection

When performing inspection or maintenance of the robot, strictly observe the following precautions to protect yourself and coworkers.

DANGER

- Be sure to turn off the main power switch of the controller before approaching the robot for maintenance and inspection.

2.2 Layout of Robot Components and Drive Mechanism

The layout of the robot mechanical components is shown in Fig. 2.1.

a) Axis 1
The output of axis 1 AC servo motor is input to the reduction gear via the spur gear. The output of the reduction gear directly controls the arm 1 motion.

b) Axis 2
The output of axis 2 AC servo motor is input to rotate the ball screw to move the slider.

c) Axis 3
The output of axis 3 AC servo motor is input to the reduction gear to move the vertical axis up and down.

d) Axis 4
The output of axis 4 AC servo motor is input to the reduction gear via the timing belt. The output of the reduction gear controls the axis 4 hand rotation.

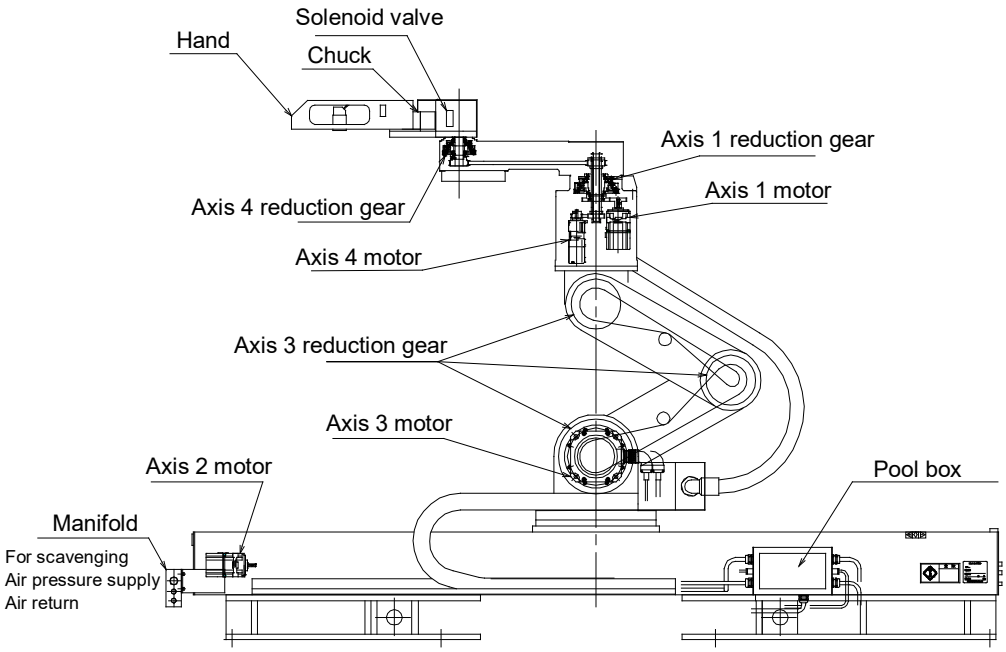


Fig. 2.1 Layout of robot mechanical components

2.3 Robot Maintenance Procedures

2.3.1 Check for Vibration and Abnormal Noise

1) Approach the robot and its peripheral equipment outside the predetermined operating range and make sure that no abnormal noise of operation is heard. Otherwise, locate the source of the abnormal noise.
When necessary, turn off the power of the robot and its peripheral equipment and manually move the part suspected to be the trouble source to confirm that the abnormal noise is heard from it.
If the abnormal noise is heard from the ball screw and linear guide, contaminant has possibly entered them, or they have run out of grease. For the former cause, remove the contaminant and make sure that other parts are not damaged. For the latter cause, apply grease.

2) If chattering is caused in the cover, etc., make sure that all screws are tightened completely and that relevant parts are not deformed. Otherwise, completely tighten the screws or repair the parts as necessary.

3) Make sure that the screws of each arm joint are tightened completely. Otherwise, tighten the screws completely.

4) Possible causes other than the above-mentioned are the wrong method of use, controller-related cause, etc. In either case, adjustment is not easy. Consult us at the after-sale service agent in your territory.

! DANGER

- When nearing the robot in the servo-free status, be sure to carry out the work by two (2) persons. One person should carry out the work while the other is monitoring the work outside the hazardous zone. The latter person should watch the work and be ready to press the emergency stop switch if any abnormality occurs.

2.3.2 Check for Lubrication

1) Check of ball screw and linear guide for lubrication state
Make sure that the ball screw and linear guide of each axis are greased sufficiently and that no rust has developed on them. If they have run out of grease, fill it.

! CAUTION

- NEVER mistake the kind of grease. Otherwise, the robot performance will deteriorate or the robot will malfunction.
- After you touched the ball screw, ball screw spline or linear guide by hand, be sure to fill the grease. Otherwise, rust will develop on it.

2) Greasing
Use the following grease for the orthogonal axes.
LG2 (NSK)

To grease the orthogonal axes, observe the following procedures.

i) Dismantle the stainless belt.
Grease each linear guide from the grease nipple attached to the slider.

ii) Greasing of linear guide:
Fill the grease from the clearance between the frame and frame cover, taking careful precautions on the bent-up of the stainless belt.

iii) Greasing of ball screw
Fill the grease to the roller surface of the ball screw shaft from the clearance between the frame and frame cover.

iv) Restretching of stainless belt:
Restretch the stainless belt according to the predetermined procedures.

The greasing volume is as follows:

- Ball screw ⋯ Approx. 5 g
- Linear guide ⋯ Approx. 15 g (per slider)

For the greasing procedures of the orthogonal axes, see Section 6 of the COMPO Arm Axis Instruction Manual provided separately.

The axis 2 reduction gear is of an oilless type and need not be greased.

2.3.3 Replacement of Position Detector (or Encoder) Batteries

To back up the data of the position detector attached to each motor, batteries (lithium dry batteries) are used. Replace the batteries every three (3) years.
If the controller has detected the battery voltage drop alarm, replace the batteries at an early stage.
For the battery replacement, observe the following procedures according to the battery power ON time.

If the batteries are replaced after they are turned on for more than one (1) hour, start with Step 2). If the battery power ON time is one (1) hour or less, start with Step 1).

1) Turn on the main power of the controller for more than one (1) minute.

2) Turn the power off.

3) Remove the pool box cover.

4) A battery box is housed in the pool box or cover.

5) Remove the battery box cover inside, then the batteries.

6) Set three (3) new batteries within five (5) minutes, taking care of the "+" and "–" polarities.
   When the lithium battery is used, disconnect it from the connector (BATT) and set a new battery.

7) Set the battery box cover, then the pool box cover.

! CAUTION

- Batteries should be disposed of according to the user's in-house regulations.
- NEVER drop the batteries into fire. NEVER short-circuit, charge, disassemble or heat them. Otherwise, liquid leakage or rupture may be caused.

2.3.4 Check for Stainless Belt

Make sure that the X-axis stainless belt is not loosened and not damaged at all. To restretch the belt, observe the following procedures.

1) Use the following stainless belt.

Material	:	SUS301–H
Belt width	:	40 mm ±0.1 mm (Alignment is necessary.)
Maker	:	Dymco Ltd.
Full length	:	Belts which are 100 mm longer than the full length of the orthogonal axis are used at a rate of two (2) pcs. per axis.

2) Move the slider of an axis requiring change of the stainless belt to the stroke center.
Remove the belt keepers on the motor side (lower side, pool box side) and joint the end of this belt with that of a new belt.

Caution: The surface of the stainless belt having burr of surface machining should be the front side.

3) Remove the belt cover and belt keepers on the anti-motor side, then carefully roll the stainless belt. When the new stainless belt has reached the end of the anti-motor side, passing through the slider, peel off the jointed tape to separate the belts.

4) Align the end of the stainless belt on the motor side with the frame end, and temporarily clamp them with the belt keepers. Align both ends of the stainless belt with the frame according to the scribed lines, then secure the belt on the motor side.

5) Secure the stainless belt while pulling the belt on the anti-motor side by the force of 14.7 (1.5 kg) and aligning it with the scribed line on the frame.

6) Bend the stainless belt projecting from the shaft and hold it with the belt cover.

Section 3 Maintenance of Controller

3.1 Cautions on Maintenance and Inspection

When performing maintenance and inspection of the controller, follow the items given below so that the work can be carried out safely.


! CAUTION

- Before removing the controller cover for maintenance or inspection, be sure to turn off the main power switch of the controller.
  Also, turn off the power breaker when connecting or disconnecting the power cable.
- DO NOT touch the servo driver for at least two (2) minutes after the main power switch is turned off. The large-capacity capacitor in the servo driver may be charged with voltage, and touching the servo driver could lead to electric shocks.
- DO NOT disconnect the battery connector at other than battery replacement. Otherwise, files saved in the memory may be lost.

! DANGER

Be sure to turn off the main power switch. If the main power switch remains ON, the servo power printed board, servo printed board and switching power supply are charged, and touching them could lead to electric shocks.

3.2 Layout of Controller Parts

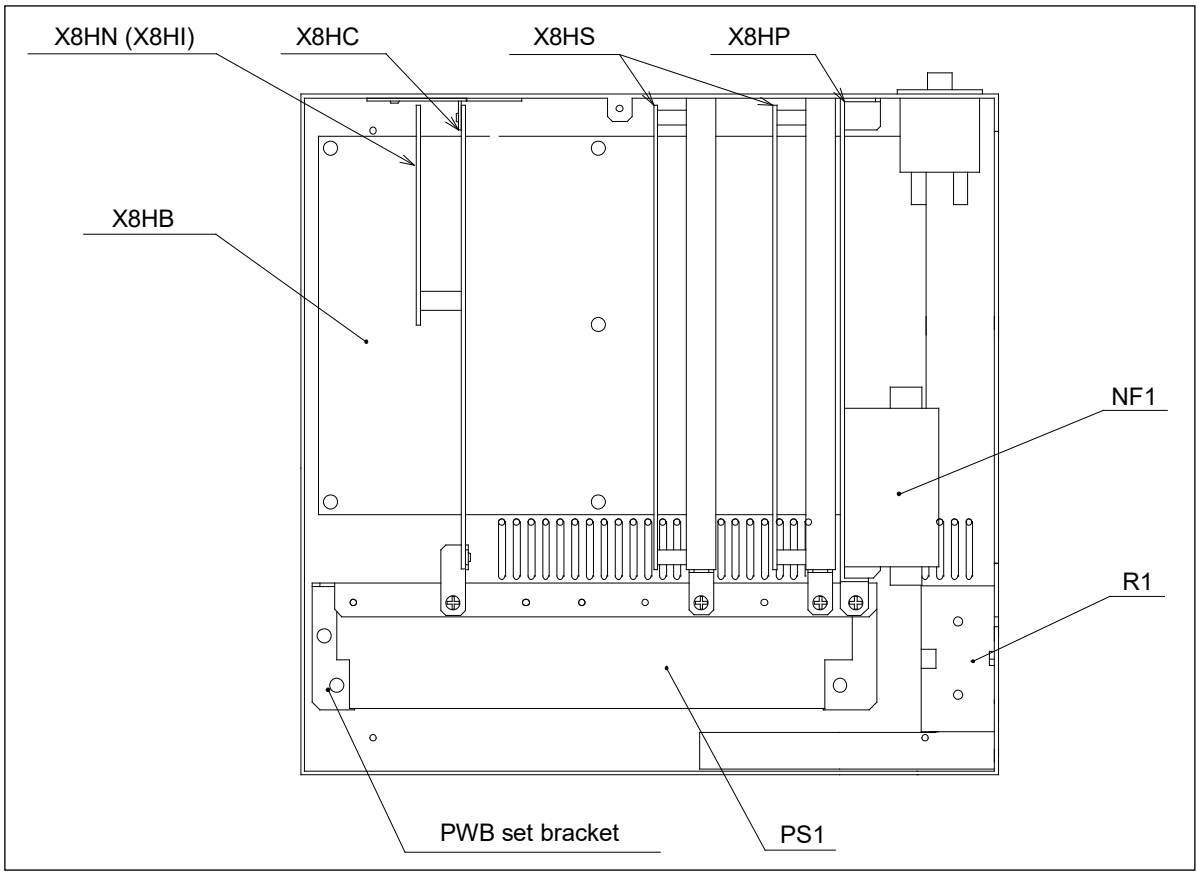

Upper side view


Fig. 3.1 Layout of controller parts

Part name	Descriptions
PS1	P5 V, P24 V switching power supply
PWB set bracket	PS1 set bracket
X8HP	Servo power printed board
X8HC	Main control printed board
X8HN (X8HI)	I/O output printed board
X8HS	Servo printed board
X8HB	Mother board
R1	Regenerative resistor
NF1	Noise filter

3.3 Maintenance Procedures

3.3.1 Check for Controller Air Vent Holes

If the air vent holes are blocked, the controller may overheat and malfunction. To avoid this, perform check on the air vent holes to make sure that air is flowing freely through them.

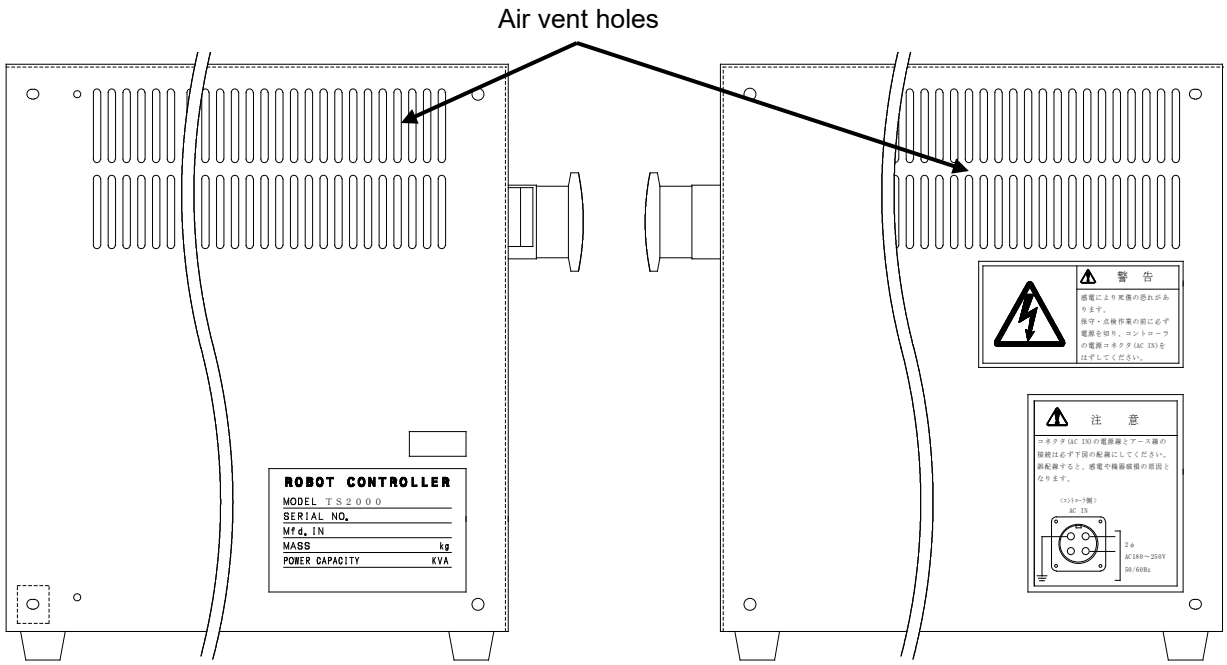

Left side view Right side view

Fig. 3.2 Controller side views

a) Make sure that no obstacle stands in front of the air vent holes. If there is any obstacles, move them away from the vent holes so that the air flow is not blocked.

b) Make sure that no contaminant is left on the air vent holes. If any contaminant is let on the vent hole, remove it.

c) If the controller is placed sideways, make sure that the air vent holes on the bottom surface of the controller are more than 11 mm away from the floor surface. Always keep the space of 11 mm or over. The length of rubber shoe is approximately 11 mm.

3.3.2 Check of Safety Devices for Function

Make sure that the emergency stop pushbutton switches equipped on the control panel and teach pendant work properly. Also make sure that the safety devices controlled by the external operation input signals work correctly.

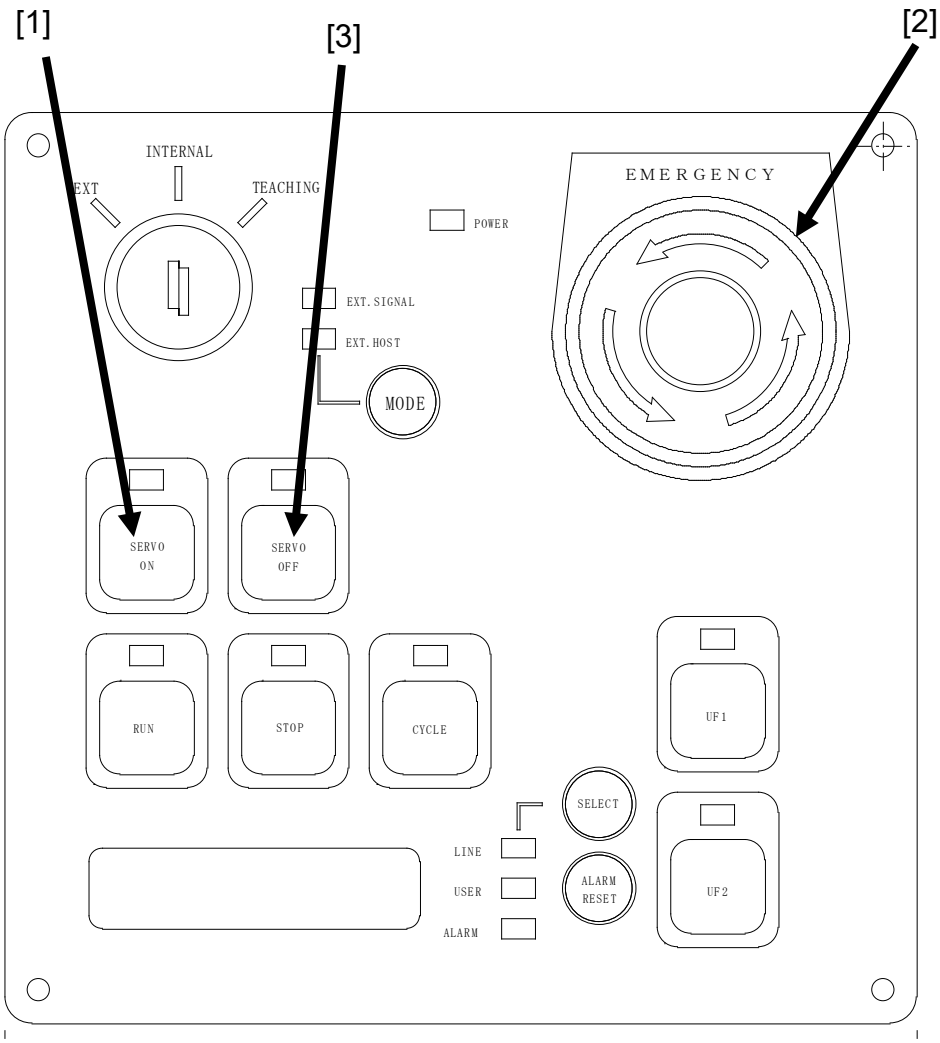


Fig. 3.3 Layout of control panel switches

a) Make sure that the EMERGENCY (emergency stop) switch [2] provided on the control panel functions properly.

1) Press the SERVO ON switch [1] provided on the control panel to turn the servos on and make sure that the SERVO ON LED is illuminated.

2) Press the EMERGENCY switch [2] and make sure that the servos are turned off. The SERVO ON LED goes out and the SERVO OFF LED illuminates. At this time, make sure that the EMERGENCY switch remains depressed.

3) Turn the EMERGENCY switch clockwise and make sure that the same switch turns off.

b) Make sure that the EMERGENCY switch [6] provided on the teach pendant functions properly.

1) Press the SERVO ON switch [4] on the teach pendant to turn on the servo power, and make sure that the SERVO ON LED [5] is illuminated.

* The servo ON is not possible in the TESTRUN mode.

2) Press the EMERGENCY switch [6] on the teach pendant and make sure that the servos are turned off. The SERVO ON LED goes out. At this time, make sure that the EMERGENCY switch [6] remains depressed.

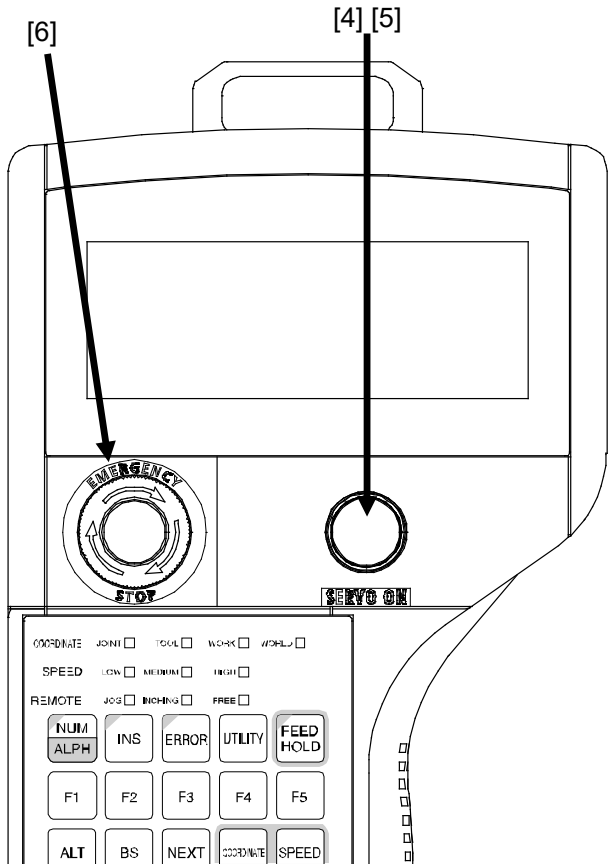


Fig. 3.4 EMERGENCY switch provided on teach pendant

3) Turn the EMERGENCY switch in the clockwise (CW) direction and make sure that the same switch turns off.

c) Make sure that the safety devices controlled by the external operation signals work properly.

1) Press the SERVO ON switch [1] equipped on the control panel to turn on the servo power. Then turn on (or trip) the safety devices connected with external operation input signal "emergency stop" (such as external emergency stop switch, photoelectric type sensing safety device and foot switch) to make sure that the servo power is turned off.

2) Set ON the safety devices connected with external operation input signal "low speed command", and make sure that each signal functions properly.

3.3.3 Battery Replacement

SRAM equipped on the X8HC printed board of the TS2000 controller is backed up by a lithium battery to save the data. Replace the battery every five (5) years. The lithium battery will turn its life when used for a predetermined time. If it is used, neglecting the life, the battery voltage will drop to below the voltage required for keeping the SRAM data, resulting in data being lost and faults caused by leakage of the battery liquid.

If the following alarm has occurred, replace the battery with a new one.

MAIN Battery alarm (alarm code 1–145)

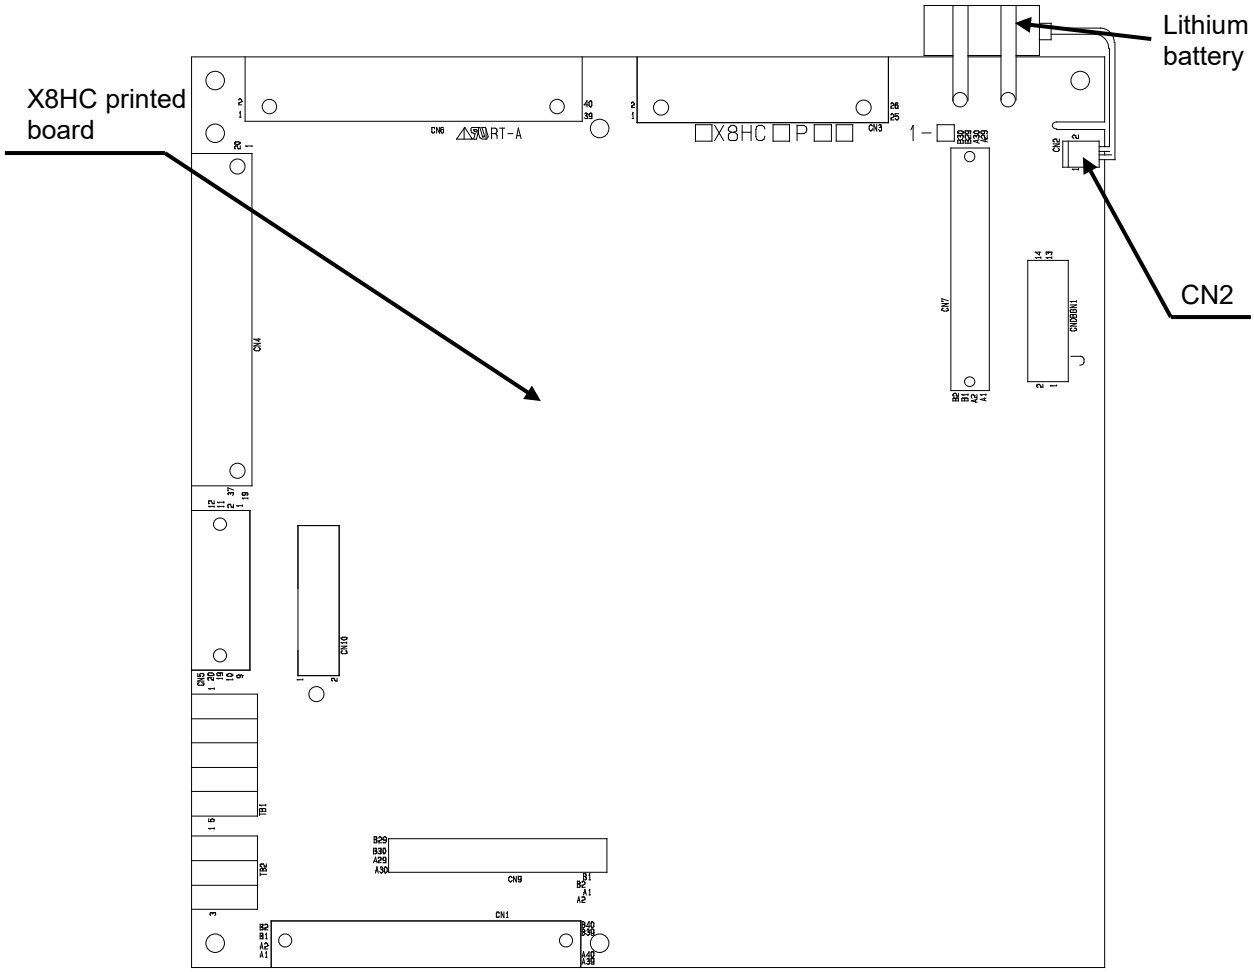


Fig. 3.5 Location of lithium battery

Table 3.1 Type of battery

Type of battery	Manufacturer	Battery service life
ER3VC	Toshiba Denchi	10 years (at room temperature)

Note: The battery life is ten (10) years at the room temperature. As it differs with the external environment such as operating temperature and humidity, we recommend to replace the battery every five (5) years.

Only the battery shown in Table 3.1 should be used. As this is an exclusive battery, contact SHIBAURA MACHINE at order entry.

[Battery replacement procedures]

1) If the battery is kept removed for more than five (5) minutes, save all programs stored in the SRAM into the personal computer. In the worst case, all SRAM data are lost.

2) Set OFF the MAIN POWER switch.

3) Remove the cover from the controller.

4) Remove the battery connector from CN2 of the X8HC printed board, then disconnect the battery from the Tie-wrap securing the battery.
(For the battery position, see Fig. 3.5.)

5) Set a new battery within five (5) minutes.
The lithium battery capacity decreases by natural discharge even if not used. Use a lithium battery which is within three (3) years (kept at the room temperature) from purchasing.

6) Set the cover to the controller.

7) If the battery is kept removed for more than five (5) minutes, set ON the main power switch and load the programs from the personal computer.

If the controller has detected the battery voltage drop alarm even before the five (5)-year replacement period, replace the battery immediately.

! CAUTION

- Batteries should be disposed of according to the user's in-house regulations.
- NEVER drop the batteries into fire. NEVER short-circuit, charge, disassemble or heat them. Otherwise, liquid leakage or rupture may be caused.

3.3.4 Replacement of Switching Power Supply Unit

The life of the switching power supply unit (DC5 V/DC24 V) used in the TS2000 controller differs with the operating conditions. This unit uses an aluminum electrolytic capacitor, and if the load current is large, the running time is long and the ambient temperature is high, the life will reduce.
As the life varies largely with the user's operating conditions (5 ~ 10 years), replace the power supply unit every five (5) years for preventive maintenance.

[Replacement procedures]

1) Turn off the main power switch.

2) Turn off the power breaker.

3) Remove the cover from the controller.

4) Remove all connectors in the control panel, which are linked to the X8HC, X8HS (2 pcs.) and X8HP printed boards. (For the position of each printed board, see Fig. 3.1.)

5) Remove the X8HC, X8HN (X8HI), X8HS (2 pcs.) and X8HP printed boards from the body.

6) Disconnect the cable connecting the power module and the cable between PS1 and mother board.

7) Remove the screws (3 places) which secure the body and PWB set bracket. (For the position of the PWB set bracket, see Fig. 3.1.)

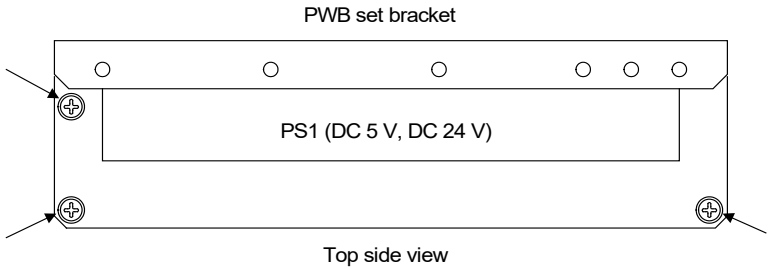


Fig. 3.6

8) Remove the connectors (2 places) linked to the PS1 with the PWB set bracket inclined slightly, then remove the PWB set bracket from the body.

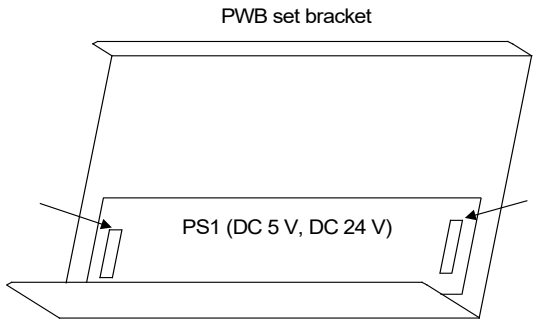


Fig. 3.7

9) Remove each power supply units from the PWB set bracket and set new power supply units.

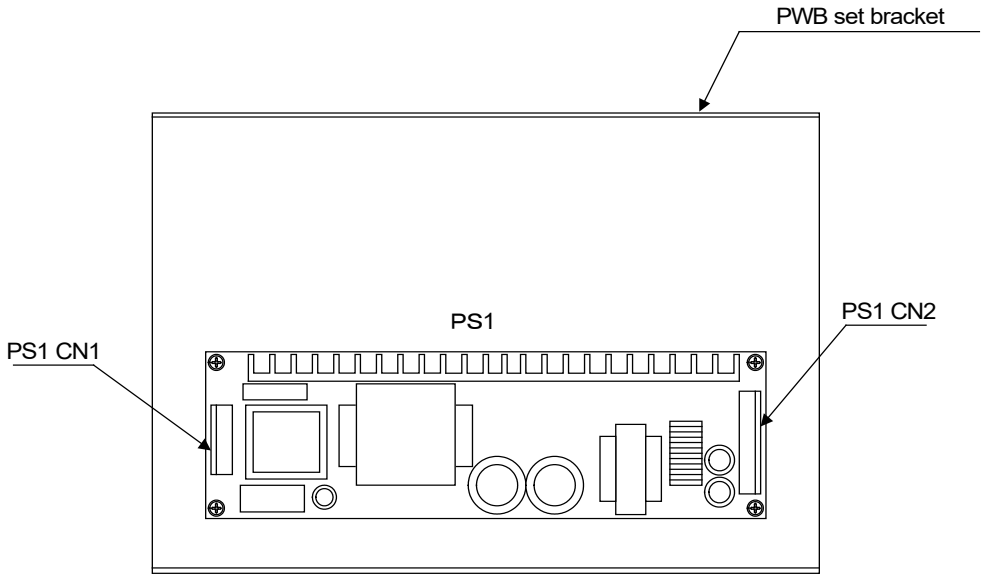


Fig. 3.8

10) Return the PWB set bracket where the new power supply units are mounted to the controller, then connect the connectors.

11) Screw the PWB set bracket into the body. (3 places; See Fig. 3.6.)

12) Mount the X8HC, X8HN (X8HI), X8HS (2 pcs.) and X8HP printed boards on the body.

13) Connect the removed connectors with respective printed boards.

14) Attach the cover to the controller.

3.3.5 Replacement of Fuse (X8HN, X8HI Printed Boards)

If the current exceeding the specified current has run through the I/O unit, the fuse of the X8HN (X8HI) printed board is blown out. If the alarm saying "I/O FUSE Broken (8–273)" is displayed, replace the fuse with a new one.
If the fuse of the output module has been blown out, examine and identify an fault circuit, remedy the cause, then replace the fuse.

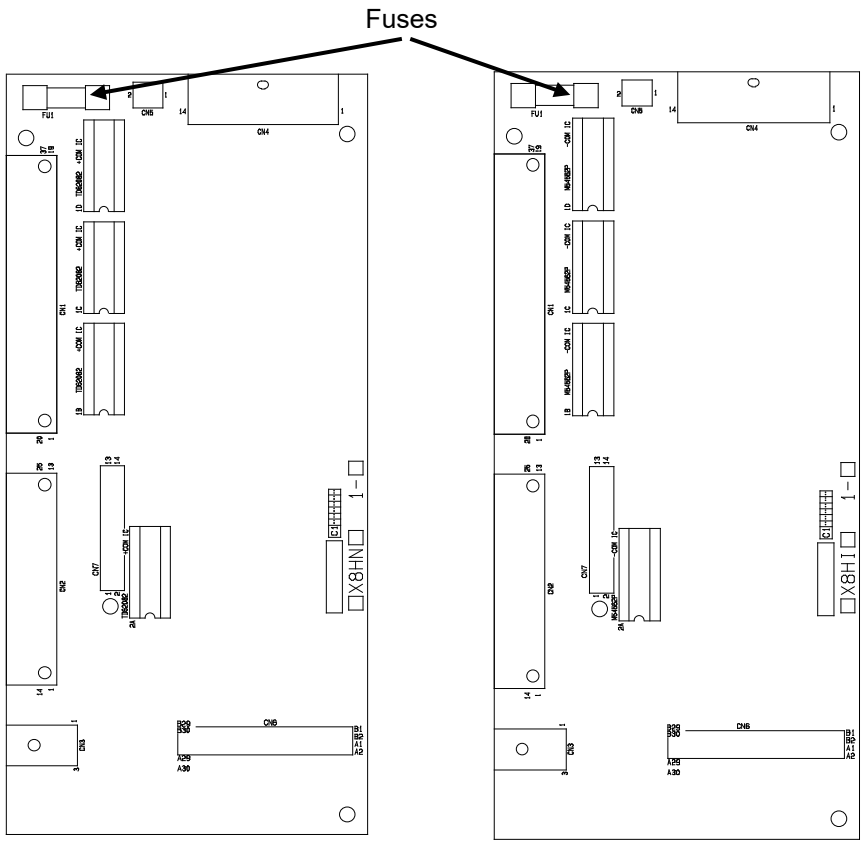


Table 3.1a Type of fuse

Type of fuse	Manufacturer
51NM030H	PICO

[Replacement procedures]

1) Turn off the controller main power.
2) Remove the cover attached to the fuse unit as shown above.
3) Remove the fuse and set a new fuse.
4) Mount the removed cover.
5) Turn on the controller main power and make sure that no error will occur.

3.3.6 Replacement of Output ICs (X8HN, X8HI Printed Boards)

If the current exceeding the specified current has run through the output unit, the outputs may not turn on normally.
When this happens, the ICs of the X8HN (X8HI) printed board have possibly been damaged. Replace the ICs.
Before the replacement, examine and identify an fault circuit, remedy the cause, then replace the ICs.

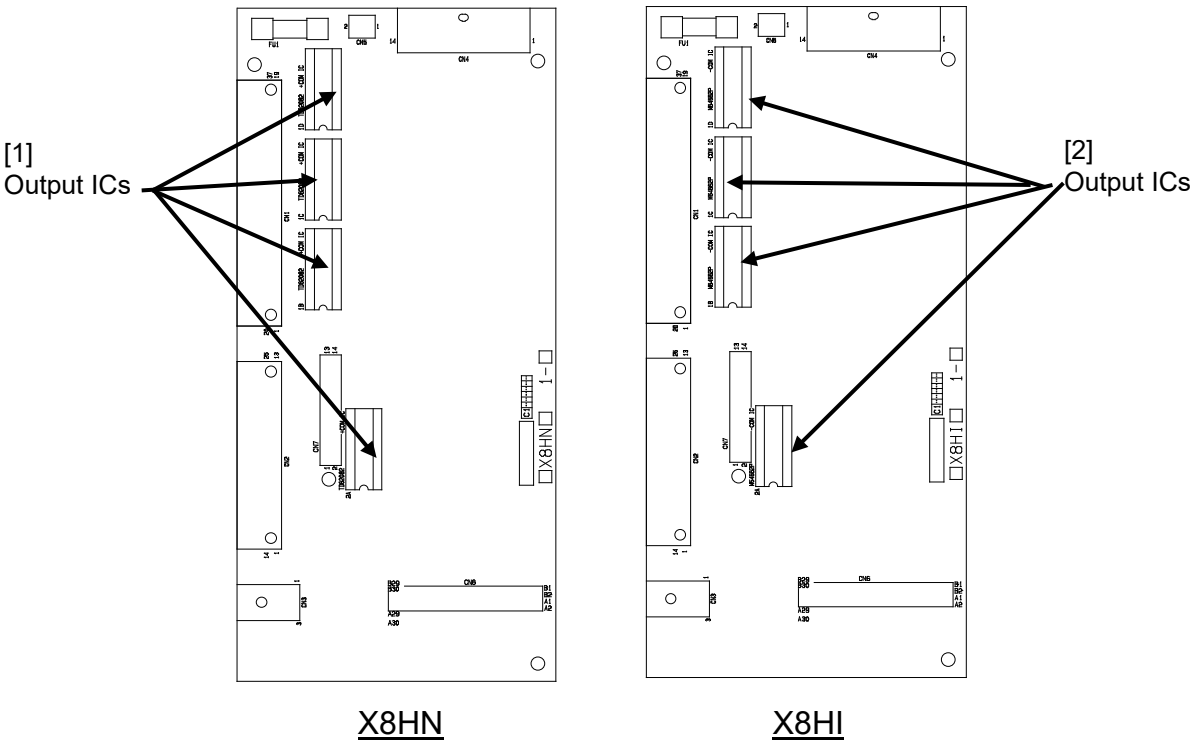


Table 3.1b Type of IC

	Name of board	Type of IC	Manufacturer
[1]	X8HN	TD62082AP	Toshiba Corp.
[2]	X8HI	MM5456P	Mitsubishi Electric

[Replacement procedures]

1) Turn off the controller main power.
2) Remove the cover from the body.
3) Remove all connectors in the control panel, which are linked to the X8HC printed board.
4) Remove the X8HC and X8HN (X8HI) printed boards from the body.
5) Remove the ICs shown above from respective sockets.
6) Attach new ICs to the sockets.
7) Mount the X8HC and X8HN (X8HI) printed boards on the body.
8) Link the removed connectors to the X8HC printed board, and set the main cover.
9) Turn on the controller main power.

Appendix Table 1 List of Mechanical Replacement Parts for Maintenance

Part name	Type	Maker	Q'ty	Remarks
AC servo motor	T–Z01030S–OU002	Toei Electric	1	Axis 4
	T–Y01030S–OU004		1	Axis 1
	T–Z06030S–OU001		1	Axis 2
	T–Y12020S–BOU001		1	Axis 3
Harmonic drive	SHF–17–120–2UH–SP	Harmonic Drive Systems	1	Axis 4
	SHF–25–120–2UH–SP		1	Axis 1
	SHF–32–80–2UH–SP		1	Axis 3
	SHF–45–160–2UH–8P		1	Axis 3
Timing belt	210–3GT–6	Unitta	1	Axis 4
	870–3GT–9		1	Axis 1
	420–5GT–15		1	Axis 2
	970–5GT–25		2	Axis 3
Timing pulley	S720216	SHIBAURA MACHINE	1	Axis 3
	S720217		1	Axis 3
	S720218		1	Axis 3
	S720236		1	Axis 4
	S720235		1	Axis 4
	S720237			Axis 4
	S720238		1	Axis 4
Solenoid valve	SY3220–5LZ–M5	SMC	1	
Chuck	11–MHL2–16D1–Y69B	SMC	1	
Harness * For details, see Appendix Drawing 1.	[1] KL1652G01	SHIBAURA MACHINE	1	
	[2] KL1653G01		1	
	[3] KL1654G01		1	
	[4] KL1655G01		1	
	[5] KL1656G01		1	
	[6] KL1657G01		1	
	[7] KL1658G01		1	
	[8] KL1659G01		1	
	[9] KL1660G01		1	
	[10] KL1661G01		1	
	[11] KL1662G01		1	
	[12] KL1668G01		1	
	[13] H04344G01		1	

Part name	Type	Maker	Q'ty	Remarks
Lithium battery	KK1613G01	SHIBAURA MACHINE	1	
Grease	LG2	NSK		
	Alvania grease 0	Shell Oil		


CAUTION

- With the exception of the grease, all parts listed above are custom-made to SHIBAURA MACHINE specifications. Contact SHIBAURA MACHINE at order entry.
- NEVER replace the parts by the user.

Appendix Table 2 List of Controller Replacement Parts for Maintenance

Part name	Type	Maker	Q'ty	Remarks
PS1 (Switching power supply)	LEB100F–0524	Cosel	1	
Main power switch	IR–11–AB–10A–1B	Nippon Thermo	1	
Lithium battery	ER3VC	Toshiba Denchi	1	
Fuse (X8HC printed board)	51NM030H	PICO	1	
Printed circuit board	X8HC (main control)	SHIBAURA MACHINE	1	
	X8HN, X8HI (I/O printed board)		1	
	X8HP (servo power supply)		1	
	X8HB (mother board)		1	
	X8HJ (connector)		1	
Operation panel unit	X8HO	SHIBAURA MACHINE	1	
Teach pendant	TP1000	SHIBAURA MACHINE	1	With 5m-long cable
System disk	TS2000SYS	SHIBAURA MACHINE	1	

Appendix Drawing 1 Component Connection Diagram

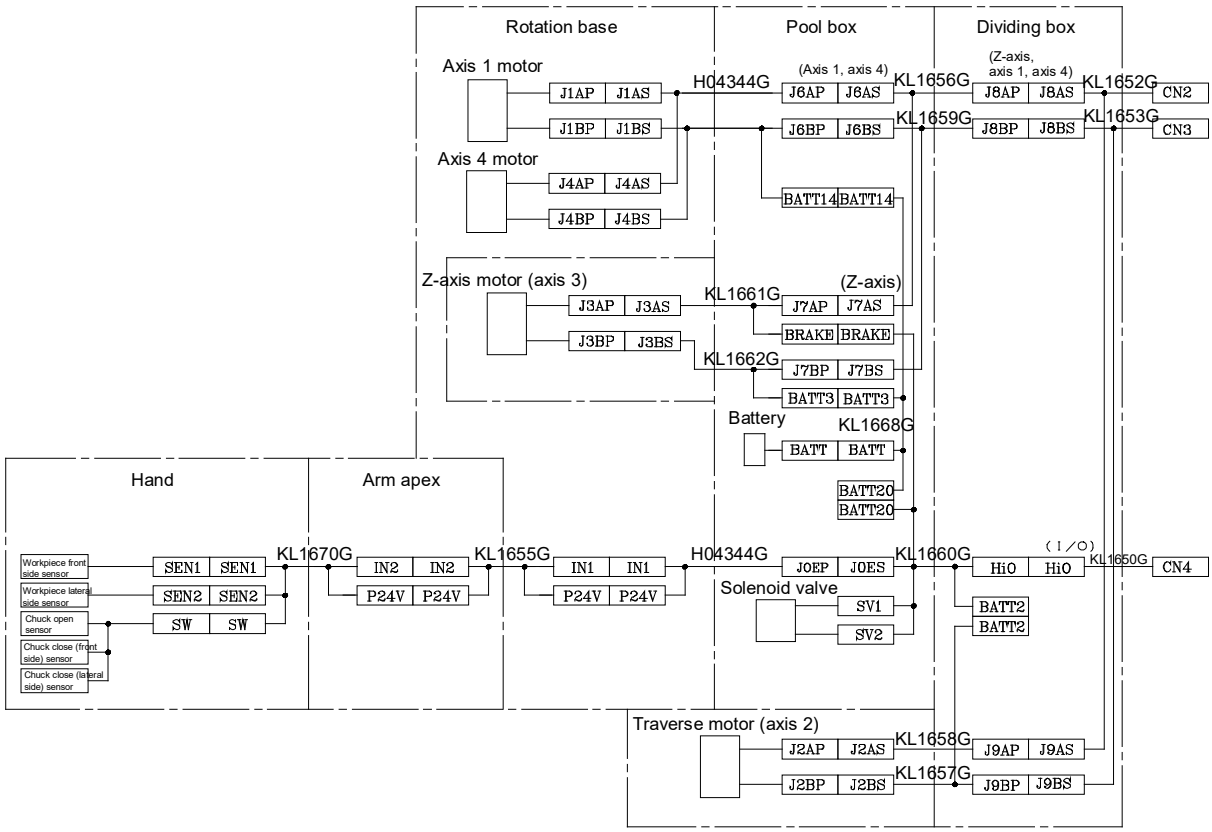

Component connection diagram