Wheel Connections

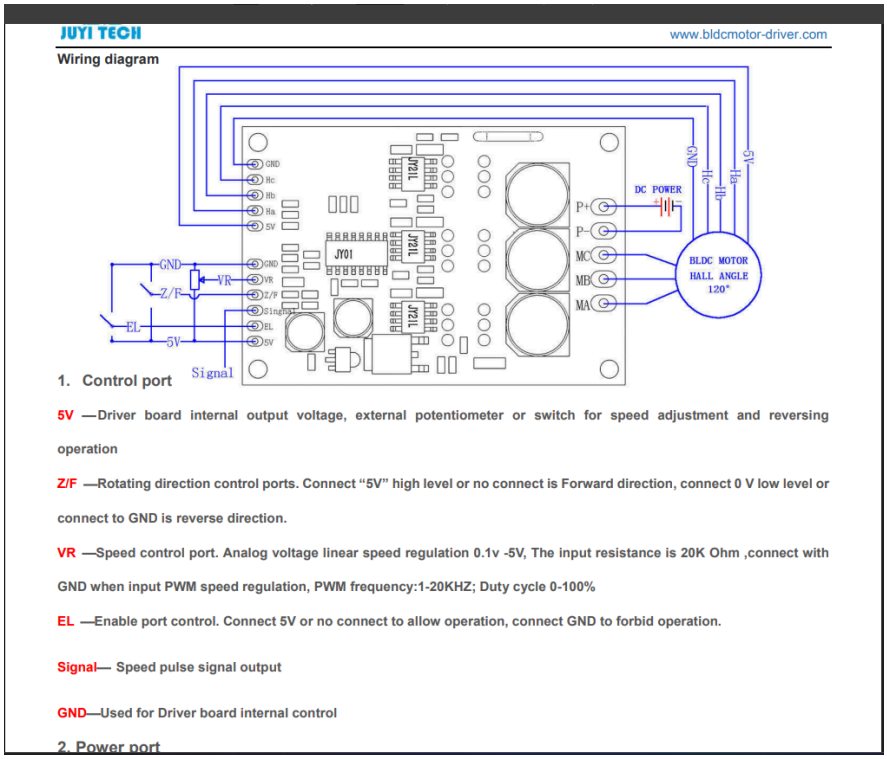

5V- Either the right or the left pin of the knob
GND-the other end of the knob
Z/F-One of the switches
VR-Middle pin of the knob
EL-open
Signal-Open(for now)