Processing ACARS and MVT Messages

AIMS User Guide

Property of AIMS INTL DWC-LLC: The information contained within this document is confidential and as such, cannot be disseminated, forwarded, printed or copied to any person or entity other to the intended audience within your airline.

Highlights

Processing ACARS and MVT Messages module allows airlines to automatically receive and update time as well as fuel information deriving from ACARS OOOI, MVT, DIV as well as LDM messages on real-time. This is possible via **AIMS Job 442**. AIMS also allows for the generation of MVT and DIV Messages upon performing time updates in the AIMS Actual Flight Info screen, as long as this is properly set up via **AIMS Option 1.3.8.2**. Moreover, the system provides an array of options that allow for Messages status tracking, validation reporting as well as and recipient management. **(AIMS Options 1.3.8.3** and **1.1.14.1** respectively)

Important: Incoming MVT, LDM messages must comply with the IATA standards and ACARS messages with ARINC 620 spec or Rockwell Collins formats in order to be processed by AIMS. Examples of those messages are demonstrated at the end of this document.

Why Use the Messages Interface?

The primary purpose of the Messages Interface is to serve as a support and information delivery tool for the AIMS Movement Control module. However, it can also be used by airlines that do not operate with the AIMS Operations Control module, enabling them to automatically update Block Times, Flight Times, Duty Times, and crew accumulators based on incoming message data.

How AIMS does that?

AIMS offers the capability to interface with external **AFTN Message Management Systems** such as **SITATEX** for Windows MultiUser IP edition with SITATEX SDK (***Message Daemon***) or SITATEX online with SITA DATA CONNECT, which is similar to Message Daemon, as well as **ARINC Avinet Connector** and **ARINC Integrator** which requires specific software from ARINC together with the relevant configuration so that to be installed and implemented in the AIMS SaaS in AWS. Through these interfaces, AIMS can both receive and transmit operational messages in the standard **AFTN TYPE B (SITA) format**.

Incoming AFTN messages are first received by the selected communication provider and then passed to AIMS through the Message Provider interface. These messages are automatically placed into the designated **MVT/IN** folder, each saved as a file with the **.rcv** extension. Once the files appear in this folder, the AIMS application detects them and begins processing automatically.

At the same time, any AIMS generated MVT messages resulting from updates made in the **Actual Flight Info** screen, are saved as files with the **.snd** extension in the **MVT/OUT** folder. These outgoing files are then picked up by the communication provider for external transmission to the relevant recipients.

Important: AIMS **does not** communicate directly with external networks such as SITA or ARINC. To send or receive messages through these networks, airlines must have an external message management or communication system (e.g., SITATEX, ARINC Avinet Connector, or similar). These systems act as the transport layer, interfacing between AIMS and the external messaging networks.

More specifically ARINC Avinet Connector requires channel configuration by ARINC and delivery of those settings to AIMS IT Support to together with the relevant software to be implemented in the AIMS SaaS in AWS. ARINC Integrator requires specific software from ARINC together with the relevant configuration so that to be installed and implemented in the AIMS SaaS in AWS.

Email Alternative

As an alternative to direct AFTN integration, airlines may configure **AIMS Job 181** to receive incoming messages from a designated **email account**. In this setup, emails are automatically converted into .rcv files and deposited directly into the MVT/IN folder, allowing them to follow the same standard AIMS processing workflow.

Note: When this method is applied, messages are delivered with a standard message body, **excluding** the AFTN TYPE B header information.

1. Upload ACARS, MVT & LDM Messages Configuration – Job 442

1.1. Access Rights and User Roles

AIMS Option(s) in use: AIMS Job 442 – Upload MVT, ACARS, LDM Messages | **Assign Appropriate User Permissions to Execute and Schedule Job 442**

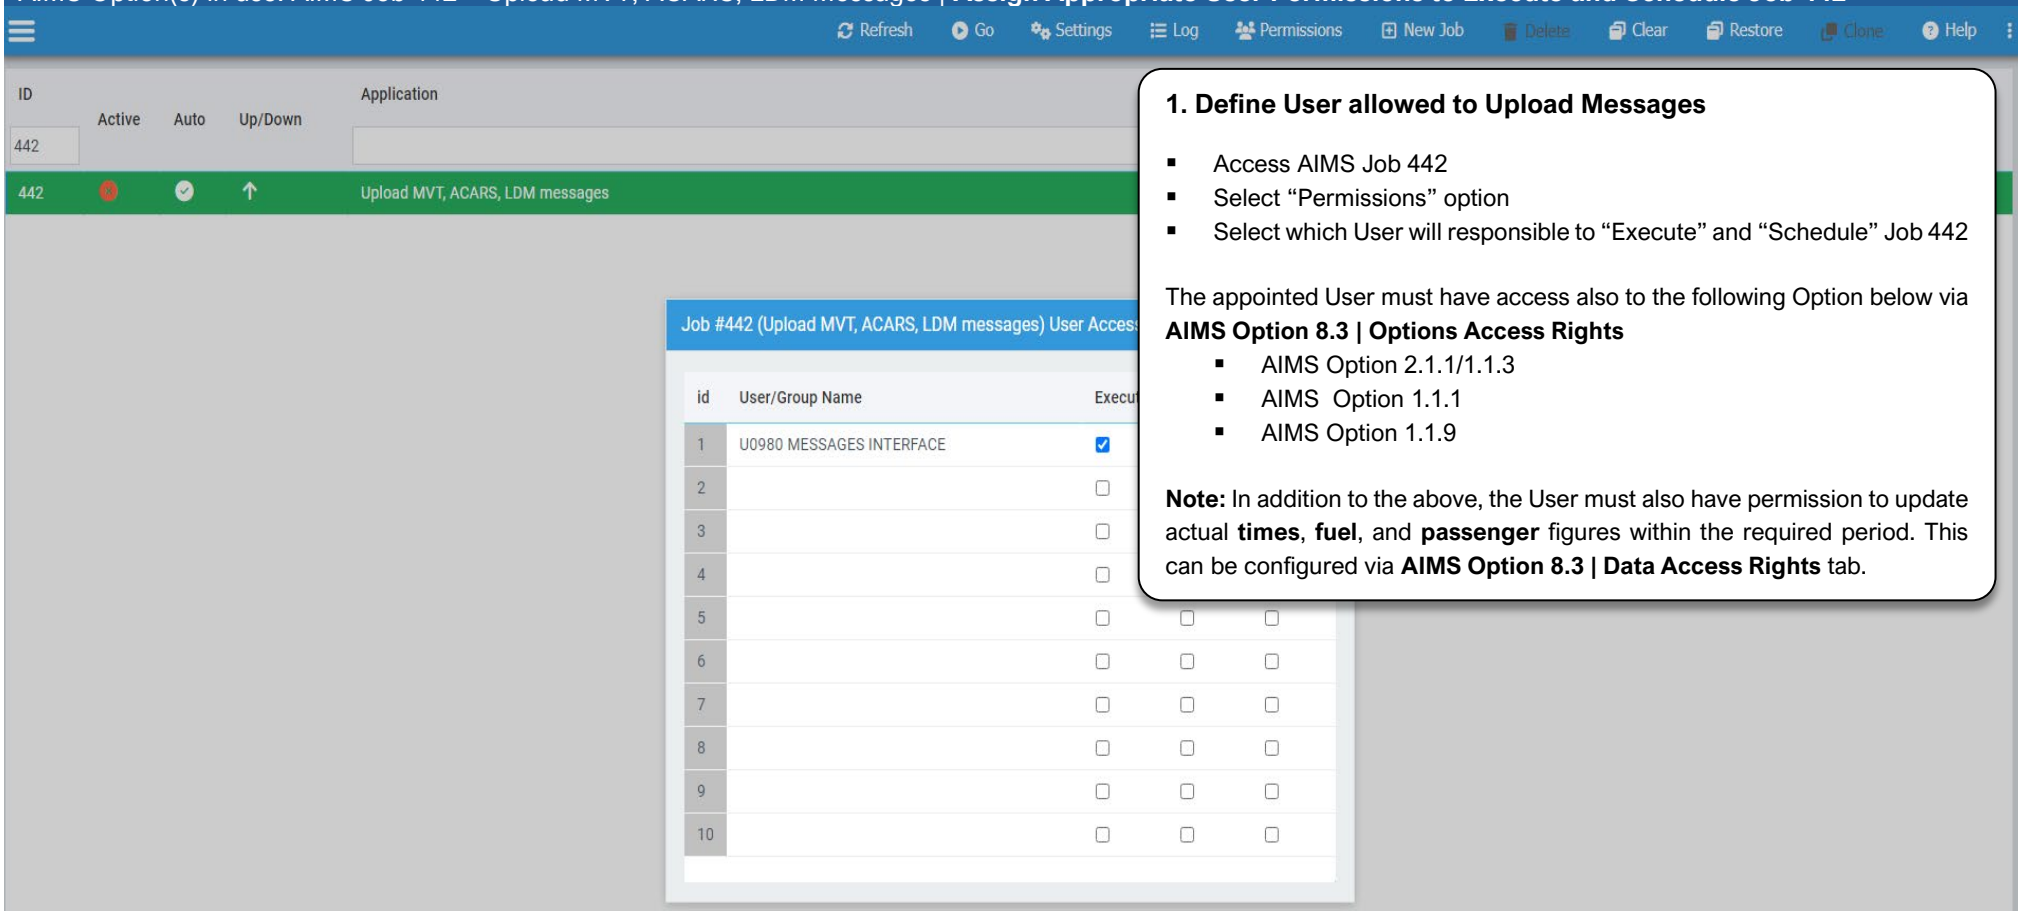

1. Define User allowed to Upload Messages

- Access AIMS Job 442
- Select "Permissions" option
- Select which User will responsible to "Execute" and "Schedule" Job 442

The appointed User must have access also to the following Option below via **AIMS Option 8.3 | Options Access Rights**

- AIMS Option 2.1.1/1.1.3
- AIMS Option 1.1.1
- AIMS Option 1.1.9

Note: In addition to the above, the User must also have permission to update actual **times**, **fuel**, and **passenger** figures within the required period. This can be configured via **AIMS Option 8.3 | Data Access Rights** tab.

Important: AIMS strongly recommends that the User responsible for uploading messages be the dedicated **MESSAGES INTERFACES USER** (User 980).This User is granted Administrator Access Rights by default, ensuring full access to all necessary system areas. In cases where the Airline prefers to assign a different User for this task, it is highly recommended that the appointed User also holds Administrator privileges to avoid any access or permission issues.

1.2. Upload and Backup folders definition

AIMS Option(s) in use: AIMS Job 422 – Settings | **Upload and Backup folders definition**

Job #442 (Upload MVT, ACARS, LDM messages) Configuration

Description | Upload & Error File

Upload directory: \\AIMSFS\AIMS\USERS\MESSAGES\MVT\IN

Backup folder: \\AIMSFS\aims\USERS\MESSAGES\MVT\IN\Backup

Schedule

When: Every

Launch job every: 1 Minutes

2. Defining the Upload and Backup folders

- **Upload directory:** Specify the MVT/IN UNC storage path for incoming messages. Here is where all incoming Messages will be forwarded with **.rcv** extension.
- **Backup folder:** Specify a Backup folder, where copies of all Incoming Messages will be automatically stored.
- **Schedule:** Define the frequency at which the Messages Upload process will be executed. The period varies, depending on the airlines flight activity. However, **1 minute** can be considered as normal frequency.

2. MVT/ACARS/LDM Configuration

2.1. General Settings

AIMS Option(s) in use: AIMS Option 1.1.15 – MVT/ACARS/LDM Configuration | **General Settings**

Refresh Save Help

General Configuration
- ACARS
- MVT
- Validation Rules

General Settings

Messages to upload ✔ MVT ✔ LDM ✔ ACARS

☐ Rejected incoming messages must be sent back to originator

☐ Consider the ARCID for the identification of the flight

Retention period of the incoming messages (in days) − 30 +

3. General Settings

- **Messages to upload:** Select the type of Messages to be upload.
- **Rejected incoming messages must be sent back to originator:** Select to return all rejected messages back to their originator (incorrect message format or information not matching the current flight schedule.)
  Note: This functionality will not apply to ACARS messages.
- **Consider the ARCID for the identification of the flight:** Once selected the flight sectors to be updated will be identified based on the ARCID identifier instead of the flight designator.
- **Retention period of the incoming messages (in days):** Specify the number of days the system should retain incoming messages before automatically deleting them. This is the *"Housefile keeping option"* for both Incoming Messages and Outgoing MVT Messages

Note: The above setting applies **also** for the AIMS Generated MVT Messages. After this period, messages will no longer appear in the various Messages Lists and in the Message Traffic Utility (AIMS option 1.1.14)

2.2. ACARS Upload Configuration

AIMS Option(s) in use: AIMS Job 422 - Configuration | **ACARS**

Refresh Save Help

General Configuration
ACARS
MVT
Validation Rules

ACARS Configuration

ACARS must update MVT fields

Upon receipt of ACARS message, generate the corresponding MVT message

Load Delays from ACARS

Ignore Fuel information from ACARS

Do not overwrite information updated by MVT messages

Do not overwrite mar

Do not overwrite info

4. ACARS Upload Settings

- **ACARS must update MVT or Voyage Report fields:** The system will direct the data received to either the Voyage Report fields or the fields in Movement Control.
  Note: If the Voyage Report Option is selected, MVT and LDM messages will continue to update the Movement Control fields.
- **Upon receipt of ACARS message, generate the corresponding MVT message:** The equivalent MVT Message will be generated, each time a Time update occurs via prcessing an ACARS message. For example: An ON ACARS Message updates the AA time field in AIMS. The system will generate and transmit an AA MVT Message on the backround.
  Attention: This is the only time, when the system will transmit MVT Messages on the background, without the Users intervention!
- **Ignore fuel information from ACARS / Load delays from ACARS:** The system will process information included in ACARS, according to user selections.
- **"Do not overwrite" options:** Define a restricted update policy for ACARS updates, by restricting ACARS updates from overwriting MVT or manual updates.
  Attention: eOps updates count as manual updates!

2.3. MVT Upload Configuration

AIMS Option(s) in use: AIMS Job 422 - Configuration | **MVT**

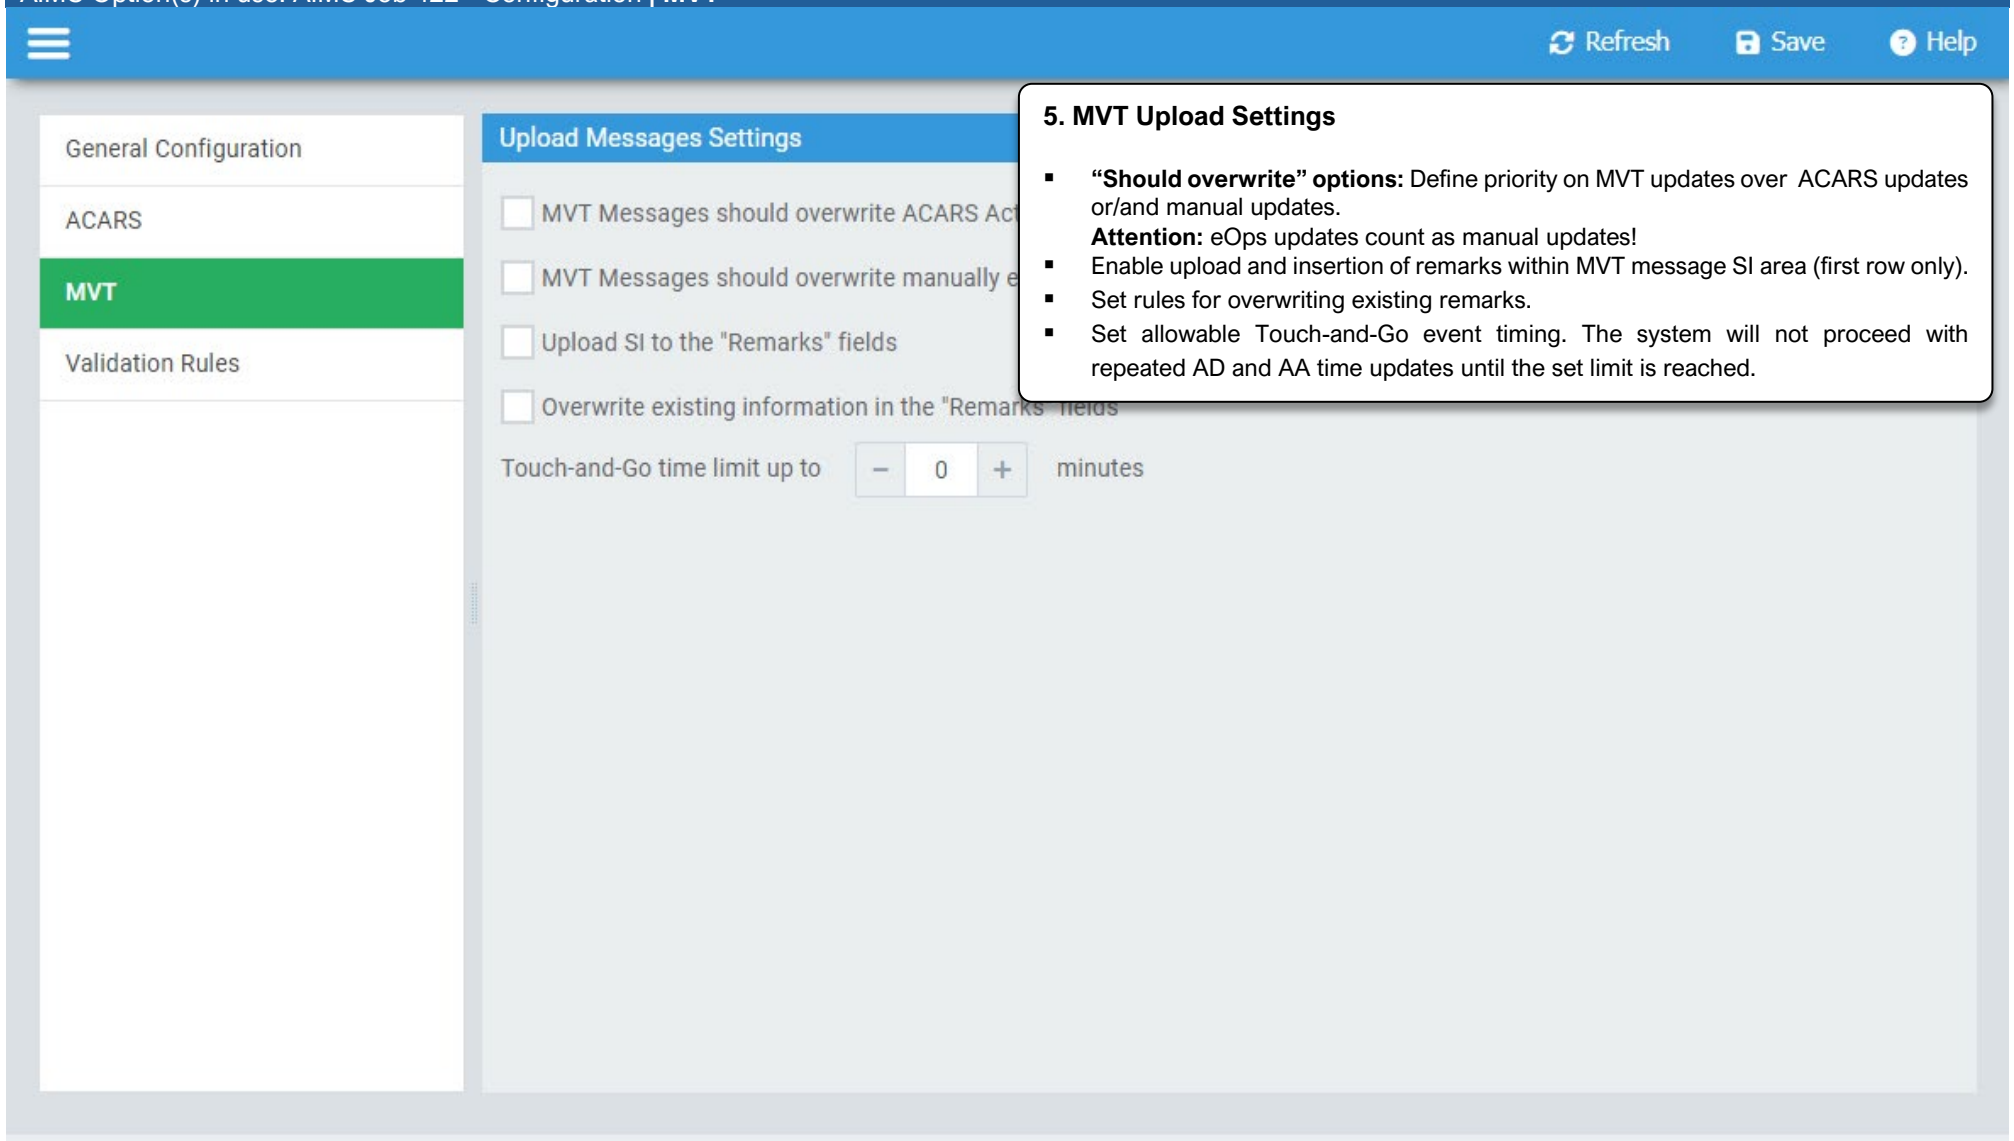

5. MVT Upload Settings

- **"Should overwrite" options:** Define priority on MVT updates over ACARS updates or/and manual updates.
  Attention: eOps updates count as manual updates!
- Enable upload and insertion of remarks within MVT message SI area (first row only).
- Set rules for overwriting existing remarks.
- Set allowable Touch-and-Go event timing. The system will not proceed with repeated AD and AA time updates until the set limit is reached.

2.4. Validation Rules

AIMS Option(s) in use: AIMS Job 422 - Configuration | **Setting Up Validation Rules and Error Handling**

Refresh Save Help

General Configuration
ACARS
MVT
Validation Rules

Validation Rules

- [x] Any actual times (AD/AA) messages received
- [ ] Messages for Late Departure (ATD-STD) greate
- [ ] Messages for Taxi **IN** (ATA-Touchdown) greate
- [ ] Messages for Early Departure (STD-ATD) greater than − 1 + hours will be rejected
- [ ] Messages for Taxi **OUT** (Takeoff-ATD) greater than − 1 + hours will be rejected
- [ ] Messages for Late Arrival (ATA-STA) greater than − 1 + hours will be rejected
- [ ] Any messages received with 2 or more flights being airborne simultaneously within the same aircraft registration will be rejected
- [ ] Actual arrival messages (AA) will be rejected for flights that have not departed (No AD, no AA)
- [ ] Actual departure messages (AD) will be rejected for flights that have already arrived (AA is received but no AD)

6. Setting Up Validation Rules

- Reject messages with future timestamps.
- Reject messages exceeding acceptable delays (ATD vs STD, ATA vs STA).
- Prevent messages with irational sequence or overlapping flight events.
- Control acceptance of AD/AA messages based on actual departure data.

Note: Apply for both MVT and ACARS Messages.

Note: Another area where Users can apply validation rules for time updates received from MVT and ACARS Messages is **AIMS Option 1.1.9 | Customization Settings**. There, Users can define an acceptable percentage range of discrepancy between the Scheduled Block Times and those resulting from actual time updates.

2.5. LDM Upload Configuration

AIMS Option(s) in use: AIMS Option 2.4.2 – Aircraft Configuration and Passenger Classes | **Configuring LDM Fields**

Refresh Save Help

Aircraft Seat Types

#	Code	Description
1	Y	Economy
2	C	Business
3	F	First
4		

Corresponding "Only Economy" Seat Type: 1

Passenger Classes

#	Code	Description		
1	Y	Economy		
2	C	Business		
3	F	First		
4			0	
5	INF	INFANTS	0	INFANTS
6	ADT	ADULTS	0	ADULTS
7	CHD	CHILDREN	0	CHILDREN
			0	PAD
			0	MALE
			0	FEMALE

Red

Rev Y C F

Tota Y C F PAD

Pers Y C F INF PAD

Passenger numbers to be displayed in 'Actual Flight Info' screen: transits, embarkations and disembarkations

WARNING: You may freely change the contents of each line, however with regards to the sequence the contents should never be changed to another line

7. Configuring LDM Fields

- Navigate to **AIMS Option 2.4.2 – Aircraft Configuration and Passenger Classes.**
- Define the Passenger Classes and the corresponding LDM Fields, including:
  - Number of Revenue Passengers by class (First, Business, Economy)
  - Number of Non-revenue passengers (PAD)
  - Children (CHD) and Infants (INF)
  - Male (MALE) and Female (FMLE) (if required)
- Define the formula to calculate Revenue Passengers, Personal on Board, etc. as necessary.

8. Example of an LDM Message

LDM
GLB50/11.GDBCJ.144Y.2/4
-EDI.81/60/3/2.T850.1/150.2/200.4/500.B1000.C110.M25.ENIL
PAX/0/0/144.PAD/0/0/1

PAX/0/0/144 : Revenue PAX per Passenger Class
PAD/0/0/1: Non-Revenue PAX *(Passenger available for disembarkation*)
81/60/3/2: Male, Female, Children and Infants
B1000.C110.M25: Baggage, Cargo and Mail Weights respectively

2.6. Review Passenger & Cargo Details

AIMS Option(s) in use: AIMS Option 2.1.1 – Aircraft Scheduling & Movement Control | **Actual Flight Information - Review Passenger & Cargo Details**

Refresh | Search | Divert | Reschedule | Previous | Next | JL Entries | Save | Send | Report

Flight Info — Audited Flight

GLB50 — Callsign: GBL3HY — Dep Date 11/07/2019

LHR UTC +0100 — London, Heathrow — STD: 0600 (0700 LT)

EDI UTC +0100 — Edinburgh — STA: 0720 (0820 LT)

A/C Registration: **GDBCJ** — A/C Type: **319** — Flt Cat: GPU

- Actual Times
- **Passenger Details**
- Fuel & Cargo
- Memos
- Airport Facilities
- Crew on Flight
- Misc Flight Info
- Custom Flight Leg Fields
- History of Changes
- Codeshare
- Charterers
- Messages

Passenger Details

Passenger Number

Category	Expected	Transit	Embarked	Total	
Y	144	0	144	**144**	
C	0	0	0	**0**	
F	0	0	0	**0**	
	0	0	0		
INF	0	0	2	**2**	
ADT	0	0	144	**144**	
CHD	0	0	3	**3**	3
PAD	0	0	1	**1**	1
MALE	0	0	81	**81**	81
FMLE	0	0	60	**60**	60
Revenue	**144**	**0**	**144**	**144**	**144**
Total	**144**	**0**	**145**	**145**	**145**

Date	Flight	Dep	Arr	Etd	Y	C	F
11 Jul	55	EDI	LHR	10:00	44	0	0
11 Jul	57	EDI	LHR	13:35	100	0	0
Totals					144	0	0

9. Review the Passenger Details

- Navigate to **Passenger Details** Tab.
- Upon processing an LDM message, the following occurs automatically:

Passenger-related data is populated into:

- Passenger categories (e.g., Y, C, F, ADT, CHD, INF, PAD).
- Embarked and Disembarked passenger counts.
- Totals for each passenger class.

Cargo-related data is populated in **Fuel & Cargo** Tab:

- Cargo weight
- Mail weight
- Baggage details

For multi-sector flights:

- AIMS calculates cumulative passenger numbers.
- Passengers disembarking at the first destination are removed from the total in subsequent legs, with remaining passengers **marked as transit**.

3. Handling Incoming Messages

3.1. Receiving Incoming MVT/ACARS/LDM Messages

AIMS Option(s) in use: AIMS Option 2.1.1 – Aircraft Scheduling & Movement Control | **Receiving Incoming MVT/ACARS/LDM Messages**

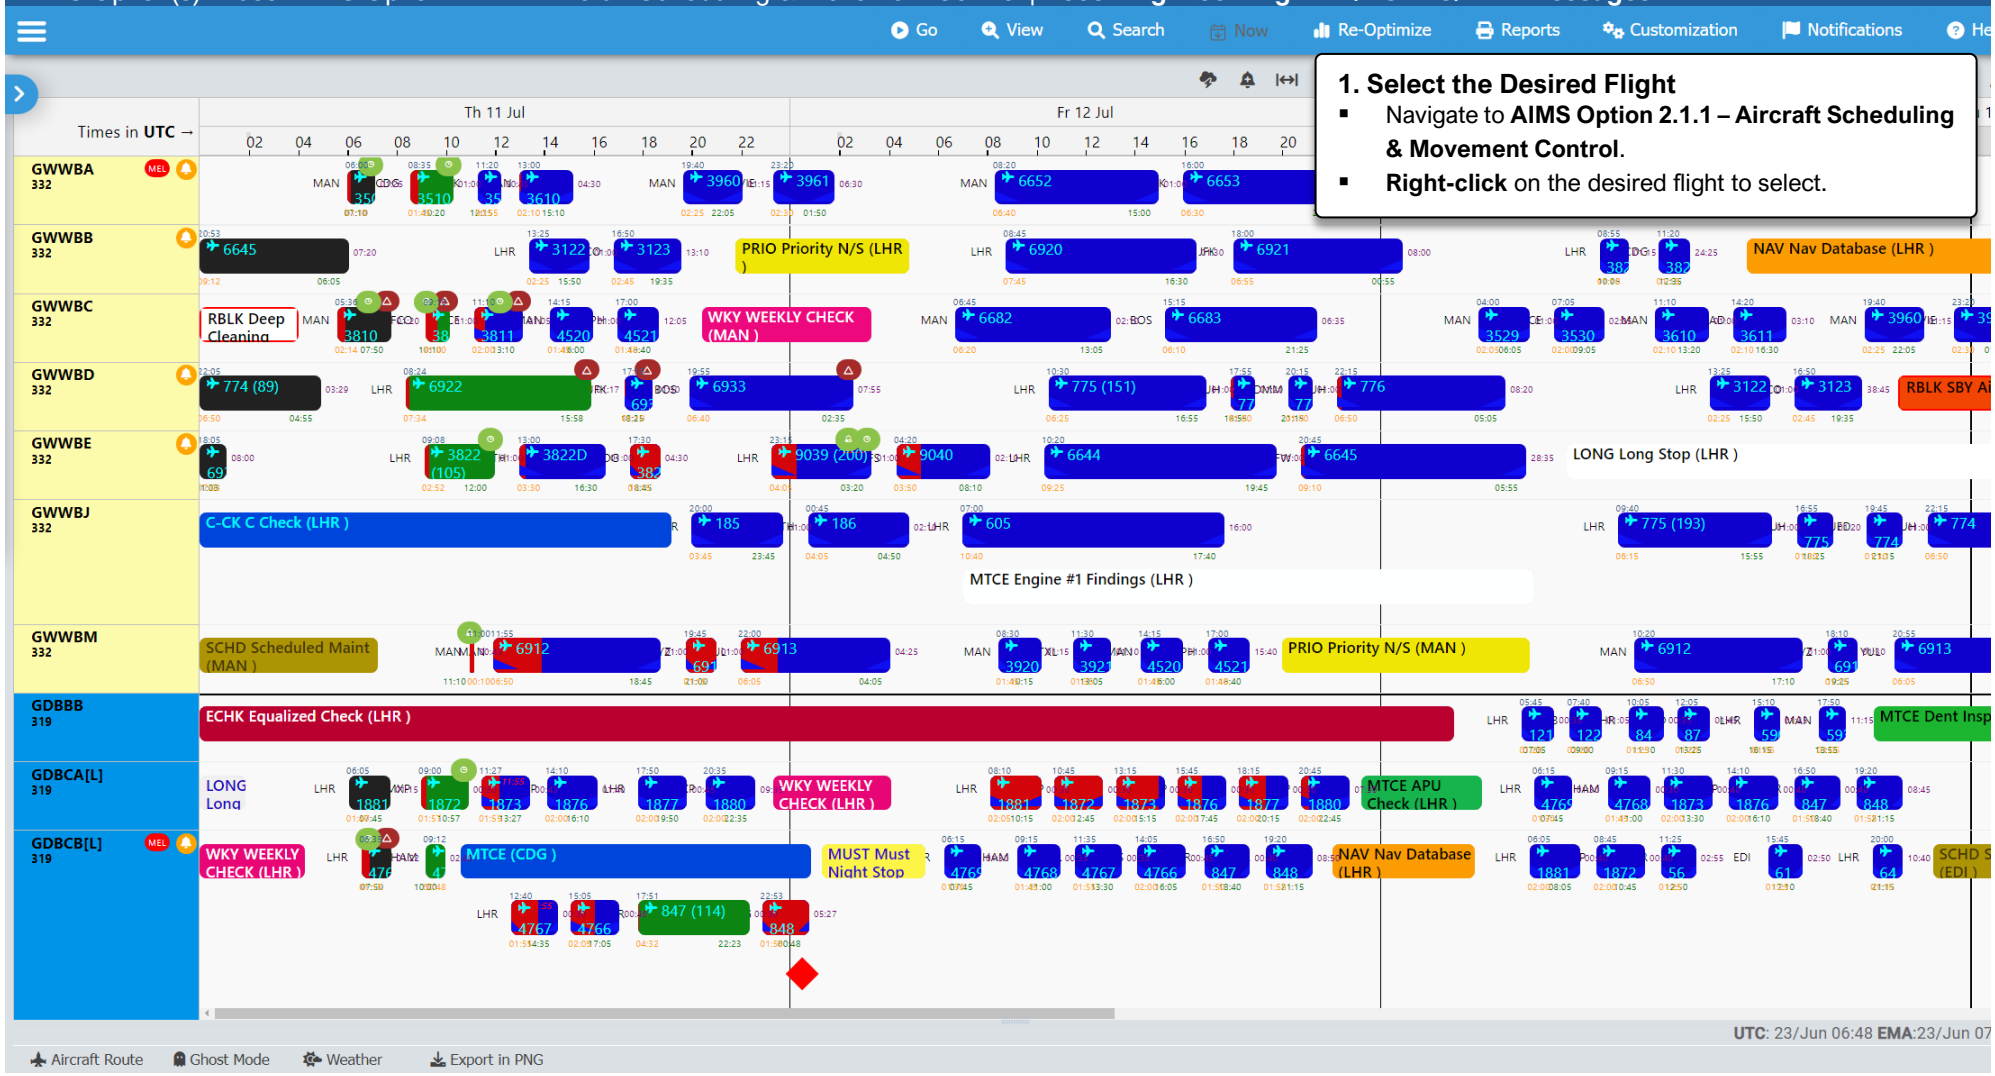

1. Select the Desired Flight

- Navigate to **AIMS Option 2.1.1 – Aircraft Scheduling & Movement Control**.
- **Right-click** on the desired flight to select.

AIMS Option(s) in use: AIMS Option 2.1.1 – Aircraft Scheduling & Movement Control | **Receiving Incoming MVT/ACARS/LDM Messages**

Refresh | Search | Divert | Reschedule | Previous | Next | JL Entries | Save | Send | Report

Flight Info

GLB3810
Callsign: -
Dep Date 11/07/2019

MAN UTC +0100
Manchester
STD: 0515 (0615 LT)

FCO UTC +0200
Rome,Fiumicino
STA: 0740 (0940 LT)

A/C Registration: **GWWBC**
A/C Type: **332**

2. Review the Incoming Messages

- Navigate to **Messages** Tab.
- A log history of all received/processed messages will appear here with option to export into .csv log file.

- Actual Times
- Passenger Details
- Fuel & Cargo
- Memos
- Airport Facilities
- Crew on Flight
- Misc Flight Info
- Custom Flight Leg Fields
- History of Changes
- Codeshare
- Charterers
- **Messages**

Messages History Log | Export

#	Date	Time	Status	Message Type	Message
1	11-07-2019	10:13:24	Processed	LDM	GLB3810/11.GWWBC.24F48C172Y.0/0 -FCO.100/0/0/0.T850.1/150.2/200.4/500.B1000.C110.M25.ENIL PAX/0/0/100.PAD/0/0/0
2	11-07-2019	10:00:57	Processed	ACARS	FI GLB3810/AN GWWBC DT DSP GSR 111400 M83A - 1301 INRP 3810/11 EGCC/LIRF .GWWBC /ON 0745/IN 0750/FOB 0200

3.2. Handling Outgoing Messages

3.2.1. Access Rights and User Roles

AIMS Option(s) in use: AIMS Option 1.3.8.2 – **Storage Setting**

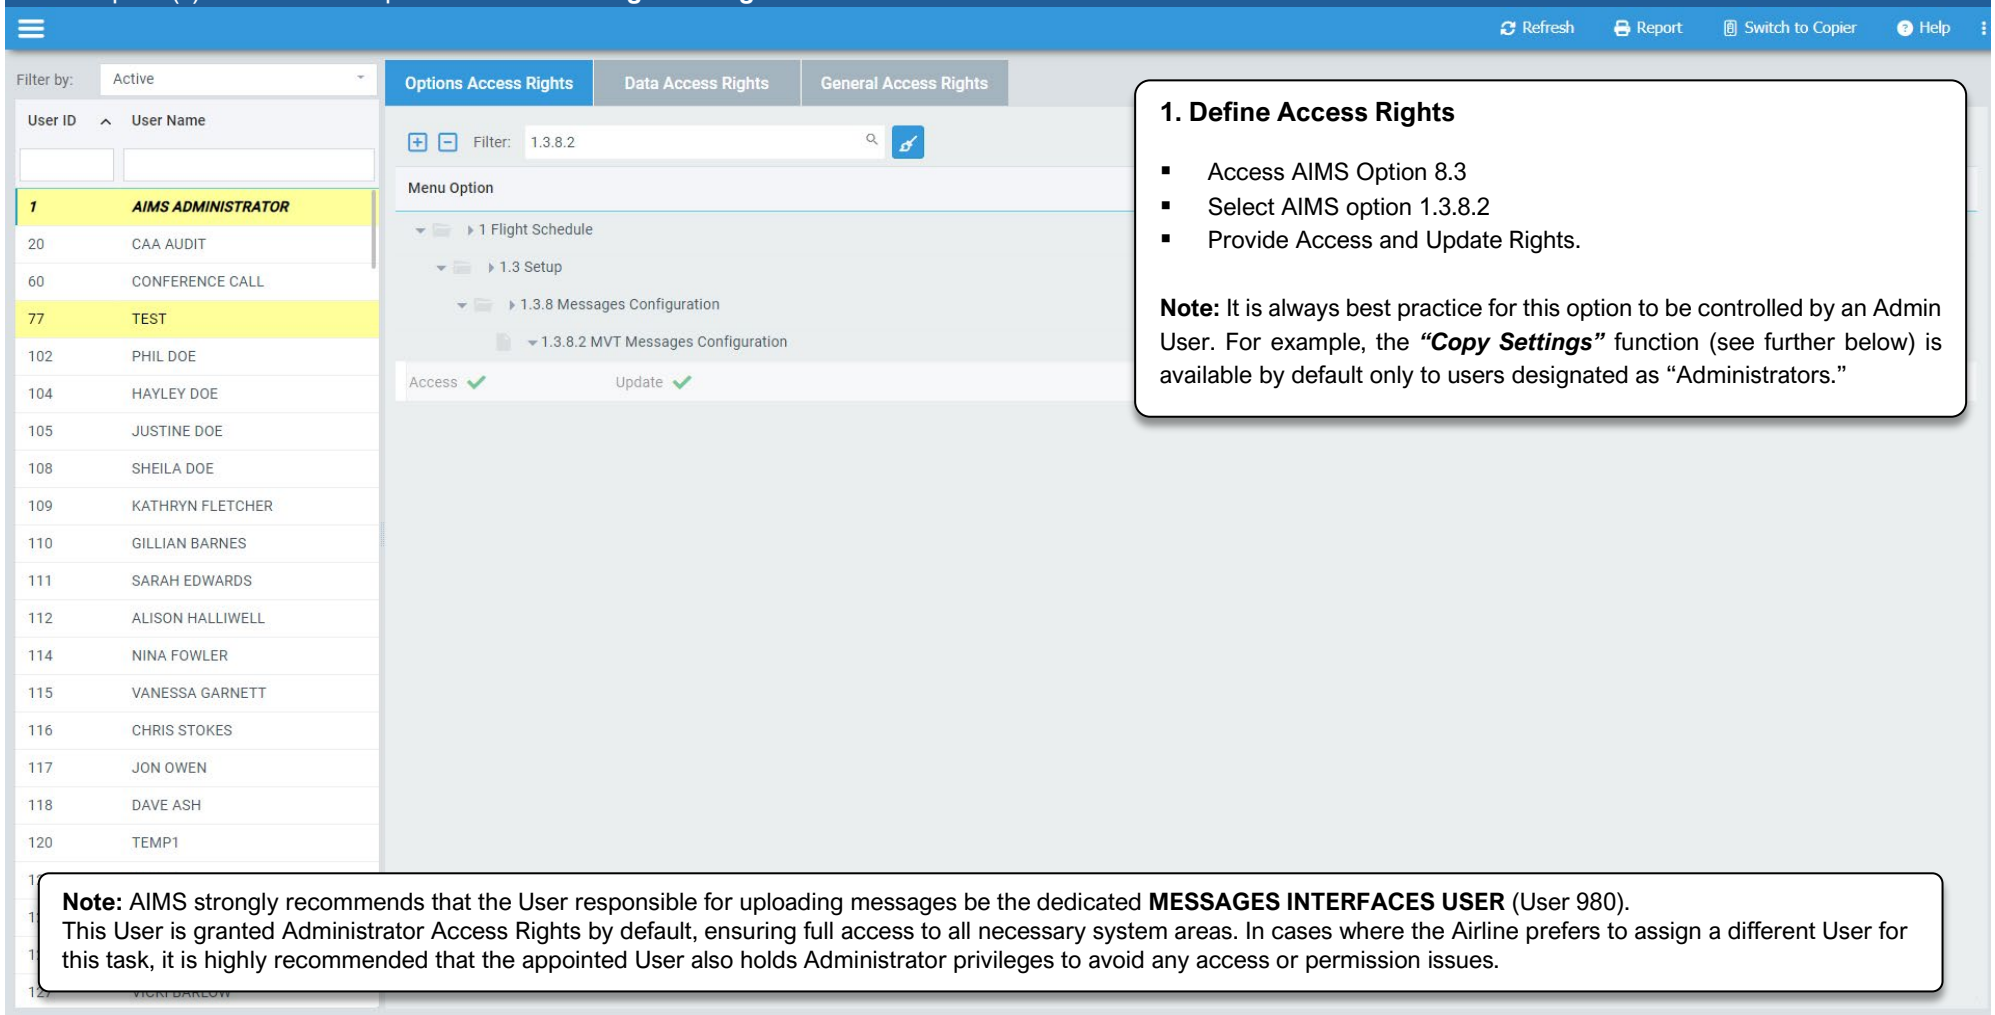

1. Define Access Rights

- Access AIMS Option 8.3
- Select AIMS option 1.3.8.2
- Provide Access and Update Rights.

Note: It is always best practice for this option to be controlled by an Admin User. For example, the ***"Copy Settings"*** function (see further below) is available by default only to users designated as "Administrators."

Note: AIMS strongly recommends that the User responsible for uploading messages be the dedicated **MESSAGES INTERFACES USER** (User 980).
This User is granted Administrator Access Rights by default, ensuring full access to all necessary system areas. In cases where the Airline prefers to assign a different User for this task, it is highly recommended that the appointed User also holds Administrator privileges to avoid any access or permission issues.

3.2.2. Defining Storage Settings

AIMS Option(s) in use: AIMS Option 1.3.8.2 – **Storage Setting**

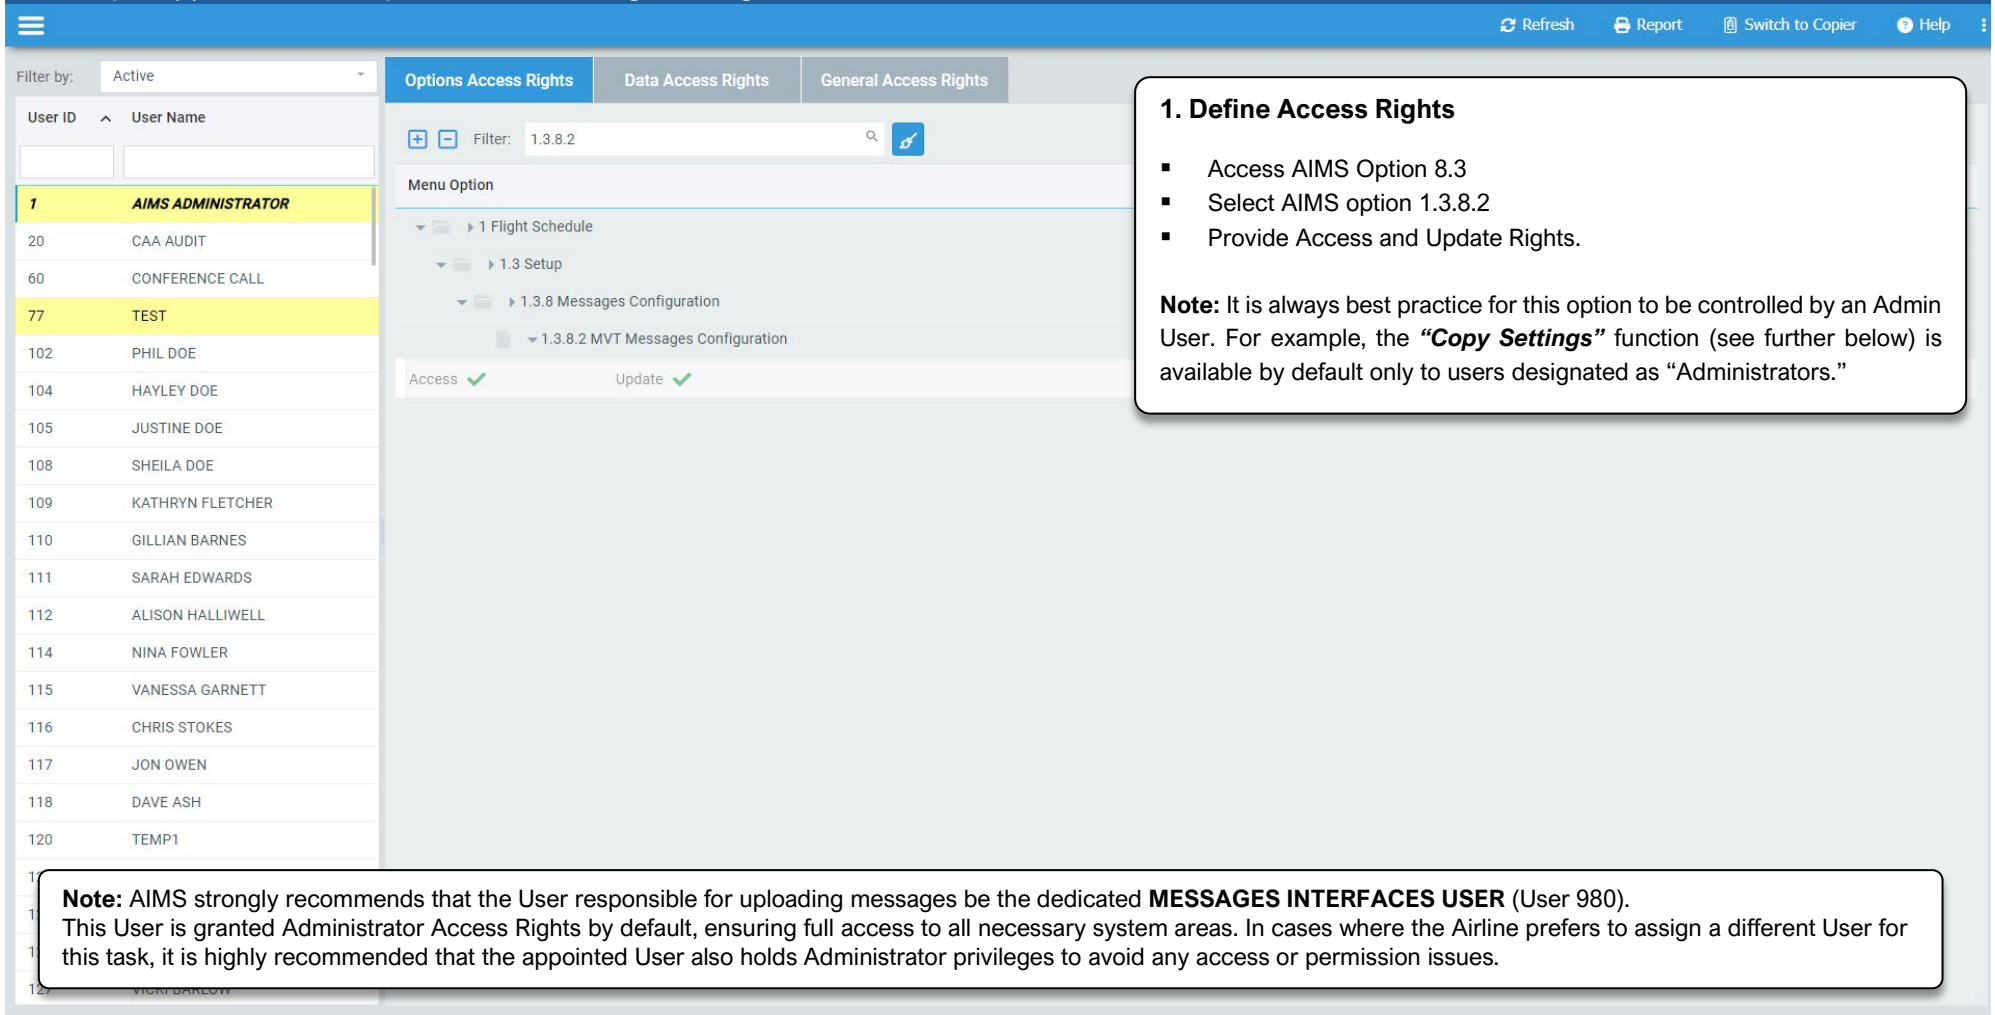

1. Define Access Rights

- Access AIMS Option 8.3
- Select AIMS option 1.3.8.2
- Provide Access and Update Rights.

Note: It is always best practice for this option to be controlled by an Admin User. For example, the ***"Copy Settings"*** function (see further below) is available by default only to users designated as "Administrators."

Note: AIMS strongly recommends that the User responsible for uploading messages be the dedicated **MESSAGES INTERFACES USER** (User 980).
This User is granted Administrator Access Rights by default, ensuring full access to all necessary system areas. In cases where the Airline prefers to assign a different User for this task, it is highly recommended that the appointed User also holds Administrator privileges to avoid any access or permission issues.

AIMS Option(s) in use: AIMS Option 1.3.8.2 – **Storage Setting**

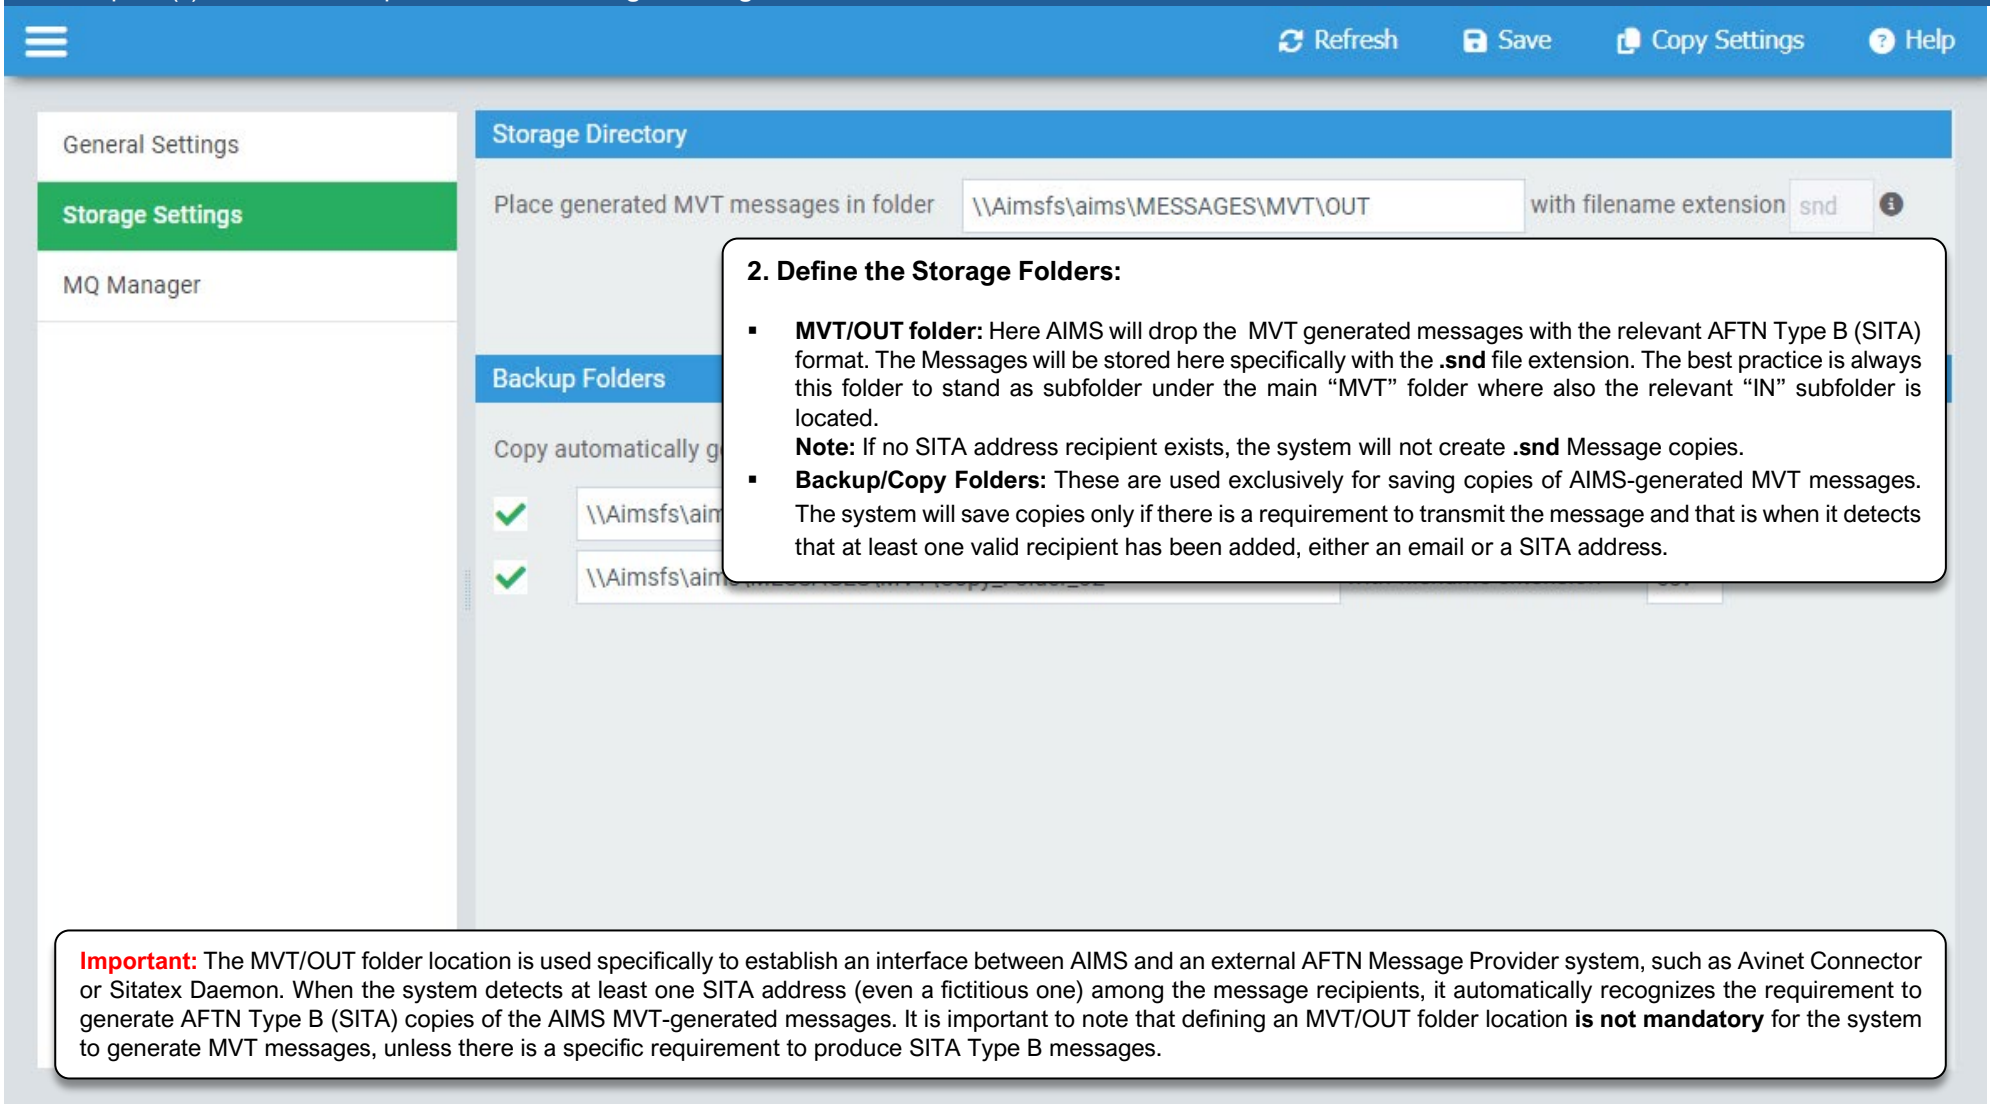

2. Define the Storage Folders:

- **MVT/OUT folder:** Here AIMS will drop the MVT generated messages with the relevant AFTN Type B (SITA) format. The Messages will be stored here specifically with the **.snd** file extension. The best practice is always this folder to stand as subfolder under the main "MVT" folder where also the relevant "IN" subfolder is located.
  Note: If no SITA address recipient exists, the system will not create **.snd** Message copies.
- **Backup/Copy Folders:** These are used exclusively for saving copies of AIMS-generated MVT messages. The system will save copies only if there is a requirement to transmit the message and that is when it detects that at least one valid recipient has been added, either an email or a SITA address.

Important: The MVT/OUT folder location is used specifically to establish an interface between AIMS and an external AFTN Message Provider system, such as Avinet Connector or Sitatex Daemon. When the system detects at least one SITA address (even a fictitious one) among the message recipients, it automatically recognizes the requirement to generate AFTN Type B (SITA) copies of the AIMS MVT-generated messages. It is important to note that defining an MVT/OUT folder location **is not mandatory** for the system to generate MVT messages, unless there is a specific requirement to produce SITA Type B messages.

3.2.3. Applying the General Settings

AIMS Option(s) in use: AIMS Job 422 – Settings | **General Settings**

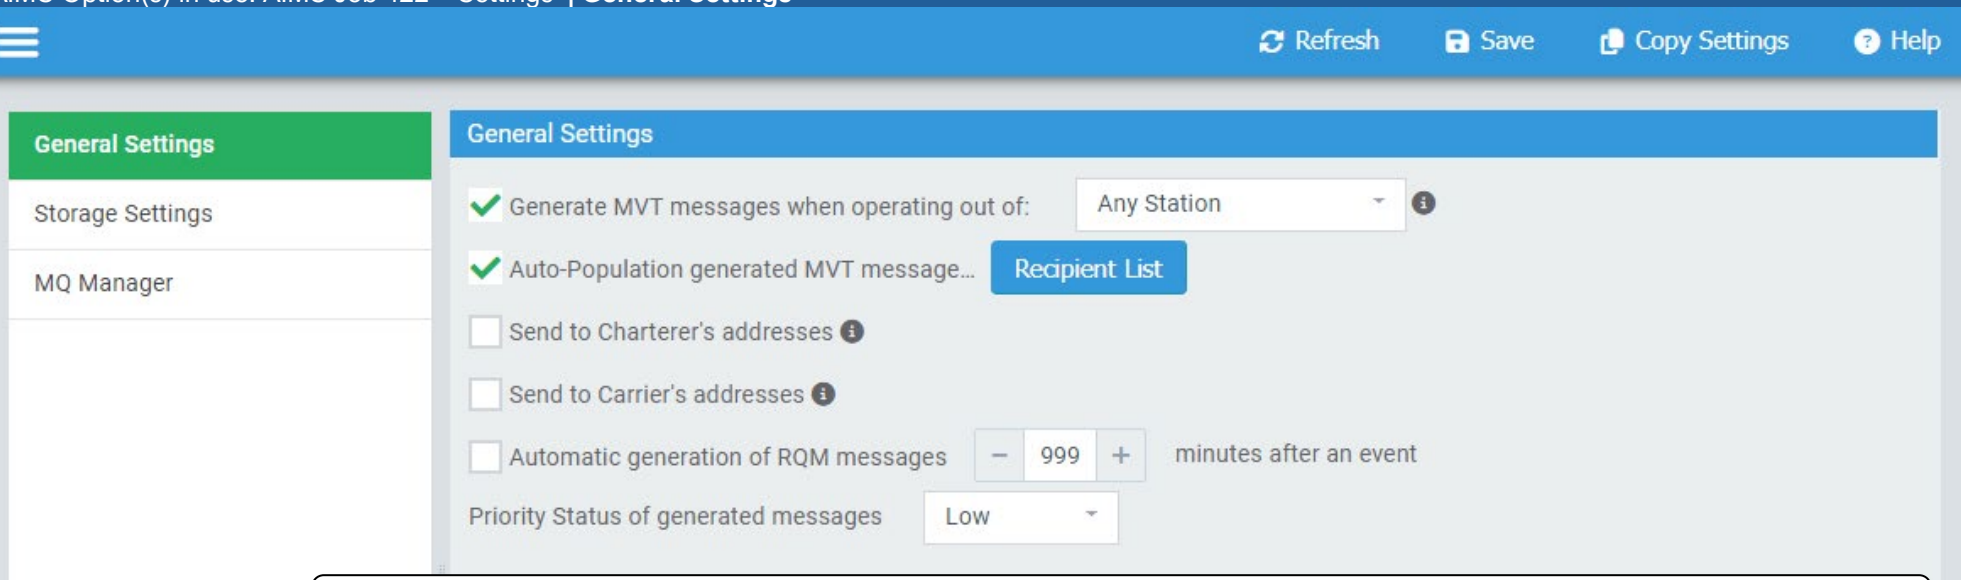

3. General Settings

- **Generate MVT Messages when operating out of:** This option applies globally to all users. It determines whether all users (who have access to the Actual Flight Info screen and are authorized to make time updates) are permitted to generate MVT messages for all stations or for selected stations only. When this option is enabled, users will be able to manually generate MVT and RQM messages at their discretion by selecting the "Messages Generation" option from within the Actual Flight Info screen.
- **Auto-Population of MVT Messages:** This setting is user-specific. When enabled, this setting allows users to get automatically a preview the resulting MVT message whenever they promote a time update within the Actual Flight Info screen.
- **Auto-Generation of RQM messages:** This option is user-specific. When this option is enabled and an interval is defined, the system will automatically generate and transmit RQM messages in the background based on missing AD or AA times, respectively.
  Important: Extra caution is advised when activating this option, as users have no control over the exact timing of RQM message transmissions, since these occur automatically in the background.

Note: The Administrator can use the **"Copy Settings"** function to replicate this user-specific configuration for other users as needed.

AIMS Option(s) in use: AIMS Job 422 – Settings | **MQ Manager**

Refresh Save Copy Settings Help

General Settings

Storage Settings

MQ Manager

MQ Manager Settings

Send the generated MVT messages by MQ

MQ Server

MQ Manager

MQ Queue

Output MQ Directory

User

Password

4. Enable MQ Transmition Settings

MQ transmission Settings can be set up in this screen.

Important: These settings are user-specific for those authorized to generate MVT messages. Therefore, Administrators should consider using the "Copy Settings" function to replicate the same MQ settings across all relevant users as needed.

4. Transmitting MVT Messages via Movement Control

AIMS Option(s) in use: AIMS Option 2.1.1 – Aircraft Scheduling & Movement Control | **Transmitting MVT Messages via Movement Control**

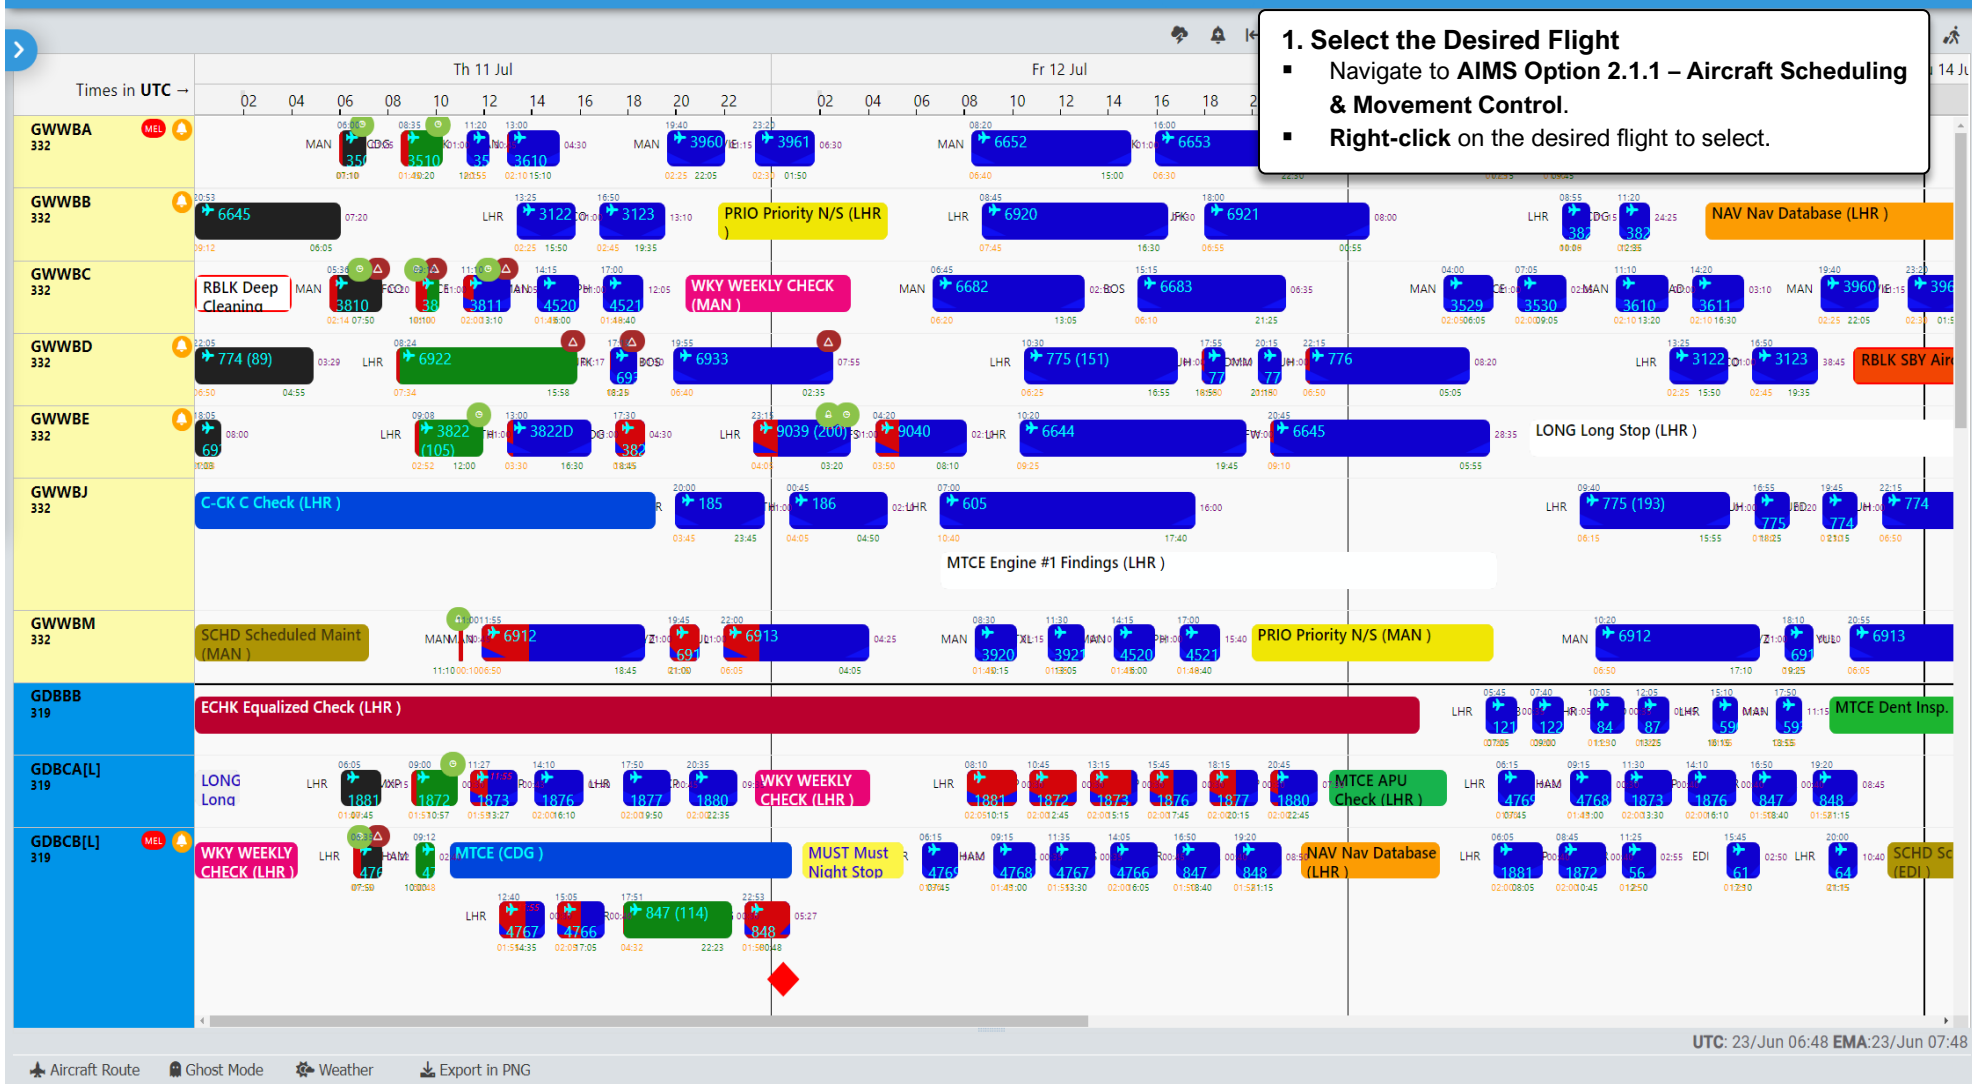

1. Select the Desired Flight

- Navigate to **AIMS Option 2.1.1 – Aircraft Scheduling & Movement Control**.
- **Right-click** on the desired flight to select.

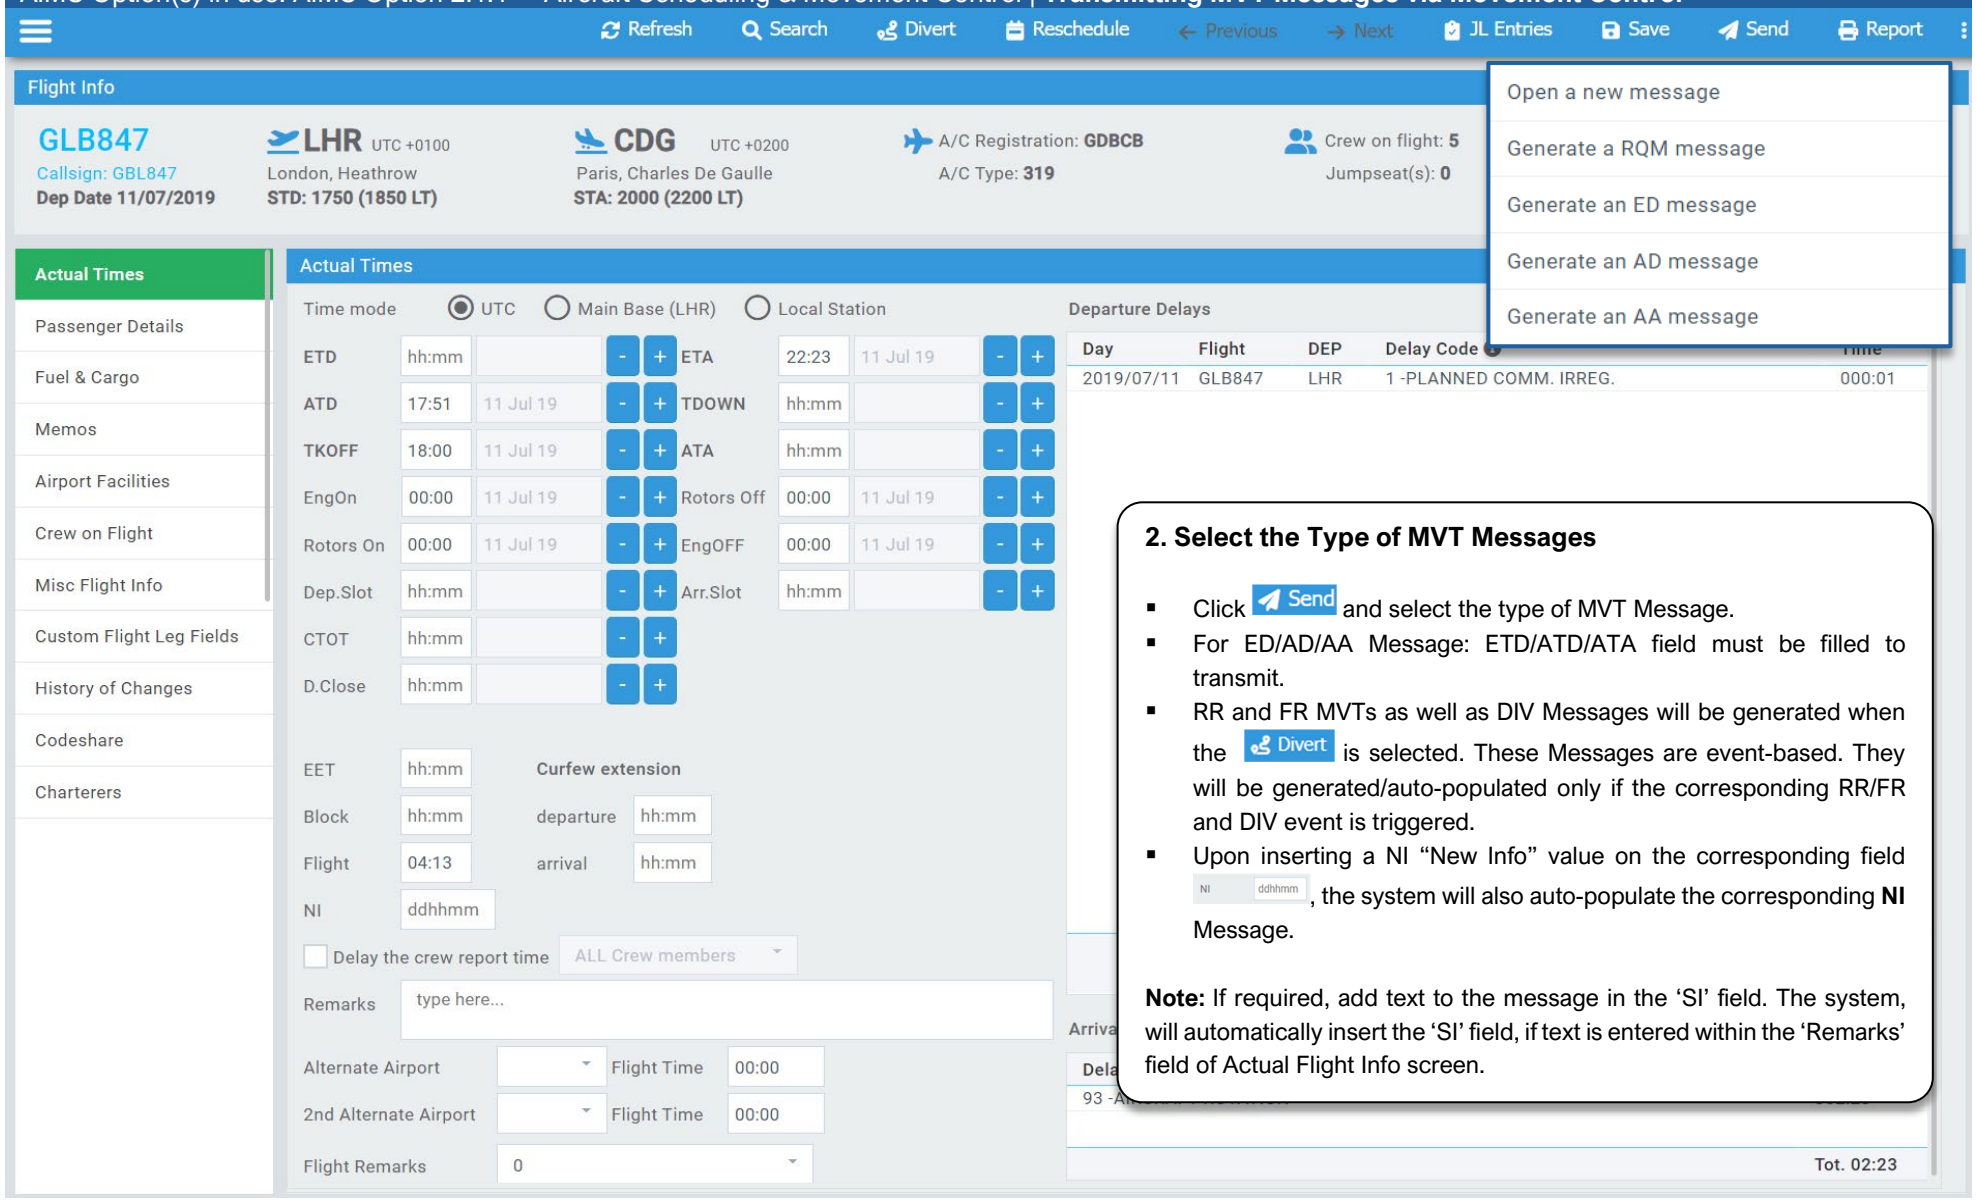

2. Select the Type of MVT Messages

- Click Send and select the type of MVT Message.
- For ED/AD/AA Message: ETD/ATD/ATA field must be filled to transmit.
- RR and FR MVTs as well as DIV Messages will be generated when the Divert is selected. These Messages are event-based. They will be generated/auto-populated only if the corresponding RR/FR and DIV event is triggered.
- Upon inserting a NI "New Info" value on the corresponding field NI ddhhmm, the system will also auto-populate the corresponding **NI** Message.

Note: If required, add text to the message in the 'SI' field. The system, will automatically insert the 'SI' field, if text is entered within the 'Remarks' field of Actual Flight Info screen.

AIMS Option(s) in use: AIMS Option 2.1.1 – Aircraft Scheduling & Movement Control | **Transmitting MVT Messages via Movement Control**

Refresh | Send | Clear | Add Recipient | Recipients | Report | Exit | Help

Date	Flight	Departure	Arrival
11/07/2019	GLB847	LHR	CDG

MVT
GLB847/11.GDBCB.LHR
AD1751/1800 EA2223 CDG
DL01/0001

#	Address		
1	LHROCXH		
2	LHREEXH		
3	LHRGHTYS		
4	LHRHGYJP		
5	LHRNBGFG		
6	LHRSGHTY		
7	LHRTHKJ	Catering companie	Gourmet/Catering 24/7
8	GBLoffice@lhrairport.com	Airline Representa	GBL Office in LHR/GBL Office
9	lhrairbp@dsfmail.com	Fuel Agents	AirBP/Ramp Supervisor
10	lhrairbp@lhrmail.com	Fuel Agents	AirBP/24/7
11	lhrcatering@khrairport.com	Catering companie	Gourmet/Catering 24/7
	azzurralhr.it	Handling Agents	Global Airways/GHA Ramp Service
	zzurralhr.it	Handling Agents	Global Airways/GHA DUTY MANAGER
	po@lhrairport.com	Transportation Co	LHR Transportation Company/Supervis
	@acl-uk.org	Slot Co-ordinators	ACL UK/SCR LEVEL 3

ve if neccessary and press 'Send'.

3. Select the Recipients

- Recipients that have been defined in **AIMS Option 1.3.8.3 – Recipients Address List** will appear here.
- Click Add Recipient to add more recipient to the list.
- Adjust the message content (if required).
- Once complete, click Send
- To abort Sending, press Exit

Note: Alternatively, you can edit/amend the recipients list manually prior sending.

4. Auto-Population of MVT Messages

When the relevant option is enabled in **AIMS Option 1.3.8.2 - General Settings**, users will get automatically get the preview the resulting MVT message along with the pre-defined recipient list, whenever they promote a time update within the Actual Flight Info screen.

Note: The Message **will not** be transmitted automatically! Users will have full control over whether to send it or not.

4.1. Predefining the Recipient List

AIMS Option(s) in use: AIMS Option 1.3.8.3 – Recipients list

Refresh | Copy Contacts | Hide Contacts | Previous | Next | Save | Report | Help

Airport LHR (UNITED KINGDOM) LONDON, HEATHROW

Contacts

Agents Of Airport LHR | Non-Crew List | Other

	Type of Address	Agent Type	Company Name	Department
1	GBLoffice@lhrairport.com	Airline Representatives	GBL Office in LHR	GBL Office
2	LHRGHTYS	Airline Representatives	GBL Office in LHR	GBL Office
3	lhrcatering@khrairport.com	Catering companies	Gourmet	Catering 24/7
4	LHRTHKJ	Catering companies	Gourmet	Catering 24/7
5	LHRTFUJ	Catering companies	Gourmet	Catering 24/7
6	lhrcatering@khpairport.com	Catering companies	LHR Catering Services	LHR Catering
7	LHRTHLM	Catering companies	LHR Catering Services	LHR Catering
8	LHRTFTG	Catering companies	LHR Catering Services	LHR Catering
9	mroteamlhr@lhrairport.com	Engineering Facilities	GBL MX team	MRO Team
10	LHRNBGFG	Engineering Facilities	GBL MX team	MRO Team
11	LHRYHFGR	Engineering Facilities	GBL MX team	MRO Team
12	hangarteamlhr@lhrairport.com	Engineering Facilities	GBL Hangar MX team	Hangar MX Team
13	LHRNBGKI	Engineering Facilities	GBL Hangar MX team	Hangar MX Team

Airline Representatives	GBL Office in LHR/GBL Office	✓	✓	✓	✓	
Fuel Agents	AirBP/24/7	✓	✓	✓	✓	
Handling Agents	Global Airways/GHA Ramp Service	✓	✓	✓	✓	
Handling Agents	Global Airways/GHA DUTY MANAGER	✓		✓	✓	
Engineering Facilities	GBL MX team/MRO Team	✓		✓	✓	
Handling Agents	Global Airways/GHA Ramp Service	✓	✓	✓	✓	✓
Transportation Companies	LHR Transportation Company/Supervisor	✓	✓	✓	✓	
Catering companies	Gourmet/Catering 24/7	✓	✓	✓	✓	

Build the Recipients List

- The contacts available for selection will be displayed on the left part of the screen. Double-click to move the email/Type B recipient to the right side of the screen. The recipeints here come from the Airport Agents, Non-Crew Lists, and "Other" areas namely the contacts from Carriers and Charterers lists.

Note: Use the Hide Contacts option to collapse the Contacts list once the required recipients have been selected and moved to the Recipient List panel. This enables them to focus on defining which recipients will receive each message type.

Note: The main concept here is to build a recipient list per Airport using mainly recipients that refer to that airport. However Users can optionally use agents recipients from other Airports if required.

- Click under each Message type column to include the recipient in the list. Press Save
- Select the navigation arrows Previous Next to move on to a next airport.
- The Copy Contacts allows for easy copy of an existing recipient list to other airports.
- The predefined lists can be also views collectively via a report. Click on the Report to get this.

Note: Users may also define standard email addresses for MVT and ASM Messages transmition on the relevant field. This applies to all airports.

Note: The Recipient Lists section now serves as a **unified** area, where Administrators can define recipients not only for AIMS MVT-generated messages, but also for all other supported AIMS-generated message types, including ASM/SSM Messages, AC Allocation Reports, and SCR Airport Slot Messages. *(The later requires the activation of the AIMS Airport Slot addon module)*. Shortcuts Recipients List to this screen are available through the respective Configuration screens of each message type.

5. Reviewing Incoming/Outgoing Messages

5.1. Managing Incoming/Outgoing Messages

AIMS Option(s) in use: AIMS Option 1.1.14.1 – Message Traffic Utility | **Managing Incoming/Outgoing Messages**

Refresh | Go | Reprocess | Report | E-Mail | Default E-Mail | Help

Selection Criteria

Message State
Message Type
Message Subtype
Message Status: Sent, Received
Refresh Period: 999 (mins)

Filters

Flight Number
Flight Date
Departure Airport
A/C Registration
Messages Between: 11/07/2019 – 18/07/2019

Processed
Failed
Unconfirmed

MVT
ACARS
DIV
LDM
ASM
SSM

Search by Flight Number

		Originator	Message Subtype	Message State	Message Date/Time	In/Out	Flight Number	Flight Date
1	ACARS	AIMS	OFFRP	PROCESSED	11/07/2019 07:06:60	RECEIVED	3509	11/07/2019
		AIMS	OFFRP	PROCESSED	11/07/2019 07:07:40	RECEIVED	3509	11/07/2019
		AIMS	MVT_ED	PROCESSED	11/07/2019 09:05:31	SENT	3510	11/07/2019
		AIMS	MVT_AD	PROCESSED	11/07/2019 09:11:27	SENT	3510	11/07/2019
		AIMS	MVT_AD	PROCESSED	11/07/2019 09:12:45	SENT	3810	11/07/2019
		AIMS	MVT_ED	PROCESSED				
		AIMS	MVT_AD	PROCESSED				
		AIMS	MVT_ED	PROCESSED				
		AIMS	MVT_AD	PROCESSED				
10	MVT	AIMS	MVT_ED	PROCESSED				
11	MVT	AIMS	MVT_ED	PROCESSED				
12	MVT	AIMS	MVT_ED	PROCESSED				
13	MVT	AIMS	MVT_ED	PROCESSED				
14	MVT	AIMS	MVT_AD	PROCESSED				
		AIMS	MVT_AD	PROCESSED	11/07/2019 09:19:24	SENT	DC4768	11/07/2019
		AIMS	MVT_AD	PROCESSED	11/07/2019 09:21:13	SENT	123	11/07/2019
		AIMS	MVT_AD	PROCESSED	11/07/2019 09:22:54	SENT	843	11/07/2019

1. Select the List of Messages

- Navigate to **AIMS Option 1.1.14.1 – Message Traffic Utility.**
- Under **Selection Criteria** Tab, select the Message State/Type and/or Subtype by its Status.
- Further filter by specific flight number or by period.
- Once complete, click Go

2. Review and Reprocess the Messages

- Reason for failed transmission will be displayed below.
- Select the message and review/amend the message content as necessary.
- Click on **Reprocess** button to place the message back into the queue.

Note: The messages gos back into the MVT/IN folder with **.rcv** file extension.

AIMS Option(s) in use: AIMS Option 1.1.14.2 – Missing MVT & LDM Messages Utility | **Transmitting MVT Messages via Movement Control**

Refresh | Go | Request LDM | Request MVT

Period Selection

Date Period 11/07/2019 17/07/2019

00:00 00:00

A rolling period of hours, starting minus 01:00

hours from the current UTC date and time.

Refresh Period 999 (mins)

Filters

A/C Type

A/C Registration

Carrier

Departure Airport

Arrival Airport

Flight Number

Output

Tolerance LDM 00:30 MVT 00:20

Time In UTC Local Base Local

Message List

Index	Date	Flight Number	STD	ST				
1	11/07/2019	8888	00:30	01				
2	11/07/2019	18	01:00	01				
3	11/07/2019	100	01:00	04				
4	11/07/2019	996	01:45	05:00	KRT	BEY	☑	
5	11/07/2019	932	02:25	09:00	IKA	LHR	☑	
6	11/07/2019	896	02:50	07:25	DME	LHR	☑	
7	11/07/2019	123	04:00	05				
8	11/07/2019	425	05:05	07				
9	11/07/2019	577	05:15	06				
10	11/07/2019	3810	05:15	07				
11	11/07/2019	840	05:25	07				
12	11/07/2019		05:30	06:50	GLA	LHR	☑	
13	11/07/2019	51	05:30	07:00	EDI	LHR	☑	
14	11/07/2019	912	05:30	11:15	AMM	LHR	☑	☑
15	11/07/2019	81	05:45	07:10	BHD	LHR	☑	
16	11/07/2019	121	05:45	07:05	LHR	DUB	☑	
17	11/07/2019	3509	05:50	07:15	MAN	CDG	☑	
18	11/07/2019	16	05:55	07:20	LHR	GLA	☑	
19	11/07/2019	80	05:55	07:15	LHR	BHD	☑	
20	11/07/2019	10	06:00	08:45	BEY	AZI	☑	☑
21	11/07/2019	50	06:00	07:20	LHR	EDI	☑	
22	11/07/2019	LX359	06:00	07:35	LHR	GVA	☑	

3.Select the Period

- Navigate to **AIMS Option 1.1.14.2 – Missing MVT & LDM Messages Utility.**
- Select the **Period** and apply the appropriate **Filter**.
- Under the **Output** Tab, select the tolerance based on STD in which flights will be shown on screen in case no MVT/LDM message has been received.
- Once complete, click Go

4. Request LDM/MVT

- Once the flight list is displayed, select the desired flight(s) whereas LDM/MVT messages are missing and click **Request LDM/ Request MVT.**
- **Additional Address:** Allow User to send LDM/MVT to two email addresses.

6. Sample of Supported Messages by AIMS

6.1. Movement Messages (MVT)

Movement Messages (MVT)			
Message Type	**Message Example**	**Message Type**	**Message Example**
Estimated Departure (ED)	**MVT** GLB711/04.GADAZ.BHX **ED040700** DL77	**Return from Airborne (FR)**	**MVT** GLB711/04.GADAZ.BHX **FR0730/0737** SI BIRD STRIKE ENG 2
Actual Departure (AD)	**MVT** GLB711/04.GADAZ.BHX **AD0700/0710** EA1345 BGR DL77/0015 PX200	**Return to Ramp (RR)**	**MVT** GLB711/04.GADAZ.BHX AD0700 **RR0730** DL77/0015 SI PRESSURIZATION LIGHT ON
Estimated Time of Arrival (EA)	**MVT** GLB711/04.GADAZ.BGR **EA1355**	**Diversion (DIV)**	**DIV** GLB711/04.GADAZ.BGR **EA1420** BDL PX200
Actual Arrival (AA)	**MVT** GLB711/04.GADAZ.BGR **AA1350/1400**	**New Information (NI)**	**MVT** GBL711/04.GADAZ.BHX **NI0435** SI GENERATOR ISSUE

Movement Messages (MVT) – Additional Delays and Sub-Delays	
Actual Departure with 4 delays (AD) In this example there are **4** diferrent delay codes, 2 of them come with a subdelay code: **DL93** **DL87A** **DL87** **DL93B**	**MVT** GBL999/27.SXABC.ATH AD271600/271615 EA1805 RHO **DL93/87**/0040/0020 **EDL87/93**/0110/0050 DLA/87A//93B SI ETC

Note: As per IATA standards, the delay time is displayed only in AD and AA MVT Type Messages.

6.2. ACARS Messages

ARINC – ACARS Messages				
OOOI – ARINC Specification 620				
Message Type	**Message Example**		**Message Type**	**Message Example**
OUT Report	**DEP** FI GLB711/AN GADAZ/DA EGBB/DS KBGR/**OT 0700**/FB 200/BF 100 DT DSP RGS 040700 M80A - FREE TEXT **OT:** 0700 (Updates ATD) **Fuel Onboard:** 200 (Updates Ramp Fuel) **Boarded Fuel:** 100 (Updates Uplift Fuel Vol.)		**ON Report**	**ARR** FI GLB711/AN GADAZ/DA EGBB/AD KBGR/**ON 1350** DT DSP GSR 041350 M81A - FREE TEXT **ON:** 1350 (Updates Touchdown)
OFF Report	**DEP** FI GLB711/AN GADAZ/DA EGBB/DS KBGR/**OF 0710**/FB 100 DT DSP RGS 040710 M81A - FREE TEXT **OF:** 0710 (Updates Takeoff) **Fuel Onboard:** 100		**IN Report**	**ARR** FI GLB711/AN GADAZ/DA EGBB/AD KBGR/**IN 1400**/FB 200/LA 2/LR 2 DT DSP GSR 041400 M82A - FREE TEXT **IN:** 1400 (Updates ATA) **Fuel Onboard:** 200 (Updates Shutdown Fuel)

ARINC – ACARS Messages				
ACARS A80 Messages (Rockwell Collins)				
Message Type	**Message Example**		**Message Type**	**Message Example**
A80 - OUT Report	**A80** FI GLB711/AN GADAZ DT DSP RGS 040700 M80A - 1001 OUTRP 711/04 EGBB/KBGR .GADAZ /**OUT 0700**/FOB 0340/BRD 100/UNT LITERS/TYP A1 **OUT:** 0700 (Updates ATD) **FOB:** 0340 (Fuel onboard)		**A80 - ON Report**	**A80** FI GLB711/AN GADAZ DT DSP GSR 041350 M82A - 1201 ONRP 711/04 EGBB/KBGR .GADAZ /**ON 1350**/FOB 0120 **ON:** 1350 (Touchdown) **FOB:** 0120
A80 - OFF Report	**A80** FI GLB711/AN GADAZ DT DSP RGS 040710 M81A - 1101 OFFRP 711/04 EGBB/KBGR .GADAZ /OUT 0700/**OFF 0710**/FOB 0320 **OFF:** 0710 (Takeoff time) **FOB:** 0320		**A80 - IN Report**	**A80** FI GLB711/AN GADAZ DT DSP GSR 041400 M83A - 1301 INRP 711/04 EGBB/KBGR .GADAZ /ON 1350/**IN 1400**/FOB 0114 **IN:** 1400 (Updates ATA) **FOB:** 0114

ARINC – ACARS Messages				
Additional ACARS Messages				
Message Type	**Message Example**		**Message Type**	**Message Example**
M13 Report	**M13** FI GLB711/AN GADAZ DT DSP GSR 041415 M90A - 08,24000,**124792**,32.5,156392,29.5,156792,165239,147, **1907**,USG,131,0,132,**0**,132/132,**338637**,**338638** **Zero Fuel Weight:** 124792 (Updates Zero Fuel Wgt) **Fuel Uplift Quantity:** 1907 (Updates Uplift Fuel Vol.) **Infants:** 0 (Updates Nr of Infants) **Fuel Tickets:** 338637, 338638 (Updates Fuel Ticket)		**M21 Report**	**M21** FI GLB711/AN GADAZ DT DSP GSR 041405 M88A - **0700**,**2000**,**0710**,**1350**,**1400**,**147**,**73**,OK **Actual Time of Departure:** 0700 (Updates ATD) **Shutdown Fuel:** 2000 (Updates Shutdown Fuel) **Takeoff Time:** 0710 (Updates T/Off Time) **Touchdown Time:** 1350 (Updates Touchdown Time) **Actual Time of Arrival:** 1400 (Updates ATA) **Crew IDs:** 147 (T/Off Details), 73 (Landing Details)
M16 Report	**M16** FI GLB921/AN GADAZ DT QXT IOR2 271220 M08A - KUGOS ,N 41.762,E 35.830,32001,0488,**1922**, 230 **Active ETA:** 1922 (Updates ETA)		**M19 Report**	**M19** FI GLB200/AN GADAZ DT QXS SKG1 290447 M23A -GLB200,LGAV,LGTS,**3456**,**7892**, **NO**, , , , **Takeoff Crew ID:** 3456 (Updates T/Off Details) **Landing Crew ID:** 7892 (Updates Landing Details) **Autoland:** NO (Updates Autoland)
M24 Report	**M24** FI GLB200/AN GADAZ DT QXS SKG1 290449 M23B - TKO01GLB200 /29290449LGAVLGTS **0355****0400**11803456---------- **Actual Departure Time:** 0355 (Updates ATD) **Takeoff Time:** 0400 (Updates T/Off Time)		**M28 Report**	**M28** FI GLB200/AN GADAZ DT QXS SKG1 290448 M24A - LND01GLB200 /29290948LGAVLGTS **0440044592601**1**Y**S **Touchdown Time:** 0440 (Updates Touchdown Time) **Actual Arrival Time:** 0445 (Updates ATA) **Shutdown Fuel:** 9260 (Updates Shutdown Fuel)

ETA Report	**ETA** FI GLB711/AN GADAZ/DA EGBB/EA **1345**/FB 300 DT DSP RGS 040711 M23A - FREE TEXT **Estimate Time of Arrival:** 1345 (Updates ETA)		**OUT/Return IN Report**	**RTN** FI GLB711/AN GADAZ/DA EGBB/DS KBGR/OT **0700**/RI **0730**/FB **250** DT DSP RGS 040730 M25A - FREE TEXT **Out Time:** 0700 (Updates ATD) **Return In:** 0730 (Updates ATA) **Fuel Onboard:** 250 (Updates Shutdown Fuel)
A80 – Door Close	**A80** FI GLB711/AN GADAZ DT DSP RGS 040700 M80A - 3P01 DOORCL 0711/04 EGBB/KBGR .GADAZ **/DC 1821** **Door Close:** 1821 (Updates Door Close Time)		**A80 – Summary Report**	**A80** FI GLB711/AN GADAZ DT DSP RGS 040700 M80A - 3501 SUMMRY 711/04 EGBB/KBGR .GADAZ **/OUT 1632/FOB 0063** **/OFF 1659/FOB 0060** **/ON 1812/FOB 0033** **/IN 1819/FOB 0033** /TKO CAPT /CRW /LND CAPT /CRW /APP N /RWY /RVR /ALT /ERR /ERR /ERR **/CPT 36389 /FO 37564** /SO1 /SO2 /CHK **OUT:** 1632 (Updates ATD), **FOB:** 0063 **OFF:** 1659 (Takeoff), **FOB:** 0060 **ON:** 1812 (Touchdown), **FOB:** 0033 **IN:** 1819 (Updates ATA), **FOB:** 0033 **Landing and Takeoff Crew IDs:** CPT 36389, FO 37564

6.3. LDM Messages

LDM Messages	
LDM Format *(Newest)*	**LDM** GB0001/**31.SXABC.180Y**.2/1 -SKG.**60/42/4/3**.T6500.1/2500.2/3000.4/1000.**PAX/0/0/100**.**PAD/0/0/2** -ATH.**58/40/2/1**.T6500.1/2500.2/3000.4/1000.**PAX/0/0/98**.**PAD/0/0/2** SI DXB **B/2000.C/450.M/50**.E/0 ATH **B/1000.C/350.M/40**.E/0 PAX WEIGHTS USED M 84 F 84 C 35
LDM Format *(Older)*	**LDM** GB0001/**31.SXABCB.180Y**.2/1 -SKG.**60/42/4/3**.T6500.1/2500.2/3000.4/1000.**B2000.C450.M50**.ENIL **PAX/0/0/100**.**PAD/0/0/2** -ATH.**58/40/2/1**.T6500.1/2500.2/3000.4/1000.**B1000.C350.M40**.ENIL **PAX/0/0/98**.PAD/0/0/2