

13.5 IF1063

13.5.1 General information

The IF1063 interface module is used for application-specific expansion of the X20 CPUs. It is equipped with a Profibus DP slave interface.

- Profibus DP slave connection

13.5.2 Order data

Model number	Short description	Figure
	Interface module	
X20IF1063	X20 interface module, 1 Profibus DP slave interface, max. 12 MBit/s, electrically isolated	
	Optional accessories	
0G1000.00-090	Bus connector, RS485, for Profibus networks	

Table 221: IF1063 - Order data

13.5.3 Technical data

Product ID	IF1063
Short description	
Communication module	1x Profibus DP slave
Interfaces	
Interface IF1 Fieldbus Type Design Maximum transfer rate	Profibus DP slave RS485 9-pin DSUB socket 12 MBit/s
General information	
Status indicators	Module status, data transfer
Diagnostics Module status Data transfer	Yes, with status LED Yes, with status LED
Electrical isolation PLC - IF1	Yes
Power consumption	0.87 W
Certification	CE, C-UL-US, GOST-R
Operating conditions	
Operating temperature Horizontal installation Vertical installation	0°C to +55°C 0°C to +50°C
Relative humidity	5 to 95%, non-condensing
Mounting orientation	Horizontal or vertical
Installation at altitudes above sea level 0 - 2000 m >2000 m	No derating Reduction of ambient temperature by 0.5°C per 100 m
Protection type	IP20
Storage and transport conditions	
Temperature	-25°C to +70°C
Relative humidity	5 to 95%, non-condensing
Mechanical characteristics	
Slot	In X20 CPU

Table 222: IF1063 - Technical data

13.5.4 Additional technical data

Product ID	IF1063
IF1 interface, Profibus DP slave	
Controller	ASIC SPC3
RAM	1.5 KByte
Maximum distance	1000 m
Maximum transfer rate	
Bus length <100 m	12 MBit/s
Bus length <200 m	1.5 MBit/s
Bus length <400 m	500 kBit/s
Bus length <1,000 m	187.5 kBit/s
Network-capable	Yes
Terminating resistor	External T-connector (0G1000.00-090)
General information	
B&R ID code	\$1F23

Table 223: IF1063 - Additional technical data

13.5.5 Status LEDs



LED	Color	Status	Description
STATUS	Green	On	Interface module is active
	Red	On	CPU starting up
RxD	Yellow	On	The module receives data via the Profibus DP slave interface
TxD	Yellow	On	The module sends data via the Profibus DP slave interface

Table 224: IF1063 - Status indicators

13.5.6 Operating and connection elements

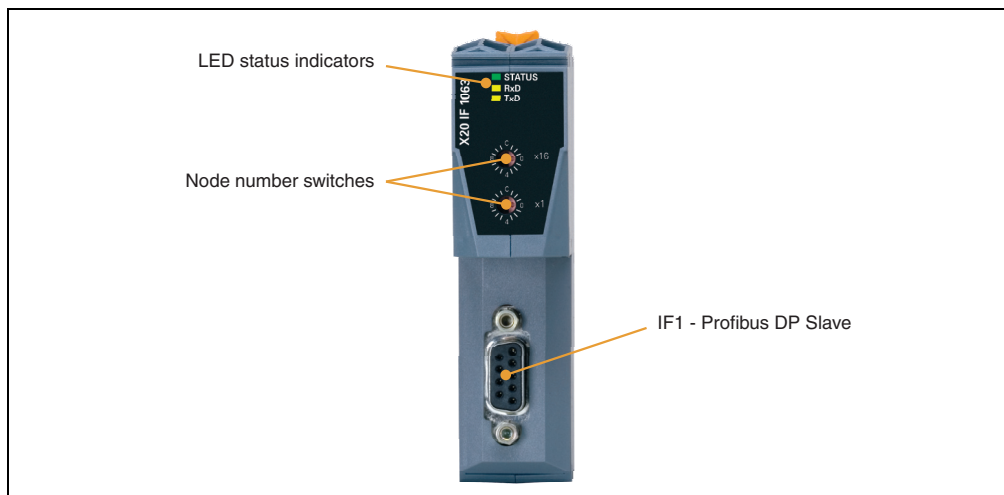


Figure 172: IF1063 - Operating and connection elements

13.5.7 Profibus DP slave node number

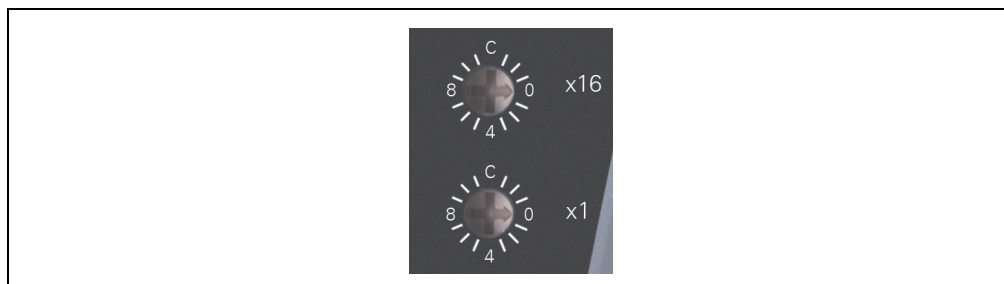


Figure 173: IF1063 - Profibus DP slave node number switches

The node number for the Profibus DP Slave interface is set with the two hex switches.

13.5.8 Profibus DP slave interface (IF1)


Interface		Pin assignments	
Application interface Profibus DP Slave  9-pin D-SUB socket	Pin	RS485	
	1	Reserved	
	2	Reserved	
	3	RxD/TxD-P	Data
	4	CNTR-P	Transmit enable
	5	DGND	Electrically isolated supply
	6	VP	Electrically isolated supply
	7	Reserved	
	8	RxD/TxD-N	Data\
	9	CNTR-N	Transmit enable\
	CNTR ... Directional switch for external repeater		

Table 225: IF1063 - Profibus DP slave interface (IF1)

13.5.9 Firmware

The IF1063 module comes with preinstalled firmware. The firmware is also part of the B&R Automation Runtime operating system for the PLC. If the two versions are different, the Automation Runtime firmware is loaded to the module.

The latest IF1063 firmware is available automatically by updating your B&R Automation Runtime.