

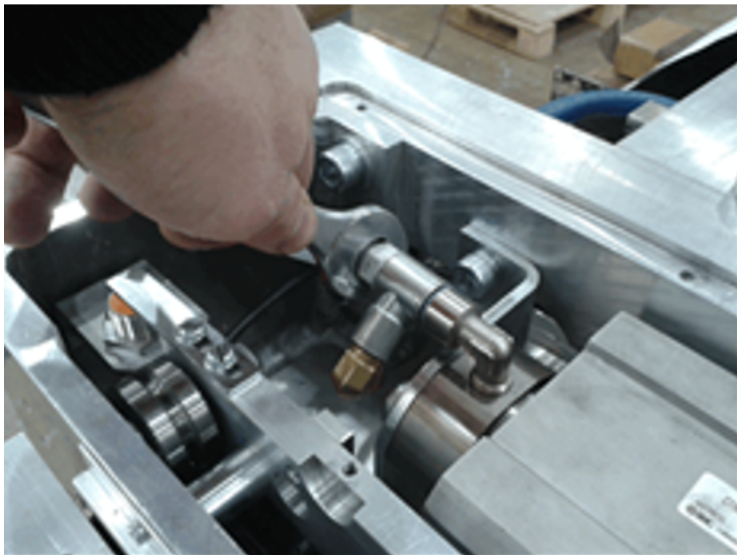


Figure 9.11-14 Example of an technician removing the pilot valve.

6. Loosen and remove the four hex-head bolts and spacers that connect the carriage plate to the pillars. Be sure not to lose the spacers.



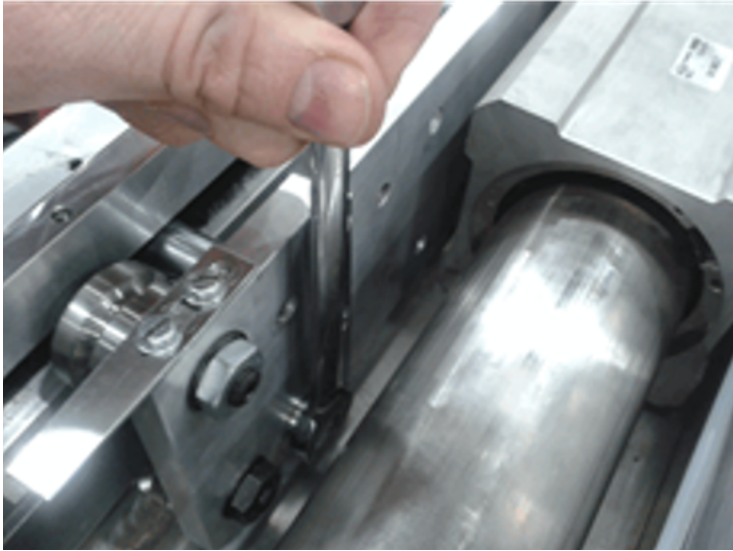


Figure 9.11-15 Examples of an technician removing the hex head bolts.

7. Push the cylinder body out of the way of the carriage plate.



Figure 9.11-16 Example of a technician pushing the cylinder body away to the opposite end.

8. Release the locking nuts



Figure 9.11-17 Example of a technician releasing the remaining fasteners.

9. Rotate the upper eccentric rollers to allow the carriage plate to be removed



Figure 9.11-18 Example of a technician rotating the eccentric rollers.

10. Manoeuvre the carriage plate off the Vee-rail by tilting as shown and then remove.



Figure 9.11-19 Example of a technician releasing the carriage plate.

The Vee rail is now accessible and able to be removed, by removing the holding fasteners.



Figure 9.11-20 Example of the Vee rail area cleared for access.

Follow the instructions in reverse to re-install the carriage plate.

To remove the cylinder from the assembly, release the air connections and remove the four cap-head screws from either end. The cylinder can then be removed.

Vee-Rail and Cylinder Installation Instructions

This procedure is written on the understanding that anybody following it, is competent to do so. Using Drawing 417G155

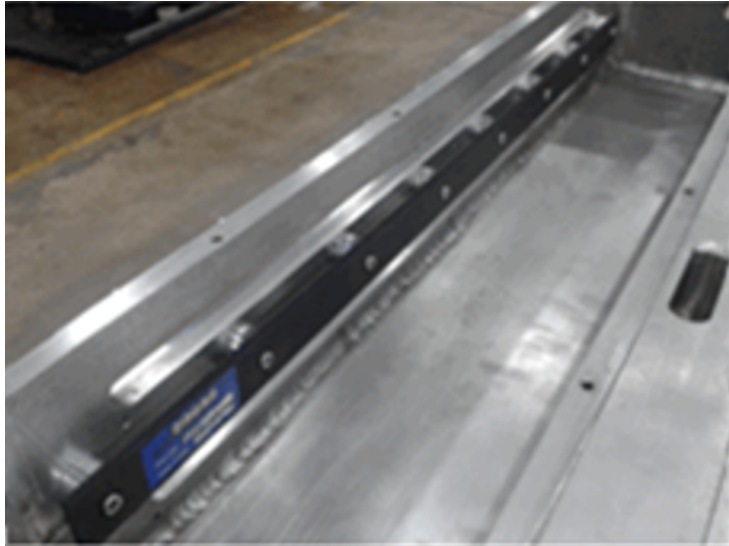


Figure 9.11-21 A mounted double edge Vee slide rail.

1. Mount the double edge Vee slide rail (B18) as shown, the spacers sit on a step on the inside face of the aluminium box, using spacers (M47) and screws (S15)
The open/close sensors can be fitted at any time of the build process, but it is easier at this stage of the assembly. Use securing cable clips are used to secure the electrical wiring.

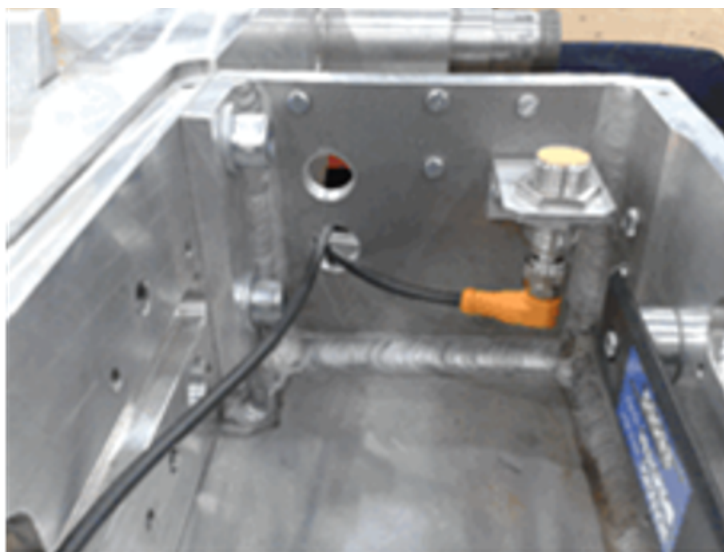
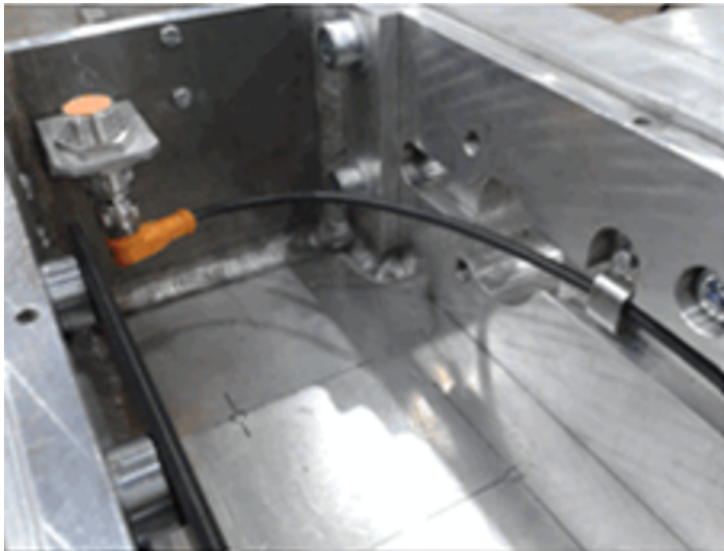


Figure 9.11-22 Position sensors located inside the enclosure

Install the concentric (B16) and eccentric rollers (B17) onto the carriage plates (M24 & M25). The concentric ones at the bottom of the plates.

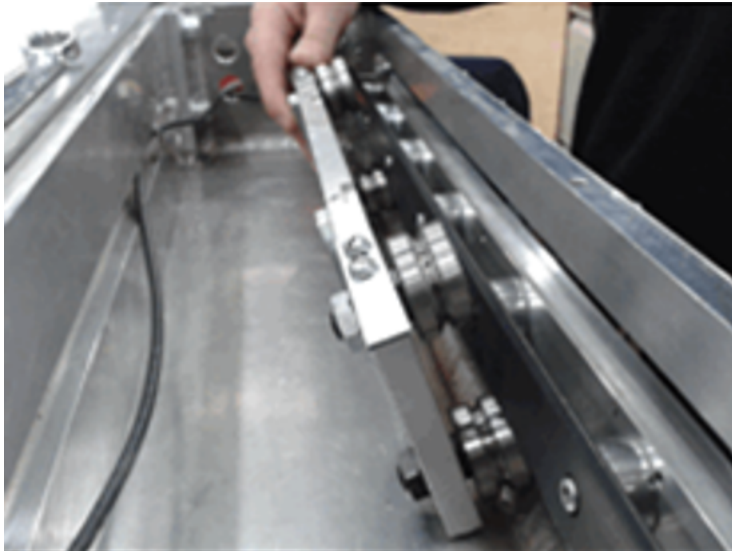


Figure 9.11-23 Carriage plate with rollers attached.

2. To secure the carriage plate (M24 & M25) to the rails, rotate the eccentric rollers to the highest position. This will give enough space to manoeuvre the rollers over the rail from the bottom.

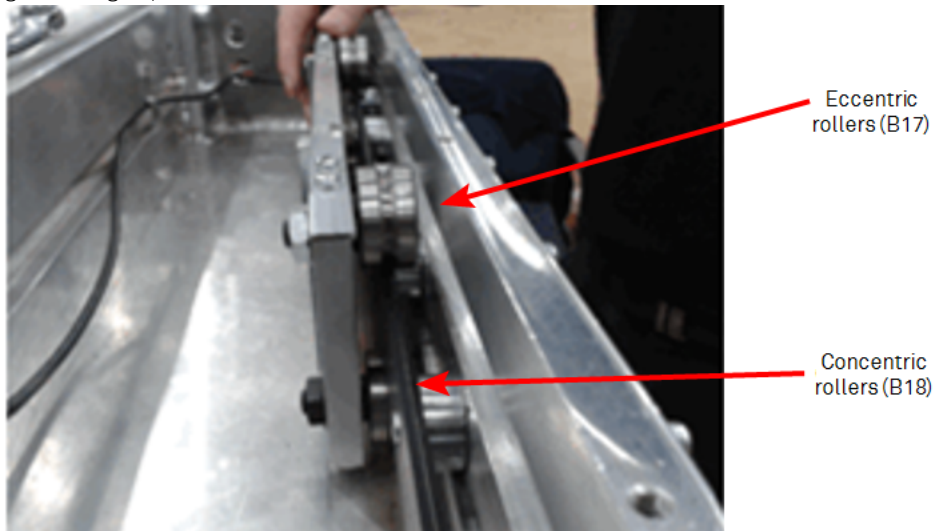


Figure 9.11-24 Example of a carriage mounted over the rail.

3. Locate the rollers to the rail by rotating the eccentric rollers (B17) using a 5mm Allen key until all rollers are in contact with the rail.
4. Fasten them in place with a spanner on the locking nut, to ensure that the eccentric roller doesn't rotate further. The tightening motion should be with the Allen key stationary in position.

Figure 9.11-25

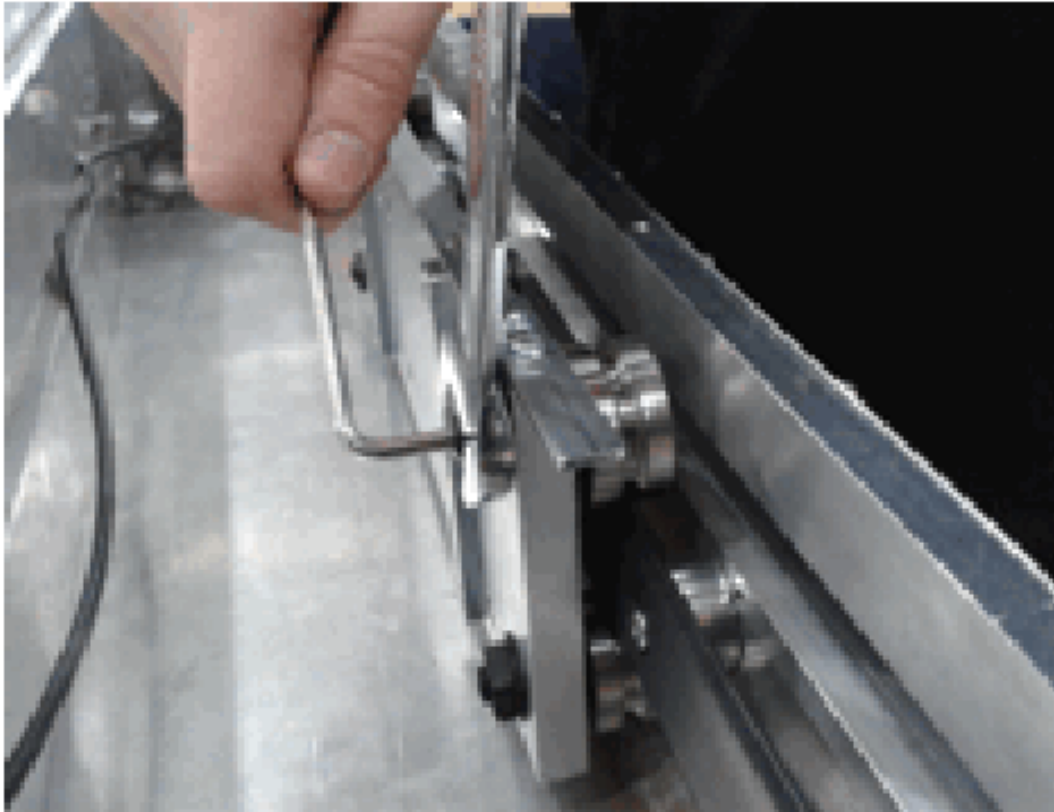


Figure 9.11-26 Example of a technician locking up the rail rollers.

5. Check that the carriage can slide up and down the rail.
6. Ensure that the rollers are not over-engaged that they restrict the carriage from sliding smoothly, yet not too loose that rattling can occur.
7. Ensure the brush strip guide brackets are fitted on the outside of the enclosure before continuing this procedure



Figure 9.11-27 Example of a fitted carriage plate.

8. On the inboard shutter side plate (M15) insert the guide pillars (M43) into the counter-bored holes in the shutter side plate (M15) with the slots facing upwards corresponding with the example. Locate the bolts that are used to secure them in place and grub screws to keep them at the correct angle/position.



Figure 9.11-28 Example of the shutter side plate (M15) with guide pillars attached (M43)

9. Insert the guide pillars (M43) through the openings in the bearing rail support and locate the pillars into the counter-bored holes on the carriage plate (M24/M25).

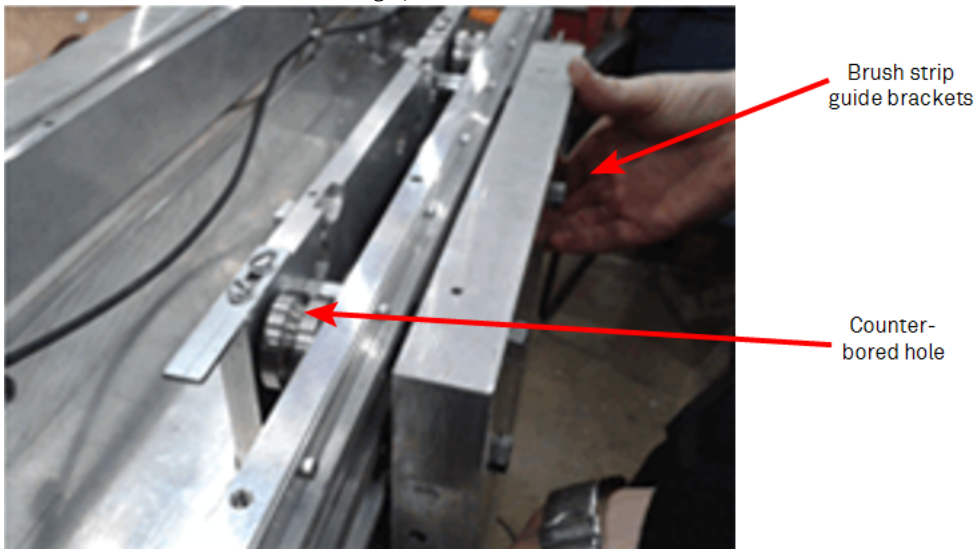


Figure 9.11-29 Example of a technician offering the side plate the assembly.

10. Locate the guide plate (M43) to the pillars using the 4 spacers and hex-head bolts.



Figure 9.11-30 Example of a technician locating the fasteners

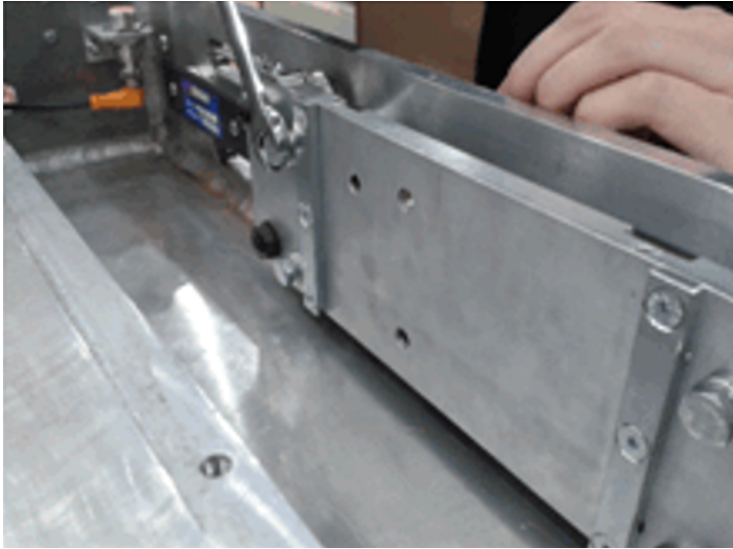


Figure 9.11-31 Example of a technician tightening the fasteners

11. Locate the cylinder in the shield enclosure and secure with cap-head screws and spring washers. Take care not to trap the sensor wires.



Figure 9.11-32 Example of a technician locating the cylinder in the shield enclosure.



Figure 9.11-33 The cylinder locating cap-head screws, also showing the routing of the sensor cable