

	Warning !
	Before attempting to lift the rolls out of the chucks, make sure that: • The rolls of material are supported by a sling and hoist. • The mechanical clamps have been opened. • The female spline is fully disengaged and at the home position.

[See chapter 7.3 Winding System Chucking/Unchucking Sequences on page 326](#) for details about the chucking and unchucking operations:

- [See Figure 7.3-1 on page 326 for details](#) about the chucking sequences
- [See Figure 7.3-2 on page 327 for details](#) about the unchucking sequence on the rewind roll
- [See Figure 7.3-3 on page 328 for details](#) about the unchucking sequence on the unwind roll

Interlocks

There are a number of interlocks provided to ensure a safe operation, and to allow interfacing to the compatible Bonfanti crane.

	Warning!
	The machine interlocks are incorporated within the machine to provide a safe working environment. Under no circumstances should you override any interlock, either mechanically or electrically.

A sensor is used to monitor when the female spline is fully disengaged and at the home position.

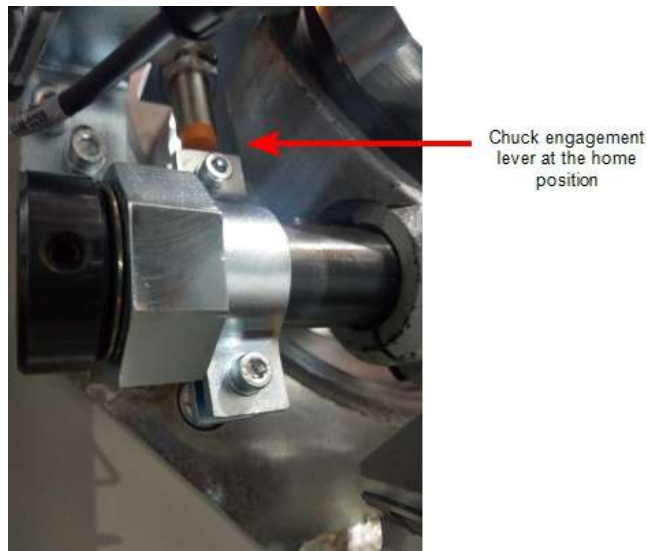


Figure 4.2-7 Chuck home position sensor

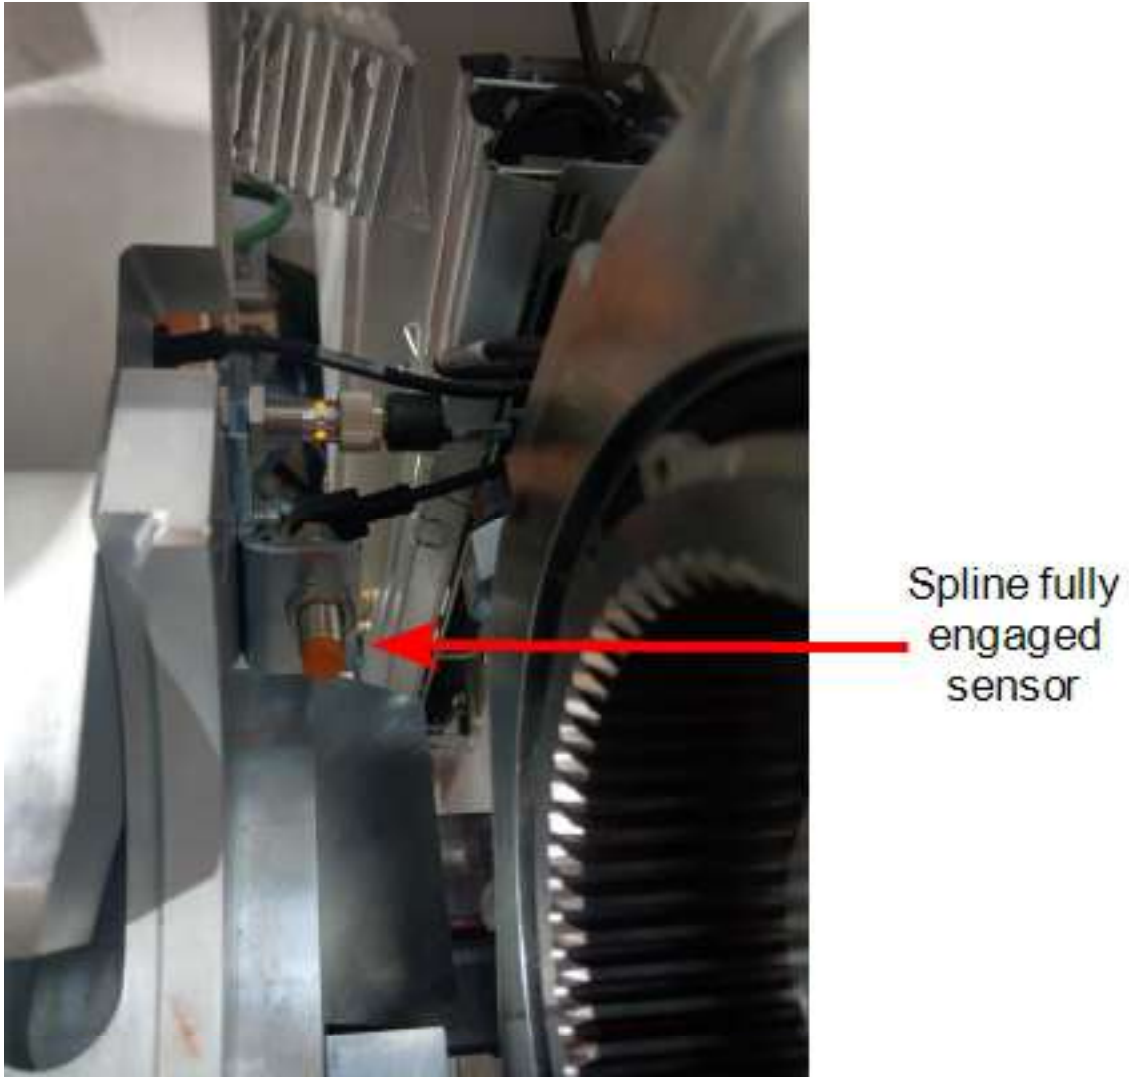


Figure 4.2-8 Chuck engagement sensor

A sensor is used to monitor when the female spline is fully engaged.
Additional sensors are located on the non-driven chuck.

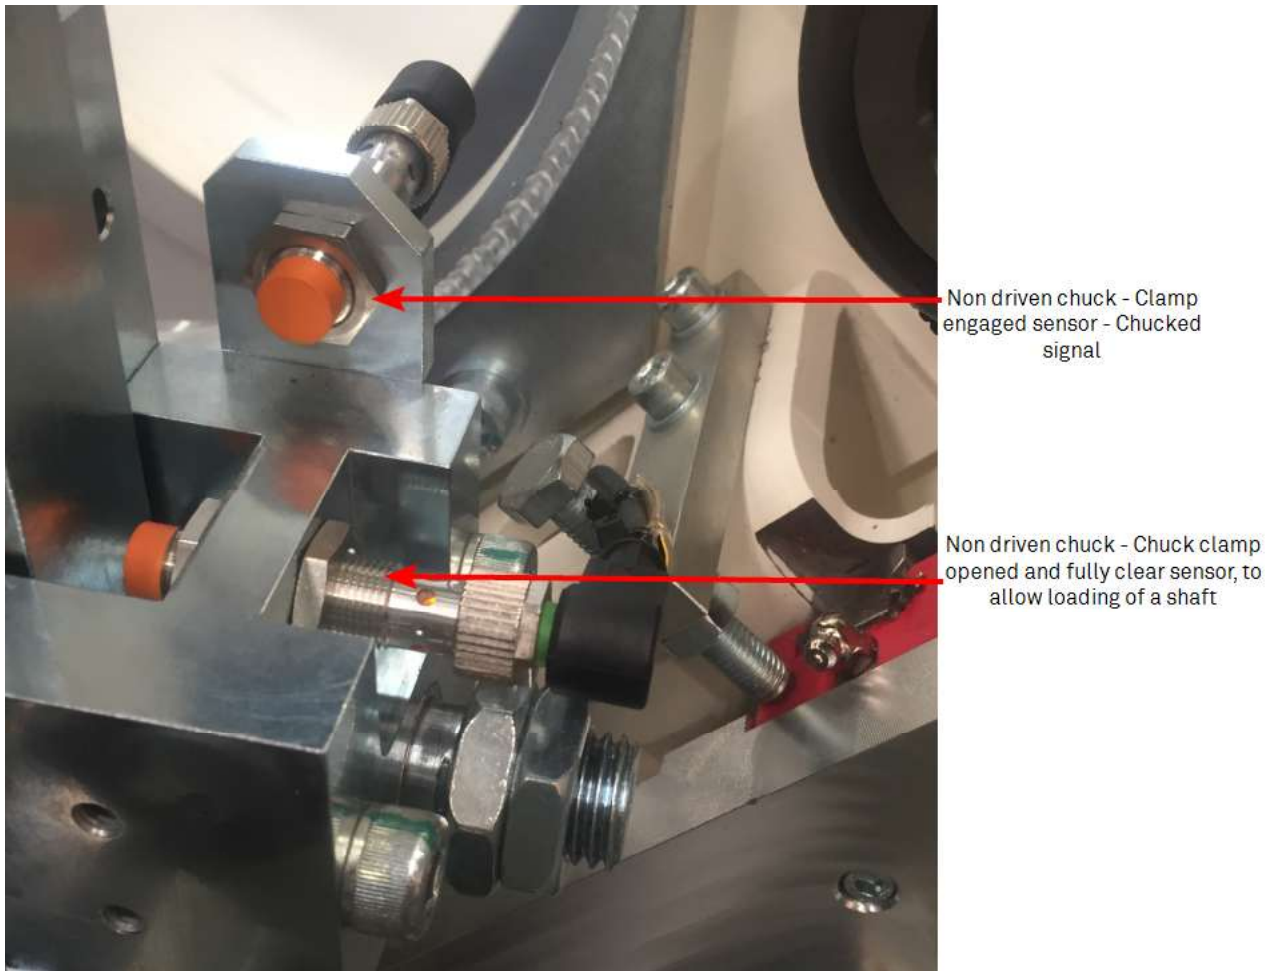


Figure 4.2-9 Non driven chuck sensors

Checking for wear

The sections of the chuck that make contact with the reel shafts should be visually checked for wear. [See chapter 12.2.24 Chucking System & Reel Shafts on page 645 for details.](#)

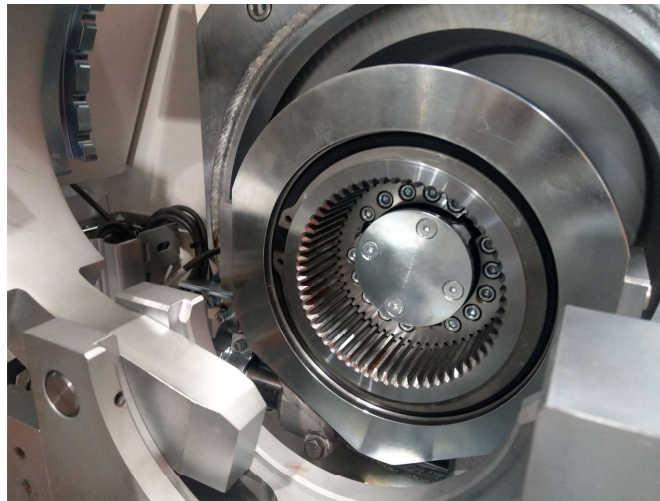


Figure 4.2-10 End view of roll unwind chuck in an open position showing the female spline section of the chuck that is in contact with the shaft