

CJM410 WiFi Module Firmware Update HOWTO


CJM410 WiFi module supports OTA technology to update firmware. Currently CJM410 supports two methods: one is by TFTP protocol, and the other is by HTTP protocol.

● TFTP

The OTA command is supported in CLI command via UART interface. Please follow the following steps to finish the firmware update.

1. Run TFTP server on a PC, and make sure the new firmware image file is located in the working directory of the tftp server (tftpd32).
2. Connect a PC to the CJM410 WiFi module by WiFi connection. If the CJM410 is working as AP mode, you can connect the PC to the CJM410 by wireless directly. If the CJM410 is working as STA mode, please make sure the CJM410 can reach the PC in LAN.
3. Type “+++” in UART interface to enter command mode, and type the following commands:

Shell> AT+OTA= <TFTP server IP address>,<firmware image file name>

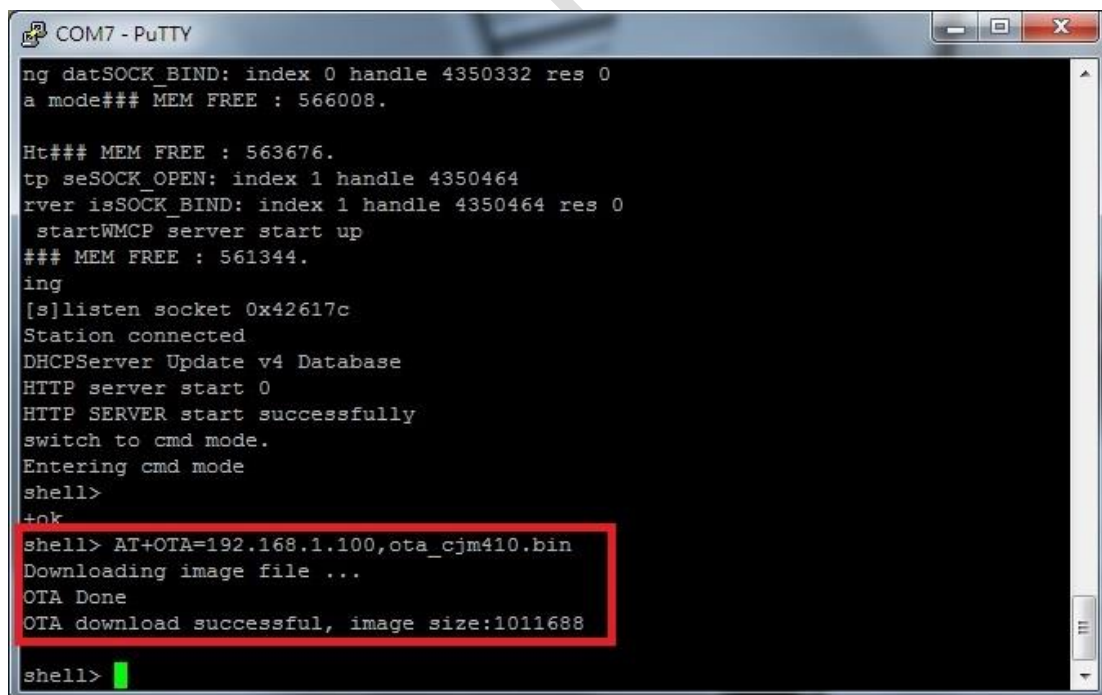A screenshot of a PuTTY terminal window titled 'COM7 - PuTTY'. The terminal shows the output of an AT command sequence. It starts with 'ng datSOCK_BIND: index 0 handle 4350332 res 0' and 'a mode### MEM FREE : 566008.'. Then it shows 'Ht### MEM FREE : 563676.', 'tp seSOCK_OPEN: index 1 handle 4350464', and 'rver isSOCK_BIND: index 1 handle 4350464 res 0'. This is followed by 'startWMCP server start up', '### MEM FREE : 561344.', 'ing', '[s]listen socket 0x42617c', 'Station connected', 'DHCP Server Update v4 Database', 'HTTP server start 0', 'HTTP SERVER start successfully', 'switch to cmd mode.', 'Entering cmd mode', 'shell>', '+ok', and then the command 'shell> AT+OTA=192.168.1.100,ota_cjm410.bin'. The output of this command is 'Downloading image file ...', 'OTA Done', and 'OTA download successful, image size:1011688'. The last line is 'shell>' with a green cursor. A red rectangular box highlights the command and its output.

```
COM7 - PuTTY
ng datSOCK_BIND: index 0 handle 4350332 res 0
a mode### MEM FREE : 566008.

Ht### MEM FREE : 563676.
tp seSOCK_OPEN: index 1 handle 4350464
rver isSOCK_BIND: index 1 handle 4350464 res 0
startWMCP server start up
### MEM FREE : 561344.
ing
[s]listen socket 0x42617c
Station connected
DHCP Server Update v4 Database
HTTP server start 0
HTTP SERVER start successfully
switch to cmd mode.
Entering cmd mode
shell>
+ok
shell> AT+OTA=192.168.1.100,ota_cjm410.bin
Downloading image file ...
OTA Done
OTA download successful, image size:1011688
shell>
```

4. The firmware update will take around 25 seconds. After the firmware update is finished, please reboot the system to take effect the new firmware.

● HTTP


The firmware update by HTTP protocol is supported in Web UI.

1. Connect a PC to the CJM410 WiFi module by WiFi connection. If the CJM410 is working as AP mode, you can connect the PC to the CJM410 by wireless directly. If the CJM410 is working as STA mode, please make sure the CJM410 can reach the PC in LAN.
2. On the PC, open a Web browser window.
3. In the address or location bar, type the IP address of the AP. Press <Enter> to connect to the Web interface. The default IP address is **192.168.1.10**.
4. The firmware update Web interface appears as belw.

Current firmware version : 2.1.2

Firmware Update : ota_CJM410.bin

5. Click the "Browse" button to select the firmware image file, and click the "Flash image" button to do the update of firmware. It will take around 25 seconds to finish the firmware update, and if the update is successful, the "HTTP Server OTA Upload Result" page will appear.

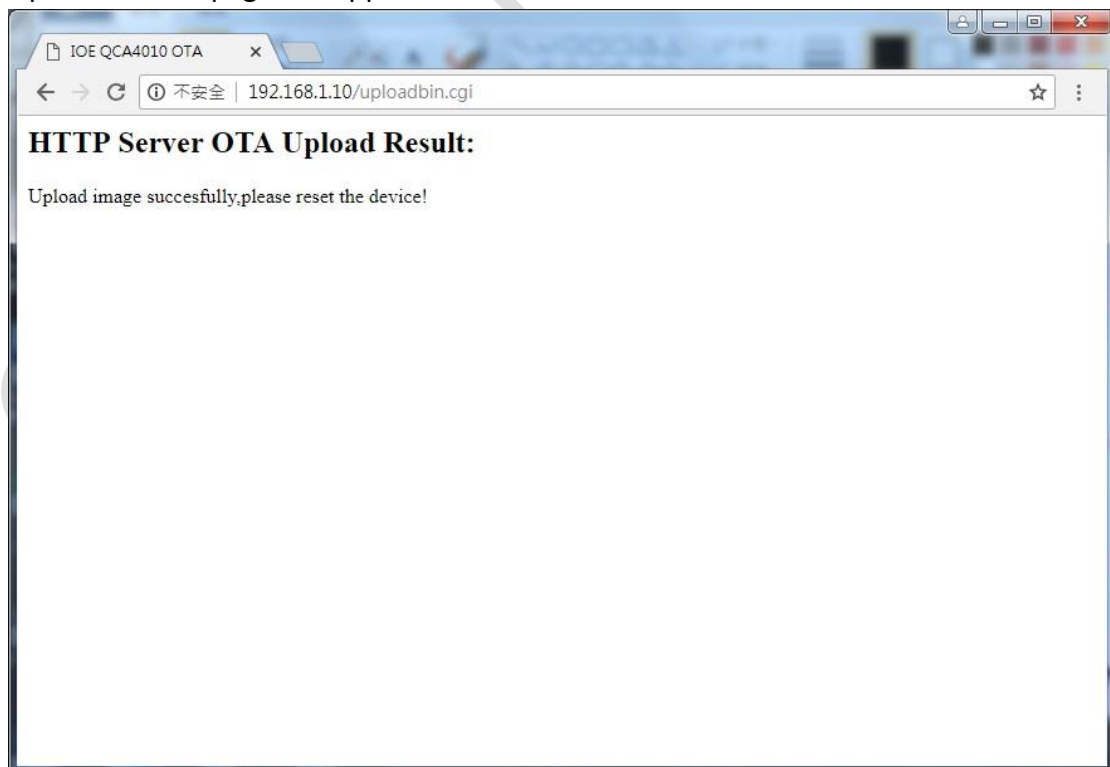

6. Please reboot the system to take effect the new firmware.

Note:

- The tftpd32 is a free tftp server for Windows. You can download it from the following web site: http://tftpd32.jounin.net/tftpd32_download.html .

 Conjing Networks INC.

(Tel) 886-3-5183389 (Fax) 886-3-5183390 (Email) sales@conjing.com.tw

I516R, No.707, Sec.2, Wufu Rd. , Xiangshan Dist. , Hsinchu City 30012, Taiwan, R.O.C.

Web site : www.conjing.com.tw