


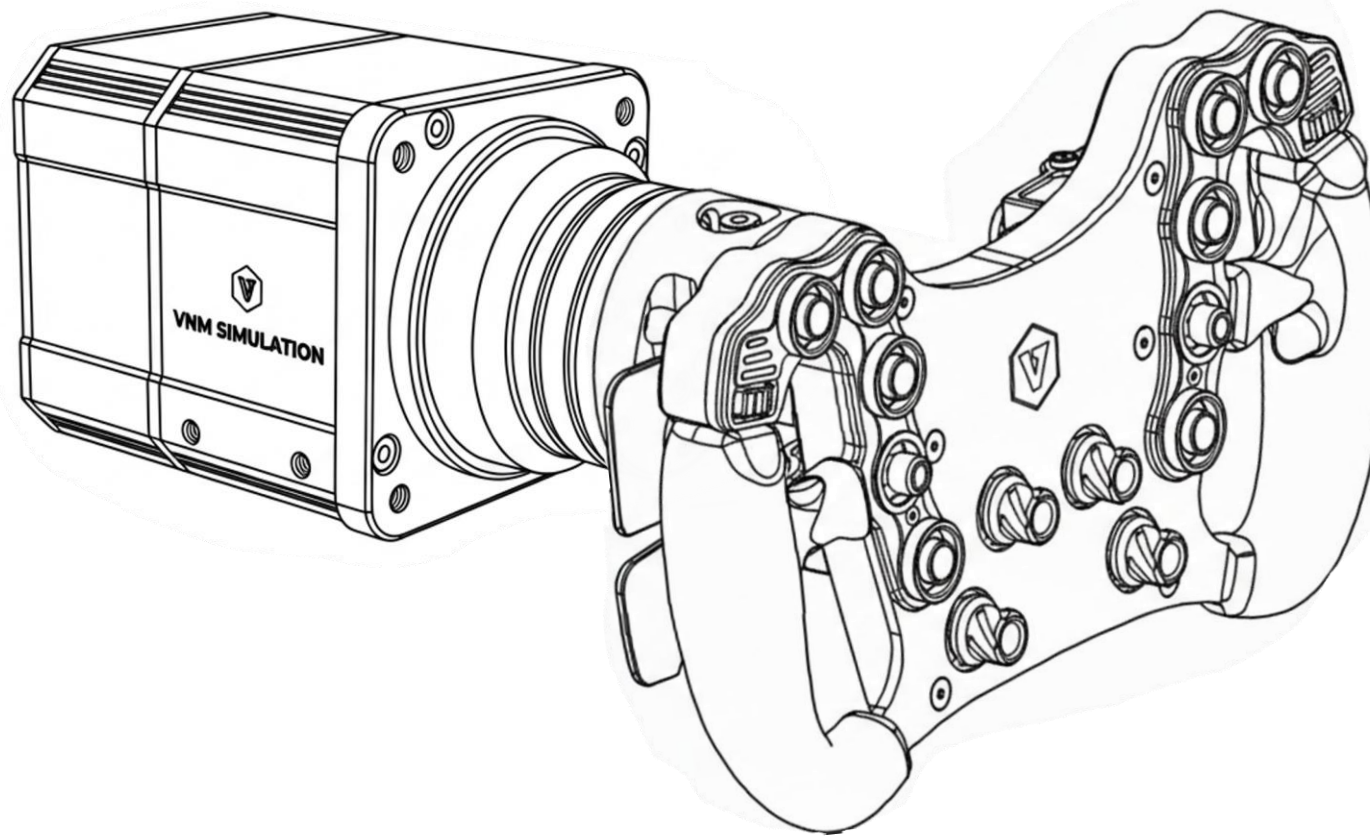

Quick installation guide

VNM Direct Drive & Quick Release

(for Supreme, Elite, Premier)





ROTATING SHAFT

- Do not touch rotating shafts during operation.
- Keep hands, hair, and loose clothing away from rotating parts.
- Disconnect and lock out power supply before maintenance.
- Do not set torque level higher than the level user can safely hold with a single hand grip



HIGH TORQUE

Warning and Important Notes

- The VNM Direct Drive generates high torque.
- Unexpected movement.
- Do not stand in line with the rotating shaft during startup
- Ensure all mechanical connections are securely fastened..



ELECTRICAL HAZARD

- Disconnect the power supply before wiring or maintenance.
- Use only the specified voltage and wiring configuration.
- Proper grounding (protective earth) is mandatory.




SUDDEN MOVEMENT

- Remove all tools and obstacles from the motion area.
- Always disable torque by pressing EMCStop button before removing or attaching wheel.
- Do not release EMCStop button unless the Quick Release has securely locked the steering wheel in place.


①

Direct Drive VNM
x1

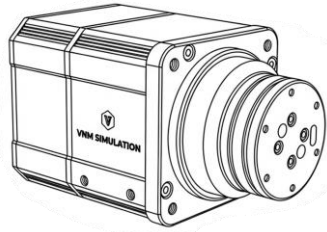


②

VNM QR Base Side
x1

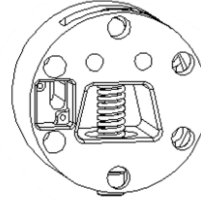

③

VNM EMC Stop
x1

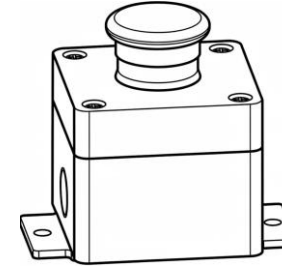

M5x30
x2



M5 Spring
x6



M5x16
x6



M8 Spring, Flat washers
x4



M6x12, M6 T Nuts
x2






M8x20,16
x4








*If you are missing any parts, please contact our
customer support team who can assist!*




Install VNM Direct Drive and VNM QR Base Side (Method 1)

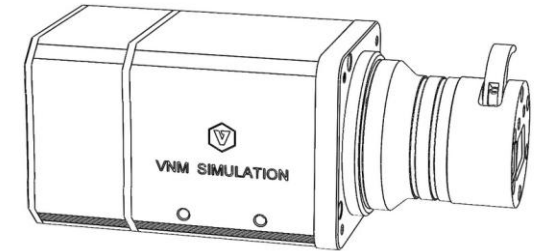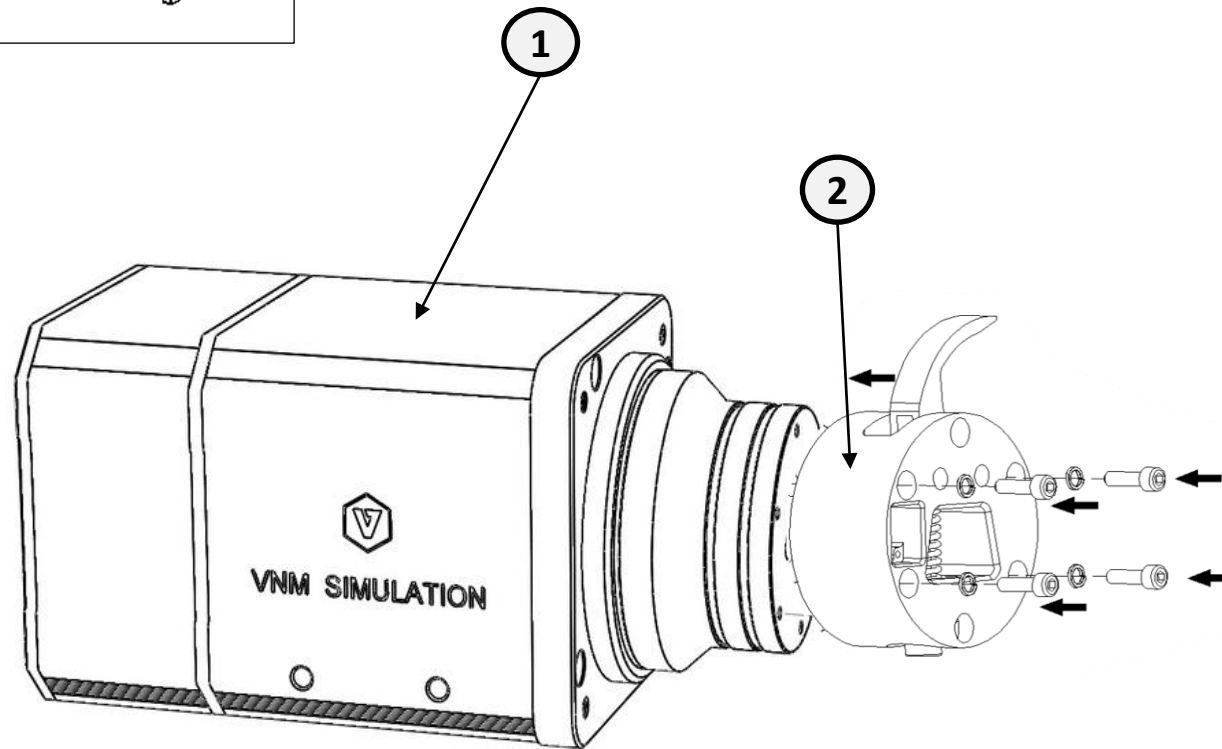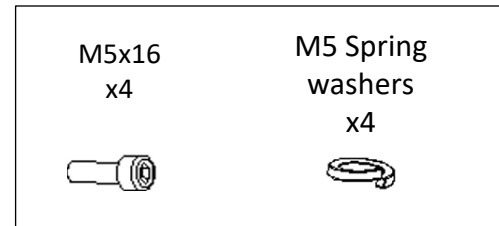



Install VNM Direct Drive and VNM QR Base Side (Method 2)

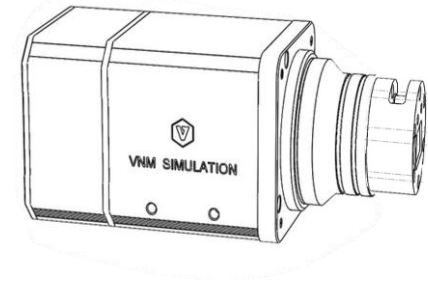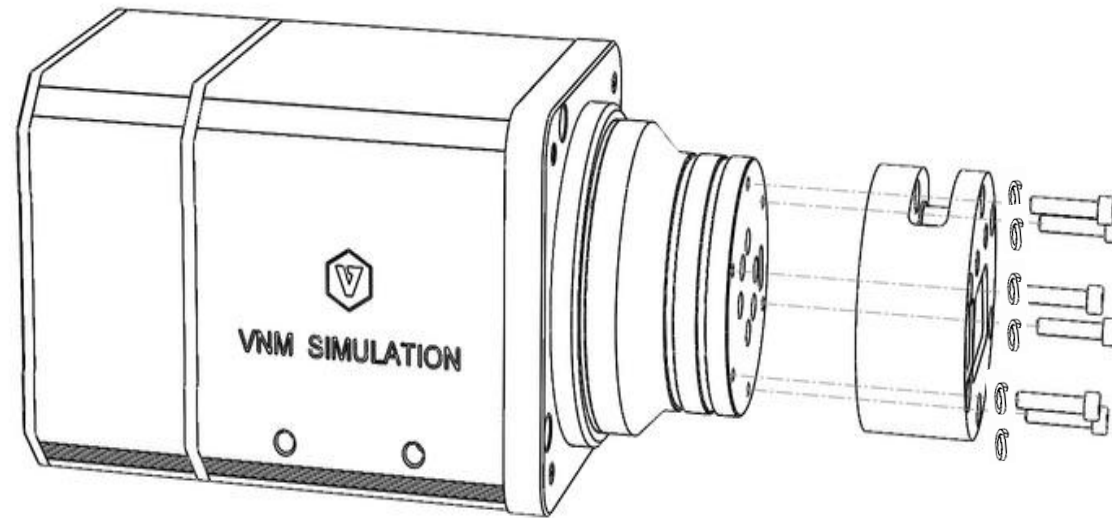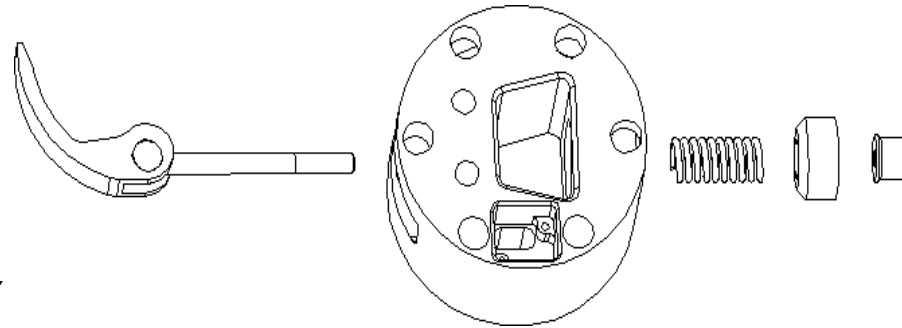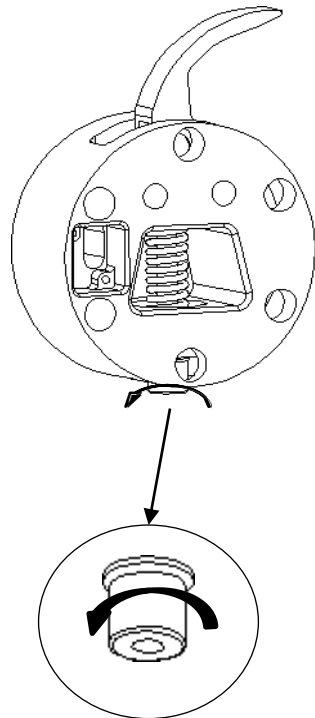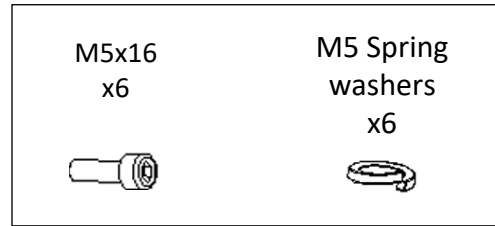



***Install VNM Direct Drive and VNM QR Base Side
(Method 2)***

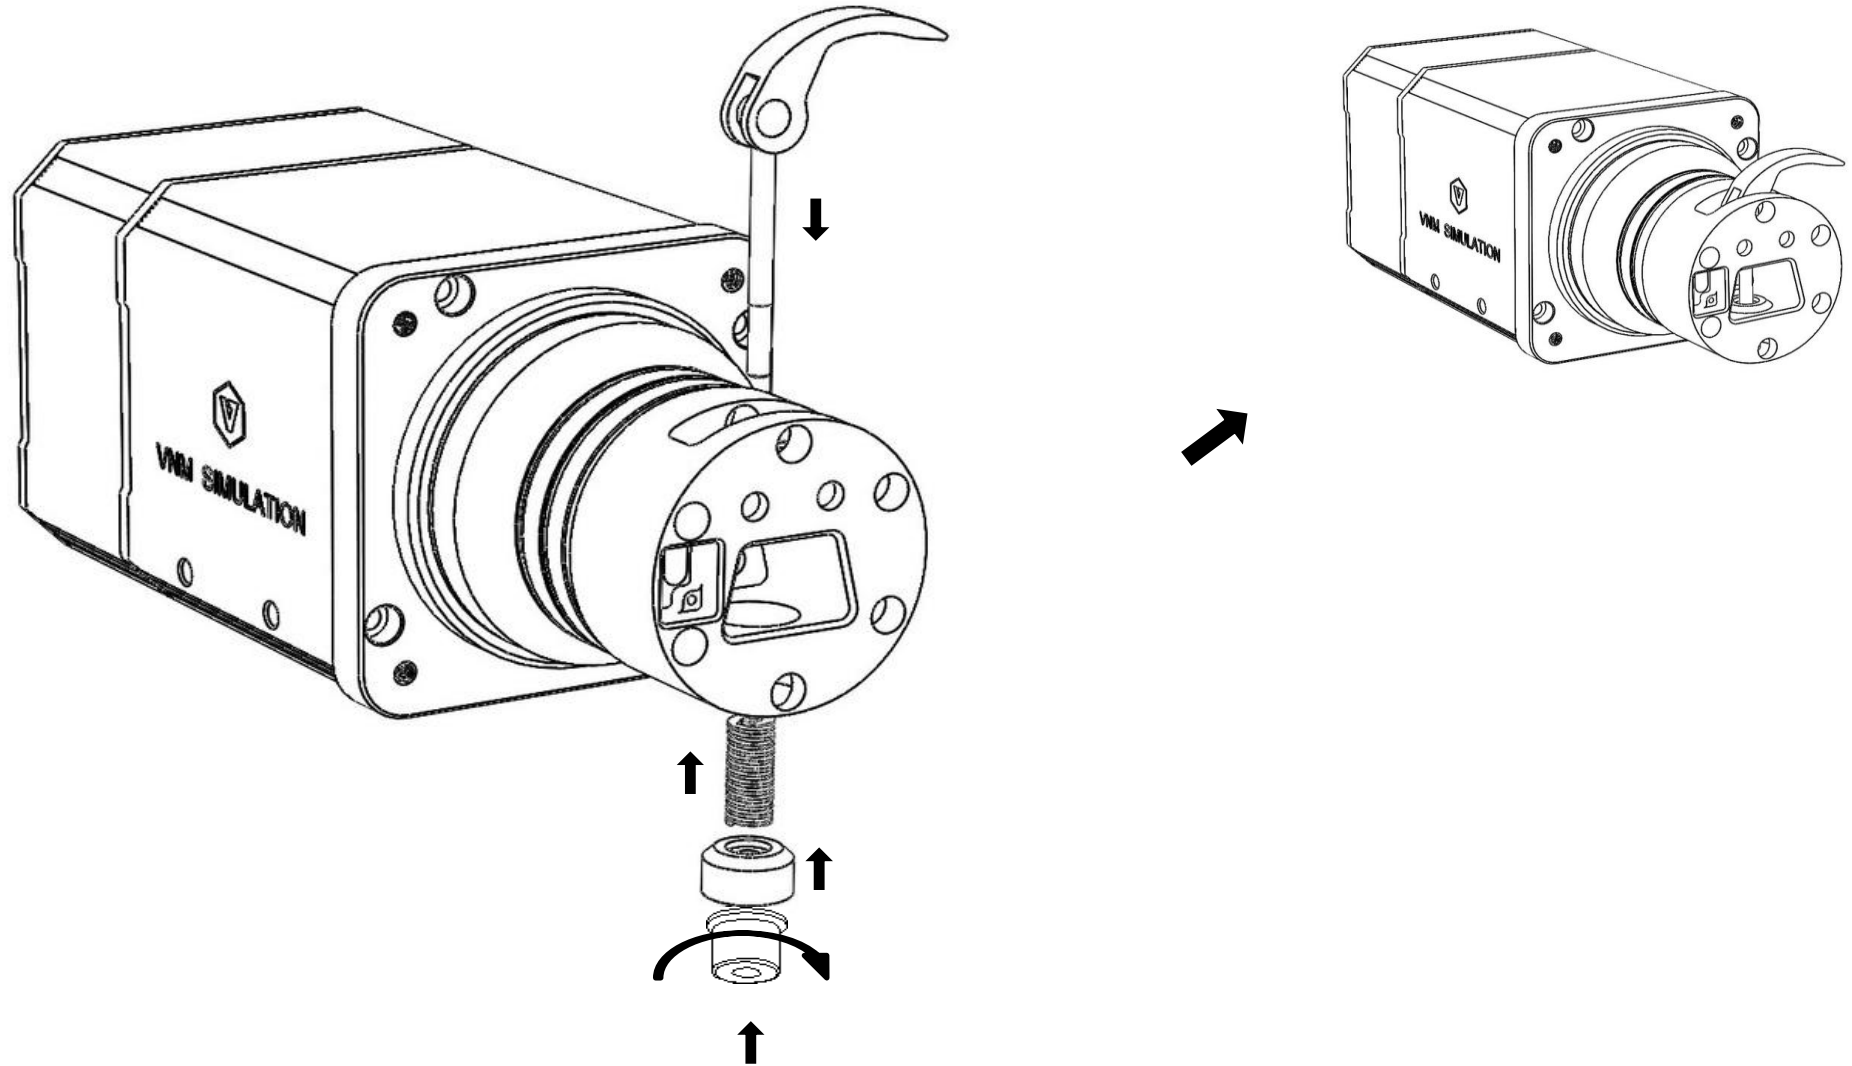

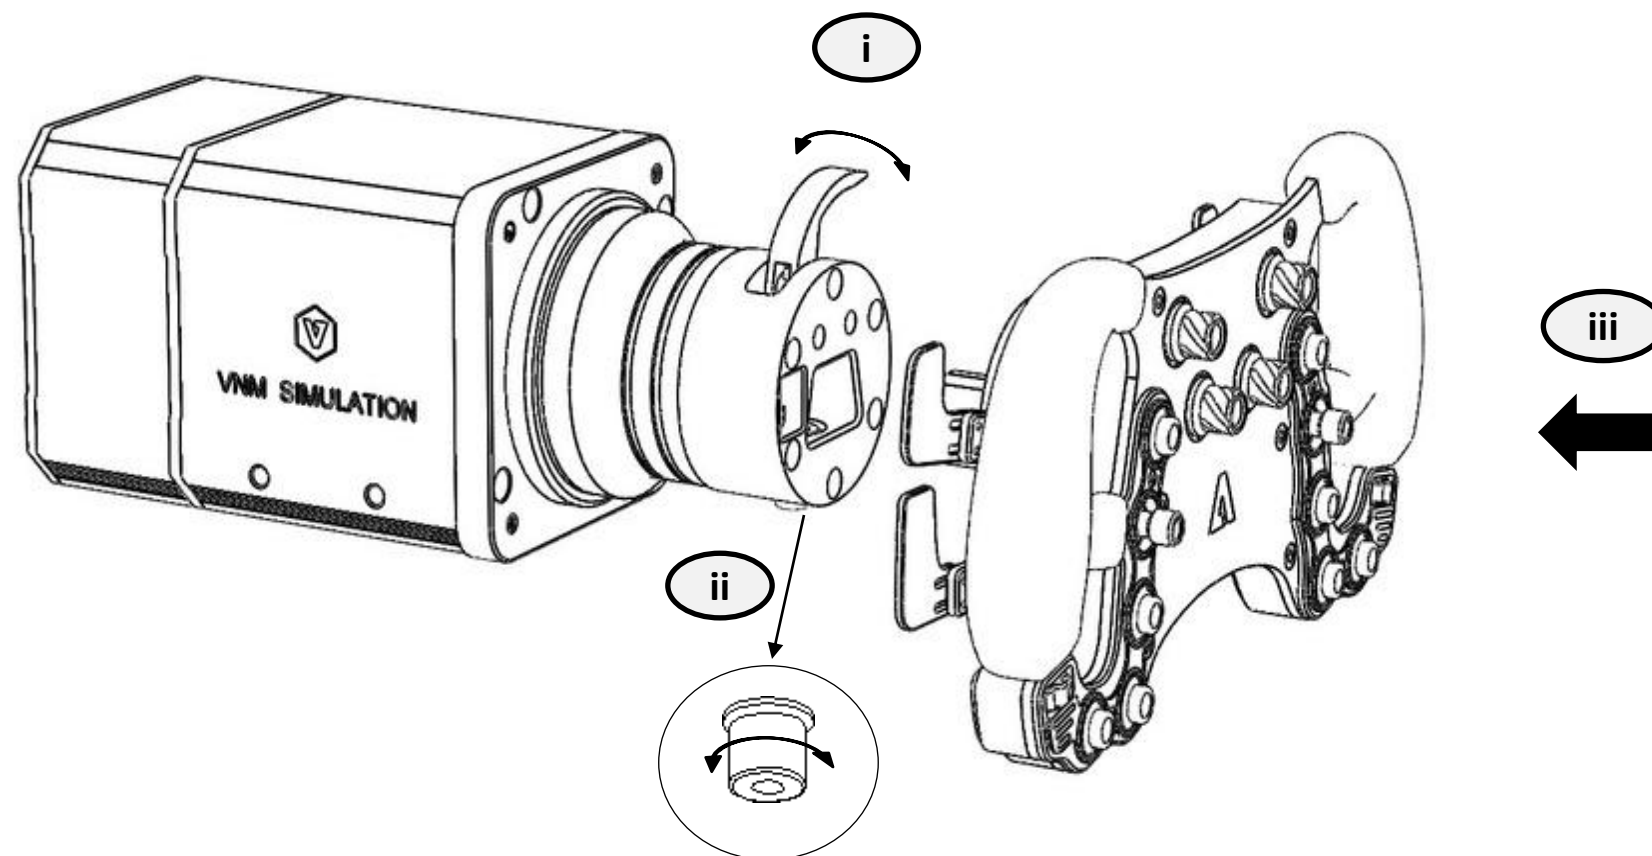

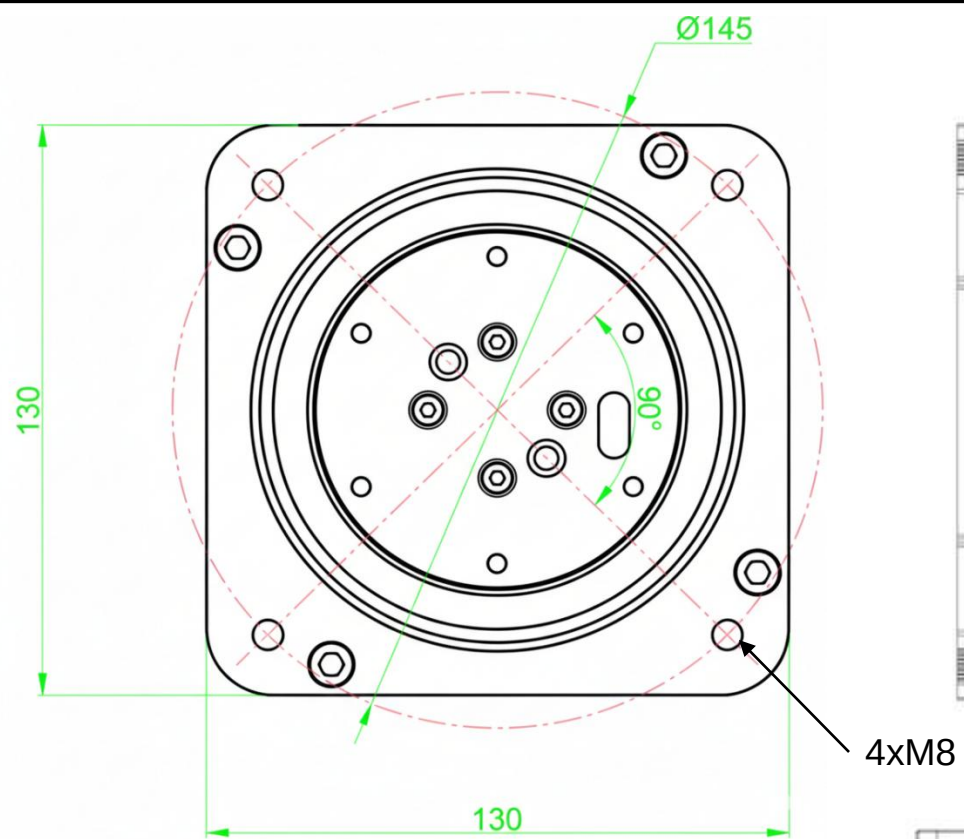

Install VNM Direct Drive on Rig (VNM Wheelbase Front Dimension)

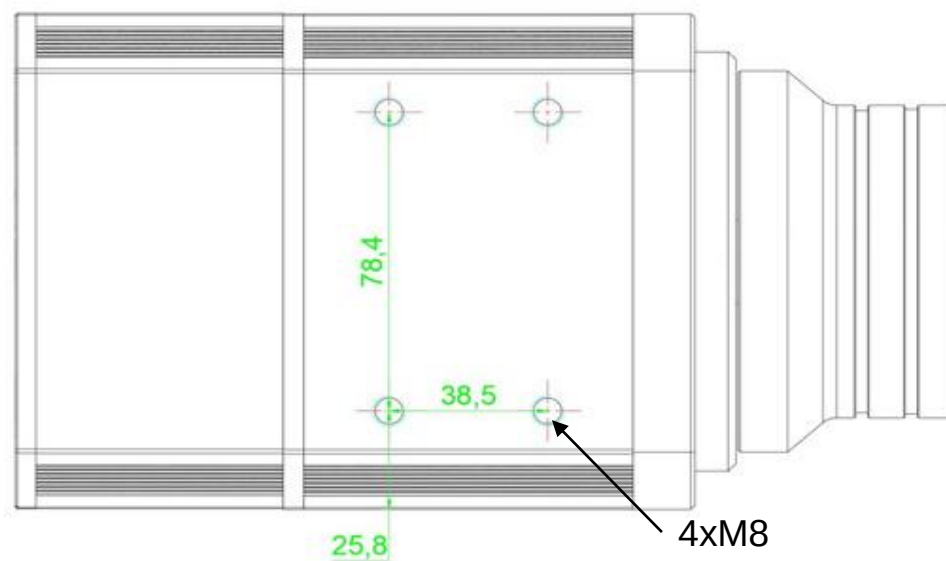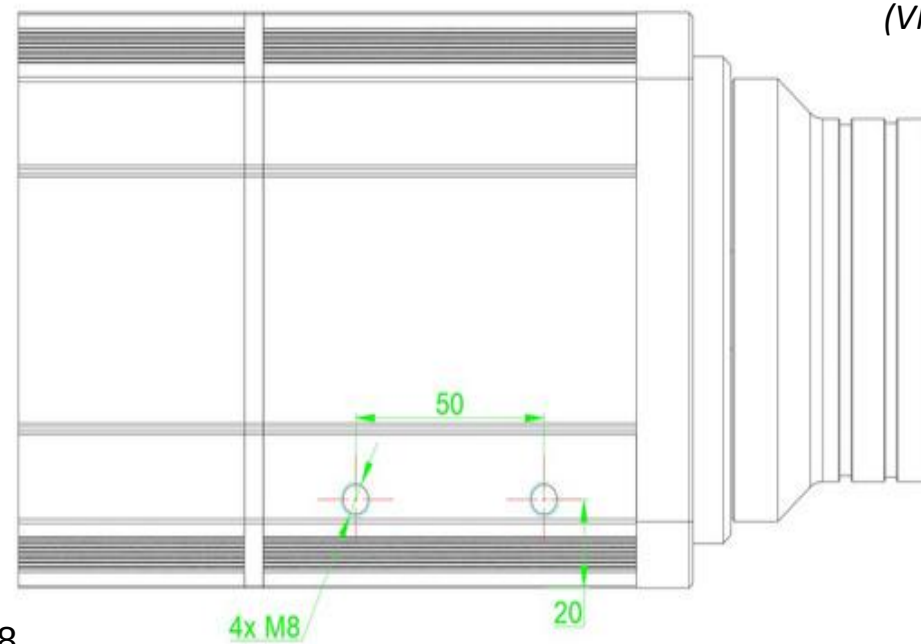


***Install VNM Direct Drive on Rig
(Method 1)***

M8x20, 16
x4



M8 Flat, Spring
washers
x4

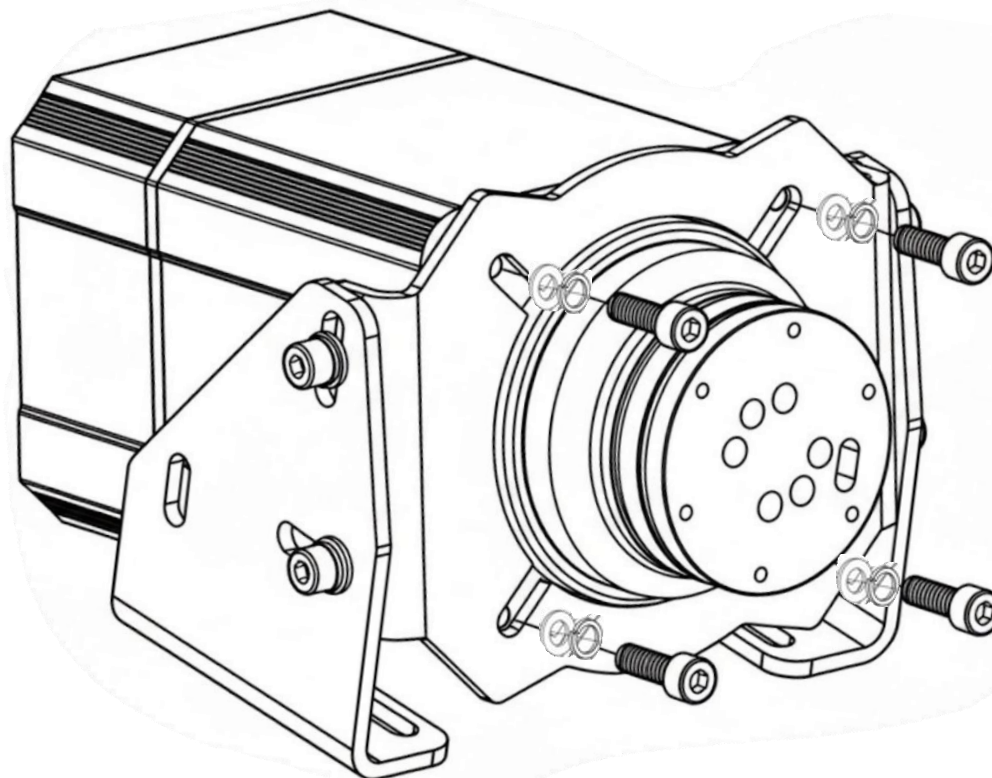


***Install VNM Direct Drive on Rig
(Method 2)***

M8x20, 16
x4



M8 Flat, Spring
washers
x4

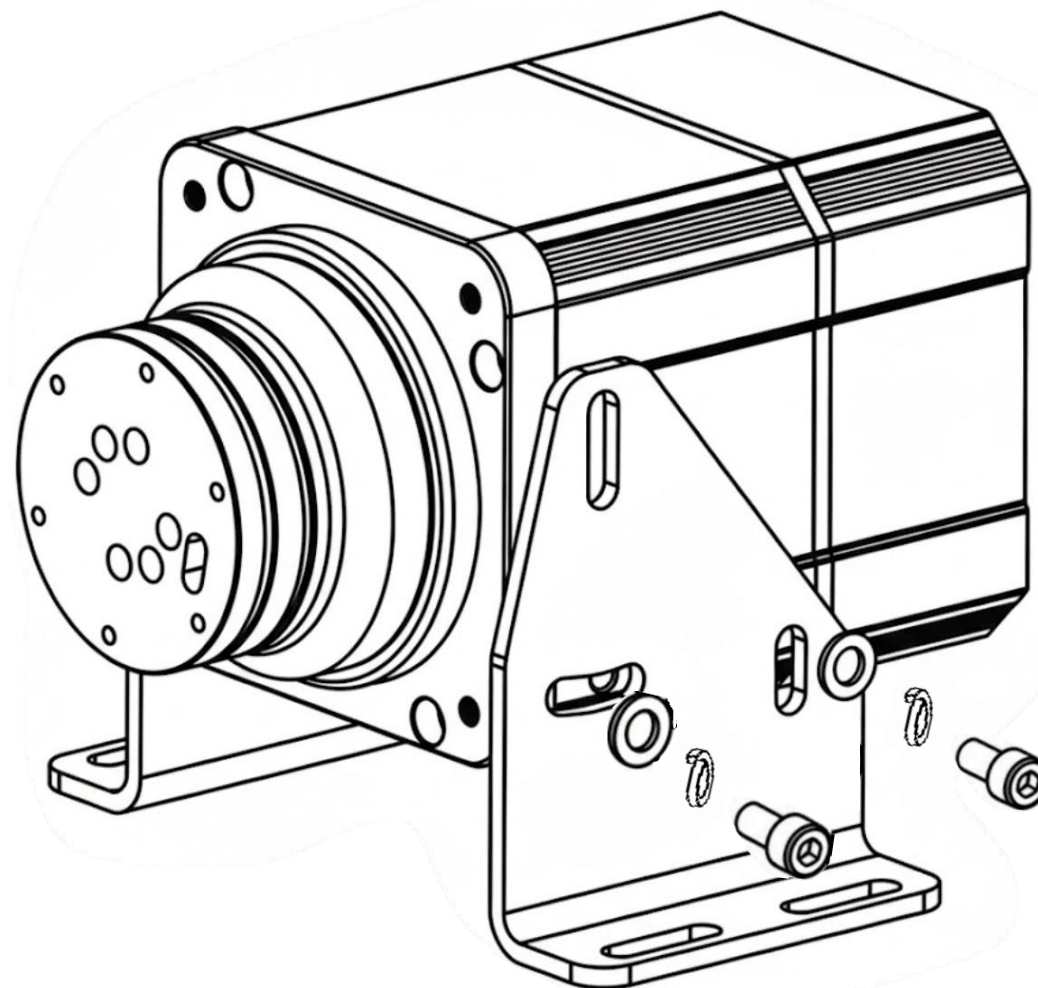


***Install VNM Direct Drive on Rig
(Method 3)***

M8x20
x4




M8 Flat, Spring
washers
x4

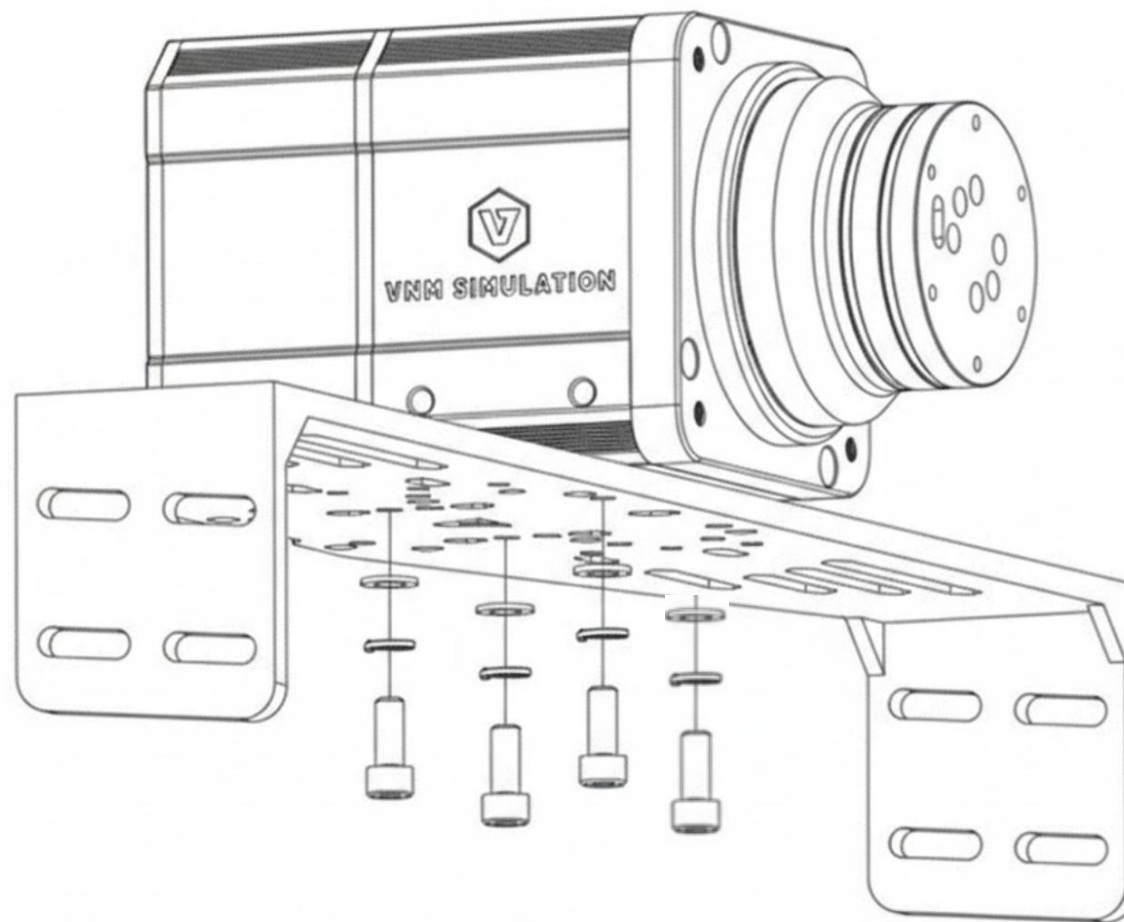


M6x12
x2



M6 T Nuts
x2

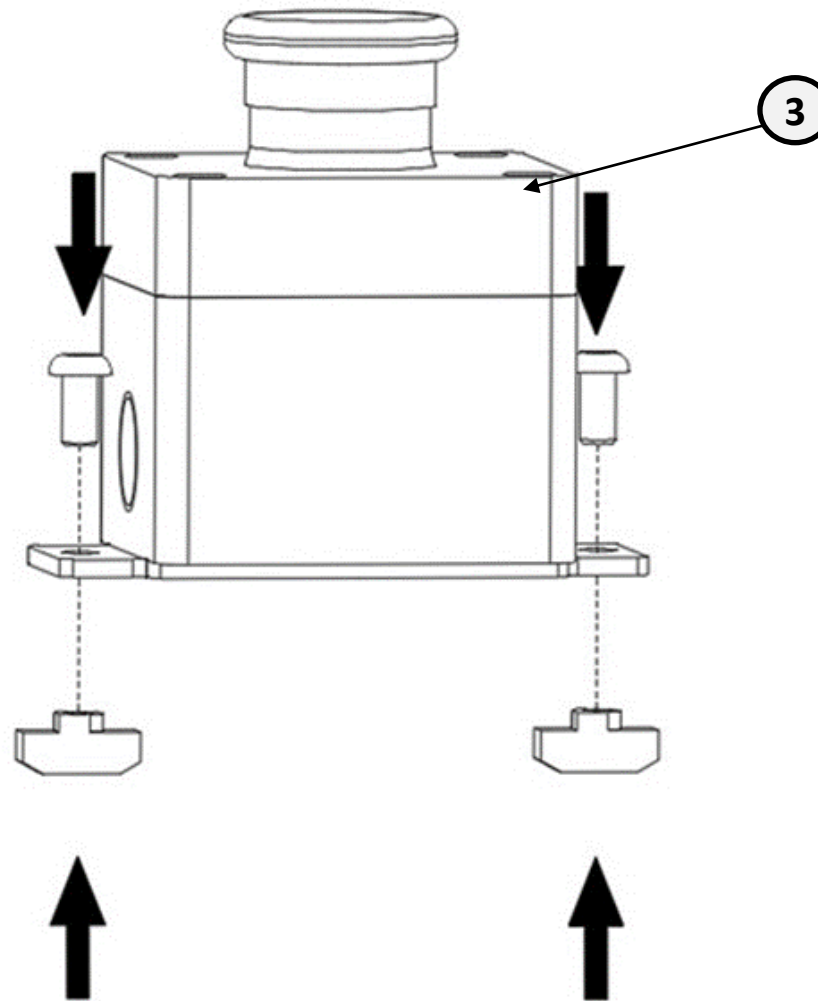

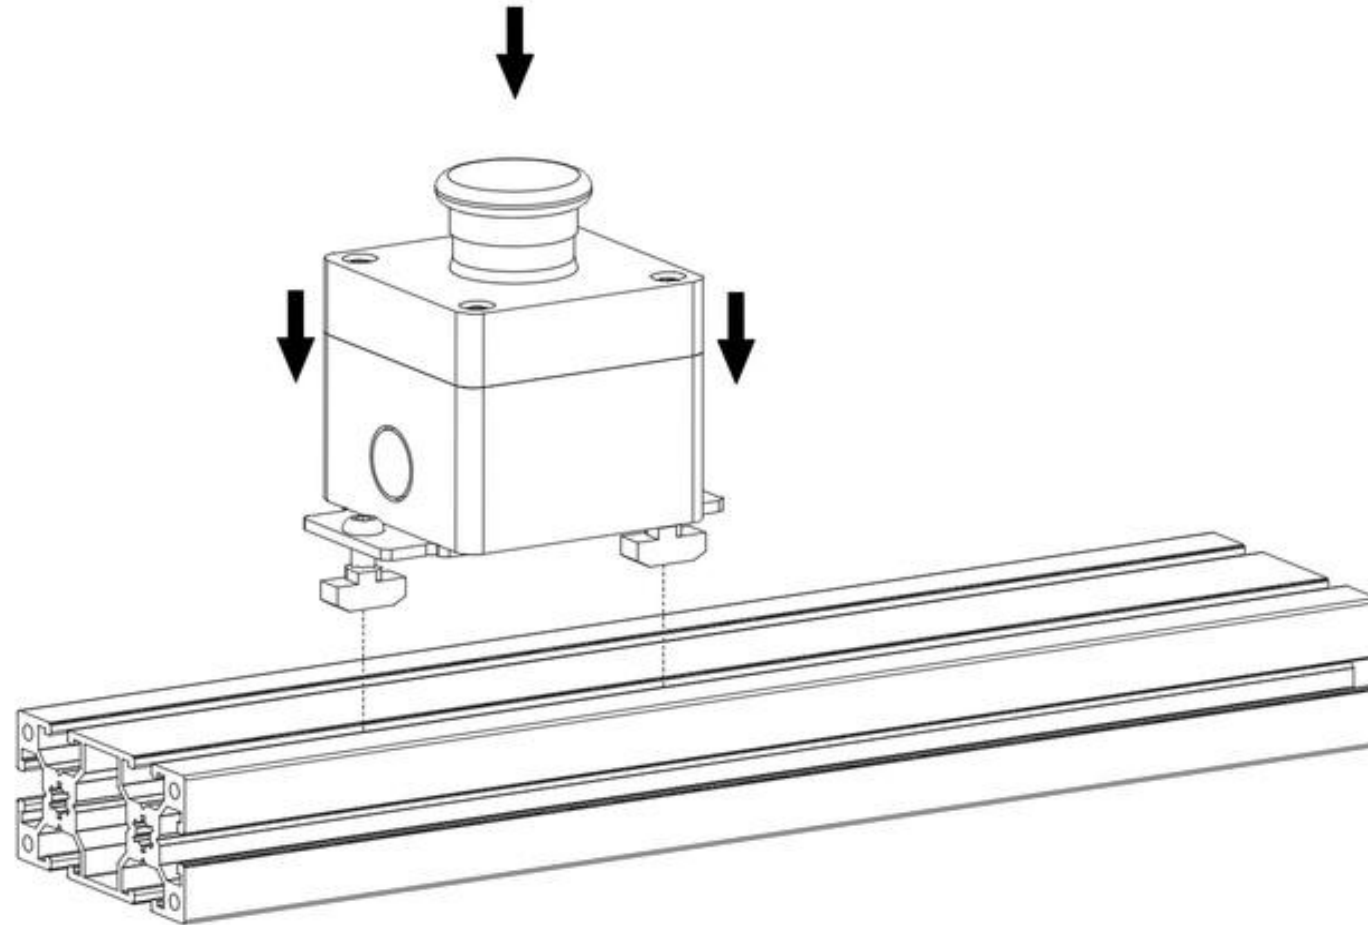

“Congratulations on completing the assembly. If you have any questions or encounter any problems, please contact us for support!”