# Data Processing User Guide

Version 3.0 July 2005

- SSMT2000
- NPIPlot
- MTEditor
- Synchro Time Series View

# PHOENIX GEOPHYSICS

# Data Processing User Guide

Version 3.0 July 2005

- SSMT2000
- NPIPlot
- MTEditor
- Synchro Time Series View



Printed in Canada on water resistant Xerox® Laser Never-Tear paper.

This User Guide was created in Adobe FrameMaker 7.0. Writing and Production: Stuart Rogers.

Copyright 2005 Phoenix Geophysics Limited.

All rights reserved. No part of this Guide may be reproduced or transmitted in any form or by any means electronic or mechanical, including photocopying, recording, or information storage and retrieval system, without permission in writing from the publisher. Address requests for permission to:

Phoenix Geophysics Limited, 3781 Victoria Park Avenue, Unit 3, Toronto, ON Canada M1W 3K5, or mail@phoenix-geophysics.com.

Information in this document is subject to change without notice.

SSMT2000 and the Phoenix logo are trademarks of Phoenix Geophysics Limited. SyncTSV is a trademark of Anton Kocherov. CompactFlash is a trademark of SanDisk Corporation. Windows and Excel are trademarks of Microsoft Corporation.

# **Contents**

Chapter 1: Introduction		
About this guide	Synchro Time Series View	
Intended audience 2		
About the software       2         SSMT2000       2         MT-Editor       2	support 3	
Chapter 2: Data Processing w	ith SSMT2000 5	
Data processing overview 6	Verifying site parameters17	
Exploring SSMT2000         8           Starting SSMT2000         8           The main window         8	Understanding the Site Parameter (TBL) file	
	Creating Fourier transforms24	
Transferring data to your PC	PFT File Naming Convention	
Copying the files	Reprocessing the Fourier transforms28	

Batch processing		Correcting layout errors	ļ
Understanding the magnetotelluric processing parameters	36	Starting layout error correction	52
Crosspower parameters	39 39 41 41	Creating reports5The Site Parameters report5The Time Ranges report5The Saturated Records report5The Custom Parameters report6Modifying the Custom Parameters report6Opening reports in a spreadsheet program6	) ) )
Examining calibration files	42 45 45 46	Processing white noise and parallel noise test data	,

<b>Chapter 3: Viewing Noise Tes</b>	t Results with NPIPlot 69
Starting NPIPlot70Viewing test results70Modifying the plot appearance72	Printing noise test plots
Chapter 4: Editing Processed	Data with MT-Editor 75
MT-Editor overview 76	Viewing the Starting data and Resulting
Exploring MT-Editor       76         Starting MT-Editor       78         The main window       78         The menus       78         The Toolbars       80	data90Opening the windows90Choosing parameters and components to view97Customizing the windows92Changing graph properties93
Setting up export options	Opening and customizing the Editing
Starting an editing session 86	window
Specifying frequencies	Editing the crosspowers
Opening files	Viewing the data mask

Ш

iv	iv
Viewing polar diagrams101Customizing the polar diagrams window101Printing102	Saving your work
<b>Chapter 5: Viewing Time Seri</b>	es Data with
Synchro Time Series View	
<b>Exploring Synchro Time Series View</b> 106 Understanding the main window	Viewing power spectra
Viewing time series channels	Viewing coherencies
Specifying start and end times	Printing time series, spectra, and coherency plots
Modifying the time series view 113	
Appendix A: Data processing flowch	art

Appendix B: Installing software and s	etting up your PC 127
System requirements 128	Registering MT-Editor
Installing the software	Organizing your files
<b>Configuring the parallel port</b>	Storing raw data files
Updating the software	Formatting a CompactFlash card 139
Appendix C: Frequency tables for SSN	MT2000141
50Hz LF, MTU-A, AMTC-30	60Hz LF, MTU-A, AMTC-30
50Hz LF, MTU-A, MTC-50	60Hz LF, MTU-A, MTC-50
50Hz LF, MTU, AMTC-30 (V5-comp.) 150	60Hz LF, MTU, AMTC-30 (V5-comp.)
50Hz LF, MTU, MTC-50 (V5-comp.)	60Hz LF, MTU, MTC-50 (V5-comp.)
50Hz LF, MTU, MTC-50 (V5-2000)	60Hz LF, MTU, MTC-50 (V5-2000)
Appendix D: System 2000 MTU Famil	y Specifications 179
General       180         Channels       180         Sampling       180	A/MTU sampling rates


V

1		VI
Calibration	182 182	Time series file naming and content
Data storage and transfer	182	Summary of tag byte assignments
External connections		Status codes (Tag Byte 14)188
Telluric inputs		Sample rate units (Tag Byte 20)
Parallel port	183 183	Related products       189         MTU-TXC       189         MTU-2ESD, MTU-5ESD       189
Mechanical and environmental		MTU-2ES, MTU-5S
File types and logical record formats	184	MTU-AI family
Calibration file naming and content		

# Index



# Chapter

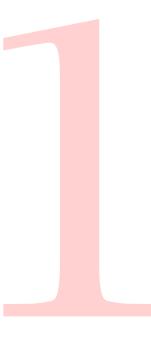

This chapter provides an introduction to the suite of Phoenix Geophysics MT and AMT data-processing software and tells you about:

- this guide and its intended audience.
- how to get further information and support.

# Introduction

Chapter 1

# About this guide

This document is a guide to the software used for processing, viewing, and editing time series data acquired by System 2000 and System 2000.*net* MT and AMT receivers manufactured by Phoenix Geophysics Ltd. Separate chapters cover the different software programs, and appendices provide software installation instructions, tables of frequencies, and system specifications, including a description of file types and record formats.

# **Intended audience**

This Guide is intended for use by geophysicists and technicians familiar with electromagnetic techniques.

# About the software

Four programs are discussed in this book:

- SSMT2000
- NPIPlot
- MT-Editor
- · Synchro Time Series View

## **SSMT2000**

This program takes as input raw time series files, calibration files, and site parameter files. In an intermediate step, it produces Fourier coefficients, which are then reprocessed with data from reference sites, using robust routines. The output is MT Plot files containing multiple crosspowers for each of the frequencies analysed.

### **NPIPlot**

This program allows you to view and print parallel noise test results that have been processed by SSMT2000.

## **MT-Editor**

This program takes as input the MT Plot files created by SSMT2000 and displays the resistivity and phase curves as well as the individual crosspowers that are used to calculate each point on the curves. Crosspowers that were affected by noise can be automatically or manually excluded from the calculations. The program also allows you to display a variety of parameters of the plot files such as tipper magnitude, coherency between channels, and strike direction. The output is industry-standard EDI files suitable for use with geophysical interpretation software such as WinGLink<sup>TM</sup>.

# **Synchro Time Series View**

This program takes as input raw time series files and displays them in graphical format. It can also compute power spectra densities and coherency between channels and display these characteristics in graphical format.

## **Installation**

See Appendix B on page 131 for complete installation and set-up instructions.

Chapter 1 About the software

# How to get further information and support

Contact us at:

Phoenix Geophysics Limited 3781 Victoria Park Avenue, Unit 3 Toronto, ON Canada M1W 3K5 Telephone: +1 (416) 491-7340 Fax: +1 (416) 491-7378

 $e\hbox{-}mail:\ mail@phoenix-geophysics.com$ 

www.phoenix-geophysics.com

Registered customers will be able to access on-line support including FAQs and individual issue-tracking when the renovated Phoenix Web site is launched in mid-to-late 2005.



# Chapter



This chapter explains how to process the raw data acquired by the MTUMTU-A into a format suitable for geophysical interpretation. Instructions are provided for:

- · transferring files to your PC.
- verifying parameters.
- creating Fourier transforms.
- reprocessing the Fourier transforms into crosspowers using robust routines.

Reference sections at the end of the chapter explain some of the processing parameters in greater detail.

# Data Processing with SSMT2000

7 Chapter 2 7

# Data processing overview


Before processing data for the first time, you must install the Phoenix processing software on your computer and prepare your file system and PC desktop. See "Installing the software" on page 132 for complete instructions.

When you process data after each day's acquisition(s), you will follow this general sequence of steps:

- Transfer the files from the MTU/MTU-A's CompactFlash™ card to your PC hard drive.
- 2. Verify and edit the parameters saved in the Site Parameters Table (.TBL) file of each site.
- Archive the raw data and Site Parameters files (original and edited) on CD-R, DVD, or other storage medium.
- 4. Create Fourier coefficients from the raw data.
- Reprocess the Fourier coefficients using a robust reprocessing program and possibly data from one or more reference sites.

- 6. Edit the resulting crosspowers one frequency at a time to verify the viability of the sounding and to reduce or eliminate low quality data.
- 7. Translate the edited crosspowers into industrystandard EDI format for use by interpretation software.

You will use the SSMT2000 program to complete steps 1 through 5 and the MT EDIT program to complete steps 6 and 7.

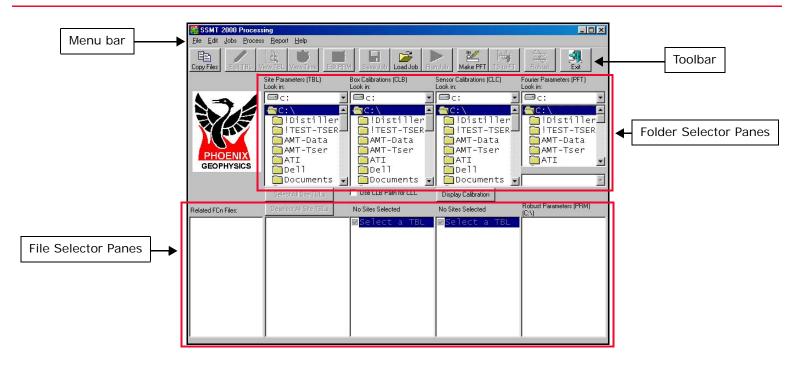

The SSMT2000 main window.

This section describes the basics of the SSMT2000 program:

- · Starting the program.
- Understanding the main window, the toolbar, and the menus.

# Starting SSMT2000

Start SSMT2000 as you would any other Windows program: either double click a desktop shortcut, or launch the program from the **Start** menu.

## The main window

When you launch the SSMT2000 program, the main application window appears (see the illustration on page 9).

Across the top of the main window are the Menus:




Below them is the Toolbar:



The Menus and the Toolbar both allow you to perform the most common tasks. Their contents are organized from left to right in the order in which tasks are normally performed. The Menus include some advanced tasks that are not available from the Toolbar.


A series of Folder Selector panes appears below the Toolbar:

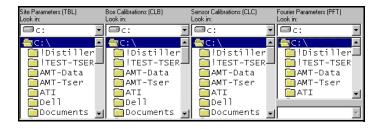

These panes make it easy to quickly select the folders containing the files (Site Parameters, Calibrations, Fourier Parameters, etc.) you want to work with.

Note When SSMT2000 is closed normally, it will save the folder choices you have made. However, if Windows™ crashes before you close SSMT2000, these settings will be lost. To avoid losing your settings, choose Save Folder Setup from the File menu any time after you select folders.

Finally, across the bottom of the main window is a series of File Selector panes:

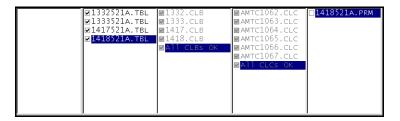

The File Selector panes display the contents of the folders that are selected in the Folder Selector panes.

# Transferring data to your PC

An MTUMTU-A instrument stores its Site Parameter (TBL) file and data files on a CompactFlash card. At the end of each sounding, these files must be transferred to your PC for processing, and should also be archived onto CD-R, DVD, or other high-capacity storage medium.

Note In all cases, limit folder and file names to eight characters, and file extensions to three characters. Do not use spaces in path names, file names, or extensions.

> Some language versions of Microsoft Windows (Russian, for example) will cause problems if file names consist only of digits. Ensure that the first character of a file name is an alphabetic character, not a digit.

# Creating folders for your data

If you have set up your PC as described in Appendix B on page 131, you have created a folder called TAG-Tser, where TAG represents a three-letter code identifying

the survey project. Inside this folder, you will create another folder for each day of acquisition, and store the raw data files in it. This daily folder should be named in the format yyyy-Hdd where:


- · "yyyy" represents the year.
- "H" represents the month in hexadecimal.
- "dd" represents the day of the month in decimal.

For example, data acquired on November 02, 2001, should be stored in a folder named 2001-B02 (November, the eleventh month, is represented by B in hexadecimal) as shown in the illustration.

The raw data file names are based on the serial number of the instrument and the date of the sounding. The format is ssssHdda, with extensions TBL or TS?, where:

- "ssss" represents the serial number of the A/MTU.
- "H" represents the month in hexadecimal.
- "dd" represents the day of the month in decimal.
- "a" represents an alpha character denoting the order of repeated soundings at a single site.

- "TBL" identifies a Site Parameter file.
- "TS?" identifies a time series data file (TSH, TSL, or TS2 to TS5, depending on instrument firmware).

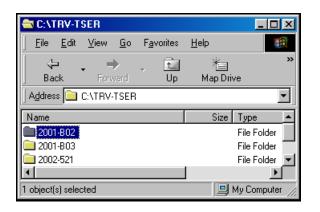

## To create folders for your data files:


 If you have already created a main (TAG-Tser) folder for your survey, select it from the Site Parameters (TBL) list in the main window:




If you have not created the main folder, select C:\.

2. On the Toolbar, click or choose **Copy Files** from the **File** menu.

The Copy Files dialog box appears. By default, Site parameters and data (TBL, TSn) is already selected, and the Copy to: folder is the one you selected in the main window.

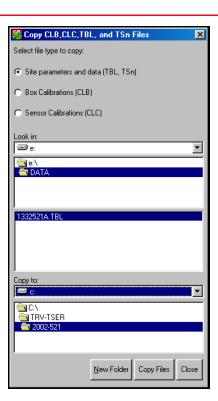

- 3. If you have already created a main (TAG-Tser) folder for your survey, skip to step 8. If you need to create that folder, continue to step 4.
- 4. In the **Copy to:** list at the bottom of the dialog box, select the drive on which you want to store your files.

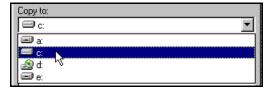


- 5. In the folder list at the bottom of the dialog box, double click the root directory (C:\).
- 6. Click New Folder.

The **New Folder** dialog box appears.



- 7. Type the name for your main survey folder and click **OK**.
- 8. In the folder list at the bottom of the dialog box, double click the main survey folder to open it.

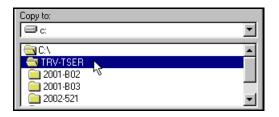

9. Click New Folder


- 10. Type the name for the folder you want to contain the new day's data, in the format yyyy-Hdd (as explained on page 12).
- 11. Click **OK**.
- 12. In the folder list at the bottom of the dialog box, double click the new daily folder to open it.

# Copying the files

Once the folder structure is set up on your PC, you can copy each day's data from the CompactFlash cards.


#### To copy the data files:

- 1. With the Copy Files dialog box still open, insert the first CompactFlash card into your card reader.
- From the Look in: list in the middle of the dialog box, select the drive containing the CompactFlash card.

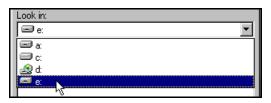

3. In the folder list that appears below the drive selection, double click the DATA folder to open it.

The Site Parameter (TBL) file on the CompactFlash card is listed in the next pane of the dialog box.

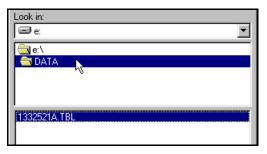

- 4. Click the Site Parameter (TBL) file to select it.
- 5. Click Copy Files .

Although only the Site Parameter (TBL) file was selected, SSMT2000 copies all the associated time series files as well as the Site Parameter file.




- 6. Click OK.
- 7. To copy data from additional sites, replace the CompactFlash card with one from another site.
- Right-click anywhere within the **Look in:** folder listings and click **Refresh** from the popup menu.



The Site Parameter (TBL) file on the new CompactFlash card is listed.

Repeat steps 4 through 8 until you have copied all the day's data, then close the Copy Files dialog box.

In the main window, SSMT2000 automatically opens the daily data folder and displays a list of the Site Parameter files that have been copied.

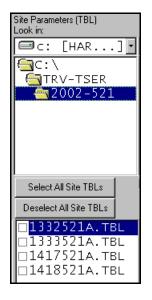

## Warning!



Do not erase the data files from the CompactFlash cards until you are sure the files were copied without error to your hard drive. If you can successfully create Fourier transforms and have archived the data to CD-R, it is usually safe to erase the CompactFlash cards.

# Renaming the files

Once the time series and Site Parameter files are copied to your PC, you may want to rename them. The default assigned by the MTU/MTU-A is based on the instrument serial number and date, but each instrument will be used many times in a typical survey, making it difficult to relate a raw data file to its site.



**Note** This procedure is optional. The names of the output files will be created automatically from the Site Name fields in the Site Parameter files. Rename the raw data files only if you want to maintain the naming convention throughout all your files.

If you decide to rename the files, the names will be more meaningful if you base them on a code for the sites. Phoenix recommends using the pattern TAG-nnna, where:

- "TAG" represents the three-letter code identifying the survey project.
- "nnn" represents the numeric designation of the individual site.
- "a" represents an alpha character denoting the order of repeated soundings at a single site.


If you choose a different naming convention, bear in mind the limits described in the Note on page 11.

SSMT2000 includes a utility that makes it easy to quickly rename many files.


#### To rename the data files:

- 1. If any files are selected in the Site Parameters File Selector pane, click Deselect All Site TBLs
- 2. From the File menu, choose Rename Files.

The Rename Files dialog box appears.

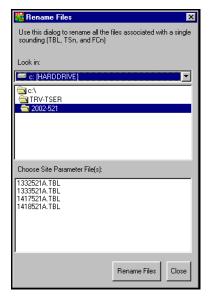

3. Select one or more Site Parameter files. (To select multiple files, hold down the SHIFT or CTRL key while clicking.)

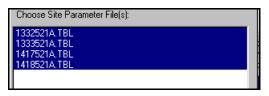

4. Click Rename Files .

The New Name dialog box appears for the first site selected.



5. Consulting the field crew's Layout Sheet, type the new name in the format TAG-nnna as described on page 12, and click **OK**.

SSMT2000 renames all files associated with this Site Parameter file, keeping their extensions unchanged.

- 6. If you selected multiple Site Parameter files, SSMT2000 will ask for the new name of the next file in the list. Type the new name and click **OK**, repeating until all files have been renamed.
- 7. Click Close to return to the main window.

# Verifying site parameters

Before processing the data files, you need to ensure that the site parameters associated with the data are complete and correct. This section describes how.

# Understanding the Site Parameter (TBL) file


The Site Parameter (TBL) file is a record of all the parameters associated with a site's time series files. However, depending on the firmware of the MTU/MTU-A and the set-up method used, some parameter values may not have been recorded automatically. These

values must be added manually before processing can proceed. Normally, the crew will have written the values on the Layout Sheet for the site.

The Site Parameter file is a binary file, and cannot be viewed or edited with a text editor. To edit the contents of the Site Parameter file, you will use SSMT2000's built-in Multi-table Editor. (To only view the contents of the Site Parameter file, you can use the View TBL button on the Toolbar to create a text file and then read that file with a simple text editor.)

#### To select Site Parameter files:

• In the File Selector panes, select individual Site Parameter files by clicking the check box next to the file name:

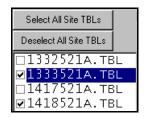

- To select all the files, click Select All Site TBLs
- To clear all the selections, click Deselect All Site TBLs

#### To only review the Site Parameter file(s):

1. On the Toolbar, click vertel, or choose View Site Parameters (TBL) from the Report menu.

A new file with the same name but with the extension .TXT is created in the folder containing the Site Parameter file. Each new .TXT file opens in Notepad.

2. Review the contents of the text file. (Although you can edit this file, the changes will have no effect on processing, since SSMT2000 does not use the file in any way.)

**Note** Units in the text file may differ from those shown in the Multi-table Editor (volts vs. mvolts, for example).

3. When you have finished reviewing the parameters, close the Notepad window.


# Editing site parameters with the Multi-table Editor

SSMT2000 provides an editor that allows you to make changes to several Site Parameter files at once. You can launch the editor from the Toolbar or by choosing Edit Site Parameters (TBL) from the Edit menu.

When you first save a Site Parameter file with the Multi-table Editor, SSMT2000 makes a backup copy of the original file, with the extension TBO. Subsequent saves will not affect the backup file; it remains a copy of the original file.

Note Do not erase TBO files! If errors are made in the editing process and you need to start over, delete the incorrect TBL file. To restore the original Site Parameter file, use the Windows File Rename command to change the TBO file extension back to TBL.

When you launch the editor, the Multi-table Editor window appears:

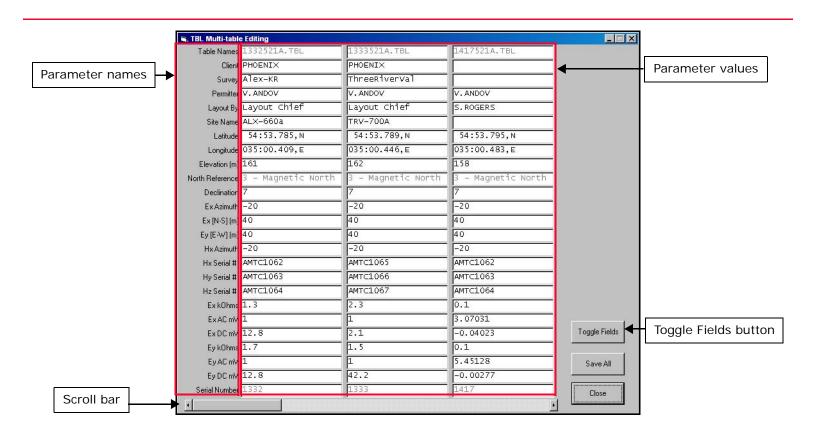

Although you can select any number of Site Parameter files, only three can be seen at a time in the editor. If you selected more than three files, use the scroll bar at the bottom of the editor to move among them.

Any of the parameter values that do not appear dimmed can be edited. Use the standard Windows actions and shortcuts to make your changes:

- press TAB or SHIFT+TAB to move from field to field.
- · double click to select a single word.
- drag the mouse pointer to select multiple words.
- type a new value to replace a selected value.
- press CTRL+C to copy a selected value.
- press CTRL+V to paste a copied value.

#### To edit the Site Parameter files:

1. On the Toolbar, click [ or choose **Edit Site** Parameters (TBL) from the Edit menu.

The Multi-table Editing window appears.

If desired, click Toggle Fields at any time to view more (non-editable) parameters, such as the MTU/MTU-A instrument type, channel configurations, gain settings, and acquisition times. Click Toggle Fields second time to return to the main editing window.

- Edit each Site Parameter file for completeness and correctness, using the field crew's Layout Sheets to find the necessary information.
- Pay particular attention to the Site Name, since this will be used to name the output (Plot) files.

The Site Name should be in the format SSS-Hdda, where

- "SSS" represents the 3-character site name.
- "H" represents the month in hexadecimal.
- "dd" represents the day of the month in decimal.
- "a" is an alphanumeric character incremented to differentiate multiple output files created by the robust processing routines.

Note If the Site Name field is left blank, SSMT2000 will use the File Name as entered with WinHost in the STARTUP.TBL file, or as created by the MTU/MTU-A firmware (using instrument serial number and date).

5. Pay particular attention to the values for **North** Reference, Declination, Ex Azimuth and Hx Azimuth.

The North Reference value is determined by the STARTUP.TBL file used by the MTUMTU-A. If the Reference is Magnetic North, then SSMT2000 will add the Declination to the Ex and Hx Azimuths before processing. However, if the field crew mistakenly aligned the site using a True North Reference, then they have already accounted for Declination in the value they recorded. To compensate for this error, subtract the Declination from the Ex and Hx azimuth values recorded by the crew.

On the other hand, if the MTUMTU-A STARTUP file specified True North Reference, then SSMT2000 will ignore the Declination value. If the field crew mistakenly aligned the site using a Magnetic North Reference, you must manually add the Declination to the Ex and Hx Azimuths.

6. Ensure that the  $H_X$ ,  $H_V$ , and  $H_Z$  serial#s (of a magnetic site) are correct. Delete sensor serial numbers from non-magnetic sites.

(If you're not sure whether a site used a 2-component or 5-component MTU/MTU-A, click

and examine the Channel Config value.)

- 7. Edit the values for E-line lengths in meters  $(E_x [N-S] (m) \text{ and } E_y [E-W] (m)).$
- 8. Edit the values for F-line electrical measurements (Ex and Ev kOhms, AC mV and DC mV).



Note SSMT2000 by default shows a copy of the E-line electrical values measured by the MTU/MTU-A. You can safely overwrite the values shown because the MTU/MTU-A stores the original values in another (hidden) group of parameters. To see the original values, follow the instructions on page 20 to review the contents of the Site Parameter file, and examine the parameters EXAC, EXDC, EYAC, and EYDC. (Your edited values are in the parameters DXAC, DXDC, DYAC, and DYDC.)

When you have finished editing the Site

Save All and close the Multi-table Parameters, click editor.

10. Using your archiving or CD-writing software, archive the daily data folder and the related calibration folder on a CD-R or other removable storage medium.



Do not skip the archiving step! The tasks described in this chapter must often be done at the end of the day, when the crew is tired and mistakes are easily made. A few minutes spent here can save an entire day's work if operator or PC errors occur later on.


# Verifying acquisition times

Typically, you will combine data from one or two survey sites with data from a remote reference site in the robust processing stage, in order to reduce the effects of noise. However, only data acquired over the same time span can be combined.

SSMT2000 makes it easy to review the time spans over which data were acquired.


#### To review data acquisition time spans:

1. In the main window, select the Site Parameter files whose times you want to view.

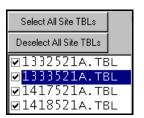

2. On the Toolbar, click vertical, or choose View Time Ranges from the Report menu.

The **Time Series Ranges** dialog box appears. The shaded areas indicate the time spans during which data were acquired.

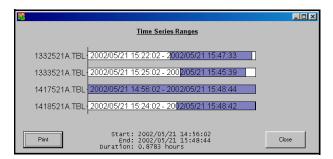

- 3. Ensure that the shaded areas overlap sufficiently for good data processing. (If they don't, you'll need to choose different sites or acquire more data.)
- 4. If you have a printer connected to your PC, you can print the time ranges by clicking Print.
- 5. When you are finished reviewing the time ranges, close the dialog box.

# **Creating Fourier transforms**

The next stage in data processing is to produce Fourier transforms from the raw time series data. All sites that are to be processed together must use identical frequency parameters. These parameters are saved in Fourier Transform Parameter (PFT) files, which can be edited if necessary.

As you process data from various surveys, you will build up a library of Fourier Transform Parameter files. At that point you can simply choose an existing file rather than creating a new one.

The Fourier Transform Parameter file names are determined by the parameters saved in the file. Table 2-1 explains the file naming convention.

Table 2-1: PFT File Naming Convention

Character Position	Possible Values	Meaning
1	M, W, P, N	Input data type ( <b>M</b> easured field, <b>W</b> hite noise, <b>P</b> arallel noise, parallel white <b>N</b> oise)

Table 2-1: PFT File Naming Convention

Character Position	Possible Values	Meaning
2	M, A, U	Instrument used ( <b>M</b> TU, MTU- <b>A</b> , <b>U</b> nified, i.e., 15Hz sampling)
3	3, 5	Sensor type: MTC-30 or MTC-50
4	5, 6	Line Frequency (50Hz or 60Hz)
5	A, B, D	MTU/MTU-A firmware version
6	N, E, 2–7	Frequency Bands to process (Normal, Extended, or only band 2–7)
7	2, 4	Frequencies per octave
8	D, H, T	Time Range to process ( <b>D</b> efault, <b>H</b> ourly, or <b>T</b> ime Range specified)

### To prepare the Fourier Transform Parameter file:

 If the title bar of the program does not display the type of processing you want (Robust Processing or Parallel Noise Processing), then open the Process menu and click the correct processing type.  In the main window, select one or more of the Site Parameter files. (All the sites must have recorded the same type of data—AMT cannot be combined with MT at this stage).

If a suitable Fourier Transform Parameter file exists in the Fourier Parameters folder, SSMT2000 will select that file from the dropdown list. In the following example, the file A35BN4D.PFT has been selected:



3. To review the selected parameter file, or to create a new file, click on the Toolbar, or choose **Edit**TS to FT Parameters (PFT) from the **Edit** menu.

The **Edit Parameters**, **Time Series to Fourier Transforms** dialog box appears (see the illustration on page 27). Below the

title bar, the dialog box displays the type of data, software version, line frequency filter, and sensor type recorded in the Site Parameter files.

4. For normal processing, none of the settings needs to be changed.


Note

It is possible, at the editing and plotting stage, to combine data from MTUs with data from MTU-As. If you want identical frequencies in the overlapping range, set the Output Data Format to *two frequencies per octave* for all sites.

For orthogonal white noise processing, set the **Input Data Type** to **White noise test**. (For more information on processing test data, see "Processing white noise and parallel noise test data" on page 65.)


For advanced processing requirements, see "Understanding Fourier Transform parameters" on page 41.

5. Save the file and close the dialog box.

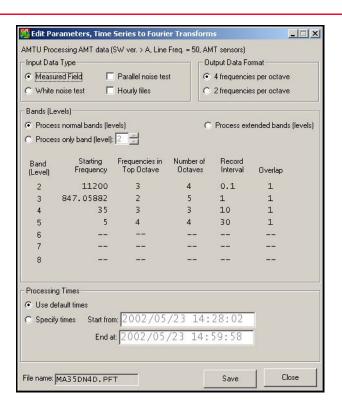


#### To produce the Fourier transforms:

 Select the Site Parameter files that you want to work with.

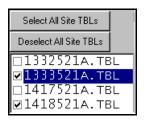


2. On the Toolbar, click , or choose **Create Fourier Coefficients (TS to FT)** from the **Process** menu.

SSMT2000 opens a new window and applies Fourier coefficients to the data from each selected Site. The windows close automatically approximately 10s after processing ends:

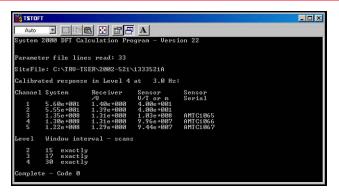

The results are saved in files with the same name as the Site Parameter file, but with an extension of FCn, where n is the frequency band.

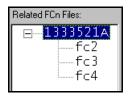

These files are listed in the lower left pane of the main window whenever the associated Site Parameter file is selected. Click the + or - sign to expand or contract the list.

If the Fourier transforms are created without error and you have archived your raw data on CD-R, it is usually safe to erase the CompactFlash cards at this time.

## **Reprocessing the Fourier** transforms

The final calculations applied by SSMT2000 reprocess the Discrete Fourier Transforms (DFTs) into crosspowers. The crosspowers are stored in Plot files that can be displayed graphically and edited using the MTEditor program. This program can also convert crosspowers to industry-standard EDI format for use with geophysical interpretation software. (For more information, see Chapter 4 on page 79.)

The Plot File names are created automatically from the Site Name parameter, with an extension determined by the frequency range. See the MTU Frequency

Ranges chart on page 34 for the three-character extension corresponding to each combination of instrument and sensor type.

If reprocessing is carried out multiple times on the same data, the middle character of the output file extensions will change to a digit, incremented with each repetition.

This stage of processing also allows you to apply a variety of robust routines that can substantially reduce the effect of noise present in the data files.

As with the previous operations, it is first necessary to set up the parameters for this stage of processing.


Note Robust Parameter (PRM) files are unique to each site. They cannot be copied to other folders and used to process other data.

#### To edit the reprocessing parameters:


1. If the title bar of the program displays SSMT 2000: Parallel Noise Processing, then open the Process menu and click Robust Processing.

2. On the Toolbar, click or choose **Edit Robust**Parameters (PRM) from the **Edit** menu.

The **Magnetotelluric Processing Setup** dialog box appears:

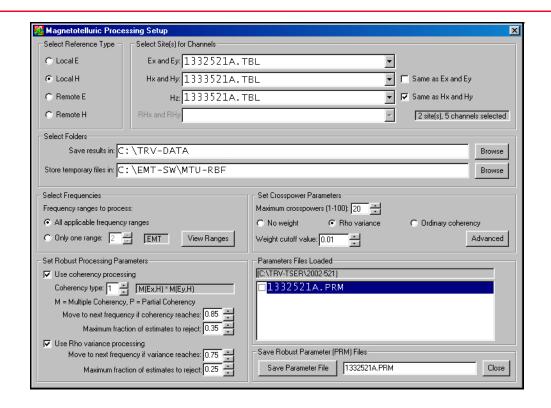

 Select the type of reference channels to be used. Local E or H channels are taken from the site to be processed; Remote E or H channels are taken from another site.

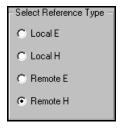

 Select the site(s) from which you want to take channels. The drop-down lists display the files contained in the Site Parameters folder that was selected in the main window.



If you are processing a 5-component site, you will usually take all the E and H channels from that site,

and take Remote E or H channels from a distant reference site. You can select the 5-component site repeatedly from the drop-down lists, or select  $\mathbf{Same}$  as  $\mathbf{E_x}$  and  $\mathbf{E_y}$  and  $\mathbf{Same}$  as  $\mathbf{H_x}$  and  $\mathbf{H_y}$ .

If you are processing a 2-component site, you will usually take the E channels from that site, the H channels from a nearby 3- or 5-component site, and Remote E or H channels from a distant reference site.

The message box in the **Select Site(s)** for **Channels** area confirms the number of different sites and channels selected.



5. Select the folder in which to store the output (Plot) files.

- Select Folders	
Save results in: C: \TRV-DATA\RmH-SITE	Browse
Store temporary files in: C: \EMT-SW\MTU-RBF	Browse

Either locate an existing folder by clicking bows or type the full path and folder name in the text box. Phoenix recommends using folder names such as

"RmH-SITE" (meaning Remote H SITE) or "MTH-SITE" (meaning a Type 4 frequency range—see the

chart on page 34) to reflect the type of data and reprocessing.

Note You can type a name for a folder that does not yet exist on your hard drive—SSMT2000 will create the folder during processing. (The folder that is to contain the new folder must already exist, however. SSMT2000 cannot create nested folders.)

6. In the same manner, select the folder in which to store the temporary files that SSMT2000 creates during processing.

**Note** The temporary files may grow to 500MB in size. Ensure that you have sufficient free disk space to accommodate these files.

Select the frequencies to be processed.



If you do not want to process all applicable frequencies, select a subset. Click View Ranges to see a chart of the available frequency ranges:


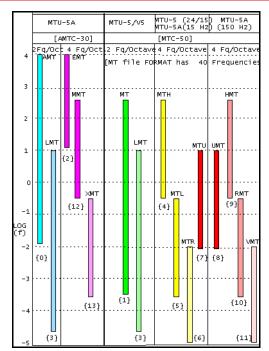


Chart of frequency ranges applicable to each instrument type.

In the chart, find the column for your instrument and sensor type. Note the name of the range

- (above the coloured bar) and the number of the range (in braces {}, below the coloured bar). Close the chart and select the number of the range you want to use. See "Frequency tables for SSMT2000" on page 145 for the effect of each choice.
- 8. If desired, modify the Robust Processing parameters. See "Robust processing parameters" on page 38 for an explanation of the parameters and their effects.

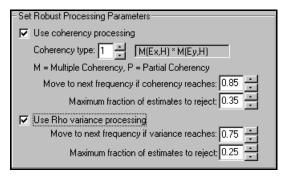

9. If desired, modify the Crosspower Parameters. See "Crosspower parameters" on page 40 for an explanation of the parameters and their effects.




- Select the number of crosspowers to be calculated, from 1 to 100.
- Select the weighting factor (No weight, Rho variance, or Ordinary coherency).
- Select the weight cutoff value, from 0.01 to 0.99.
- 10. When you have finished editing the parameters, save them in a file. SSMT2000 suggests a file name based on the site selected for  $E_{\rm X}$  and  $E_{\rm Y}$  channels; however, you can type any file name you want (but see the restrictions in the Note on page 11).



Click Save Parameter File to save the settings.

SSMT2000 saves the PRM file to disk, and lists the file in the **Parameters Files Loaded** list.

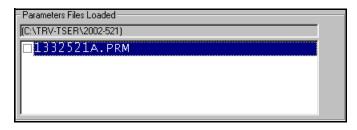

11. Click Close to return to the main window.

#### To reprocess the Fourier transforms:

- 1. In the lower right pane of the main window, select the Robust Parameters file that you just prepared.
- 2. On the Toolbar, click , or choose **Process** from the **Process** menu.

SSMT2000 opens a full-screen DOS window and reprocesses the Fourier transforms. This can take several minutes, depending on file sizes. The window closes automatically when reprocessing is finished.

## **Batch processing**

Since data processing is time-consuming, SSMT2000 includes a provision for unattended processing of multiple sites.

#### To prepare for batch processing:

- 1. In the main window, select the Site Parameter files that you want to work with.
- 2. Edit the files as explained on page 22.
- 3. Ensure that a valid Fourier Transform Parameter (PFT) file exists, as explained on page 26.
- 4. Create and save a Robust Parameter (PRM) file for each site as explained on page 29. Note that you do not need to close the Magnetotelluric Processing Setup dialog box after saving a site's processing parameters. Simply repeat steps 3 through 10 on page 32 for each additional site.
- 5. In the main window, ensure that all Robust Parameter files you want to include in the batch are selected.

#### To save the batch job:

1. On the Toolbar, click saveJob

The JOB File Creation dialog box appears.



2. Type a name for the file and click **OK**.


SSMT2000 adds the extension JOB to the file name if necessary and saves the file.

You can run the batch job immediately, or load and run it at any later time.

#### To load and run a saved batch job:

1. On the Toolbar, click , or choose **Load Saved Batch Job** from the **Jobs** menu.

The Load Batch Job dialog box appears.

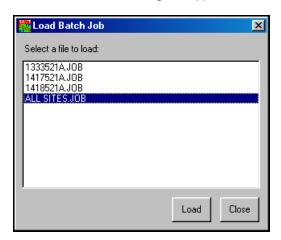

- 2. Select the batch job you want to run from the list of saved JOB files.
- 3. Click Load.
- 4. On the Toolbar, click RunJob

SSMT2000 calculates Fourier transforms for each Site in the JOB file, then reprocesses the data into Plot files.

#### **Editing saved robust parameters**

When you have saved the processing parameters for a number of sites, the files will be listed in the Robust Parameters list in the main window:



You can review or change the contents of these files at any time.

## To review or edit saved robust reprocessing parameters:


1. On the Toolbar, click or choose **Edit Robust**Parameters (PRM) from the **Edit** menu.

The Magnetotelluric Processing Setup dialog box appears.

From the Parameters Files Loaded list, click on the name of the file you want to review (it doesn't matter if the check boxes are selected or cleared—it

37 Chapter 2 Batch processing 37

is the coloured highlight that determines which file will be reviewed).

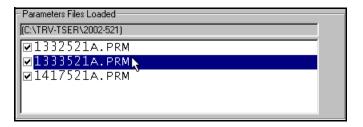

The Magnetotelluric Processing Setup dialog box is updated to show the parameters saved in the selected file.

- 3. If you want, change the parameter values and click

  Save Parameter File

  .
- 4. Click Close to return to the main window.

# Understanding the magnetotelluric processing parameters

This section explains the meaning and possible values of the processing parameters in the Magnetotelluric Processing Setup dialog box. The default values should produce satisfactory results in most cases; however, experimentation may improve results in noisy areas.

#### **Robust processing parameters**

Two schemes of initial processing that attempt to filter out noise-affected data are controlled by the robust processing parameters: Coherency and Rho variance. This process reduces the size of the error bars and smooths the curves in plots of apparent resistivity.

"Coherency" refers to eight processing schemes that compare survey site data with reference site data, and process only data that are coherent. Cultural noise that is present at the survey site but not at the reference site is therefore reduced (but see the Note on page 40).

"Rho variance" (Resistivity variance) refers to a second stage of coherency processing that compares the telluric and magnetic results from the first stage, and selects data where these results are coherent (again, see the Note on page 40).

**Coherency type.** This parameter defines which of the eight coherency processing schemes will be used. Enter a value of:

- 1 to combine Type 2 with Type 3.
- 2 to use the Multiple Coherency of  $E_X$  with the total magnetic field:  $M(E_X, H)$ .
- 3 to use the Multiple Coherency of  $E_y$  with the total magnetic field:  $M(E_y, H)$ .
- 4 to combine Type 5 with Type 6.
- to use the Partial Coherency of Ex with the total magnetic field: P(E<sub>x</sub>, H).
- to use the Partial Coherency of Ey with the total magnetic field:  $P(E_y, H)$ .

- 7 to use the combined factors of the Multiple Coherency of  $H_X$  with the total Remote Magnetic field and the Multiple Coherency of  $H_Y$  with the total Remote Magnetic field:  $M(H_X, R) * M(H_Y, R)$ .
- 8 to use the combined factors of the Partial Coherency of  $H_X$  with the total Remote Magnetic field and the Partial Coherency of  $H_Y$  with the total Remote Magnetic field:  $P(H_X, R) * P(H_Y, R)$ .

A discussion of Multiple and Partial Coherency is beyond the scope of this guide. Consult a text on statistical methods for a fuller understanding of these terms.

Move to next frequency if coherency (or variance) reaches set value. Even with powerful computers, data processing can be time-consuming. These two parameters define the minimum level of coherency or variance that must be found for the routine to stop processing. Once this minimum level has been found, the program can save time by moving on to the next frequency. Enter a value between 0 and 1.0, where 0 means no coherency and 1.0 means complete coherency.

Typical effective values would range from 0.95 for data with much noise to 0.80 for data with little noise.

Maximum fraction of estimates to reject. These two parameters define what fraction of the data can be discarded in each attempt to reach the minimum level of coherency or variance. Enter a value between 0 and 1.0, where 0 means no crosspowers are rejected and 1.0 means all crosspowers can be rejected. Typical effective values would range from 0.75 for data with much noise to 0.25 for data with little noise.

#### Crosspower parameters


Maximum crosspowers. This is the number of equalsized segments (maximum 100) into which the time series is divided when calculating data points for each frequency. These data points will be averaged or "stacked" to produce each point on the resistivity and phase curves. If the curves contain large error bars, or are difficult to smooth when editing, it may be helpful to increase the number of crosspowers and reprocess the data.

Weight type (Rho variance, Ordinary coherency). This parameter selects the robust processing scheme used to weight the results of the initial processing described on page 38. Rho variance, the default, gives more weight to data points with smaller error bars. Ordinary coherency gives more weight to data points with good coherency between E and H channels. No weight uses a factor of 1 for all data points and is useful when noise is coherent (see the Note below). Experimentation is the only way to arrive at the best choice for particular survey or site conditions.

Note The same sources of cultural noise may affect both survey and reference sites, and the noise in the data will therefore be coherent. If this is known or suspected to be the case, coherency processing should be disabled so that the noise is not selected for processing.

Weight cutoff value. This parameter affects a step function in the weighting scheme. If the weight factor assigned to a crosspower is less than the weight cutoff value, that weight factor is reduced to zero.

Advanced crosspower parameters. On occasion, a survey site will have been laid out in very close alignment to the strike direction, and it is difficult to interpret the results. In this case it is often useful to mathematically rotate the impedance matrix [Z] relative to True North. Enter the desired azimuth in degrees.

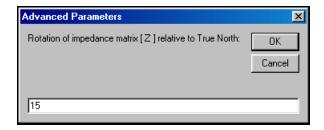

Any value other than zero will cause a selection box to appear in the Magnetotelluric Processing Setup dialog box, for easier readjustment of the value.



## **Understanding Fourier Transform parameters**

For normal processing, the default values in the **Edit Parameters, Time Series to Fourier Transforms** dialog box are correct. This section explains the meaning of the parameters and how to change them for advanced processing requirements.


#### **Input Data Type**

**Measured field.** Select this option for normal processing of field data.

White noise test. A dual random white noise generator is available from Phoenix for bench testing purposes. If data have been acquired with this input, select White noise test to prevent SSMT2000 from attempting to locate and use sensor calibration files. For more information on noise test processing, see "Processing white noise and parallel noise test data" on page 65.

Parallel noise test. If the sensors or electrodes were set out in parallel for testing, or if you want to compare similar components from multiple sites, select this checkbox. If the checkbox is selected but unavailable, then the Array Type in the Site Parameter file has been set to 1 – Parallel orientation. For more information on noise test processing, see "Processing white noise and parallel noise test data" on page 65.

**Hourly files.** Select this option only if the instrument is used in continuous monitoring applications, where the files are closed automatically at set intervals for transmission to a processing computer.

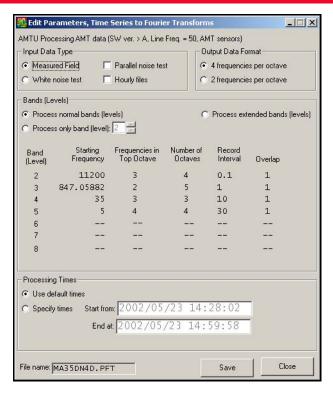

#### **Output Data Format**

This parameter determines the set of frequencies that will be output for a given combination of MTU/MTU-A and sensor type. See the frequency tables in Appendix C on page 145 for details.

- 4 frequencies per octave. For higher resolution in the apparent resistivity plots and improved ability to interpret the results, select this option.
- 2 frequencies per octave. For backwards compatibility with the V5-16 format, or to edit combined data from MTUs and MTU-As with identical frequencies in the overlapping range, select this option.

#### Bands (Levels)

These parameters determine how many frequency bands (formerly known as Levels) will be processed and therefore how many FCn files will be created. The table at the bottom of the box displays details on the selected bands. For an explanation of the terms used in the table headings, refer to "Time Series To Fourier

Coefficient Program - TSTOFT Program Description" contained in the file TSTOFT.PDF in the folder C:\FMT-SW\EMT-DOCS, or in the documentation folder on the Phoenix software CD.

**Process normal bands (levels).** For normal processing, select this option.

**Process only band (level) n.** If you want to restrict processing to a single band, select this option and select or type the band number desired.

Process extended bands (levels). To output very low frequency bands, select this option.

The frequency ranges of various equipment combinations are:

- MTU-A + AMTC-30: 10Hz 0.5Hz (Band 5).
- MTU-A + MTC-50: 1000s 10 000s (Band 7).
- MTU + MTC-50: 1000s 10 000s (Band 7).

Note For MT data, you must have at least 18 hours of continuous recording in order to process extended bands.

### **Processing Times**

By default, SSMT2000 processes data acquired over the longest time span common to all the selected sites.

If it is known that data quality is poor at the beginning or end of the common time span—due to a thunderstorm or broken E-lines, for example—better results can be obtained by shortening the time span to eliminate the poor data.

**Use default times.** Select this option for normal processing.

**Specify times.** Select this option and edit the **Start from** or **End at** times as required to shorten the time span. When you save the parameter file, SSMT2000 will add or increment a digit at the end of the filename, from 0 through 9, to indicate the file version number.

## **Examining calibration files**

Phoenix V-5 System 2000 MTU/MTU-As and sensors must be calibrated before each survey and should be

recalibrated at the end of a survey. They may also require recalibration during a survey—in the case of equipment damage, for example.

In the calibration process, the response of the instrument and components is measured using a known input signal. The signal includes components at odd harmonics, starting with a different fundamental for each frequency band the instrument can acquire. The results are stored in a file named with the serial number of the instrument or sensor and the extension .CLB (instrument) or .CLC (sensor).

SSMT2000 includes a utility for viewing and printing different analyses of the calibration results. These analyses will show whether the equipment is working properly. They can also help to verify that you have chosen instrument filter settings that are appropriate for site conditions.

To simply evaluate the calibration, use the DEFAULT.TBL as the **Site Parameter File** (in step 6 on page 46). This setting removes the effect of the line frequency comb filter. (You can view calibration results


that include the effect of the filter by selecting a specific Site Parameter file from the list; however, the resulting scatter of points on the curve makes it difficult to evaluate the calibration.)

On the other hand, to evaluate the effect of specific filter settings, select the Site Parameter File containing the settings you want to check. The displayed calibration results will then include the effect of the high-pass filter (if selected) and all digital filters. In the case of an MTU-A, the display will also include the effect of the input low-pass filter, taking into account the electrode resistance as recorded by the user.

Note An inaccurate record of contact resistance will introduce error when the processing software applies its correction using the calibration model. This fact emphasizes the importance of correctly measuring contact resistance at the survey site. Measurements taken at the end of a sounding are preferable to those taken just after the electrodes are buried. (The soil conditions at the electrodes are likely to be unstable for a time after installation, until the salt water has dispersed.)


#### To view calibration curves:

1. In the SSMT2000 main window, select the folder(s) containing the calibration files you want to examine.

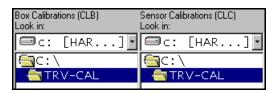

Below the **Sensor Calibrations (CLC)** folder selector pane, click Display Calibration


The Display Calibrations dialog box appears.

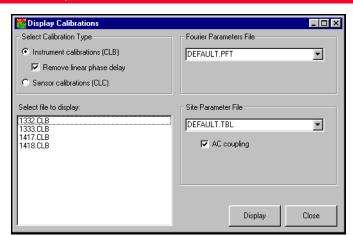

- Select the calibration type (instrument or sensor).
   If you select Instrument calibrations, you should also select Remove linear phase delay. (Phase delay is an artefact of the digital filters and will disrupt the curves.)
- 4. From the **Select file to display** list, select the file you want to view.
- To view the standard analysis (two frequencies per octave), select the DEFAULT.PFT Fourier Param-

- eters File. If you want to view an analysis showing the specific frequencies at which your data will be processed, choose the appropriate Fourier Parameters File from the dropdown list. (See "Creating Fourier transforms" on page 25 for more information.)
- 6. From the **Site Parameter File** dropdown list, select either DEFAULT.TBL (for simple calibration evaluation) or a specific site TBL file (for filter settings evaluation).
- Finally, if the calibration was for an MTU-A to acquire MT data (not AMT data), clear the AC coupling checkbox. For other instrument or data types, select AC Coupling.
- 8. Click Display

The **Display Calibration Files** window appears, showing the magnitude (upper curve) and phase (lower curve) of the instrument or sensor response.

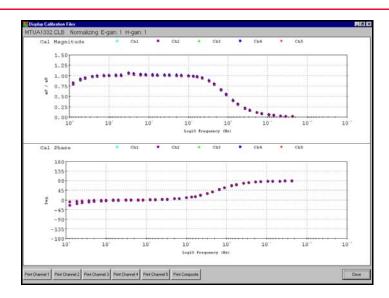

#### Changing the vertical scale

By default, the calibration curves are displayed in semilogarithmic format—the frequency scale (x-axis) is logarithmic and the phase and magnitude scales (yaxes) are linear. You can toggle the magnitude y-axis between logarithmic and linear scales.

#### To change the scale of the magnitude curve:

 Right click anywhere on the curves and choose the desired scale from the shortcut menu. (The current choice is indicated by a checkmark.)



#### **Printing calibration curves**

If the chart is for a sensor, the calibration is displayed as a single curve.

#### To print a sensor channel:

• Click either Print Channel 1 or Print Composite

If the chart is for an instrument, multiple channels will be overlaid. Channels are numbered sequentially, representing the components in alphabetical order ( $E_x$ ,  $E_y$ ,  $H_x$ ,  $H_y$ ,  $H_z$ , if they exist).

#### To print a single instrument channel:

 Click one of the Print Channel buttons at the bottom of the window.

## To print all the instrument channels overlaid on a single chart:

Click Print Composite

#### Viewing calibration data numerically


You can view the numerical values of a calibration curve on screen in a spreadsheet format. You can also save or export the data in text (.TXT) or comma separated values (.CSV) format for use by another program. All word processing programs can open .TXT files. Most spreadsheet programs can open .CSV files.

#### To view raw calibration data:

Right click anywhere on the curves and choose
 View Data from the shortcut menu.



A spreadsheet window displays the data.

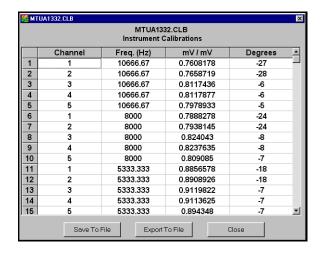

2. Use the scrollbar on the right of the window to see the remaining frequencies.

#### To save the data for text editing:

Save To File Click

> A file with the same name but the extension .TXT is saved in the same folder as the calibration file, and the Save to File button appears dimmed.

#### To export the data for spreadsheet editing:

Export To File

A file with the same name but the extension CSV is saved in the same folder as the calibration file, and the Export to File button appears dimmed.

## Editing site parameters advanced

In some circumstances, it may be necessary to edit Site Parameters that are not normally changed and are not accessible through the Multi-table Editor. For example, a file may be corrupt and contain an invalid start or end time. It is sometimes possible to overcome such problems using an advanced editing utility that allows direct access to all the fields in a Site Parameter file.

#### Warning!



Modifying parameters incorrectly may produce invalid results, cause data loss, or may prevent data processing altogether. Phoenix Geophysics Ltd. accepts no responsibility for data loss or invalid results or interpretations based on parameters incorrectly modified.

DO NOT MODIFY PARAMETERS unless you fully understand the consequences or are advised by Phoenix Geophysics Technical Support.


The Advanced Parameter Table Interface lists all the parameters in a Site Parameter file in alphabetical order, with their current values and a brief explanation.

#### To use Advanced Editing:

1. In the main window, select only one Site Parameter file you want to edit.

- 2. From the **Edit** menu, choose **Edit TBL—Advanced**.
  - A Warning dialog box appears.
- 3. If you want to continue, click Yes.

The **Advanced Parameter Table Interface** dialog box appears.

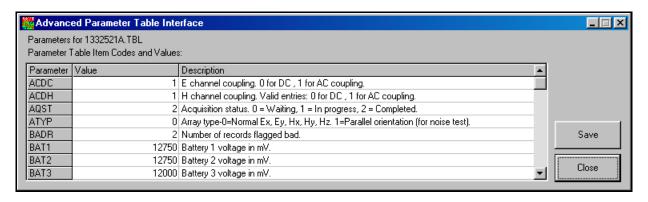

The Advanced Parameter Table Interface.

- 4. In the **Parameter** column, locate the required parameter name. Drag the scroll bar on the right if necessary.
- 5. In the **Value** column, double click the current value to activate the field.
- 6. Double click again (or drag the mouse pointer through the value) to select it.
- Type the new value and press Enter.
- Repeat as required for other parameters.
- Click to save the changes or to discard them.

10. Click to return to the main window.

## Correcting layout errors

The most common errors made by inexperienced field crews occur when components are incorrectly oriented, incorrectly connected, or incorrectly identified. If you discover such errors, you can compensate for them

during processing and salvage data that would otherwise be unusable.

**Note** Users encountering these errors frequently are advised to review the layout procedures described in the V5 System 2000 MTU/MTU-A User Guide.

To correct errors in sensor identification (sensor serial numbers recorded incorrectly), just use the Multi-table editor (see step 6 on page 23) to type in the correct values.

To correct errors in polarity, orientation or connection, use the Edit Layout Errors feature explained here. This feature can correct for:

- H<sub>X</sub>, H<sub>Y</sub>, and/or H<sub>Z</sub> sensors connected to the wrong terminal on the three-way splitter cable.
- H<sub>x</sub> and/or H<sub>y</sub> sensors incorrectly oriented by 180°.
- E<sub>X</sub> and E<sub>y</sub> connections interchanged.
- E<sub>X</sub> and/or E<sub>V</sub> polarity reversed.

Note

It is not practical to try to compensate for incorrectly paired electrodes (e.g., N–E and S–W), since the result is two parallel E-lines instead of two orthogonal E-lines.

### **Preparation**

Before correcting layout errors, use the Multi-table editor to *complete* the editing of the Site Parameter file in question. Type in all the parameter values necessary, including the ones that you know are wrong, and save the file. This is the starting point for correcting layout errors. If you apply error correction more than once, SSMT2000 must be able to identify this starting point each time.

If you correct layout errors before you have completely edited the Site Parameter file, you will have to use the Multi-table editor on the corrected file. In doing so, you may inadvertently override the corrections. You will also be altering the file from its starting point, making it more difficult to repeat error correction. For these

reasons, you should finish editing with the Multi-table editor before using the Edit Layout Errors feature.


#### Starting layout error correction

Once you have saved the edited Site Parameter File, you can open the **Edit Layout Errors** dialog box.

#### To start layout error correction:

- 1. In the main window, select only the single Site Parameter file you want to correct.
- 2. From the **Edit** menu, choose **Layout Errors**.

The Edit Layout Errors dialog box appears.

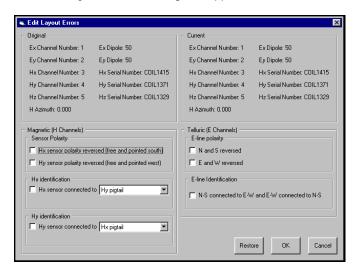

Depending on the kind of error being corrected, the channel assignments, sensor assignments, dipole sign (+/-) and/or H azimuth may be changed. The dialog box shows the original starting point values in the top left frame. As you make your corrections, the new, "Current" values appear in the top right frame.


### Correcting magnetic component polarity errors

A common error made by inexperienced crews is to align the sensors so that the connectors always point back toward the MTU/MTU-A, no matter which quadrant they may be in. If the  $H_X$  sensor is south of the site centre, or the H<sub>V</sub> sensor is west of the site centre, the result is reversed polarity.


The following three diagrams show how SSMT2000 makes adjustments to compensate for the error(s).

In the diagrams, the location of the sensors in a specific quadrant is arbitrary and not relevant to the procedure.


 $H_X$  reversed. SSMT2000 interchanges the  $H_X$  and  $H_Y$  channels and serial number assignments and increases the H azimuth by 90°.

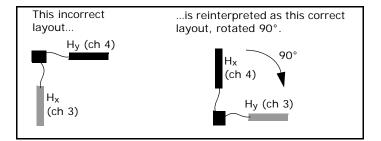

 $H_y$  reversed. SSMT2000 interchanges the  $H_x$  and  $H_y$  channels and serial number assignments and decreases the H azimuth by 90°.

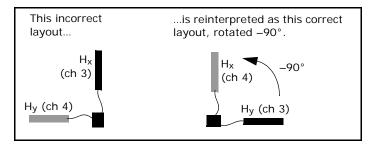


 $H_X$  and  $H_Y$  both reversed. SSMT2000 increases the H azimuth by 180° (no change to sensor channels or serial numbers).

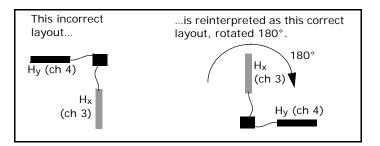

#### To correct for reversed sensor polarity:

1. In the **Sensor polarity** frame, select either or both check boxes, according to the error that was made.

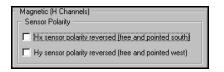

In the **Current** frame, SSMT2000 displays adjusted channels, serial numbers, and H azimuth.

2. To save the changes, click OK; to revert to the original values, click Restore; to close the dialog box without saving changes, click Cancel.


# Correcting magnetic component connection errors

The three-way splitter cable for connecting sensors to the MTU/MTU-A is marked with coloured rings on the pigtails—one ring for  $H_X$ , two for  $H_Y$ , and three for  $H_Z$ . If these markings are not matched to the correct sensor cables, data will be recorded on the wrong channels.



#### To correct sensor connections:

If H<sub>x</sub> was connected to the wrong pigtail, select
 H<sub>x</sub> sensor connected to and choose the actual
 connected pigtail from the dropdown list.

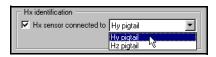

- If H<sub>y</sub> was connected to the wrong pigtail, select
   Hy sensor connected to and choose the actual
   connected pigtail from the dropdown list.
- 3. If  $H_Z$  was connected to the wrong pigtail, it will be automatically corrected when you follow steps 1 and 2.
- 4. To save the changes, click or evert to the original values, click rouse the dialog box without saving changes, click cancel.


## Correcting telluric component errors

Two types of errors in dipole layout can be corrected: reversed polarity of a dipole and interchange of the two dipoles.

**Note** It is not practical to try to compensate for incorrectly paired electrodes (e.g., N-E and S-W), since the result is two parallel E-lines instead of two orthogonal F-lines.

#### To correct telluric layout errors:

1. In the Telluric (E Channels) frame, select the check boxes that describe the actual layout conditions.

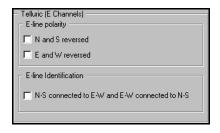

SSMT2000 corrects polarity by multiplying the dipole length by -1 and corrects interchanged dipoles by interchanging E<sub>x</sub> and E<sub>y</sub> channel assignments.

To save the changes, click \_\_\_\_\_; to revert to the original values, click Restore; to close the dialog box without saving changes, click

#### **Revising layout corrections**

When you make layout error corrections, SSMT2000 saves the original Site Parameter values (the "starting point") in a special file with the same name but a .TBK extension. This file makes it possible to reverse layout corrections you have made.

#### To reverse layout corrections:


- 1. From the Edit menu, choose Layout Errors.
- Click Restore.

SSMT2000 restores the Site Parameter file to the starting point values.

- 3. Click in the confirmation dialog box.
- 4. Click in the **Edit Layout Errors** dialog box.

If you have used the Multi-table editor to change the Site Parameter (TBL) file after applying layout correction, then the Site Parameters no longer match the starting point values. Therefore, it is not possible to reverse or revise the layout corrections reliably.

In this case, when you choose **Layout Errors** from the **Edit** menu, a warning dialog box appears.

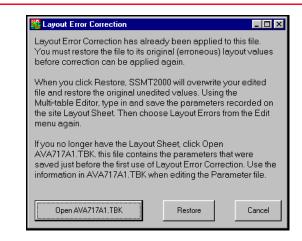

The warning dialog box refers to the following instructions.

#### To restore original parameter values:


1. If you have the original Layout Sheet, click



SSMT2000 replaces the Site Parameter file with a copy of the file as it was saved by the instrument—before you did any editing at all.

. If you don't have the original Layout Sheet, click **Open filename.TBK**.

A text version of the Site Parameter file opens in Notepad as it was at the starting point when you first applied layout error correction.

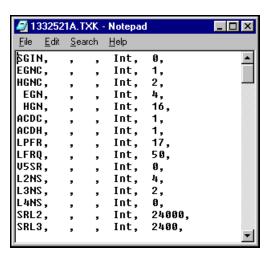

3. Use the Multi-table editor and the Layout Sheet or Notepad file to edit the Site Parameters. If you are using the Notepad file, locate the parameter code in the leftmost column and its value in the rightmost column. The code for each required parameter is shown in the following illustration.

	1332521A.TBL
	CMPY
Survey:	SRVY
Permitter:	PMIT
Layout By:	
Site Name:	SITE
Latitude:	
Longitude:	
Elevation (m):	ELEV
North Reference:	3 - Magnetic North
Declination:	DECL
Ex Azimuth:	
Ex [N-S] (m):	
Ey [E-W] (m):	EYLN
Hx Azimuth:	
Hx Serial # :	HXSN
Hy Serial # :	HYSN
Hz Serial # :	HZSN
Ex kOhms:	
Ex AC mV:	DXAC
Ex DC mV:	DXDC
Ey kOhms:	EYR
Ey AC mV:	DYAC
Ey DC mV:	
Serial Number:	1332

## **Creating reports**

Four reports are available from the **Report** menu:

- · Site Parameters
- Time Ranges
- · Saturated Records
- · Custom Parameters

#### The Site Parameters report

For information on the Site Parameters report, see "Understanding the Site Parameter (TBL) file" on page 19.

#### To view the Site Parameters report:

• On the Toolbar, click , or choose View Site Parameters (TBL) from the Report menu.

9 Chapter 2 Creating reports 59

#### The Time Ranges report

For information on the Time Ranges report, see "Verifying acquisition times" on page 24.

#### To view the Time Ranges report:

 On the Toolbar, click
 or choose View Time Ranges from the Report menu.

#### The Saturated Records report

The Saturated Records report can be useful when troubleshooting. If Gain is set too high, the dynamic range of the system will be exceeded, resulting in many "saturated" records. A fault in the instrument can also produce this result. The Saturated Records report provides a way of viewing instrument and channel performance for multiple instruments, sites, and channels. The report can be viewed on-screen within SSMT2000 and is simultaneously saved as a commaseparated-values (.CSV) file. Most spreadsheet programs can open or import CSV files, allowing you to

sort the report by various criteria, or manipulate it in other ways.


#### To create the Saturated Records report:

1. In the Site Parameters folder selection pane, navigate to the folder containing the Site Parameter file(s) you want to include in the report.

A list of the files appears in the Site TBLs file selection pane, but you do not need to select any—the report will cover all files in the folder.



 From the Report menu, choose Saturated Records Report... (If the folder you selected in step 1 contains no Site Parameter files, the command will be unavailable. Repeat step 1, selecting a different folder.) The **Saturated Records Report** dialog box appears:

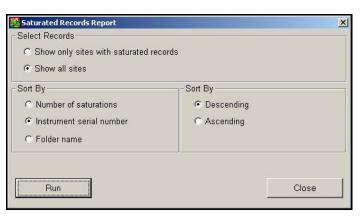

3. Select the records, the sort criterion, and the sort order, and click Run.

1 Chapter 2 Creating reports 61

The compiled report appears:

SERIAL	LATITUDE X LONGITUDE	FOLDER	FILE	SATURATED	TOTAL
1418	5453.778,N X 03500.372,E	Original	1418521A.TBL	1	2590
1418	5453.784,N X 03500.409,E	518n	1418518A.TBL	25	59671
1418	5453.778,N X 03500.372,E	2105	1418521A.TBL	1	2590
1417	5453.795,N X 03500.483,E	Original	1417521A.TBL	0	3407
1417	5453.795,N X 03500.482,E	518n	1417518A.TBL	25	59853
1417	5453.795,N X 03500.483,E	2105	1417521A.TBL	0	3407
1333	5453.789,N X 03500.446,E	Original	1333521A.TBL	0	2166
his report	has been saved in comma-deli	mited forma	at as:	_	

- 4. You can examine the report on screen, using the scroll bar on the right to move among the rows, or launch a spreadsheet or text-processing program and open the file from within that program. The file name appears at the bottom of the report.
- 5. To change the width of the columns, drag the vertical bars that separate the column headings. The pointer will change appearance when it is correctly positioned to allow resizing:



6. Click Close to return to the report dialog box. You can change the setup and run the report again, or return to the main window by clicking

#### The Custom Parameters report

The Custom Parameters report content is completely flexible: you can create a listing of any and all parameters contained in the Site Parameter files in any folder, sorted by any single parameter. The report will be saved in comma-separated-values (.CSV) format for use with a spreadsheet or text-processing program and will also appear on screen.

#### To create a Custom Parameters report:


 In the Site Parameters folder selection pane, navigate to the folder containing the Site Parameter file(s) you want to include in the report.

A list of the files appears in the Site TBLs file selection pane, but you do not need to select any—the report will cover all files in the folder.



From the Report menu, choose Custom Parameters Report... (If the folder you selected in step 1 contains no Site Parameter files, the command will be unavailable. Repeat step 1, selecting a different folder.)

The **Custom Parameters Report** dialog box appears:

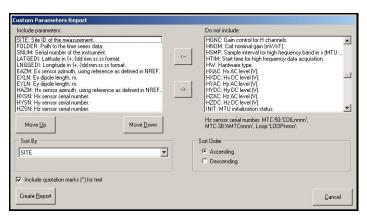

 Several commonly used parameters appear in the Include parameters list; all other parameters appear in the Do not include list. If the default selection meets your needs, click Create Report. If not, follow the next procedures to modify the report.

63 Chapter 2 <u>Creating reports</u> 63

#### Note

In the latitude and longitude formats, "d" represents degrees, "m" represents minutes, and "s" represents seconds. "C" represents the cardinal points of the compass—N or S for north or south latitude, E or W for east or west longitude. The EDI format uses a "+" for north or east and a "-" for south or west. The suffixes themselves are acronyms for Degrees/Minutes/Fractions (DMF), Degrees/ Minutes/Seconds (DMS), and Electronic Data Interchange (EDI).

# Modifying the Custom Parameters report

You can add to or subtract from the default list of parameters, and you can change the order of the columns in the report. You can also specify a sorting criterion and sort order.

#### To remove parameters from the report:

• In the Include parameters list, select the parameter you want to remove, and click

The parameter moves from the **Include parameters** list to the **Do not include** list.


#### To add parameters to the report:

• In the **Do not include** list, select the parameter you want to include, and click \_\_\_\_.

The parameter moves from the **Do not include** list to the bottom of the **Include parameters** list.

#### To change the order of included parameters:

 In the Include parameters list, select the parameter you want to move, and click either

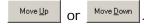

#### To change the sort criteria:

- After selecting all the parameters you want to include, choose the sort criterion from the **Sort By** list.
- 2. Click either the **Ascending** or **Descending** sort order.

# Opening reports in a spreadsheet program

Most word processing and spreadsheet programs can import the report files saved by SSMT2000. The exact procedure will vary depending on the program. As an example, this section provides instructions for using Microsoft Excel™.

#### To open a report with Microsoft Excel:

- 1. Launch Excel.
- 2. In the blank workbook that appears, select cell A1.
- From the Data menu, point to Import External Data and then click Import Data.
- 4. In the **Files of type** list, select **All Files (\*.\*)**.
- Select the file saved by SSMT2000 (SATR.CSV, CUSTOM.CSV, or the name you assigned to the file) and click Open.
- 6. In the **Text Import Wizard**, click **Delimited**.
- 7. Click Next.
- 8. Select Comma and Space as the Delimiters.

- 9. Select Treat consecutive delimiters as one.
- 10. Select " as the **Text qualifier**.
- 11. Click Next.
- Scroll through the Data preview. If any column is empty, select it and click **Do not import column** (skip).
- 13. Select the column to the right of the Latitude X Longitude column and click **Text**.
- 14. Click Finish.
- 15. In the **Import Data** dialog box, click **OK** to accept cell A1 as the destination.

# Processing white noise and parallel noise test data

Two types of noise tests can be performed to verify or troubleshoot system and component performance: white noise and parallel noise. The processed output from these tests can be viewed and printed with the NPIPlot program.

In the case of a white noise test, the input source is a dual random white noise generator, available from Phoenix. The two outputs from the generator can be connected to the MTU/MTU-A in either orthogonal or parallel configuration.

In the case of a sensor parallel noise test, one or more MTU/MTU-A instruments are set up in the field with the E-lines in parallel at right angles to the sensors, which are also in parallel. You can also conduct parallel tests using multiple standard orthogonal layouts separated by only a meter or so, comparing corresponding channels from two or more instruments.

# Processing orthogonal white noise data

White noise data from an orthogonal configuration is processed exactly the same way as normal field data, except that sensor calibration files are not used in the Fourier transform stage of processing.

#### To process orthogonal white noise data:

 Follow the instructions given earlier in this chapter for processing site data, being sure to select White noise test in the Time Series to Fourier Transform parameters.

### Processing parallel noise data

Parallel noise data, whether from a white noise or natural source, is processed differently, so that channels of the same type can be compared with each other, i.e., magnetic with magnetic and telluric with telluric. To view the processed data, use the NPIPlot program, described in Chapter 3 on page 73.




To avoid confusing test data with field data, create a separate folder for the test data and associated Site Parameter files.

Changing the Array type. If you are performing parallel processing on data from a site where the channels were laid out in parallel (i.e., you are not using data

from multiple standard orthogonal layouts), the Array Type must be changed in the Site Parameter files.

#### To change the Array Type:

- Select the first Site Parameter file containing parallel noise data.
- From the Edit menu, choose TBL Advanced...
  and in the warning dialog box, click Yes to
  continue.
- 3. In the Advanced Parameter Table Interface, locate the **ATYP** parameter and change its value to 1.

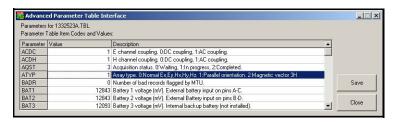

- 4. Save the file and close the Interface.
- 5. Repeat these steps for any other Site Parameter files you want to process.

**Creating Fourier Transforms.** The procedure for creating Fourier Transforms is similar to that used for field data.

#### To prepare the Fourier Transform Parameter file:


- From the Process menu, choose Parallel Noise Processing.
- 2. In the folder selection panes of the main window, select the folder containing the Site Parameter files you want to work with.

If a suitable Fourier Transform Parameter file exists in the Fourier Parameters folder, SSMT2000 will select that file from the drop-down list.

- To review the selected parameter file, or to create a new file, click on the Toolbar, or choose Edit TS to FT Parameters (PFT) from the Edit menu.
- If the signal source was a white noise generator, select White noise test as the Input Data Type; otherwise, select Measured Field.
- 5. Save the file and close the dialog box.


#### To produce the Fourier transforms:

 Select the Site Parameter files that you want to work with.

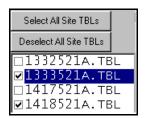


2. On the Toolbar, click , or choose **Create Fourier Coefficients (TS to FT)** from the **Process** menu.

SSMT2000 opens a new window and applies Fourier coefficients to the data from each selected Site. The windows close automatically approximately 10s after processing ends:

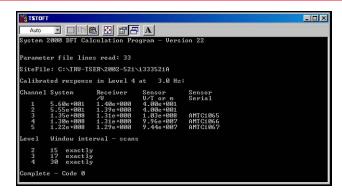

The results are saved in files with the same name as the Site Parameter file, but with an extension of FCn, where n is the frequency band.

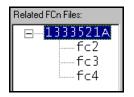

These files are listed in the lower left pane of the main window whenever the associated Site Parameter file is selected. Click the + or – sign to expand or contract the list.


**Reprocessing the Fourier Transforms.** A processing parameters dialog box similar to that for robust processing allows you to set up the channels to be processed.

When you setup these parameters, SSMT2000 will suggest a file name based on the number of E and H channels selected, the date and run number from the first Site Parameter file chosen. For example, if two E-channels and 3 H-channels are selected from Site Parameter file 1332523A.TBL, the file name suggested by SSMT2000 will be E2H3523A.PRM. You can override this suggested file name if you want. The file name of the PRM file will become the file name of the output file, with the extension NPI.

#### To edit the reprocessing parameters:

 In the main window folder selection panes, select the folder containing the Site Parameter files you want to work with. (You do not need to select individual files.) 2. On the Toolbar, click or choose **Parallel Noise** processing (PRM) from the **Edit** menu.

The **Parallel Noise Test Processing Setup** dialog box appears.

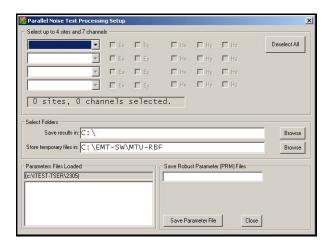


3. Select the site(s) from which you want to take channels. The drop-down lists display all the files contained in the Site Parameters folder that you selected in the main window.

4. Select the E and H channels from each site that you want to process together. You can select up to 7 channels in total.

The message box below the lists confirms the number of different sites and channels selected.



5. Select the folder in which to store the output (Plot) files.

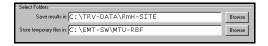

Either locate an existing folder by clicking or type the full path and folder name in the text box.

You can type a name for a folder that does not yet exist on your hard drive—SSMT2000 will create the folder during processing. (The folder that is to *contain* the new folder must already exist, however. SSMT2000 cannot create nested folders.)

- In the same manner, select the folder in which to store the temporary files that SSMT2000 creates during processing.
- 7. If desired, overwrite the file name suggested by SSMT2000 for the processing parameters (PRM) file. The file name entered here will be used as the output file name, but with the extension NPI.
- 8. Save the file and click on return to the main window.

#### To reprocess the Fourier transforms:

- 1. In the lower right pane of the main window, select the Robust Parameters file that you just prepared.
- 2. On the Toolbar, click , or choose **Process** from the **Process** menu.

SSMT2000 opens a full-screen DOS window and reprocesses the Fourier transforms. This can take several minutes, depending on file sizes. The window closes automatically when reprocessing is finished.





The NPIPlot program allows you to view and print parallel noise test results that have been processed by SSMT2000.


Viewing Noise Test Results with NPIPlot

73 Chapter 3 73

# **Starting NPIPlot**

Launch the NPIPlot program as you would any Windows program: double click the desktop icon or click Start, point to Programs, then to Phoenix Geophysics NPIPlot, and click NPIPlot.

The main program window appears.

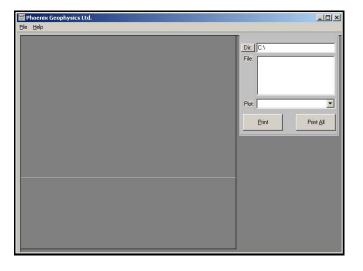


# Viewing test results

You can view comparisons of any pairs of channels in any of the noise plot files output by SSMT2000.


#### To select a file for viewing:

- 1. To locate the folder containing your parallel noise output files, either click <u>Dir.</u> or double click the text box beside it.
- 2. In the **Browse for Folder** dialog box, select the folder containing your output files and click **OK**.
- 3. In the **File** list, click the file you want to use.

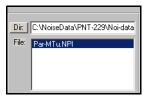


#### To select channels to plot:

• Click anywhere in the **Plot** list and then click the channel pair you want to plot.

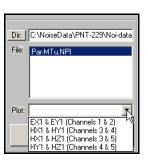

Two channel plots appear in the chart area. The upper plot shows signal amplitudes and the difference between them; the lower plot shows coherency and amplitude ratio.

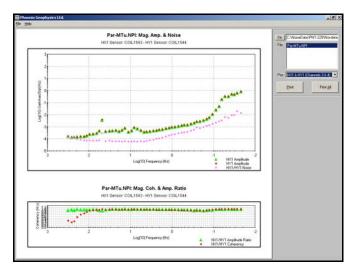

5 Chapter 3 Vi ewi ng test resul ts 75


# Modifying the plot appearance

The colours, shapes, and other characteristics of the plot can be customized in several ways.

#### To modify the plot appearance:

1. Right-click anywhere on the plot and click Appearance.

The **Plot Options** dialog box appears.

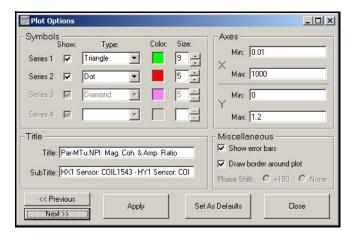

- 2. Use the controls within the dialog box to customize the appearance of the upper plot.
- and use the controls Click Next>> << Previous to customize the appearance of the lower plot.
- Apply When you are satisfied, click
- If you want to keep these settings as the defaults Set As Defaults for other plots, click

## Printing noise test plots

You can print each pair of plots individually, or you can print a set of all pairs as a single print job. Each page will be printed in landscape orientation, unless you change the setting from the File menu.

#### To override the printing defaults:

- 1. From the **File** menu, click **Print...**
- In the **Print** dialog box, make the changes you want.

If you want to add header information such as your company name and address, click **Include header**, and type the desired information in the **Header** area.

3. Click

Note Printing overrides are not saved. If you want to print more plots in the same configuration, repeat the procedure just described; do not use the **Print** button.

#### To print using the defaults:

- To print all the channel pairs, click
   Print All

# **Evaluating noise test plots**

All curves in the plots should be fairly smooth, except at the extremities of the frequency range and at the frequency of the local power grid.

In the lower plot, both the amplitude ratio and coherency should approach 1.0 except at the extremities of the frequency range.

In the upper plot, the signal amplitudes should be roughly a decade above the signal differences.

# Viewing and exporting channel data

You can view the data from the NPI files in a spreadsheet format on screen. You can also export the data from the EDI format to ASCII format files that can then be opened in a word processor or imported to a spreadsheet program.

#### To view or export channel data:

- 1. Right-click anywhere on the plot you want to export and click **View Data**.
- 2. If you want to export the data, click **Save To File**.

A plain text file with the same name as the NPI file but with the extension ASC is saved in the same folder as the source data.

For an example of how to import report files into spreadsheets, see "Opening reports in a spreadsheet program" on page 65.



# Chapter

The output of the SSMT2000 program is one or more files (known as MT Plot files) that form the basis for calculating apparent resistivity and other characteristics of the site. For best results, these files must be edited one frequency at a time, both to verify the viability of the sounding and to reduce or eliminate low quality data.

The edited files can then be translated into various industry-standard EDI formats for use by interpretation software.

Editing and translation is done with the MT-Editor program, described in this chapter.

# **Editing Processed Data with MT-Editor**

79 Chapter 4 79

## MT-Editor overview

MT-Editor is a Windows-based program that takes as input one or more crosspower (or "plot") files created by SSMT2000. MT-Editor merges the crosspowers and displays its calculations graphically. This lets you view different characteristics of the soundings, such as apparent resistivity, phase, impedance, strike direction, coherence, and so on, across the full frequency range that was acquired.

MT-Editor also gives you the ability to remove individual crosspowers from the calculations, so that you can edit out poor quality data. The edits are made by changing a mask, not by deleting data, so it is easy to restore individual crosspowers or revert to the initial view. The program includes an "auto-edit" capability that quickly masks crosspowers that lie too far from the mean, saving considerable time in the editing process.




**Note** To have full functionality, you must register your copy of MT-Editor with Phoenix Geophysics Ltd. You will not be able to save or export your work until the program is registered. See "Registering MT-Editor" on page 139.

## **Exploring MT-Editor**

This section describes the basics of the MT-Editor program:

- Starting the program.
- · Understanding the main window, the toolbars, and the menus.

The SAMPLE DATA folder on the software distribution. CD contains several plot files (\*.MT, \*.EMT). As you read this chapter, you may want to open these files and experiment with the program features.

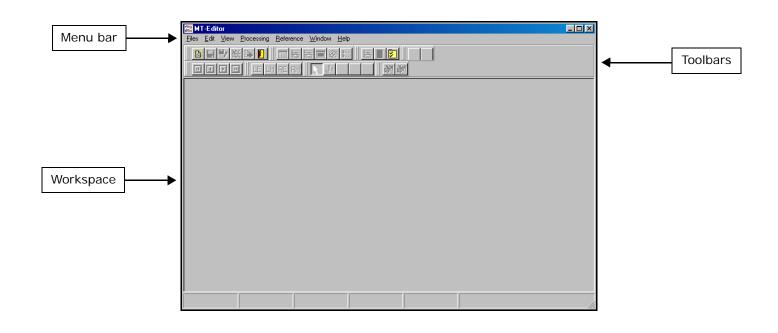

The MT-Editor main window.

1 Chapter 4 Exploring MT-Editor

Start MT-Editor as you would any other Windows-based program: either double click a desktop shortcut, or launch the program from the **Start** menu.

#### The main window

When you launch the MT-Editor program, the main application window appears (see the illustration on page 81).

Across the top of the main window are the menus:



Below them are the toolbars:



Below the toolbars is the main workspace, in which other windows will open as you work with your files.

The workspace will be blank when you launch the program.

The menus and the toolbars both allow you to perform the most common tasks. The menus include some commands that are not available from the toolbars.

#### The menus

This section briefly describes each of the seven menus.

Note Individual commands on each menu are disabled and appear dimmed unless a window in which they can be used is open.

> If a keyboard shortcut exists for a command, it appears to the right of the command on the menu. Menus and commands can also be activated by holding down the Alt key while typing the underlined letter in the menu.

Throughout the instructions in this manual, tools and commands that appear on both a menu and a toolbar are referred to by the toolbar only. It should be understood that menus and keyboard shortcuts can also be used where available.

The Files menu. The commands on this menu are used to open, close, and export crosspower files; to print the active window contents; to perform automatic editing of several files at once ("batch" processing); and to exit the program. Most of these commands are duplicated on the Files toolbar.

**The Edit menu.** The two commands on the **Edit** menu, **Deleting** and **Restoring**, toggle the effect of some of the selection tools on the **Cursors** toolbar, used in editing crosspowers. The commands are duplicated on the **EditingMode** toolbar.

**The View menu.** The **View** commands allow you to switch among various graphical and textual views of the data, and also allow you to show or hide each of the toolbars. All the commands except the **Toolbars** submenu are duplicated on the **View** toolbar.

The Processing menu. This menu contains the commands used to automatically or manually edit the crosspowers and to retrieve previous editing sessions. The **Options** command lets you set the properties of export files such as header text identifying survey participants, distance to the reference site,

measurement units, and EDI format. Most of the **Processing** commands are duplicated on the **Navigate** and **Processing** toolbars.

The Reference menu. The commands on this menu let you switch among four types of calculation that may have been output by SSMT2000, using Local E, Local H, Remote E, or Remote H channels as reference.

The Window menu. The commands on this menu let you organize and rearrange multiple windows that may be open in the main workspace. If the window you want to see is hidden behind others, you can select it from the **Window** menu to bring it to the front. You can also close all open windows without closing the file(s) you are working with.

The Window commands are not available on a toolbar.

The Help menu. The About command on this menu provides information on the program version and links to the software's author. The **Registration** command lets you retrieve and input the coded information that will register the software and enable full functionality.

Chapter 4 Exploring MT-Editor 83

For registration instructions, see "Registering MT-Editor" on page 139.

#### The Toolbars

This section briefly describes the eight toolbars, which provide quick access to the most frequent commands.

Note

Individual tools on each toolbar are disabled and appear dimmed unless a window in which they can be used is open.

Hover the mouse pointer over a tool to learn its name and keyboard shortcut, if one exists.

You can customize the main window by showing or hiding individual toolbars, and by rearranging them. This lets you maximize the workspace and the graphs within it.

#### To show or hide a toolbar:

 Right-click anywhere in the toolbar area, or choose ToolBars from the View menu. Select the toolbar that you want to show or hide. (Toolbars that are currently showing are indicated by a check mark.)



#### To move a toolbar:

 Point to the pair of ridges on the left end of the toolbar, and drag it to a new position.



The other toolbars will move as necessary to accommodate the toolbar's new position.

#### The File toolbar.

#### **Button Command**

Open file(s).

Save file(s).

Save As. Saves file(s) with new name(s).

Close. Immediately closes all open files, whether saved or not.

ExportTo. Saves the edited data in a variety of FDI formats.

Exit the program.

# Warning! Be sure to save or export your work before using the Close command, unless you want to discard your edits and begin again.

#### The View toolbar.

Each button on the **View** toolbar opens (or brings to the front) a different window.

#### **Button Command**

View station header information.

View Starting Data. Shows the data with no editing mask applied.

View Resulting Data. Shows the data with the editing mask applied.

View Mask. Shows a block diagram of the editing mask itself.

View Polar Diagrams.


View Oplog (Operator Log) Lines.

5 Chapter 4 Exploring MT-Editor 85

#### The Processing toolbar. 🖾 🛮 💆

The buttons on the **Processing** toolbar open the editing window and also enable the Navigate, **Cursors**, and **EditingMode** toolbars.

#### **Button Command**

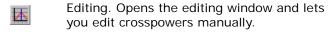

AutoEdit. Applies an algorithm to mask outlying crosspowers. To see the result, click Editing.

Options. Lets you set up default file properties for exporting in EDI format.

#### The Show toolbar.

These tools are only available during editing. Their calculations do not include deleted crosspowers.

#### **Button Command**

Mean view. Shows the arithmetic mean of the crosspowers that make up a given data point.

Std view. Shows ±1 standard deviation of the crosspowers that make up a given data point.

#### The Navigate toolbar.

You can use these tools when editing, to move from one data point to another. However, it is generally more efficient to use the keyboard shortcuts.

#### **Button Command**

First. Moves to the leftmost data point. 41 (Shortcut: CTRL+A.)

Prior. Moves leftward one data point. (Shortcuts: CTRL+S, <spacebar>, or Left Arrow.)

Next. Moves rightward one data point. Ŀ (Shortcuts: CTRL+D, <spacebar>, or Right Arrow.)

Last. Moves to the rightmost data point. (Shortcut: CTRL+F.)

Note The spacebar moves leftward or rightward one data point depending on the last direction set by the Prior or **Next** commands. It also automatically reverses direction when the First or Last data point is encountered.

#### The Cursors toolbar.



When editing, the cursors allow you to delete (i.e., mask) or restore single or multiple crosspowers. For three of these tools, you must first choose **Deleting** or Restoring from the EditingMode toolbar or the Edit menu to define the effect the cursor tool will have.

In any graph, the **Pointer** tool lets you enlarge part of the graph (zoom in) and restore it to 100% size.

#### Button Name and Use



Pointer. Use this tool to zoom in on part of a graph. To zoom in, drag a rectangle from top left to bottom right of the area you want to enlarge. To restore to 100% size, drag diagonally in any other direction.



Hand. Use this tool to toggle the status of a single crosspower. Click once to delete a crosspower, click again to restore it. (The Hand reverts to the Pointer tool when the cursor is not directly over an editable crosspower.)

#### Button Name and Use



Two Vertical Lines. Use this tool to delete or restore a group of crosspowers. First choose Deleting or Restoring from the Editing-Mode toolbar, then use this tool to select the group. Click between any two crosspowers to set the first boundary, then move just beyond the last crosspower in the group and click to set the other boundary. All the crosspowers between the Vertical Lines will be deleted or restored.



Circle. Use this tool to delete or restore individual crosspowers. First choose **Deleting** or **Restoring** from the **EditingMode** toolbar, then click with this tool directly on the individual crosspowers.



Lasso. Use this tool to delete or restore a group of crosspowers. First choose **Deleting** or **Restoring** from the **EditingMode** toolbar, then use this tool to drag a rectangle from top left to bottom right, surrounding the crosspowers you want to delete or restore.


Chapter 4 Exploring MT-Editor

#### The Reference toolbar. LE LH RE RH

If local or remote F or H channels were used as reference(s) during SSMT2000 processing, the tools on the **Reference** toolbar will allow you to switch among them when editing.

#### **Button Command**

LE	Local E. Shows the results of Local E refer-
	ence processing.

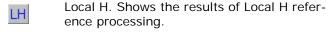

Remote E. Shows the results of Remote E reference processing.

Remote H. Shows the results of Remote H. reference processing.

#### The EditingMode toolbar.



The **EditingMode** toolbar lets you toggle the effect of several tools on the Cursors toolbar, switching between deleting and restoring the crosspowers selected with the cursor.

#### **Button Command**



Deleting. To delete crosspowers, choose this tool, then choose the Lasso, Circle, or Two Vertical Lines cursor.



Restoring. To restore deleted crosspowers, choose this tool, then choose the Lasso. Circle, or Two Vertical Lines cursor.

# Setting up export options


Before you begin editing data from a survey, you should set up the options that will be common to all the files that you export to your interpretation software.

The actual values for these options will vary depending on the interpretation software that you choose; consult the software's documentation to learn what values are appropriate.

#### To set export options:

1. Click on the **Processing** toolbar.

The Options dialog appears.

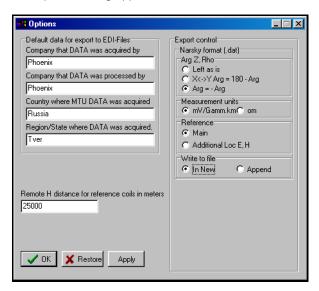

- 2. Type in the **Default data for export to EDI-Files** as described above each text box in the dialog.
- 3. Calculate the average distance in meters between the survey sites and the magnetic reference site, and type in the Remote H distance for reference coils in meters
- 4. Make four selections in the **Export control** area, according to the requirements of your interpretation software and the circumstances of your survey:
  - Change **Arg Z**, **Rho** if your software requires an orientation of the impedance matrix different from the Phoenix standard.
  - Choose Measurement Units of either mV/Gamma (H) and mV/km (E) or om (ohmmeters).
  - If an additional local **Reference** was used. choose Additional Loc E, H; otherwise choose Main.
  - To export (Write to file) all results in a single continuous file, choose Append; to export results in separate files, choose In New.

89

5. Click **OK** to apply the changes and close the **Options** dialog.

# Starting an editing session

Every editing session begins by opening one or more plot files output by SSMT2000. When opening files in MT-Editor, it may be necessary or desirable to specify that only a subset of the data be used. You will also have the choice of continuing with a previously saved editing session, or starting again with the raw data. This section explains how.

## **Specifying frequencies**

The plot files to be edited from a given survey site will vary in content depending on several factors:

- Equipment used (MTU, MTU-A; MTC-50, MTC-30).
- Processing parameters chosen in SSMT2000 (Frequency Ranges; Maximum Crosspowers).

It is therefore possible that you will have several files for each site, with each file possibly containing a different number of crosspowers and a different frequency range. MT-Editor allows you to selectively merge the files so that the final output contains the best quality data (up to 100 crosspowers per frequency) and a range of up to 100 frequencies.

For example, data acquired by an MTU-5 using MTC-50 coils could be processed in three ranges of 40 frequencies each: MTH, MTL, and MTR (see the illustration on page 91), with perhaps 40 crosspowers per frequency. MT-Editor could open all three files at once, and for the 20 frequencies in MTL that overlap MTR, all 80 crosspowers would be used to calculate each frequency.

Allowing for the 20 frequencies that overlap, the total number of frequencies for the site would be:  $(3 \times 40) - 20 = 100$ .


A more complex example would be to combine data acquired by an MTU-5A first with MTC-30 coils, then with MTC-50 coils, at a single site. The data could be

processed in the EMT, HMT, and RMT ranges with 60 crosspowers per frequency. In this example, the 20 overlapping frequencies in EMT and HMT could not be combined, because  $2 \times 60$  crosspowers would exceed the 100-crosspower limit. Instead, when opening the files, you would specify that only the first 20 frequencies of the EMT range (or perhaps, only the last 20 of the HMT range) should be used. The result would be 100 frequencies (20 + 40 + 40 = 100) calculated from 60 crosspowers each.

See "Opening files" on page 92 for instructions on how to specify which frequencies should be used.

Note

If you open only one file, all its frequencies will be used; the **Open** dialog does not allow you to specify a subset. (If for some reason you want to remove a frequency entirely, you can delete all the crosspowers for that frequency when editing.)

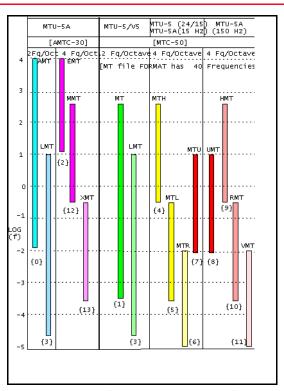

Frequency ranges (processing parameters).

## Continuing from a previous session

When you save your work during an editing session, MT-Editor saves the mask that you create, giving it the name PLOT-EDIT. It does not change the raw data, which is preserved with the name PLOT-COMP. Each new editing session is saved separately. This means that when you open files for editing, you have the choice of starting with the raw data, or continuing from where you left off in a previous session. (You can also revert to previous work during an editing session by choosing **Other editing** from the **Processing** menu.)

## **Opening files**



As soon as you open files, the **Open** menu command and tool are disabled, and remain so until you close the files. If you close all the windows in the main workspace, it may appear that no files are open—yet you cannot use the **Open** command. In this case, either

re-open the windows for the current files, or click to close the current files and enable the **Open** command.

#### To open a single plot file for editing:


1. Click on the Files toolbar.

A standard Windows Open dialog appears.

- 2. Navigate to the folder containing your plot files, and select the file that you want to edit.
- 3. Click **Open**.

If no previous editing session was saved, the **Program output** window appears briefly, followed by the **Starting data** window.

If one or more previous editing sessions were saved, a dialog appears with a list of them sorted from earliest to latest.

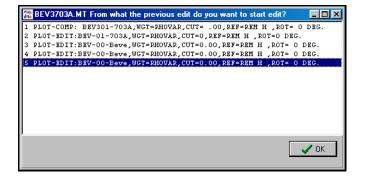

- 4. If you want to start with unedited data, select the line that begins with PLOT-COMP. If you want to continue from a previous session, select one of the lines that begin with PLOT-EDIT.
- 5. Click OK.

The **Program output** window appears briefly, followed by the **Starting data** window.

Note

When opening multiple files with mixed reference types, ensure that the first and last files that you select are from sites processed with remote H reference channels. Otherwise, all files will be treated as having local H reference only. (This condition will be removed in a future upgrade of MT-Editor.)

#### To open multiple plot files for editing:


1. Click on the Files toolbar.

A standard Windows Open dialog appears.

2. Navigate to the folder containing your plot files, and select the files that you want to edit. (Hold down the Ctrl key while clicking to select multiple files.)

#### 3. Click Open.

For each file in turn, a dialog appears with a list of saved editing sessions and two frequency selection boxes.

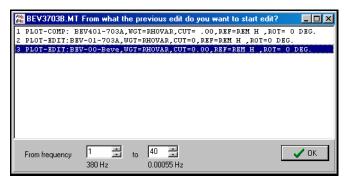

- 4. If you want to start with unedited data, select the line that begins with PLOT-COMP. If you want to continue from a previous session, select one of the lines that begin with PLOT-EDIT.
- If you want to include only a subset of the data, change the frequency number in one or both of the frequency selection boxes. (You can replace the default by selecting it and typing a new number, or

you can click on the up and down arrows to scroll through the list.)

6. Click OK.



When files contain overlapping frequencies, it can be valuable to first open them separately, to find out which contain the best quality data at various frequencies. Then when you merge the files for editing, you can specify which frequencies to use from each.

# Viewing the Starting data and Resulting data

Because MT-Editor uses a mask to "delete" crosspowers, it is always possible to view both the results of your edits and the data you started with. Two different windows display these views: the **Starting data** window and the **Resulting data** window.

## Opening the windows


When you first open files, MT-Editor performs a series of calculations in the **Program output** window, and then opens the **Starting data** window automatically. If you close this window, you can reopen it from the toolbar.

#### To open the the Resulting data window:

Click on the View toolbar.

#### To reopen the Starting data window:

• Click on the View toolbar.

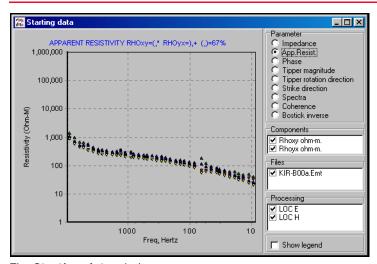

The **Starting data** window.



When multiple windows are open, you can bring a hidden window into view by choosing it from the **Window** menu.

# Choosing parameters and components to view


The **Starting data** and **Resulting data** windows allow you to view nine different parameters of the plot files:



As you select each parameter, the **Components** list will change appropriately, allowing you to select which components are displayed. By default, all components, processing methods, and files for the displayed parameter are selected when you first open the window.

# To toggle the display of components, files, processing methods, or legends:

 Select or clear the the item in the control area lists that you want to display or hide. A checkmark indicates that an item is displayed.

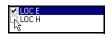



Viewed on screen, the control areas of the **Resulting data** window make clear what components the markers represent. However, the control areas will not appear in a printout. To produce a meaningful printout, select **Show legend** before printing.

## **Customizing the windows**

You can customize the appearance of the **Starting data** and **Resulting data** windows in a variety of ways. MT-Editor saves the customizations between launches. Even if you don't customize, though, choosing different files, parameters, and window sizes may result in windows or window controls being

clipped. This section explains how to manage the windows' appearance.

Moving and resizing windows. Use standard Windows mouse commands to change a window's size and position: move a window by dragging its title bar; maximize it by clicking the Maximize button; resize or reshape it by dragging the corners or sides.

Resizing or restoring window controls. The right hand side of each Starting data or Resulting data window contains a set of controls for choosing the parameter to display, as well as for selecting which components, files, processing types, and legends should be visible. See "Choosing parameters and components to view" on page 95 for instructions on using these controls.

If more choices are available than can fit into a control list, a scroll bar will appear to the right of the list. Depending on the the number of files, channels, or components available, it may be helpful to resize a control area to avoid the need to scroll. Furthermore, if you resize the whole window, you may find that some of the controls are clipped at the bottom. Resizing any control area will restore the clipped areas.

#### To resize a control area:

1. Move the mouse pointer into the space below the control area you want to resize, until the pointer changes to a double-headed arrow.



Drag the mouse pointer to a new position (indicated by the gray line that appears when you click).

The control area changes size, and the controls below it adapt to the remaining space.



You cannot expand a control area if it would force areas below it to move outside the window boundary. To size the controls most efficiently, resize the bottom control first, then the next above it, and so on.

#### To restore clipped (hidden) controls:

If you cannot see a control (it has been clipped by resizing the window), simply click between two

control areas, where the mouse pointer is a doubleheaded arrow.

The controls resize automatically.

## Changing graph properties

The graph of any of the **Parameters** viewable in the Starting data and Resulting data windows can be further customized by changing its properties. Two methods are available: the ChartEditor, and Properties.

#### Warning!



ChartEditor provides direct access to the underlying graphic engine at the core of MT-Editor. It is very powerful, and with few exceptions, it is not intended for regular use with MT-Editor. Users are cautioned not to change settings in ChartEditor except as explicitly instructed in this User Guide.


#### To access ChartEditor or Properties:

Right click anywhere within the frame of the graph (not the control areas) and choose either

ChartEditor or Properties from the popup menu, as noted in the instructions that follow.

#### To optimize the x-axis:

- Choose **Properties** from the popup menu.
- Select AutoX.
- 3. Click to apply the change and close the dialog.

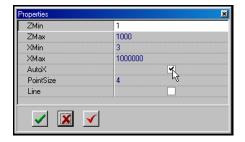


The scale adjusts to fit all the data points into the entire horizontal axis.

#### To change axis scales manually:

1. Choose **Properties** from the popup menu.

- 2. Click on the **Min** or **Max** value you want to change and type a new value.
- 3. If you are changing the horizontal scale, clear AutoX.
- 4. Click to apply the change and close the dialog.

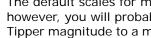

Tip The default scales for most graphs should be adequate, however, you will probably want to set the values for Tipper magnitude to a minimum of 0.01 and a maximum of 1.0.

It is best to use non-zero values in all fields. Minimum values of 0.0 for any graph may cause all points to disappear from view.

#### To change marker size for all points:

- 1. Choose **Properties** from the popup menu.
- 2. Click on **PointSize** and type a new value.

The size of the markers for all data points changes to the new value.

3. Click \(\formaller\) to apply the change and close the dialog.

### To change marker properties for only one component:

- Choose ChartEditor from the popup menu.
- Click the Series tab.
- 3. Select the component from the drop-down list.
- 4. Select a new marker **Style**, **Width**, and/or **Height**.
- Close the ChartEditor.

Note Changing PointSize in the Properties dialog will reset all the markers to their default shapes and the current point size.

### To add a line between points:

- 1. Choose **Properties** from the popup menu.
- 2. Select Line.

The graph style changes from markers only to line plus markers.

## Opening and customizing the Editing window

#### To open the editing window:


1. If you want to use Autoediting, click on the **Processing** toolbar.

The **Program output** window displays the editing mask in binary form.

2. Click on the **Processing** toolbar.

The **MTEd1** window appears. Rho<sub>xy</sub> points and crosspowers are indicated by red triangles. Rho<sub>yx</sub> points and crosspowers are indicated by green triangles. The active frequency (left hand panes) and any crosspowers deleted by Autoediting (right hand panes) are indicated by white triangles. See "The editing window." on page 100.

Note ■# Early versions of MT-Editor may display incorrect symbols in the titles of each of the four graphs. Correct symbols are shown in the illustration.

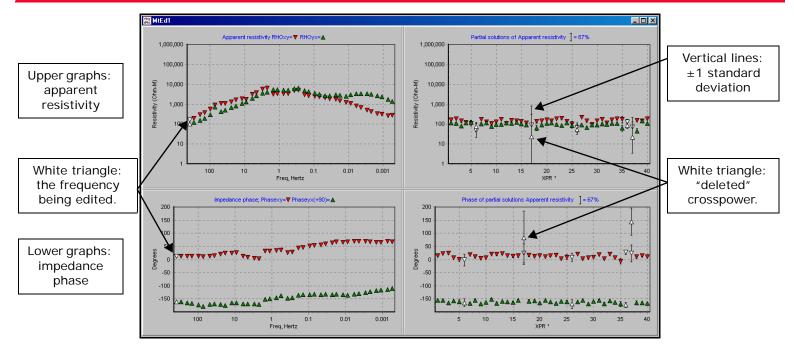

The editing window.

### **Changing graph properties**

The properties of the four graphs in the Editing window can be changed in the same way as those in the **Starting data** and **Resulting data** windows. See "Changing graph properties" on page 97 for instructions.

#### To change the proportions of the four graphs:

- Position the mouse pointer on either the vertical or horizontal double lines that separate the graphs, until the pointer changes to a double-headed arrow.
- 2. Drag the double lines to a new position.



On computers with small screens, it can be hard to position the editing cursor exactly on the crosspower you want to edit—especially if the number of crosspowers is large. Be sure to use the options of zooming and resizing the graphs and/or resizing the markers so you can work more easily.

### **Editing the crosspowers**

The primary objective of editing is to create a smooth apparent resistivity curve, by eliminating from the calculation of each data point any crosspowers that were affected by noise. The editing is done by deleting or restoring individual crosspowers in the two graphs on the right of the window. The effect can be seen in the two graphs on the left of the window.

There are two methods of editing, auto and manual, as mentioned above. With normal quality data (low to moderate noise), it is best to start with autoediting and then refine the result with manual editing. With very noisy data, it may be faster to start by deleting *all* the crosspowers for a given frequency, and then selectively restore the best.



Impedance phase is often more sensitive to noise than apparent resistivity is. You may find it most efficient to start editing using the phase graphs, then refine the result using the apparent resistivity graphs. For the best results, repeat the editing using different reference processing (Local E, Local H, etc.), if it is available.

For efficency, scan the crosspowers for each frequency as you begin to edit them, and choose the most appropriate tool from the **Cursors** toolbar to make your changes.

- If only one or two crosspowers are of low quality, choose the **Hand** tool.
- If several crosspowers in a row are of low quality, edit them as a group. Choose the Two Vertical Lines or the Lasso tool and toggle its effect by choosing Deleting or Restoring from the Editmode toolbar.

To learn how to use all the tools, see "The Toolbars" on page 84.

#### To Autoedit the crosspowers:

Click on the Processing toolbar.

### To manually edit the crosspowers:

1. If necessary, click to make the first frequency active.

- 2. Evaluate the crosspowers in the right hand pane, looking for long vertical error bars (indicating a large standard deviation) and crosspowers that vary significantly from the others.
- 3. If it is helpful, show the **Mean** and/or **Standard Deviations** of the crosspowers by clicking or on the **Show** toolbar.
- 4. Use one of the tools on the **Cursors** toolbar to delete the low quality crosspowers (or to restore them if you change your mind).
- 5. Evaluate the effect of your editing by examining the left hand panes.
- 6. When you are satisfied with the results, move to the next crosspower (see "The Navigate toolbar" on page 86) and repeat from step 2.
- 7. When all the crosspowers from a given type of processing have been edited, consider whether the results can still be improved: if possible, select a different type of processing from the **Reference** toolbar IFIME and repeat the editing process.


### Viewing the data mask

Although the terms Deleting and Restoring are used to refer to the editing process, no crosspowers are actually deleted from the data. Instead, they are temporarily removed from the calculations of the data points. It can be useful to have an overall view of how many crosspowers remain in use; the **Mask View** shows this information.

#### To view the data mask:

Click on the View toolbar.

The **Mask View** window appears:

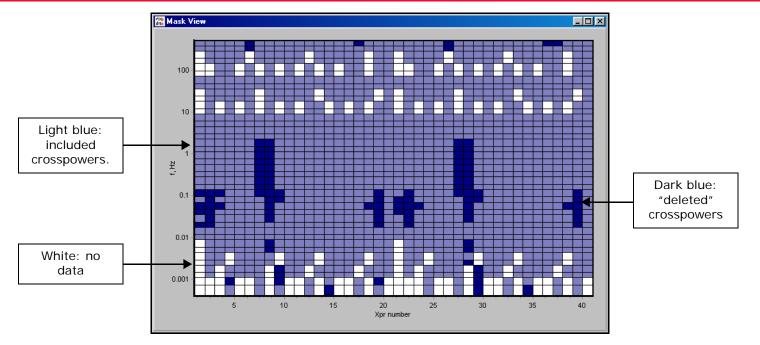

The Mask View window.

Each row of the Mask View table represents a single frequency, with high frequencies at the top of the table and low frequencies at the bottom. Each cell in a row represents a single crosspower. White cells indicate

there is no data; dark blue cells indicate "deleted" crosspowers; light blue cells indicate crosspowers that are included in the calculations.


### Viewing polar diagrams

Polar diagrams of the frequencies in your data set are available from the **View** menu and toolbar. Initially, a separate diagram will be created for each frequency, making the individual plots very small. However, it is easy to change the number of plots that are shown at one time, and to view only a subset of the data.

#### To view polar diagrams:

Click on the View toolbar.

The Polar diagrams window opens.

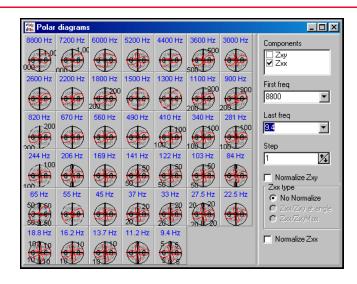

## Customizing the polar diagrams window

Use the controls on the right hand side of the polar diagrams window to customize the display.

Chapter 4 Pri nti ng

- Select or clear the components (Zxy, Zxx) that you want to display or hide. A checkmark indicates that a component is currently displayed.
- To see a contiguous subset of the data, choose from the drop-down lists the **First** and **Last** frequencies you want to view. (This is a good way to increase the size of individual plots.)

**Note** The value you set for **First freq** must be greater than the value for Last freq.

- To see a non-contiguous subset of the data, change the **Step** value. A **Step** value of 2 will display every second frequency between First and Last; a Step value of 3 will display every third frequency, and so on. (Increasing the Step value is also a good way to increase the size of the plots.)
- To normalize either of the component values, select the appropriate **Normalize** controls. A checkmark indicates that a component is currently normalized.

### **Printing**

The **Print** command on the **Files** menu is under development. At present, only some graphs can be Previewed or Printed from this menu, in portrait orientation only (regardless of print setup properties).

For more control over the appearance of a printed graph, use the following procedure.

### To print a graph:

- Right click on the graph and choose ChartEditor from the popup menu; if **ChartEditor** is not on the menu, choose Properties.
- 2. Click the **Print** tab.
- Select the page orientation desired.
- 4. To change the margins, drag the dotted lines in the preview pane.
- 5. Click **Setup** to choose your printer and set its properties in a standard Windows Print Setup dialog.
- 6. Close the **Print Setup** dialog.

#### 7. Click Print.



Most printing will be done from the **Resulting data** window, where the control areas make clear what components the markers represent. However, the control areas are not printed. To produce a meaningful printout, select **Show legend** before printing.

### Saving your work

You should save your editing periodically as you work, before you close the file(s) you are editing, and before you exit the program.

### To save your edits:

• On the Files toolbar, click either to save the file with its current name, or to open the Save As dialog and save the file with a new name.

### **Exporting in EDI format**


When you are satisfied with your edits, save the data for use with your interpretation software.

#### To export in EDI format:

- Ensure that you have correctly set up the file header and format parameters using the Options command (see "Setting up export options" on page 88).
- 2. Click on the Files toolbar.
- 3. Navigate to the folder where you want to save the output file.
- 4. Choose the file format from the **Save as type:** drop-down list.
- 5. If desired, change the **File name**.
- 6. Click Save.

107 Chapter 4 Saving your work 107

## Chapter

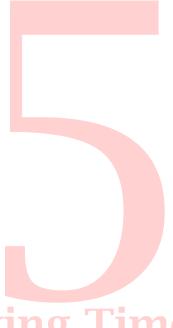

This chapter explains how to use Synchro Time Series View to view and print graphical representations of:

- · raw time series data.
- power spectra derived from the time series data.
- coherencies between pairs of channels.

The time series files must have been acquired with Phoenix System 2000 or System 2000. net equipment. Up to six channels from one or more files can be analysed at one time.

## Viewing Time Series Data with Synchro Time Series View

109 Chapter 5 109

### **Exploring Synchro Time Series View**

Start Synchro Time Series View as you would any other Windows program: either double click a desktop shortcut, or launch the program from the Start menu.

### Understanding the main window

When you launch the Synchro Time Series View program, the main application window appears (see the illustration on page 111).

Across the top of the main window are the Menus:



Below them is the Toolbar:



The Menus and the Toolbar both allow you to perform the most common tasks.

Across the bottom of the main window is the Status bar. At startup the bar is blank, but when time series channels are loaded, the Status bar displays information about the them.



The Synchro Time Series View main window.

### Viewing time series channels

Synchro Time Series View can display and analyse up to six data channels at a time. The channels can be taken from more than one site, but the program will display only those records that lie within a common time span.


### Opening time series files

The first task is to identify which channel(s) from which site(s) to load. Synchro Time Series View will automatically select the highest sampling rate from the first site you select, but you can easily choose another sampling rate if you want.

#### To load time series channels:


1. On the Toolbar, click or choose **Open** from the **File** menu.

The **Load Time Series** dialog box appears. Only the first **Window** button is enabled.

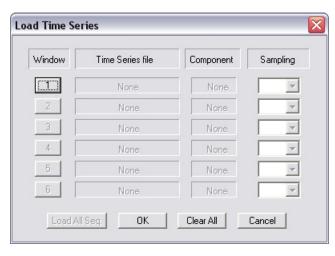

2. In the **Window** column, click .

The **Select TS File and Component** dialog box appears.

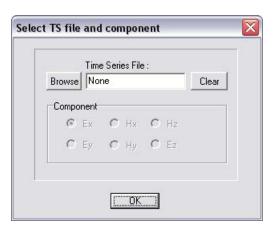

- 3. Click Browse and open any time series file (TSL, TSH, or TS2 to TS5) from the site you want to use.
- 4. In the **Component** area, click the channel you want to view.
- Click **OK** to return to the **Load Time Series** dialog box.

The dialog box displays the names of the time series file and component, and the highest sampling rate of the site. The Window button for the next channel is enabled.




- 6. If you want to load all the remaining channels from the chosen site, click Load All Seq. . Otherwise, click 2 and load the next channel in the same manner as the first channel.
- 7. Continue by clicking the next numbered button until all desired channels are loaded.

**Note:** To load the same channels from other time series files from the same site(s), select a different sampling rate from any list in the **Sampling** column.

8. Click **OK** to return to the main window.

The main window now displays the selected channels in graphical format. The Status bar displays the file name, record

number, saturation status, date, and channel of whichever time series record the mouse points to.

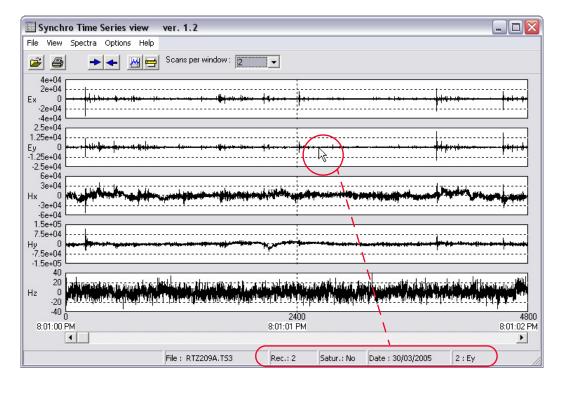

Note: The program opens in a maximized window. If you resize the window, it may become too small to show the Status bar. Increase the size of the window slightly to bring the Status bar back into view.


### Specifying start and end times

Time series files can be very large, depending on the sampling schedule and the length of acquisition. You may want to view only a subset of the records in your files. You can specify start and end times other than the beginning and end of a file.

#### To specify start and end times:

From the Options menu, choose TS info options...

The **Time Series Info Options** dialog box appears:

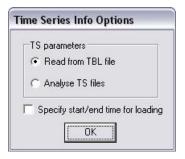

- Select Specify start/end time for loading.
- 3. Click OK.
- 4. From the **File** menu, choose **Open** and load the files you want to view, as described earlier in this chapter.

When you click  $\mathbf{OK}$  in the final step of loading, the  $\mathbf{Specifying}$   $\mathbf{Times}$  dialog box appears:



Edit the dates and/or times displayed in the dialog box and click OK.

The channels are loaded and displayed in the main window.

### Troubleshooting time series files

This section describes a method of opening files that otherwise fail to open and cause an error in Synchro Time Series View.

When you open time series files, Synchro Time Series View reads the associated site parameter (TBL) file to get information on start and end times, number of records, etc. Sometimes (especially with files from


instruments with older firmware) there may be problems getting all the required information from the site parameter file alone.

If you experience problems opening files, it may help to have the program read and analyse the time series files directly to get the required information. (Files may take slightly longer to load if you select this option.)

### To open files by analysing the time series records:

1. From the **Options** menu, choose **TS info** options...

The **Time Series Info Options** dialog box appears:

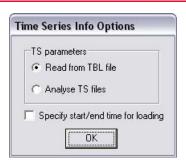

- 2. Click Analyse TS files.
- 3. Click OK.
- 4. Try again to open the file(s) that caused problems.

If you still cannot open the files, contact Phoenix for support.

### Modifying the time series view

Synchro Time Series View provides several controls for modifying the time series view. You can scroll through the records, change the number of scans shown in the window, and change the vertical scale of each chart. The default scale normalizes the data to use the full height of each strip chart with zero in the centre (called "Adaptive scale") and DC offset automatically corrected. Adaptive scale applies to all the scans visible in a given window. When the signal amplitude varies as you scroll through the data, the vertical scale will grow or shrink as needed to normalize the scans currently visible.

You can disable adaptive scaling and increase or decrease the limits manually. You can also disable the DC offset autocorrection. Either of these changes may require you to shift the y-axis origin up or down in order to see the data.

### To change the number of scans visible:

 On the Toolbar, select the desired number of scans in the Scans per window list. (The choices will vary depending on the frequency band of the time series files.)

### To scroll through all the records sequentially:

Click or on the Toolbar.

#### To scroll by increments of 1% of the file length:

 Click the scroll arrows at either end of the scroll bar or press the LEFT ARROW or RIGHT ARROW keys.

#### To scroll by increments of 10% of the file length:


Click in the scroll bar on either side of the scroll box.

#### To scroll rapidly:

 Drag the scroll box. (The smallest increment with this method is 1% of the file length.)

### To change the vertical scale or shift the y-axis origin:

 Right-click on the chart of the channel you want to change (or click on the Toolbar, or choose Vertical Scales from the View menu). The Scale Settings dialog box appears.

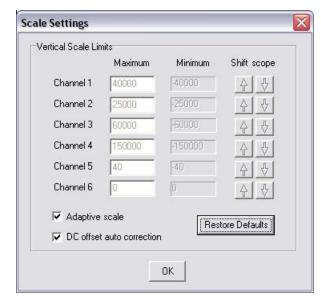

- 2. Clear the Adaptive scale check box.
- Enter a new maximum value for the vertical scale of any channel. (The value is multiplied by -1 to set the minimum value.)

4. If you want to change the position of the y-axis origin, click one of the **Shift scope** buttons.

The y-axis origin will be moved a distance equal to half the original **Maximum** value.

5. Click **OK** to return to the main window.

#### To restore the vertical scale:

- 1. Right-click on the chart of the channel you want to change.
  - To restore the original maximum and minimum and move the y-axis origin back to the centre of

     Restore Defaults

the chart, click Restore Defaults

- to restore adaptive scaling, select Adaptive scale
- to remove DC offset effects, select DC offset auto correction
- 2. Click **OK** to return to the main window.


### Viewing power spectra

Synchro Time Series View includes the capability of calculating power spectra, as well as coherency between pairs of channels.

#### To calculate and view power spectra:

- Load the time series files that you want to work with.
- 2. On the Toolbar, click , or choose **Compute Spectra** from the **Spectra** menu.


The **Spectra Computation** dialog box appears.

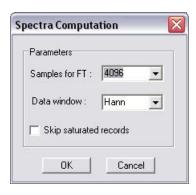

- 3. Choose the number of samples for each Fourier Transform calculation. (The choices will vary depending on the frequency band of the time series files; lower numbers will produce smoother curves.)
- 4. Choose the algorithm to be used in the Data window (Hann, Nuttall, or Rectangular).
- 5. Optionally, to prevent saturated records from being included in the calculations, select **Skip saturated** records.
- 6. Click OK.

A progress dialog box appears while the program computes the power spectra, and then the Spectra window appears, maximized. If both E and H channels have been analysed, the window will be split; if only one type of channel has been analysed, the curves will fill the window.

Note: If Skip saturated records is selected and the time series files contain many saturations, there may not be enough valid records to compute the spectra. Synchro Time Series View will display the error message, "No acceptable time segments found."

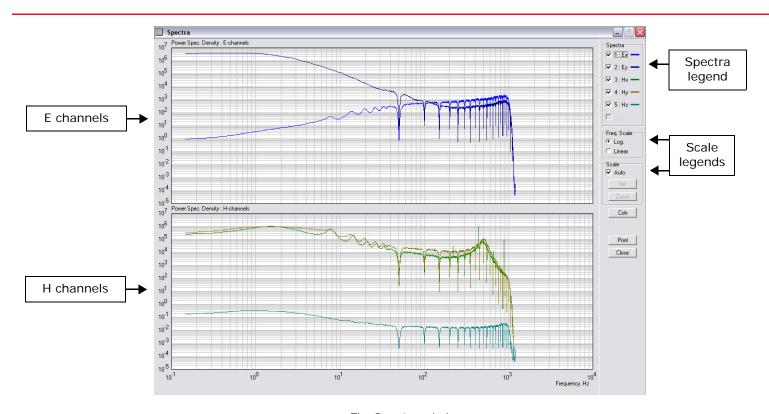

The **Spectra** window.

### Modifying the spectra view

The **Spectra** window provides several controls for modifying the view. You can choose which channel(s) to plot, change the scales, enlarge a portion of the curves, and pinpoint values on the curves.

### To select channels for plotting:

1. The curves are colour-coded in the **Spectra** legend; clear the check box of any channel you want to remove from the graph.



To restore a curve to the graph, select it in the Spectra legend.

By default, the graph is plotted on a logarithmic scale for both axes, with frequency on the x-axis.

#### To change the frequency scale:

Choose Log or Linear from the Freg. Scale legend.



By default, the curves are scaled to fill the available space. You can override this setting by changing the scale of either x or y axis, or both.


### To change the axes limits:

In the **Scale** legend, clear the **Auto** check box.



2. Click

The Scale Settings dialog box appears.

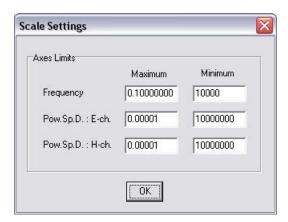

- 3. Edit the minimum and maximum for the frequency, for the E channels, and/or for the H channels, as desired.
- 4. Click OK.

The curves are replotted at the new scale.

5. To restore the default scale, select **Auto**.

### To enlarge a portion of the plot:

1. In the **Scale** legend, clear the **Auto** check box.



2. Click Zoom

The mouse pointer changes to +||+.

- 3. Place the mouse pointer at the left or right boundary of the area you want to enlarge, and drag it to the other boundary. (The boundaries must encompass at least one decade of frequencies. Choosing a smaller span will have no effect.)
- 4. To choose another area to enlarge, select **Auto** and repeat steps 1 to 3.

#### To restore the default scale:

Select Auto.

#### To pinpoint values on the curves:

 Position the mouse pointer over a point on the curve and read the frequency and power spectra density (PSD) values below the Scale legends, between the Coh and Print buttons.



### **Viewing coherencies**

Once the power spectra have been calculated, it's easy to plot the coherencies between all the pairs of channels.

#### To view coherencies:

1. From the **Spectra** window, click Coh

The **Coherencies** window appears, showing curves for all possible channel pairs.

2. The curves are colour-coded in the **Component**Pairs legend; clear the check box of any channel you want to remove from the graph.



To restore a curve to the graph, select it in the Component Pairs legend.

### To pinpoint values on the curves:

 Position the mouse pointer over a point on the curve and read the frequency and coherency values below the Component Pairs legend.



To return to the Spectra window, close the Coherencies window.

## Printing time series, spectra, and coherency plots


Any of the plots can be printed to any printer connected to your PC.

### To print the plots:

1. For time series, click on the Toolbar or choose **Print** from the **File** menu.

For spectra or coherencies, click Print.

The Print Preview window appears.

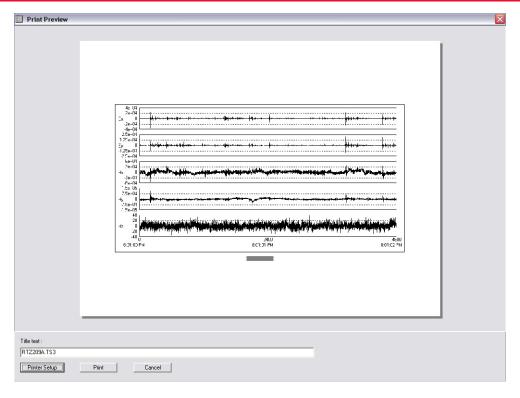

The **Print Preview** window.


2. Edit the **Title text**, which will appear on the printout centred below the plot.




- 3. If you want to modify the default printer settings (choice of printer, page orientation, margins, etc.), click Printer Setup |
  - A standard Windows printer setup dialog box appears.
- 4. Set up the printer as desired and click **OK**.
- 5. Click Print to send the plot to the printer, or click Cancel to return to the plot without printing.




**Appendix** 

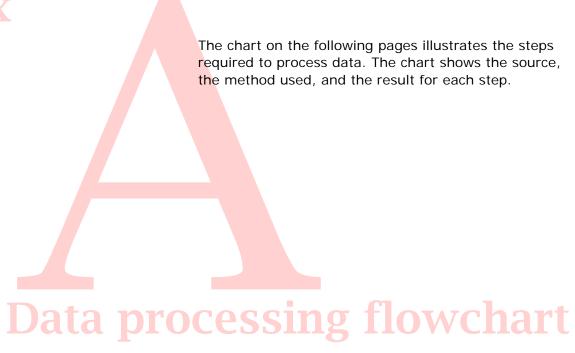

129 Appendix A 129

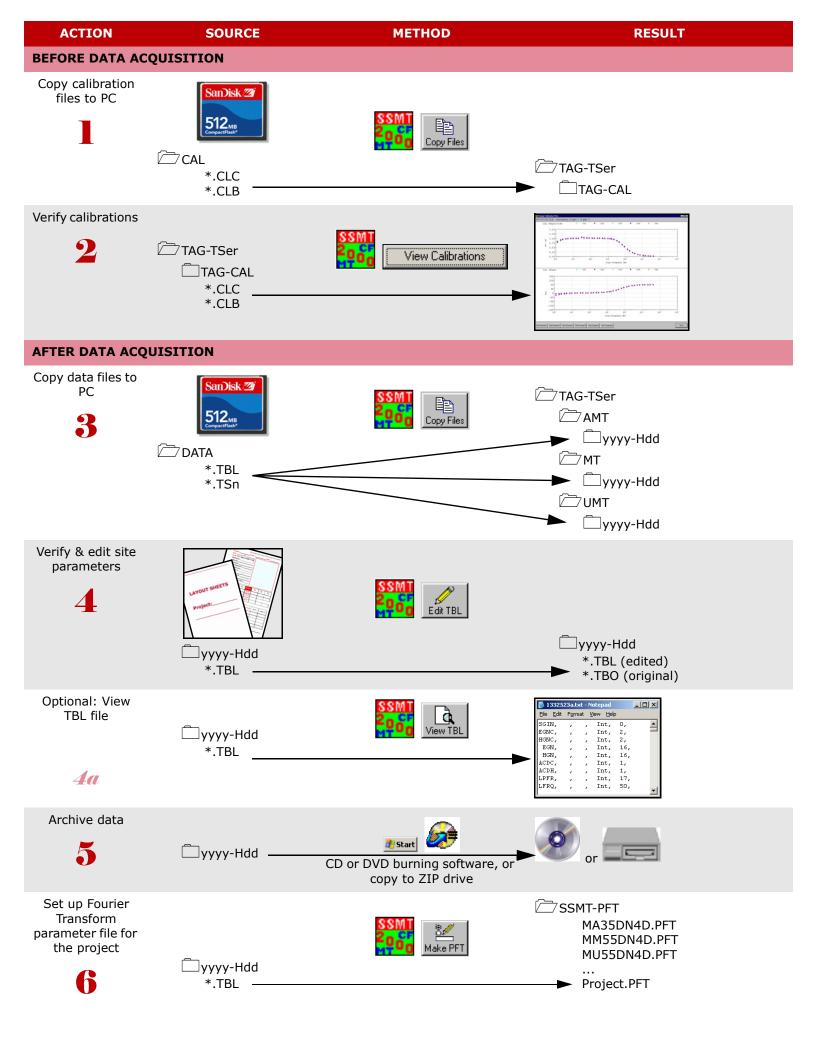

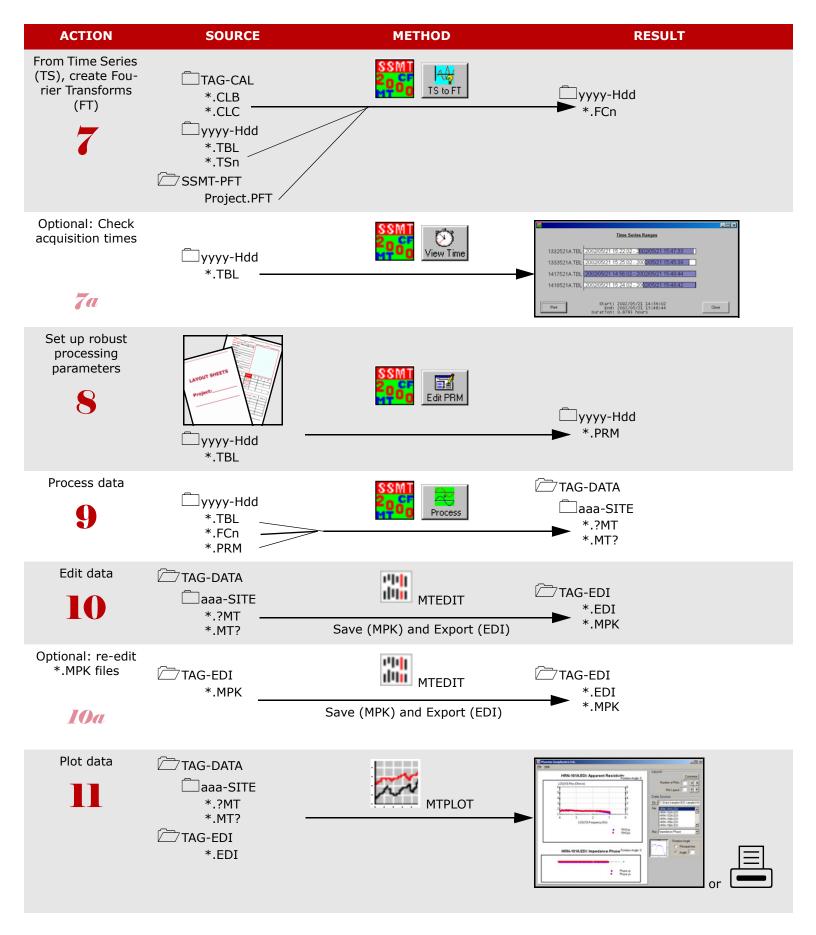

# Appendix -

Before processing data for the first time, you must install the Phoenix processing software on your computer and prepare your file system. This appendix tells you how.

Installing software and setting up your PC

131 Appendix B 131

### **System requirements**

Phoenix software is designed to run on a PC equipped with:

- Microsoft<sup>®</sup> Windows<sup>™</sup> 95, 98, Me, or XP
- Pentium processor
- 100MB of free space on drive C: (for applications)
- 500MB of additional free space on any drive (for temporary files created during processing)
- CD-ROM or CD-RW drive for loading software
- CD-RW, DVD-RW, or other mass storage drive for archiving data
- super VGA (800 x 600) or higher resolution monitor
- parallel port configured as ECP (See "Configuring the parallel port" on page 134.)
- · keyboard and mouse or other pointing device
- Internet access (optional, for software updates)

Data processing can be very time-consuming on older computers. Phoenix recommends using a recent vintage, high-speed Pentium processor. (Celeron processors are not recommended)

### **Installing the software**

Phoenix software is shipped on a CD-ROM that also contains sample data. The data folder is not copied to the PC during the installation process, but can be copied manually if desired.

The Setup program will install MTU and MTU-A Host software, SSMT2000 data processing software, and MT-Plot software. Overall installation is controlled by a batch file that requires you to press a key to start each of the phases of installation.

#### To install the software:

- 1. If Phoenix software has already been installed on your PC, change the name of the folder C:\EMT-SW to preserve your previous work.
- 2. Close any applications that are currently running.
- Insert the Phoenix CD into the CD-ROM drive.
- 4. If Autorun is enabled, wait for Windows Explorer to open.
  - If Windows Explorer does not open automatically, double click on the CD-ROM icon on the desktop.

- 5. Double click on Setup.Bat and follow the instructions on screen.
- 6. Be sure to return to the Setup batch window (a DOS window) and press any key to start each subsequent phase of installation.

Installation is complete when the Setup batch window title says "Finished."

After installing the software, follow the instructions on page 134 to configure the parallel port.

Note

Some customers have reported problems installing the software on Windows Me systems. If your installation fails, use the following alternate procedure.

### To install the software (alternate for Windows Me):

- If Phoenix software has already been installed on your PC, change the name of the folder C:\EMT-SW to preserve your previous work.
- 2. Close any applications that are currently running.
- 3. Create a new temporary folder on your desktop, called PGL.

- 4. Insert the Phoenix CD into the CD-ROM drive.
- If Autorun is enabled, wait for Windows Explorer to open.
   If Windows Explorer does not open automatically
  - If Windows Explorer does not open automatically, double click on the CD-ROM icon on the desktop.
- 6. Copy these folders from the CD to the PGL folder you created:
  - 1\_PC HOST FILES
  - 2 PROGRAMS
  - 3\_SSMT2000
- 7. Copy these files from the CD to the PGL folder you created:
  - autorun.inf
  - ReadMe.html
  - · Setup.Bat
- 8. In the PGL folder, double click Setup.Bat and follow the instructions on screen.
- Be sure to return to the Setup batch window (a DOS window) and press any key to start each subsequent phase of installation.

Installation is complete when the Setup batch window title says "Finished."

After installing the software, follow the next procedure to configure the parallel port.


# Configuring the parallel port

The WinHost program communicates with an MTU/MTU-A via a special cable (part number 6218) and adapter (part number 6228) connected to the PC's parallel port.

The parallel port must be configured as an Extended Capability Port (ECP). ECP provides a high-performance bi-directional communication path between the PC and the instrument. Your PC may already be configured to use the ECP protocol, in which case you need to verify the setup only if you experience problems using WinHost. Otherwise, you will have to configure the port in your computer's CMOS Setup.

#### To determine the parallel port configuration:

- 1. Right-click on **My Computer** and choose **Properties**.
- If your operating system is Windows Me or earlier, click the **Device Manager** tab; if your operating system is Windows XP, click the **Hardware** tab and then the **Device Manager** button.
- 3. Expand the **Ports (COM & LPT)** entry by clicking the plus sign to the left of it. (See the illustration on page 135.)
- 4. If there is an ECP Printer Port listed, verify the ECP port Properties as described on page 136. If there is no ECP Printer Port listed, follow the next procedure to create the port.

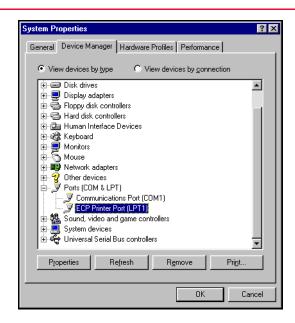

#### To create an ECP parallel port:

1. Be prepared to issue the keyboard command that puts your PC into CMOS Setup during system startup ("cold boot"). This command varies from one manufacturer and model to another. Consult


- your PC documentation or the manufacturer's Web site. (Typically, the command key is one of the Function keys or the Insert or Delete key. Many computers, when they are powered on, will display a prompt that names the command key.)
- 2. Follow the instructions just given to determine the parallel port configuration. If there is an SPP Standard Parallel Port listed, select it and click **Remove**. Close the **Properties** dialog box.
- 3. Restart your computer. (You may have to shut down your computer completely before restarting it in order to reach the CMOS Setup prompt.)
- 4. During the restart, before the Windows logo screen appears, type the keyboard command to enter CMOS Setup.
- 5. Consult your PC documentation or follow the onscreen prompts for instructions, and change the parallel port to ECP. If there are options for a DMA channel or Interrupt Request, accept the defaults.
- 6. Save the new settings and exit CMOS Setup.
- 7. Allow Windows to continue loading, and observe whether it detects and configures the new ECP port.

- If it does, verify the ECP port Properties as described on page 136.
- 8. If Windows does not detect and configure the ECP port, follow the next procedure to add it manually.

If you are not sure whether Windows detected the port, repeat the procedure on page 134 to determine the parallel port configuration.

#### To add an ECP port manually:

- Create the ECP port in CMOS Setup as just described.
- When Windows finishes loading, click on Start, point to Settings, then click Control Panel.
- 3. Click on Add New Hardware.
- 4. Follow the on-screen instructions. When asked "Do you want Windows to search for your new hardware?" click "No, I want to select the hardware from a list."
- Choose Ports (COM & LPT) from the list and then click on (Standard port types) and ECP Printer Port.

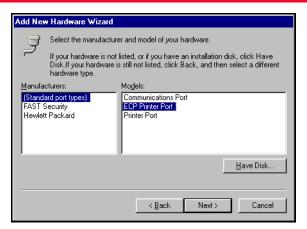

6. Follow the on-screen instructions to finish adding the port, reboot the computer, then follow the next procedure to verify the port properties.

#### To verify the ECP port properties:

- Right-click on My Computer and choose Properties.
- 2. If your operating system is Windows Me or earlier, click the **Device Manager** tab; if your operating

- system is Windows XP, click the **Hardware** tab and then the **Device Manager** button.
- 3. Expand the **Ports (COM & LPT)** entry by clicking the plus sign to the left of it.
- 4. Select the **ECP Printer Port** and click **Properties**.
- If your operating system is Windows XP, click the Port Settings tab. Select "Use any interrupt assigned to the port."
- 6. Click the **Resources** tab.
- Examine the Resource type list. It should contain three or four lines: two Input/Output Ranges, an Interrupt Request, and possibly a Direct Memory Access setting:



If any line other than Direct Memory Access is missing, you may have to upgrade the BIOS of the PC in order to use WinHost.

 Examine the Conflicting device list. If there are any conflicts, resolve them according to the instructions in your PC documentation or in the Windows Help files.

# Troubleshooting parallel port communications

If you experience communication problems between the PC and the MTU/MTU-A when using WinHost, there may be a problem with the parallel port configuration or operation. Try these suggestions:

- Verify that the cable and adapter are correct and that both are being used. A laplink cable alone without the adapter will not work.
- Verify that the cable and adapter are working properly. Try using them with a different instrument, or try substituting a cable and adapter that you know are working properly.
- Verify the ECP port properties as described on page 136.

- Verify that the parallel port is working properly by connecting a printer (using a standard printer cable) and printing a test document.
- If your operating system is Windows XP and you receive error code 54, "ECP driver is not set up to use an interrupt," verify that the Port Settings will "Use any interrupt assigned to the port." (See step 5 on page 137.)
- If you receive error code 4096, "Error setting up timer event," Windows is out of memory. Reboot the PC.
- If you receive error code 4098, "ECR register not detected," the system BIOS is not set for ECP mode.
   Follow the instructions under "Configuring the parallel port" on page 134, being sure to save the settings when exiting CMOS setup.
- If you receive error code 4097, "Error accessing the driver," Windows XP is attempting to run WinHost in "compatibility" mode. Follow the next procedure to change the mode.

#### To disable "compatibility" mode in Windows XP:

- From the **Start** menu, click **Programs**, point to Phoenix Geophysics Host Software, and right-click on WinHost.
- 2. Click Properties.
- 3. Click the **Compatibility** tab.
- 4. Clear the Compatibility mode checkbox.
- 5. Click OK.

# **Updating the software**

Periodic updates to SSMT2000 processing software are made available through the Phoenix website. SSMT2000 includes a utility to check for and install updates.

#### To check for updates:

- 1. Ensure that your computer is connected to the Internet.
- 2. Launch SSMT2000.

- From the Help menu, choose Check for Updates.
   A Warning dialog appears.
- 4. Click **Yes** to continue.

SSMT2000 closes temporarily, determines current software versions, and checks for updates.

A DOS-mode screen appears briefly during this process.

5. If updates are available, follow the instructions on screen to complete the updating process.

# **Registering MT-Editor**

After installation, the MT-Editor program must be registered (by e-mail to Phoenix) in order to enable the saving and exporting functions. Up to three copies of MT-Editor can be registered for each purchased license.

#### To request an MT-Editor Serial Number:

1. After installing the software, launch MT-Editor.

- 2. From the MT-Editor **Help** menu, choose **Registration**.
- Select the text in the **Hardware ID** box and press CTRL+C to copy the text to the clipboard.



- 4. Close the dialog box and exit from MT-Editor.
- Launch your e-mail client and create a new message to: mail@phoenix-geophysics.com

- In the body of the message, request a Serial Number for MT-Editor and provide:
  - · a Company Name or User Name for this copy of the program
  - the Hardware ID from the Registration dialog box. (Press CTRL+V to paste the Hardware ID from the clipboard.)
- 7. Send the e-mail to Phoenix.

Phoenix personnel will reply in one to two business days with a Serial Number keyed to both the Hardware ID and the Company Name you provided.

## To enter the Serial Number and complete the registration:

- 1. When you receive the Phoenix reply, open the email message and launch MT-Editor.
- 2. From the MT-Editor **Help** menu, choose **Regis**tration.
- 3. In the e-mail message, select the Company Name or User Name and press CTRL+C to copy it to the clipboard.

- 4. In the MT-Editor Registration dialog box, select the words "Enter user name here" and press CTRL+V to paste the Company Name from the clipboard.
- 5. In the e-mail message, select the Serial Number and press CTRL+C to copy it to the clipboard.
- 6. In MT-Editor, click anywhere in the **Serial Number** text box and press CTRL+V to paste the Serial Number from the clipboard.



<u>R</u>egister Click

# Organizing your files

Phoenix software relies on several file naming and organization conventions. Although it is possible to follow alternate plans, we strongly recommend that you establish the following file and folder conventions in order to minimize problems.

Note In all cases, limit folder and file names to eight characters, and file extensions to three characters. Do not use spaces in path names, file names, or extensions.

> Some language versions of Microsoft Windows (Russian, for example) will cause problems if file names consist only of digits. Ensure that the first character of a file name is an alphabetic character, not a digit.

For each survey you conduct, three types of files need to be stored and organized on your PC: calibration files, raw data (time series) files, and processed data (plot) files.

We recommend establishing a three-letter tag for each survey, and using that tag in the name of each folder containing files related to the survey.

For example, in a survey of Three River Valley, you might choose TRV as the tag. You would then create:

- a folder called TRV-TSER for the daily time series folders.
- within TRV-TSER, a folder called TRV-Cal for the calibration files
- a folder called TRV-DATA for the plot file folders.

You would also use the TRV tag when naming sites in the Multi-table editor (see "Editing site parameters with the Multi-table Editor" on page 20.)

## Storing raw data files

The raw data files are named by the MTU/MTU-A in the formats ssssHdda.TBL and ssssHdda.TS? where:

- "ssss" represents the serial number of the A/MTU.
- "H" represents the month in hexadecimal.
- "dd" represents the day of the month in decimal.

- "a" represents an alpha character denoting the order of repeated soundings at a single site.
- "TBL" identifies a Site Parameter (Table) file.
- "TS?" identifies a time series data file (TSH, TSL, or TS2 to TS6, depending on A/MTU firmware).

We recommend that files of these types be stored together in a folder identifying the date of the soundings, in the form yyyy-Hdd where:

- "yyyy" represents the year.
- "H" represents the month in hexadecimal.
- "dd" represents the day of the month in decimal.

To continue the example, after five days of surveying in May, 2002, the TRV data would be organized like this:



Each of the dated folders in TRV-TSER would contain the Site Parameter and Time Series files from all the MTU/MTU-As that acquired data on that day.

## Storing calibration files

Equipment must be calibrated at the beginning of each survey, and may have to be recalibrated during a survey. The calibration files must be available whenever SSMT2000 analyses the data acquired with the calibrated equipment. We therefore recommend

storing the calibration files in a TAG-CAL folder within the TAG-TSER folder, as illustrated above. This distinguishes the calibration files from others created with the same equipment on other surveys, and also ensures that when the TAG-TSER folder is archived, the calibration files are included.

In the case where equipment must be recalibrated during a survey, the new files could be stored in folders called TAG-CAL1, TAG-CAL2, etc.

## Storing output (plot) files

The data from survey sites may have to be processed several times using different parameters in order to get satisfactory results in all the desired frequency ranges. For this reason, we recommend creating a TAG-DATA folder and within it various aaa-SITE folders, where "aaa" is an abbreviation or code relating to the type of processing performed.

For example, if you processed Three River Valley site data using a remote magnetic (H) reference, you might store the output files in a folder called ReH-SITE. If you

used a local telluric (E) reference, the folder might be called LoE-SITE. You would store both these folders in a folder called TRV-DATA.

You can create the SITE folders in advance if you want, or simply create them as needed using the Magnetotelluric Processing Setup dialog. (The TAG-DATA folder that is to contain the SITE folders must be set up in advance, however.) See "Reprocessing the Fourier transforms" on page 29.

# Formatting a CompactFlash card

CompactFlash cards must be correctly formatted before use.

The formatting utility provided by SanDisk corporation is not compatible with Phoenix instruments. CompactFlash cards must use the FAT or FAT16 (File Allocation Table) file system applied by the Windows formatting utility. Do not format as FAT32 or NTFS. If you experience operating system crashes when inserting a CompactFlash card into the reader, the problem may be caused by static electricity. Touch a grounded object such as an unpainted area of the computer case before inserting the card.

### To format a CompactFlash card:

Insert the card into a card reader connected to the PC.

- 2. Double click My Computer.
- Right-click the CompactFlash card drive letter and click Format...
- 4. If your operating system is Windows XP, be sure that the **File system** is set to **FAT**. (In earlier Windows versions, the file system is always FAT.)
- 5. If desired, type a volume label (a name for the disk).
- If **Quick Format** is selected, clear the checkbox.
- Click Start.

When formatting is complete, click **Close**. The card is ready for use in Phoenix instruments.



# **Appendix**

This appendix provides charts of all the frequencies output by SSMT2000 for various combinations of:

- · Line Frequency filter.
- A/MTU box type.
- · Firmware version.
- Sensor type.
- · Frequencies per octave.

The first half of the appendix covers the line frequency filter of 50Hz; the second half covers the line frequency filter of 60Hz. The tables appear in order from highest to lowest frequencies.

# Frequency tables for SSMT2000

145 Appendix C 145

Table C-1: 50Hz LF, MTU-A, AMTC-30

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	В	В	
Range Name:	EMT (50)	EMT (50)	
24000	10666.67	10400	24000
FC2		8800	FC2
	8000	7200	
		6000	
	5333.33	5200	
		4400	
	4000	3600	
		3000	
	2666.67	2600	
		2200	
	2000	1800	
		1500	
	1333.33	1300	
		1100	
	1000	900	
		776.47	2400
	666.67	635.29	FC3
		529.41	
	500	458.82	
		388.235	
Firmware:	В	В	
Range Name:	EMT (50) continues	EMT (50) continues	
Firmware:		Ext. Range	
Range Name:		LMT (50) begins	
2400	320	317.645	
FC3		264.705	
	240	229.41	
		194.1175	
	160	158.8225	
		132.3525	
	·	114.705	
	120	114.705	
	120	97.0588	
	120 80		

Table C-1: 50Hz LF, MTU-A, AMTC-30(cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
2400	60	57.3525	2400
FC3		48.5294	FC3
	40	39.7056	
		32.5	150
	30	27.5	FC4
		22.5	
	20	18.75	
		16.25	
	15	13.75	
		11.25	
Firmware:	В	В	
Range Name:	EMT (50) continues	EMT (50) ends	
Firmware:		Ext. Range	
Range		LMT (50)	
Name:		continues	
2400 FC3	10	9.375	
FC3		8.125	
	7.5	6.875	
		5.625	
150	6	4.6875	150 (AMT)
FC4		4.0625	15 (MT) FC5
	4.5	3.4375	103
		2.8125	
	3	2.34375	
		2.03125	
	2.25	1.71875	
		1.40625	
	1.5	1.17188	
		1.01563	
	1.125	0.85938	
		0.70313	
	0.75	0.58594	
		0.50781	
	0.5625	0.42969	
		0.35156	

Table C-1: 50Hz LF, MTU-A, AMTC-30(cont'd)

	T		
Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
150 (AMT)	0.375	0.2929688	150 (AMT)
15 (MT)		0.2539063	15 (MT)
FC5	0.28125	0.2148438	FC6
		0.1757813	
	0.1875	0.1464844	
		0.1269532	
	0.140625	0.1074219	
		0.0878907	
	0.09375	0.0732422	
		0.0634766	
	0.070313	0.053711	
		0.0439453	
	0.046875	0.0366211	
		0.0317383	
	0.035156	0.0268555	
		0.0219727	
	0.023438	0.0183106	
		0.0158691	
	0.017578	0.0134277	
		0.0109863	

Table C-2: 50Hz LF, MTU-A, MTC-50

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Hi Range	Hi Range	
Range Name:	HMT (50)	HMT (50)	
2400	320	317.645	2400
FC3		264.705	FC3
	240	229.41	
		194.11765	]
	160	158.8225	]
		132.3525	
	120	114.705	]
		97.05883	
	80	79.41125	]
		66.17625	
	60	57.3525	
		48.52941	
	40	39.70563	
		32.5	150
	30	27.5	FC4
		22.5	
	20	18.75	
		16.25	
	15	13.75	
		11.25	
Firmware:	Hi Range	Hi Range	
Range Name:	HMT (50) continues	HMT (50) continues	
Firmware:	Lo Range		
Range Name:	RMT (50) begins		
			-
2400	10	9.375	
2400 FC3	10	9.375 8.125	
	7.5		
		8.125	
FC3		8.125 6.875 5.625 4.6875	150 (AMT)
FC3	7.5	8.125 6.875 5.625	15 (MT)
FC3	7.5	8.125 6.875 5.625 4.6875 4.0625 3.4375	
FC3	7.5 6.0 4.5	8.125 6.875 5.625 4.6875 4.0625 3.4375 2.8125	15 (MT)
FC3	7.5	8.125 6.875 5.625 4.6875 4.0625 3.4375	15 (MT)

Table C-2: 50Hz LF, MTU-A, MTC-50 (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
150	2.25	1.71875	150 (AMT)
FC4		1.40625	15 (MT) FC5
	1.5	1.171875	FC5
		1.015625	
	1.125	0.859375	
		0.703125	
	0.75	0.5859375	
		0.5078125	
	0.5625	0.4296875	
		0.3515625	
Firmware:	Hi, Lo Ranges	Hi Range	
Range Name:	HMT (50), RMT (50) continue	HMT (50) ends	
Firmware:		Lo Range	
Range Name:		RMT (50) begins	
150 (AMT)	0.375	0.2929688	150 (AMT)
15 (MT)		0.2539063	15 (MT)
FC5	0.28125	0.2148438	FC6
		0.1757813	
	0.1875	0.1464844	
		0.1269532	
	0.140625	0.1074219	
		0.0878907	
	0.09375	0.0732422	
		0.0634766	
	0.070313	0.053711	
		0.0439453	
	0.046875	0.0366211	
		0.0317383	
	0.035156	0.0268555	
		0.0219727	
	0.023438	0.0183106	
		0.0158691	
	0.017578	0.0134277	
		0.0109863	

Table C-2: 50Hz LF, MTU-A, MTC-50 (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Hi Range	Lo Range	
Range	HMT (50)	RMT (50)	
Name:	continues	continues	
Firmware:		Ext. Range	
Range Name:		LMT (50) begins	
150 (AMT)	0.011719	0.009155275	150 (AMT)
15 (MT) FC6		0.007934572	15 (MT)
FC6	0.0087891	0.006713869	FC7
		0.005493166	
	0.0058594	0.0045776	
		0.0039673	
	0.0043945	0.0033569	
		0.0027466	
	0.0029297	0.0022888	
		0.0019836	
	0.0021973	0.0016785	
		0.0013733	
	0.0014648	0.0011444	
		0.0009918	
	0.0010986	0.0008392	
		0.0006866	
	0.0007324	0.0005722	
		0.0004959	
	0.0005493	0.0004196	
		0.0003433	
Firmware:	Hi Range	Lo Range	
Range Name:	HMT (50) ends	RMT (50) ends	
Firmware:	Lo Range	Ext. Range	
Range	RMT (50)	LMT (50)	
Name:	continues	continues	
150 (AMT)	0.0003662	0.0002861	150 (AMT)
15 (MT) FC7		0.000248	15 (MT) FC8
''	0.0002747	0.0002098	100
		0.0001717	
	0.0001831	0.0001431	
		0.000124	

Table C-2: 50Hz LF, MTU-A, MTC-50 (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
150 (AMT)	0.0001373	0.0001049	150 (AMT)
15 (MT)		0.0000858	15 (MT)
FC7	0.0000916	0.0000715	FC8
		0.000062	
	0.0000687	0.0000525	
		0.0000429	
	0.0000458	0.0000358	
		0.000031	
	0.0000343	0.0000262	
		0.0000215	
	0.0000229	0.0000179	
		0.0000155	
	0.0000172	0.0000131	
		0.0000107	

Table C-3: 50Hz LF, MTU, AMTC-30 (V5-comp.)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Up Range	Up Range	Rate, HZ
Range	-		
Name:	EMT (50)	EMT (50)	
2560	640	720	2560
FC3		600	FC3
	480	520	
		440	
	320	360	
		300	
	240	260	
		220	
	160	180	
		150	
	120	130	
		110	
	80	90	
		75	
	60	65	
		55	
320	40	45	
FC4		37.5	320
	30	32.5	FC4
		27.5	
	20	22.5	
		18.75	
	15	16.25	
		13.75	
	10	11.25	
		9.375	
	7.5	8.125	
		6.875	
24	6	5.625	
FC5		4.875	24
	4.5	4.125	FC5
		3.375	
	3	2.8125	
		2.4375	

Table C-3: 50Hz LF, MTU, AMTC-30 (V5-

2.25 1.5 1.125	2.0625 1.6875 1.40625 1.21875 1.03125 0.84375	24 FC5
1.125	1.40625 1.21875 1.03125	FC5
1.125	1.21875 1.03125	
	1.03125	
	0.84375	
0.75		
0.5625		
0.375		
0.2813		

Table C-4: 50Hz LF, MTU, MTC-50 (V5-comp.)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	D	Hi Range	
Range Name:	MT (50)	MTH (50)	
2560	320	360	2560
FC3		300	FC3
	240	260	
		220	
	160	180	
		150	
	120	130	
		110	
	80	90	
		75	
	60	65	
		55	
320	40	45	
FC4		37.5	320
	30	32.5	FC4
		27.5	
	20	22.5	
		18.75	
	15	16.25	
		13.75	
Firmware:	D	Hi Range	
Range Name:	MT (50) continues	MTH (50) continues	
Firmware:	Lo Range		
Range Name:	RMT (50) begins		
320	10	11.25	
FC4		9.375	
	7.5	8.125	
		6.875	
24	6	5.625	
		4.875	24
FC5			
FC5	4.5	4.125	FC5
FC5	4.5		FC5
FC5	4.5	4.125	FC5

2 Frequencies/ 4 Frequencies/ Sampling Sampling Rate, Hz Rate, Hz octave, Hz octave, Hz 2.25 24 2.0625 24 FC5 FC5 1.6875 1.5 1.40625 1.21875 1.125 1.03125 0.84375 0.75 0.70313 0.60938 0.5625 0.51563 0.42188 D, Lo Range Firmware: Hi Range MT (50), RMT Range MTH (50) ends Name: (50) continue Lo Range Firmware: MTL (50) Range Name: begins 24 0.375 0.3515625 FC5 0.3046875 0.2813 0.2578125 0.2109375 0.1875 0.1757813 0.0523438 0.140625 0.1289063 0.1054688 0.09375 0.0878906 0.0761719 0.070646 0.0644531 0.0527344 03046875 0.0439453 0.0380859 0.035156 0.0322266 0.0263672 24 0.023438 0.0219727 24 FC6 FC6 0.019043 0.017578 0.0161133 0.0131836

Table C-4: 50Hz LF, MTU, MTC-50 (V5-comp.)(cont'd)

Table C-4: 50Hz LF, MTU, MTC-50 (V5-comp.)(cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	D, Lo Range	Lo Range	
Range	MT (50), RMT	MTL (50)	
Name:	(50) continue	continues	
Firmware:		Ext. Range	
Range Name:		MTR (50) begins	
24	0.011719	0.0109863	24
FC6		0.0095215	FC6
	0.008789	0.0080566	
		0.0065918	
	0.005859	0.0054932	
		0.0047607	
	0.004395	0.0040283	
		0.0032959	
	0.00293	0.0027466	
		0.0023804	
	0.005197	0.0020142	
		0.0016479	
	0.001465	0.0013733	
		0.0011902	
	0.001099	0.0010071	
		0.000824	
	0.000732	0.0006866	
		0.0005951	
	0.000549	0.0005035	
		0.000412	
Firmware:	D	Lo Range	
Range Name:	MT (50) ends	MTL (50) ends	
Firmware:	Lo Range	Ext. Range	
Range	RMT (50)	MTR (50)	
Name:	continues	continues	
24 FC7	0.000366	0.0003433	24 FC7
FC/		0.0002975	FC/
	0.000275	0.0002518	
		0.000206	
	0.000183	0.0001717	
		0.0001488	

Table C-4: 50Hz LF, MTU, MTC-50 (V5-comp.)(cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
24	0.000137	0.0001259	24
FC7		0.000103	FC7
	0.000092	0.0000858	
		0.0000744	
	0.000069	0.0000629	
		0.0000515	
	0.000046	0.0000429	
		0.0000372	
	0.000034	0.0000315	
		0.0000257	
	0.000023	0.0000215	
		0.0000186	
	0.000017	0.0000157	
		0.0000129	

Table C-5: 50Hz LF, MTU, MTC-50 (V5-2000)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Hi Range	Hi Range	
Range Name:	HMT (50)	HMT (50)	
2400	320	317.645	2400
FC3		264.705	FC3
	240	229.41	
		194.11765	
	160	158.8225	
		132.3525	
	120	114.705	
		97.05883	
	80	79.41125	
		66.17625	
	60	57.3525	
		48.52941	
	40	39.70563	
		32.5	150
	30	27.5	FC4
		22.5	
	20	18.75	
		16.25	
	15	13.75	
		11.25	
Firmware:	Hi Range	Hi Range	
Range Name:	HMT (50) continues	HMT (50) continues	
Firmware:	Lo Range		
Range Name:	RMT (50) begins		
2400	10	9.375	
FC3		8.125	
	7.5	6.875	
		5.625	
150	6.0	4.6875	15
FC4		4.0625	FC5
	4.5	3.4375	
		2.8125	
			1
	3.0	2.34375 2.03125	

Sampling	2 Frequencies/	4 Frequencies/	Sampling
Rate, Hz	octave, Hz	octave, Hz	Rate, Hz
150	2.25	1.71875	15
FC4		1.40625	FC5
	1.5	1.171875	
		1.015625	
	1.125	0.859375	
		0.703125	
	0.75	0.5859375	
		0.5078125	
	0.5625	0.4296875	
		0.3515625	
Firmware:	Hi, Lo Ranges	Hi Range	
Range Name:	HMT (50), RMT (50) continue	HMT (50) ends	
Firmware:		Lo Range	
Range Name:		RMT (50) begins	
15	0.375	0.2929688	15
FC5		0.2539063	FC6
	0.28125	0.2148438	
		0.1757813	
	0.1875	0.1464844	
		0.1269532	
	0.140625	0.1074219	
		0.0878907	
	0.09375	0.0732422	
		0.0634766	
	0.070313	0.053711	
		0.0439453	
	0.046875	0.0366211	
		0.0317383	
	0.035156	0.0268555	
		0.0219727	
	0.023438	0.0183106	
		0.0158691	
	0.017578	0.0134277	
		0.0109863	

Table C-5: 50Hz LF, MTU, MTC-50 (V5-2000) (cont'd)

Table C-5: 50Hz LF, MTU, MTC-50 (V5-2000) (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Hi Range	Lo Range	
Range	HMT (50)	RMT (50)	
Name:	continues	continues	
Firmware:		Ext. Range	
Range Name:		LMT (50) begins	
15	0.011719	0.009155275	15
FC6		0.007934572	FC7
	0.0087891	0.006713869	
		0.005493166	
	0.0058594	0.0045776	
		0.0039673	
	0.0043945	0.0033569	
		0.0027466	
	0.0029297	0.0022888	
		0.0019836	
	0.0021973	0.0016785	
		0.0013733	
	0.0014648	0.0011444	
		0.0009918	
	0.0010986	0.0008392	
		0.0006866	
	0.0007324	0.0005722	
		0.0004959	
	0.0005493	0.0004196	
		0.0003433	
Firmware:	Hi Range	Lo Range	
Range Name:	HMT (50) ends	RMT (50) ends	
Firmware:	Lo Range	Ext. Range	
Range	RMT (50)	LMT (50)	
Name:	continues	continues	
15	0.0003662	0.0002861	15
FC7		0.000248	FC8
	0.0002747	0.0002098	
		0.0001717	
	0.0001831	0.0001431	
		0.000124	

Table C-5: 50Hz LF, MTU, MTC-50 (V5-2000) (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
15	0.0001373	0.0001049	15
FC7		0.0000858	FC8
	0.0000916	0.0000715	
		0.000062	
	0.0000687	0.0000525	
		0.0000429	
	0.0000458	0.0000358	
		0.000031	
	0.0000343	0.0000262	
		0.0000215	
	0.0000229	0.0000179	
		0.0000155	
	0.0000172	0.0000131	
		0.0000107	

C		
	s	
п		
п		
-		
		T
г.		

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	В	В	
Range Name:	EMT (60)	EMT (60)	
24000	10666.67	10400	24000
FC2		8800	FC2
	8000	7200	
		6000	
	5333.33	5200	
		4400	
	4000	3600	
		3000	
	2666.67	2600	
		2200	
	2000	1800	
		1500	
	1333.33	1300	
		1100	
	1000	900	
		776.47	2400
	666.67	635.29	FC3
		529.41	
	500	458.82	
		388.235	
Firmware:	В	В	
Range	EMT (60)	EMT (60)	
Name:	continues	continues	
Firmware:		Ext. Range	
Range Name:		LMT (60) begins	
2400	384	317.645	
FC3		264.705	
	288	229.41	
		194.1175	
	192	158.8225	
		132.3525	
	144	114.705	
		97.0588	
i	0/	79.4113	
	96	66.1763	

# Table C-6: 60Hz LF, MTU-A, AMTC-30 (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
2400	72	57.3525	2400
FC3		48.5294	FC3
	48	39.7056	
		32.5	150
	36	27.5	FC4
		22.5	
150	24	18.75	
FC4		16.25	
	18	13.75	
		11.25	
Firmware:	В	В	
Range Name:	EMT (60) continues	EMT (60) ends	
Firmware:		Ext. Range	
Range		LMT (60)	
Name:		continues	
150 FC4	12	9.375	
FC4		8.125	
	9	6.875	
		5.625	
	6	4.6875	150 (AMT)
		4.0625	15 (MT) FC5
	4.5	3.4375	103
		2.8125	
	3	2.34375	
		2.03125	
	2.25	1.71875	
		1.40625	
150	1.5	1.17188	
FC5		1.01563	
	1.125	0.85938	
		0.70313	
	0.75	0.58594	
		0.50781	
	0.5625	0.42969	
		0.35156	

Table C-6: 60Hz LF, MTU-A, AMTC-30 (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
150	0.375	0.2929688	150 (AMT)
FC5		0.2539063	15 (MT)
	0.28125	0.2148438	FC6
		0.1757813	
	0.1875	0.1464844	
		0.1269532	
	0.140625	0.1074219	
		0.0878907	
	0.09375	0.0732422	
		0.0634766	
	0.070313	0.053711	
		0.0439453	
	0.046875	0.0366211	
		0.0317383	
	0.035156	0.0268555	
		0.0219727	
	0.023438	0.0183106	
		0.0158691	
	0.017578	0.0134277	
		0.0109863	

Sampling Rate, Hz Firmware:	2 Frequencies/ octave, Hz Hi Range	4 Frequencies/ octave, Hz Hi Range	Sampling Rate, Hz
Range Name:	HMT (60)	HMT (60)	
2400	384	317.645	2400
FC3		264.705	FC3
	288	229.41	
		194.11765	
	192	158.8225	
		132.3525	
	144	114.705	
		97.05883	
	96	79.41125	
		66.17625	
	72	57.3525	
		48.52941	
	48	39.70563	
		32.5	150
	36	27.5	FC4
		22.5	
150	24	18.75	
FC4		16.25	
	18	13.75	
		11.25	
Firmware:	Hi Range		
vvai G.		Hi Range	
Range	HMT (60)	HMT (60)	
Range Name:	HMT (60) continues	~	
Range	HMT (60)	HMT (60)	
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range	HMT (60)	
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins	HMT (60) continues	
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins	HMT (60) continues	
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins	HMT (60) continues 9.375 8.125	
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins	9.375 8.125 6.875	150 (AMT)
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins	9.375 8.125 6.875 5.625	15 (MT)
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins	9.375 9.375 8.125 6.875 5.625 4.6875	
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins  12  9	9.375 9.375 8.125 6.875 5.625 4.6875 4.0625	15 (MT)
Range Name: Firmware: Range Name:	HMT (60) continues Lo Range RMT (60) begins  12  9	9.375 8.125 6.875 5.625 4.6875 4.0625 3.4375	15 (MT)

Table C-7: 60Hz LF, MTU-A, MTC-50 (cont'd)

TC4	Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
150 (AMT)   1.5   1.171875   1.015625		2.25	1.71875	150 (AMT)
1.50 (AMT)	FC4		1.40625	
T.		1.5	1.171875	FC5
1.125			1.015625	
0.75	FC5	1.125	0.859375	
0.5078125   0.4296875   0.3515625			0.703125	
O.5625		0.75	0.5859375	
Firmware: Hi, Lo Ranges Hi Range Range Name: Co) continue HMT (60) ends Firmware: Lo Range Range Name: D.2929688 150 (AMT) 15 (MT) 5 (MT) 5 (MT) 60.28125			0.5078125	
Firmware:         Hi, Lo Ranges         Hi Range           Range Name:         HMT (60), RMT (60) ends           Firmware:         Lo Range           Range Name:         RMT (60) begins           150 (AMT) 15 (MT) FC5         0.375 0.2929688 0.2539063 0.2539063 0.2539063 0.1757813 0.1757813 0.1757813 0.1464844 0.1269532 0.1464844 0.1269532 0.1074219 0.0878907 0.09375 0.0732422 0.0634766 0.00732422 0.0634766 0.0053711 0.0439453 0.0053711 0.0439453 0.00439453 0.0046875 0.0366211 0.0317383 0.00317383 0.00317383 0.00219727 0.0023438 0.0183106 0.00158691		0.5625	0.4296875	
Range Name:         HMT (60), RMT (60) ends           Firmware:         Lo Range RMT (60) begins           150 (AMT) 15 (MT) FC5         0.375 0.2929688 0.2539063 0.2539063 0.1757813 0.1757813 0.1757813 0.1464844 0.1269532 0.1074219 0.0878907 0.09375 0.0732422 0.0634766 0.00634766 0.070313 0.053711 0.0439453 0.00439453 0.0046875 0.0366211 0.0317383 0.035156 0.0268555 0.0219727 0.023438 0.0183106 0.0158691			0.3515625	
Name:   (60) continue   HMT (60) ends	Firmware:	Hi, Lo Ranges	Hi Range	
Range Name:         RMT (60) begins           150 (AMT) 15 (MT) FC5         0.375         0.2929688 0.2539063 0.2539063 0.2148438 0.1757813 0.1757813 0.1464844 0.1269532 0.1074219 0.0878907 0.09375 0.0732422 0.0634766 0.00634766 0.00439453 0.00439453 0.00439453 0.0046875 0.0366211 0.00317383 0.0035156 0.0268555 0.0219727 0.023438 0.0183106 0.0158691	_		HMT (60) ends	
Name:  150 (AMT) 15 (MT) FC5  0.28125  0.2148438  0.1757813  0.1464844  0.1269532  0.140625  0.0878907  0.09375  0.09375  0.0732422  0.0634766  0.070313  0.0439453  0.0317383  0.035156  0.023438  0.0183106  0.00158691	Firmware:		Lo Range	
15 (MT) FC5  0.28125  0.2148438  0.1757813  0.1464844  0.1269532  0.040625  0.0732422  0.0634766  0.070313  0.0439453  0.0439453  0.0439453  0.035156  0.0268555  0.0219727  0.023438  0.0158691	_		RMT (60) begins	
FC5  0.28125  0.2148438  0.1757813  0.1464844  0.1269532  0.140625  0.0878907  0.09375  0.0732422  0.0634766  0.070313  0.0439453  0.0439453  0.0317383  0.035156  0.0268555  0.0219727  0.023438  0.0158691		0.375	0.2929688	150 (AMT)
0.28125     0.2148438       0.1757813       0.1875     0.1464844       0.1269532       0.140625     0.1074219       0.0878907       0.09375     0.0732422       0.0634766       0.070313     0.053711       0.0439453       0.0317383       0.035156     0.0268555       0.0219727       0.023438     0.0183106       0.0158691			0.2539063	
0.1875     0.1464844       0.1269532       0.140625     0.1074219       0.0878907     0.0732422       0.0634766       0.070313     0.053711       0.0439453     0.0366211       0.0317383     0.0268555       0.0219727     0.023438       0.0158691	FC5	0.28125	0.2148438	FC6
0.1269532       0.140625     0.1074219       0.0878907       0.09375     0.0732422       0.0634766       0.070313     0.053711       0.0439453       0.0366211       0.0317383       0.0268555       0.0219727       0.023438     0.0183106       0.0158691			0.1757813	
0.140625     0.1074219       0.0878907     0.0732422       0.0634766     0.053711       0.0439453     0.0366211       0.0317383     0.0268555       0.0219727     0.023438       0.0158691		0.1875	0.1464844	
0.0878907       0.09375     0.0732422       0.0634766       0.070313     0.053711       0.0439453       0.0366211       0.0317383       0.0268555       0.0219727       0.023438     0.0183106       0.0158691			0.1269532	
0.09375     0.0732422       0.0634766       0.070313     0.053711       0.0439453       0.0366211       0.0317383       0.0268555       0.0219727       0.023438     0.0183106       0.0158691		0.140625	0.1074219	
0.0634766       0.070313     0.053711       0.0439453       0.0366211       0.0317383       0.0268555       0.0219727       0.023438     0.0183106       0.0158691			0.0878907	
0.070313     0.053711       0.0439453     0.0366211       0.0317383     0.0268555       0.0219727     0.023438       0.0158691		0.09375	0.0732422	
0.0439453       0.046875     0.0366211       0.0317383       0.0268555       0.0219727       0.023438     0.0183106       0.0158691			0.0634766	
0.046875     0.0366211       0.0317383       0.035156     0.0268555       0.0219727       0.023438     0.0183106       0.0158691		0.070313	0.053711	
0.0317383 0.035156 0.0268555 0.0219727 0.023438 0.0183106 0.0158691			0.0439453	
0.035156     0.0268555       0.0219727       0.023438     0.0183106       0.0158691		0.046875	0.0366211	
0.0219727 0.023438 0.0183106 0.0158691			0.0317383	
0.0219727 0.023438 0.0183106 0.0158691		0.035156	0.0268555	
0.0158691			0.0219727	
		0.023438	0.0183106	
0.017578 0.0134277			0.0158691	
		0.017578	0.0134277	
0.0109863			0.0109863	

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Hi Range	Lo Range	
Range	HMT (60)	RMT (60)	
Name:	continues	continues	
Firmware:		Ext. Range	
Range Name:		LMT (60) begins	
150 (AMT)	0.011719	0.009155275	150 (AMT)
15 (MT) FC6		0.007934572	15 (MT) FC7
FCO	0.008789	0.006713869	FC7
		0.005493166	
	0.005859	0.0045776	
		0.0039673	
	0.004395	0.0033569	
		0.0027466	
	0.00293	0.0022888	
		0.0019836	
	0.002197	0.0016785	
		0.0013733	
	0.001465	0.0011444	
		0.0009918	
	0.001099	0.0008392	
		0.0006866	
	0.000732	0.0005722	
		0.0004959	
	0.000549	0.0004196	
		0.0003433	
Firmware:	Hi Range	Lo Range	
Range Name:	HMT (60) ends	RMT (60) ends	
Firmware:	Lo Range	Ext. Range	
Range	RMT (50)	LMT (50)	
Name:	continues	continues	
150 (AMT)	0.0003662	0.0002861	150 (AMT)
15 (MT) FC7		0.000248	15 (MT) FC8
,	0.0002747	0.0002098	. 33
		0.0001717	
	0.0001831	0.0001431	
		0.000124	

Table C-7: 60Hz LF, MTU-A, MTC-50 (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
150 (AMT)	0.0001373	0.0001049	150 (AMT)
15 (MT)		0.0000858	15 (MT)
FC7	0.0000916	0.0000715	FC8
		0.000062	
	0.0000687	0.0000525	
		0.0000429	
	0.0000458	0.0000358	
		0.000031	
	0.0000343	0.0000262	
		0.0000215	
	0.0000229	0.0000179	
		0.0000155	
	0.0000172	0.0000131	
		0.0000107	

Shaded areas indicate overlap of frequency ranges.

Table C-8: 60Hz LF, MTU, AMTC-30 (V5-comp.)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Up Range	Up Range	
Range Name:	EMT (60)	EMT (60)	
3072	768	720	3072
FC3		624	FC3
	576	528	
		432	
	384	360	
		312	
	288	264	
		216	3072 FC3
	192	180	
		156	
	144	132	
		108	
	96	90	
		78	
	72	66	
		54	
384	48	45	
FC4		39	FC4
	36	33	
		27	
	24	22.5	
		19.5	
	18	16.5	
		13.5	
	12	11.25	
		9.75	
	9	8.25	
		6.75	
24	6	5.625	24
FC5		4.875	FC5
	4.5	4.125	
		3.375	
	3	2.8125	
		2.4375	

Campling	2 Fraguancies /	4 Fraguapaias /	Campling
Table C-8: BOHZ EF, MTO, AMTC-30 (V5-comp.) (cont d)			

2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
2.25	2.0625	24
	1.6875	FC5
1.5	1.40625	
	1.21875	
1.125	1.03125	
	0.84375	
0.75		
0.5625		
0.375		
0.2813		
	0ctave, Hz 2.25 1.5 1.125 0.75 0.5625 0.375	octave, Hz         octave, Hz           2.25         2.0625           1.6875         1.40625           1.21875         1.21875           1.125         1.03125           0.84375         0.84375           0.5625         0.375

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	D	Hi Range	
Range Name:	MT (60)	MTH (60)	
3072	384	360	3072
FC3		312	FC3
	288	264	
		216	
	192	180	
		156	
	144	132	
		108	
	96	90	
		78	
	72	66	
		54	
384	48	45	384
FC4		39	FC4
	36	33	
		27	
	24	22.5	
		19.5	
	18	16.5	
		13.5	
Firmware:	D	Hi Range	
Range Name:	MT (60) continues	MTH (60) continues	
Firmware:	Ext. Range		
Range Name:	LMT (60) begins		
384	12	11.25	1
FC4		9.75	
	9	8.25	
		6.75	
24	6	5.625	24
FC5		4.875	FC5
	4.5	4.125	
			•
		3.375	
	3	3.375 2.8125	

Table C-9: 60Hz LF, MTU, MTC-50 (V5-comp.) (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
24	2.25	2.0625	24
FC5		1.6875	FC5
	1.5	1.40625	
		1.21875	
	1.125	1.03125	
		0.84375	
	0.75	0.703125	
		0.609375	
	0.5625	0.515625	
		0.421875	
Firmware:	D, Ext Range	Hi Range	
Range Name:	MT (60), LMT (60) continue	MTH (60) ends	
Firmware:		Lo Range	
Range		MTL (60)	
Name:		begins	
24	0.375	0.3515625	
FC5		0.3046875	
	0.2813	0.2578125	
		0.2109375	
	0.1875	0.1757813	
		0.1523438	
	0.140625	0.1289063	
		0.1054688	
	0.09375	0.0878906	
		0.0761719	
	0.070646	0.0644531	
		0.0527344	
	0.046875	0.0439453	
		0.0380859	
	0.035156	0.0322266	]
		0.0263672	
24	0.023438	0.0219727	24
FC6		0.019043	FC6
	0.017578	0.0161133	
		0.0131836	

Table C-9: 60Hz LF, MTU, MTC-50 (V5-comp.) (cont'd)

Sampling	2 Frequencies/	4 Frequencies/	Sampling
Rate, Hz	octave, Hz	octave, Hz	Rate, Hz
Firmware:	D, Ext Range	Lo Range	
Range Name:	MT (60), LMT (60) continue	MTL (60) continues	
Firmware:		Ext. Range	
Range Name:		MTR (60) begins	
24	0.011719	0.0109863	24
FC6		0.0095215	FC6
	0.008789	0.0080566	
		0.0065918	
	0.005859	0.0054932	
		0.0047607	
	0.004395	0.0040283	
		0.0032959	
	0.00293	0.0027466	
		0.0023804	
	0.005197	0.0020142	
		0.0016479	
	0.001465	0.0013733	
		0.0011902	
	0.001099	0.0010071	
		0.000824	
	0.000732	0.0006866	
		0.0005951	
	0.000549	0.0005035	
		0.000412	
Firmware:	D	Lo Range	
Range Name:	MT (60) ends	MTL (60) ends	
Firmware:	Ext Range	Ext. Range	
Range	LMT (60)	MTR (60)	
Name:	continues	continues	2.4
24 FC7	0.000366	0.0003433	24 FC7
	0.000375	0.0002975	107
	0.000275	0.0002518	
	0.000100	0.000206	
	0.000183	0.0001717	
		0.0001488	

Table C-9: 60Hz LF, MTU, MTC-50 (V5-comp.) (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
24	0.000137	0.0001259	24
FC7		0.000103	FC7
	0.000092	0.0000858	
		0.0000744	
	0.000069	0.0000629	
		0.0000515	
	0.000046	0.0000429	
		0.0000372	
	0.000034	0.0000315	
		0.0000257	
	0.000023	0.0000215	
		0.0000186	
	0.000017	0.0000157	
		0.0000129	

Shaded areas indicate overlap of frequency ranges.

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
Firmware:	Hi Range	Hi Range	
Range Name:	HMT (60)	HMT (60)	
2400	384	317.645	2400
FC3		264.705	FC3
	288	229.41	
		194.11765	
	192	158.8225	
		132.3525	
	144	114.705	
		97.05883	
	96	79.41125	
		66.17625	
	72	57.3525	
		48.52941	
	48	39.70563	
		32.5	150
	36	27.5	FC4
		22.5	
150	24	18.75	
FC4		16.25	
	18	13.75	
		11.25	
Firmware:	Hi Range	Hi Range	
Range	HMT (60)	HMT (60)	
Name:	continues	continues	
Range Name:	Lo Range RMT (60) begins		
150	12	9.375	
FC4	12		
	9	8.125	
	9	6.875 5.625	
	4	4.6875	15
	6	4.0625	FC5
	4.5	3.4375	
	4.0	2.8125	
	3	2.34375	
	3	2.03125	
		2.03123	

Table C-10:	60Hz LF,	MTU,	MTC-50 (	(V5-2000)	(cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
150	2.25	1.71875	15
FC4		1.40625	FC5
15	1.5	1.171875	
FC5		1.015625	
	1.125	0.859375	
		0.703125	
	0.75	0.5859375	
		0.5078125	
	0.5625	0.4296875	
		0.3515625	
Firmware:	Hi, Lo Ranges	Hi Range	
Range Name:	HMT (60), RMT (60) continue	HMT (60) ends	
Firmware:		Lo Range	
Range Name:		RMT (60) begins	
15	0.375	0.2929688	15
FC5		0.2539063	FC6
	0.28125	0.2148438	
		0.1757813	
	0.1875	0.1464844	
		0.1269532	
	0.140625	0.1074219	
		0.0878907	
	0.09375	0.0732422	
		0.0634766	
	0.070313	0.053711	
		0.0439453	
	0.046875	0.0366211	
		0.0317383	
	0.035156	0.0268555	
		0.0219727	
	0.023438	0.0183106	
		0.0158691	
	0.017578	0.0134277	
		0.0109863	

Table C-10: 60Hz LF, MTU, MTC-50 (V5-2000) (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz	
Firmware:	Hi Range	Lo Range	11010/112	
Range Name:	HMT (60) continues	RMT (60) continues		
Firmware:		Ext. Range		
Range Name:		LMT (60) begins		
15	0.011719	0.009155275	15	
FC6		0.007934572	FC7	
	0.008789	0.006713869		
		0.005493166		
	0.005859	0.0045776		
		0.0039673		
	0.004395	0.0033569		
		0.0027466		
	0.00293	0.0022888		
		0.0019836		
	0.002197	0.0016785		
		0.0013733		
	0.001465	0.0011444		
		0.0009918		
	0.001099	0.0008392		
		0.0006866		
	0.000732	0.0005722		
		0.0004959		
	0.000549	0.0004196		
		0.0003433		
Firmware:	Hi Range	Lo Range		
Range Name:	HMT (60) ends	RMT (60) ends		
Firmware:	Lo Range	Ext. Range		
Range	RMT (50)	LMT (50)		
Name:	continues	continues	4.5	
15 FC7	0.0003662	0.0002861	15 FC8	
FC/	0.00007:-	0.000248	FU0	
	0.0002747	0.0002098		
		0.0001717		
	0.0001831	0.0001431		
		0.000124		

Table C-10: 60Hz LF, MTU, MTC-50 (V5-2000) (cont'd)

Sampling Rate, Hz	2 Frequencies/ octave, Hz	4 Frequencies/ octave, Hz	Sampling Rate, Hz
15	0.0001373	0.0001049	15
FC7		0.0000858	FC8
	0.0000916	0.0000715	
		0.000062	
	0.0000687	0.0000525	
		0.0000429	
	0.0000458	0.0000358	
		0.000031	
	0.0000343	0.0000262	
		0.0000215	
	0.0000229	0.0000179	
		0.0000155	
	0.0000172	0.0000131	
		0.0000107	

Shaded areas indicate overlap of frequency ranges.



# Appendix

This Appendix provides specifications for the System 2000 family of MTU instruments:

- MTU-P (2E, 2H, 3H, 5)
- MTU-A (2EA, 2HA, 3HA, 5A)

MTU-P indicates an instrument capable of acquiring MT data, equipped with a pluggable CompactFlash storage card. (Earlier instruments had non-removable storage.)

MTU-A indicates an instrument capable of acquiring MT and AMT data. All versions have removable storage.

The values and specifications given here are typical, and are subject to change. They are not claimed to be worst-case specifications.

# System 2000 MTU Family Specifications

183 Appendix D 183

# **General**

# **Channels**

Instruments acquire and store two electric field channels (E) and/or two or three magnetic field channels (H).

# Sampling

**Frequency ranges.** MT signals are defined as the frequency range up to approximately 400Hz. AMT signals are defined as the frequency range up to 10 000Hz.

The MTU-A family acquires MT or AMT signals using V5-2000 (S2000) sample rates.

The MTU-P family acquires MT signals using either V5-2000 or V5-compatible sample rates.

**Sampling rates.** Time series of signals are stored at three different sample rates. The signals sampled at

the lowest rate are acquired continuously. Signals sampled at the two higher rates are sampled intermittently in a pattern programmed by the user. For more information, refer to the *V5 System 2000 MTU/MTU-A User Guide*.

Table D-1 illustrates the sampling rates for frequency bands 2 (highest) to 5 (lowest).

Table D-1: A/MTU sampling rates.

	MTU			MTU-A	
Band	V5-Compatible V5		V5-	Data Type	
	50Hz	60Hz	2000	MT	AMT
future	_	_	_	_	96 000
future	_	_	_	_	48 000
2	_	_	_	_	24 000
3	2560	3072	2400	2400	2400
4	320	384	150	150	150
5	24	24	15	15	_

**Bandwidth.** Signal bandwidth is typically 42% of the sample rate in V5-2000 modes and 25% of the sample rate in V5-compatible modes.

Resolution. Samples are 24-bit resolution.

# Filtering and noise

**Noise floor.** Typical noise floor (MTU-2EA, high gain, DC coupling) is  $10nV/\sqrt{Hz}$  above 30Hz.

Line frequency digital comb filter. At the lowest sample rate, a comb filter attenuates odd harmonics of the line frequency.

Except at the 24 000Hz sample rate, the higher sample rates use a comb filter to attenuate all harmonics of the line frequency. At the 24 000Hz sample rate, a digital high-pass filter (nominal 600Hz corner frequency) is used.

# Clocking and synchronization

Sample times are synchronized with UTC using a combination of global positioning system (GPS) signals and stable oven-controlled crystal oscillator (OCXO) clock.

Long-term absolute accuracy when locked to GPS is  $1\mu s$  or better.

Typical short-term stability governed by OCXO during GPS dropouts is  $\pm 5 \times 10^{-9}$ .

Any Phoenix GPS-equipped devices (MTUs, current sources, related controllers, etc.) can be synchronized at any location worldwide without communication among the units.

# **Calibration**

Units perform multi-frequency self-calibration and magnetic sensor calibration on command. The resulting files contain a complete calibration of the instrument or sensor over its useful frequency range, independent of

185 Appendix D General 185

the mode of operation (e.g., line frequency, AC/DC coupling). For more information on file format and content, see "Calibration file naming and content" on page 188.

The schedule (and other parameters) can be established on-line with a PC connected to the instrument or off-line by saving a startup file on the CompactFlash card to be used in the acquisition.

## **Power**

Power consumption varies from 14W (MTU-5 with three magnetic sensors) to as low as 8W (MTU-2E). With appropriate external battery(ies), units will operate for 24h or more.

Units shut down automatically when battery voltage is low.

All inputs are protected against power surges.

# **Scheduling**

Acquisition start and stop dates and times are userprogrammable. Within the overall duration, acquisition of the two higher frequency bands can start and stop together independently of the lowest band.

# Data storage and transfer

Calibration and acquisition data are stored on a removable CompactFlash card of up to 512MB capacity.

Data can be transferred to a PC either by connecting to the instrument with a parallel cable or by physically transferring the CompactFlash card.

# **External connections**

Multi-pin connectors are military grade, environmentally sealed.

## Ground

An external binding post provides the case ground, which should be connected to a porous pot electrode.

# Telluric inputs

Units are equipped with four binding posts, marked WNSE for ease of cable connection.

# Parallel port

A multi-pin connector is used for control and data transfer via an external adapter.

- Circular, 26-pin, shell size 16.
- Pinouts compatible with IEEE 1284 ECP bidirectional PC parallel port (pin A = PC pin 1, pin B = PC pin 2, etc.).
- Electrostatic discharge protection on all pins.
- 5V logic levels.

# **Auxiliary connector**

- Circular, 18-pin, shell size 14.
- Provides signal input, power output, and calibration signals to three magnetic sensors.

# **Battery connector**

- Circular, 4-pin, shell size 8.
- Surge protection and overload protection on all pins.
- Pin A: Battery 1, +12VDC.
- Pin B: Battery 2, +12VDC.
- Pin C: Battery common.
- Pin D: Battery common.

# GPS antenna connector

· Circular, BNC-type.

# Mechanical and environmental

Case. Environmentally sealed diecast aluminum.

Weight. 4.4kg.

Dimensions, 230mm x 225mm x 110mm.

Operating temperature. -20°C to +50°C.

# File types and logical record formats

Results are stored in the files described in the following paragraphs. To allow future changes in file formats to be made transparent, Phoenix software uses a library of C-language functions to access the files. Anyone writing software to access files generated by the MTU family is strongly advised to used the Phoenix C library.

# Calibration file naming and content

Calibration files are in a proprietary binary format. Human-readable calibration information can be extracted from calibration files by supplying the SYSCAL program with a text file of frequencies.

SYSCAL then computes and displays the response of the instrument or sensor at those frequencies.

**Instrument.** Instrument calibration files are named automatically in the format ssss.CLB, where ssss is the instrument serial number.

**Sensors.** Sensor calibration files are named by the user, and should be in the format COILSSS.CLC (for MTC-50 sensors), AMTCssss.CLC (for MTC-30 sensors), or LOOPssss.CLC (for AL-100 airloop sensors), where ssss is the coil or loop serial number.

# Time series file naming and content

Time series files can be named by the user. If the user does not supply a name, files are named automatically in the format ssssmdda, where

- ssss is the instrument serial number.
- m is the month in hexadecimal
- dd is the day in decimal
- · a is an alpha character denoting the order of repeated soundings on the same day.

The file extension is in the format TSH, TSL, or TSn and denotes the sample rate:

 $.\mathtt{TSH} = \mathtt{V5}\text{-compatible Bands 3}$  and 4 sample rates.

.TSL = V5-compatible Band 5 sample rates.

.TS2 = 24 000Hz sample rate.

.TS3 = 2400Hz sample rate.

.TS4 = 150Hz sample rate.

.TS5 = 15Hz sample rate.

Note TS2 to TS5 may use other sample rates in the future.

TSH and TSL apply only to MTU instruments in V5compatible modes.

Each record consists of a *tag* followed by time series data. Figure D-1 on page 190 illustrates the file format graphically.

The time series is stored in 24-bit two's complement format, three bytes per sample, least significant byte first. A *scan* is a set of samples, one from each channel, taken simultaneously. A complete scan from one sample time is stored consecutively in order of channel number. (Channels are numbered starting at 1, not 0.) Scans are stored in order of sample time.

The first scan in a record always starts exactly on a UTC second, and the scan rate is always an exact integer multiple of 1Hz.

# Time series file format

Time series files consist of *records* containing time series data, written chronologically from the time of the first sample in the record.

Record lengths within a single file may vary.

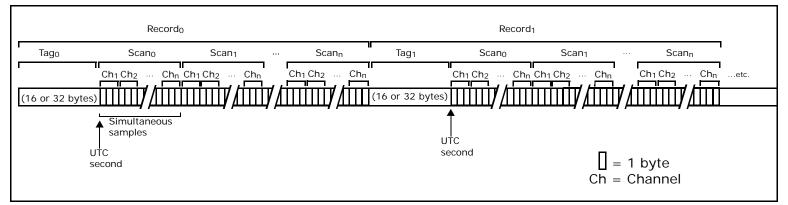


Figure D-1: A graphical representation of the time series file format. The scans within one record span either one second (Bands 3, 4, and 5) or 0.1 second (Band 2). Records always begin on a UTC second, but not necessarily on consecutive UTC seconds.

# Time series tag format

The tag format may vary depending on instrument firmware, but only one tag format is used in any one file.

Currently, tags are 16 bytes long in  $\mathtt{TSH}$  and  $\mathtt{TSL}$  files and 32 bytes long in  $\mathtt{TSn}$  files. Table D-1 summarizes the byte assignments within the tags, and the paragraphs that follow provide additional detail.

Table D-2: Summary of tag byte assignments

Byte	Meaning
0–7	UTC time of first scan in the record.
0	second
1	minute
2	hour
3	day
4	month
5	year (last 2 digits)
6	day of week
7	century
8–9	instrument serial number (16-bit integer)
10–11	number of scans in the record (16-bit integer)
12	number of channels per scan
13	tag length (TSn) or tag length code (TSH, TSL)
14	status code
15	bit-wise saturation flags
	Tags in TSH or TSL files end with byte 15

Table D-2: Summary of tag byte assignments

Byte	Meaning
16	reserved for future indication of different tag and/or sample formats
17	sample length in bytes
18–19	sample rate (in units defined by byte 20)
20	units of sample rate
21	clock status
22–25	clock error in µs
26–31	reserved; must be 0

**Bytes 10–11.** The number of scans in the record. Except in TS2 files, every record contains 1s of data, so this 16-bit integer is also the sample rate in Hz. (TS2 records contain 0.1s of data.)

**Byte 13.** In TSn files, this byte contains the tag length in bytes (currently 32). In TSL and TSH files, this byte contains the code 0, indicating a 16-byte tag length.

Byte 14. The instrument status code values are explained in Table D-3.

Table D-3: Status codes (Tag Byte 14)

Value	Meaning
0	normal completion
1	internal error
2	reserved
3	saturation of front-end board analog circuits
4	internal error in front-end board digital signal processor (DSP)
5	internal error
6	processor timed out without receiving data from front-end board DSP
7	internal error
8	internal error

Byte 15. Saturation flags. Each bit corresponds to a different channel (bit 0 for channel 1, bit 1 for channel 2, etc.). A bit's value will be 1 if either the common mode or differential mode input voltage limit is exceeded in any sample.

Byte 16. This byte is reserved for future use to identify different tag formats or different sample formats, such

as floating point or compressed format. The value is currently 0.

Byte 17. The sample length in bytes, currently 3. Future changes in sample formats (32-bit integer or floating point, for example) may cause this value to change.

Bytes 18-19. The sample rate (per unit time as specified by Byte 20). For the range of possible values, see Table D-1 on page 184.

Byte 20. Time unit of the sample rate. The current range of values is shown in Table D-4. Other values may be defined in the future.

Table D-4: Sample rate units (Tag Byte 20)

Value	Unit
0	second (Hz)
1	minute
2	hour
3	day

Byte 21. Clock status. This byte reflects the status of the clock at the time the record is taken. A value of 4 indicates that the clock was locked to GPS. A value of 3 indicates that the time is based on the crystal oscillator initialized by GPS.

Bytes 22–25. Clock error in  $\mu$ s. The value will be 0 unless GPS lock has been lost and reacquired. Recovery from GPS dropout (re-synchronization of the crystal oscillator) can take up to 20min. During this time, the difference between the recorded sample time (bytes 0–7) and the actual sample time is recorded as clock error. This value is a 32-bit two's complement integer, positive if the sample is late, negative if it is early.

# Related products

Several other products for similar or specialized applications are available or under development.

## **MTU-TXC**

Used to synchronize other equipment, such as current sources, to System 2000 equipment.

UTC signal output:

- 921 600Hz
- 1Hz
- 1/60Hz

Geophysical current source control output:

• 0.001Hz to 10kHz

Control waveforms are referenced to zero phase at UTC 2000 Jan 01 00:00:00.

# MTU-2ESD, MTU-5ESD

Used in remote reference and monitoring applications, these instruments use a 33.6kb/s dialup telephone connection for control and data transfer.

# MTU-2ES, MTU-5S

Also used in monitoring applications, these instruments use a serial interface for control and data transfer, typically connecting to a fibre optic or copper wire modem.

193 Appendix D Related products 193

## MTU-5LR

Used in surveys with extended depths of investigation, these instruments employ a ring-core fluxgate magnetic sensor and low sample rates.

# **MTU-AI** family

These instruments, under development in 2003, provide an infrared interface to allow setup and monitoring from Palm OS® handheld terminals.

# System2000.net family

These instruments, introduced in 2004, are multichannel, multifunction receivers. The family includes the V8 and RXU receivers and the RXU-TM transmitter controller. The V8 has a full-colour, sunlight-readable display and keyboard, while the RXUs are equipped with an infrared interface and are sold with Palm OS® handheld terminals. All the instruments can optionally be equipped with wireless network capability.



# Index

#### **Numerics**

2 frequencies per octave, 41 4 frequencies per octave, 41 4096, error code, 134 4097, error code, 134 4098, error code, 134 54, ECP driver error code, 134

#### A

AutoEdit, 82 AutoX, 94

#### В

bands, processing, 41 bandwidth, specifications, 181 batch processing, SSMT2000, 34

#### C

calibration
curves, printing, 45
files, examining, 42
viewing data numerically, 46
channels, specifications, 180
ChartEditor, 93
Circle tool, MT-Editor, 83
CLB file extension, 42
CLC file extension, 42
clocking and synchronization,
specifications, 181
CMOS Setup, ECP port, 131
coherencies, viewing in SyncTSV, 120
coherency, 36

coherency type, 37 coherent noise, 38 comb filter, 181 communications, parallel port troubleshooting, 133 compatibility mode, Windows XP, 134 Component Pairs legend, SyncTSV, 120 connection errors, magnetic, 52 connections specifications, 182 controls, resizing in MT-Editor, 92 Copy Files command, SSMT2000, 11 correcting layout errors, 49 corrupt file, editing, SSMT2000, 47 Create Fourier Coefficients (TS to FT) command, noise tests, SSMT2000, 65 Create Fourier Coefficients (TS to FT) command, SSMT2000, 27 creating Fourier transforms, SSMT2000, 24 crosspower parameters, 38 custom parameters report, 60 customizing graphs, MT-Editor, 94

95 Index 198

I ndex

SSMT2000, 28, 35

#### D Edit TS to FT Parameters (PFT) command, SSMT2000, 25, 65 data processing flowchart, 125 editing crosspowers, MT-Editor, 97 data processing overview, 6 Editing tool, MT-Editor, 82 data storage and transfer, electrode resistance and calibration, 43 specifications, 182 E-line electrical values, 22 DC offset, SyncTSV, 113 E-line errors, correcting, 53 default times. Fourier Transform EMT file extension, 76 parameter, 42 error codes, parallel port DEFAULT.PFT, examining calibrations, 44 4096, 134 DEFAULT.TBL, examining calibrations, 44 4097, 134 degrees, report format, 61 4098, 134 Deleting tool, MT-Editor, 84 54, 134 Device Manager, Windows, 130, 132 error messages digital comb filter, 181 SyncTSV, 116 diting, 35 evaluating noise test plots, 73 DMF, latitude and longitude format, 61 EXAC, 22 DMS, latitude and longitude format, 61 examining calibration files, 42 DXAC, 22 Excel, for reports, 62 DXDC, 22 EXDC, 22 DYAC, 22 export options, MT-Editor, 84 DYDC, 22 exporting in EDI format, MT-Editor, 103 E exporting, MT-Editor, 135 extended bands, 41 ECP driver, use of interrupt, 134 Extended Capability Port (ECP), 130 ECP printer port, 130 extensions, file, 9 EDI format, exporting from MTexternal connections, specifications, 182

EYAC, 22

EYDC, 22

Editor, 103

EDI, latitude and longitude format, 61

Edit Robust Parameters (PRM) command,

#### F

FAQs, 3 FCn file extension, 27 FCn file extension, noise tests, 66 file and folder names, Plot Files, 30 file extension, Plot Files, 28 file extensions, SSMT2000, 9 file names, raw data, SSMT2000, 10 file naming, specifications, 184 files, organizing, 136 filtering and noise, specifications, 181 flowchart, data processing, 125 folder and file names, 9 format data records, 184 format, latitude and longitude in reports, 61 Fourier Transform parameters, 39 Freq. Scale legend, SyncTSV, 118 frequencies, specifying in MT-Editor, 86 frequency ranges, specifications, 180 frequency ranges specifications, 180 frequency ranges, instrument/sensor combinations, 41 frequency tables, SSMT2000, 141 FT, samples for, SyncTSV, 116

#### G

gain, and saturated records, 57 graph properties, MT-Editor, 93

#### Н

Hand tool, MT-Editor, 83 Hann, 116 hardware ID, MT-Editor, 135 hexadecimal, in file names, 10 hidden controls, MT-Editor, 93 hidden windows, MT-Editor, 91 hourly files, Fourier Transform parameter, 40

#### L

impedance matrix, rotating, SSMT2000, 39 increments, scrolling, SyncTSV, 113 installing software, 127 intended audience, 2 Internet site, 3 introduction, 1

#### Κ

keyboard shortcuts, MT-Editor, 78 keyboard shortcuts, navigating in MT-Editor, 82

#### L

laplink cable, 133 Lasso tool, MT-Editor, 83 latitude, report format, 61 layout corrections, revising, 54 layout errors, correcting, 49 legend, MT-Editor printout, 92 Load All Seg., SyncTSV, 109 Load Saved Batch Job comand, SSMT2000, 34 Load Time Series, SyncTSV, 108 Local E or H, SSMT2000, 30 Local E tool, MT-Editor, 84 Local H tool, MT-Editor, 84 logarithmic scale, examining calibrations, 45 longitude, report format, 61

## M

magnetotelluric processing parameters, 36–39 marker size, MT-Editor, 94 Mask View, MT-Editor, 81, 99 maximum crosspowers, 38 Maximum fraction of estimates to reject, 38 Mean tool, MT-Editor, 82 measured field, Fourier Transform parameter, 39

mechanical and environmenta specifications, 183 menus, MT-Editor, 78 Microsoft Excel, for reports, 62 minutes, report format, 61 Move to next frequency if..., robust processing parameter, 37 moving and resizing windows, MT-Editor, 92 MT file extension, 76 MT-Editor about, 2 exporting, 103 graph properties, 93 hardware ID, 135 hidden windows, 91 Mask View, 99 menus, 78 moving and resizing windows, 92 overview, 76 registration, 76 resizing window controls, 92 saving and exporting, 135 serial number registration, 135 user name, 135 Multi-table Editor, SSMT2000, 18

#### N

names, folders and files, 9 nested folders, SSMT2000, 31, 67

197 Index 197

198 Index 198

No acceptable time segments found, SyncTSV, 116 noise test results, viewing, 70 noise, coherent, 38 North Reference, SSMT2000, 22 NPIPlot, 69 NPIPlot, appearance, 72 NPIPlot, printing, 72 Nuttall, 116

#### 0

on-line support, 3 Oplog Lines, MT-Editor, 81 Options menu, SyncTSV, 111 Options tool, MT-Editor, 82 organizing your files, 136

#### P

parallel noise data, processing, 64
Parallel Noise Processing (PRM)
command, SSMT2000, 67
parallel noise test, Fourier Transform
parameter, 40
parallel noise tests, evaluating, 73
parallel port
configuring, 130
troubleshooting communications, 133
PC requirements, 128
PFT file extension, 24
PFT File Naming Convention, table, 24

Phoenix Geophysics Limited, contact information, 3 plot appearance, NPIPlot, 72 Plot Files, 28 PLOT-COMP, 88, 89 PLOT-EDIT, 88, 89 Pointer tool, MT-Editor, 83 Polar Diagrams, 81 polar diagrams, viewing, MT-Editor, 101 polarity errors, magnetic, 51 Ports (COM & LPT), 132 power spectra density, SyncTSV, 120 power spectra, SyncTSV, 115 power spectra, viewing in SyncTSV, 115 power, specifications, 182 printer setup, SyncTSV, 123 printing calibration curves, SSMT2000, 45 printing noise test plots, 72 printing, MT-Editor, 102 printing, SyncTSV, 121 PRM file extension, 28 processing flowchart, 125 processing times, SSMT2000, 42 PSD, 120

## R

raw data file names, SSMT2000, 10 record formats, 184 Rectangular (power spectra),

SyncTSV, 116 reference channels, SSMT2000, 30 registering MT-Editor, 135 related products, specifications, 189 Remote E or H, SSMT2000, 30 Remote E tool, MT-Editor, 84 remote H reference channels, MT-Editor, 89 Remote H tool, MT-Editor, 84 Remove linear phase delay, examining calibrations, 44 renaming data files, SSMT2000, 15 reports creating, 57 custom parameters, 60 importing to spreadsheet, 62 latitude and longitude formats, 61 modifying custom parameters reports, 61 saturated records, 57 time ranges, 23, 57 view site parameters, 18, 57 Reprocess (Robust) command, SSMT2000, 33, 68 requirements, PC, 128 resistivity variance, 37 resizing or restoring window controls, MT-Editor, 92 resolution, specifications, 181 Restore Defaults, SyncTSV, 115

restoring original parameter values, SSMT2000, 55 restoring original Site Parameter file, SSMT2000, 19 Restoring tool, MT-Editor, 84 Resulting Data, MT-Editor, 81 revising layout corrections, SSMT2000, 54 Rho variance, 36 robust processing, 36 rotating the impedance matrix, SSMT2000, 39 Russian Windows, 9

## S

sample data, 128
samples for FT, SyncTSV, 116
sampling, specifications, 180
Sampling, SyncTSV, 109
saturated records report, 57
saving, MT-Editor, 135
Scale Settings (Spectra), SyncTSV, 119
scale, SyncTSV, 113
Scans per window, SyncTSV, 113
scheduling, specifications, 182

scrolling, SyncTSV, 113 seconds, report format, 61 Select TS File and Component. SyncTSV, 109 semi-logarithmic scale, examining calibrations, 45 sensor serial numbers, SSMT2000, 22 serial number, MT-Editor, 135 shift scope (y-origin), SyncTSV, 113 Shift scope, SyncTSV, 115 shortcuts MT-Editor, 78 navigating in MT-Editor, 82 Windows, 21 Site Parameter File examining calibrations, 43 Site Parameter file TBL, 17 Site parameter file restoring, 19 Skip saturated records, SyncTSV, 116 software installing, 127

specifications bandwidth, 181 channels, 180 clocking and synchronization, 181 data storage and transfer, 182 external connections, 182 file naming, 184 file types and logical record formats, 184 filtering and noise, 181 mechanical and environmental, 183 power, 182 related products, 189 sample resolution, 181 sampling, 180 scheduling, 182 system, 179 tag format, 186 specify times, Fourier Transform parameter, 42 specifying frequencies, MT-Editor, 86 Spectra Computation, SyncTSV, 116 Spectra legend, SyncTSV, 118 SPP Standard Parallel Port, 131 spreadsheet, importing reports, 62

199 Index 199

updating, 134

200 Index 200

SSMT2000 about, 2 batch processing, 34 Create Fourier Coefficients (TS to FT) command, 27 Create Fourier Coefficients (TS to FT) command, noise tests, 65 creating data folders, 9 Edit Robust Parameters (PRM) command, 28, 35 Edit Site Parameters command, 21 Edit TS to FT Parameters (PFT) command, 25, 65 Fourier transforms, creating, 24 frequency tables, 141 Load Saved Batch Job command, 34 main window, 8 Multi-table Editor, 18 North Reference, 22 Parallel Noise Processing (PRM) command, 67 processing times, 42 renaming data files, 15 Reprocess (Robust) command, 33, 68 selecting folders and files, 9 sensor serial numbers, 22 starting, 8 temporary file size, 31 Toggle Fields command, 21 transferring data to your PC, 9

verifying acquisition times, 23 verifying site parameters, 17 View Ranges command, 31 View Site Parameters command, 18, 57 View Time Ranges, 23, 57 start and end times, specifying, SyncTSV, 111 Starting Data, MT-Editor, 81 starting MT-Editor, 78 starting SSMT2000, 8 station header, MT-Editor, 81 Status bar, SyncTSV, 110 Std View, MT-Editor, 82 support, contact information, 3 support, on-line, 3 Synchro Time Series View about, 3 SyncTSV, 105 shift scope, 113 troubleshooting time series files, 112 System 2000, 2 System 2000.net, 2

#### Т

tag format, specifications, 186 TBL (site parameter) file, 17 TBO file extension, 18 telluric component errors, correcting, 53 temporary file size, SSMT2000, 31 time span of acquisition, 23 Tipper magnitude scale, MT-Editor, 94
Toggle Fields command, SSMT2000, 21
toolbars, MT-Editor, 80
troubleshooting time series files,
SyncTSV, 112
Two Vertical Lines tool, MT-Editor, 83

#### U

updating software, 134 URL, Phoenix Web site, 3 user name, MT-Editor, 135

#### V

verifying acquisition times, SSMT2000, 23 verifying site parameters, SSMT2000, 17 vertical scale, examining calibrations, 45 Vertical Scales, SyncTSV, 114 View Ranges command, SSMT2000, 31 View Site Parameters command, SSMT2000, 18, 57 View Time Ranges command, SSMT2000, 23, 57 viewing noise test results, 70

#### W

Web site, 3 weight cutoff value, 38 weight type (Rho variance, Ordinary coherency), 38 white noise test, Fourier Transform parameter, 39 Windows Me, installation procedure, 129 Windows shortcuts, SSMT2000 Multitable Editor, 21 Windows XP and ECP port, 133 Windows XP, compatibility mode, 134 Windows, Russian, 9

Z

Zoom (spectra), SyncTSV, 119



201 Index 201