How to update POLYPHRASE firmware

OUT L mono
OUT R send
9V DC
IN L mono
IN R return

tone — dark / bright
depth
mix — 0% / 100%
midi input
rate — 0.1 hz / 10 hz
repeats — 0% / 110%

time:
682ms · 1.3s · 2.7s
341ms · · 5.5s
170ms · · 11s
85ms · 22s

TRIG FUNCTION
• tap tempo
• infinite

L   R
SYNC

dual stereo
ping pong
mono with external loop
ECHO STYLE

TRIG
ECHO

polyphrase stereo echo effect with infinite feedback loop

by VONGON
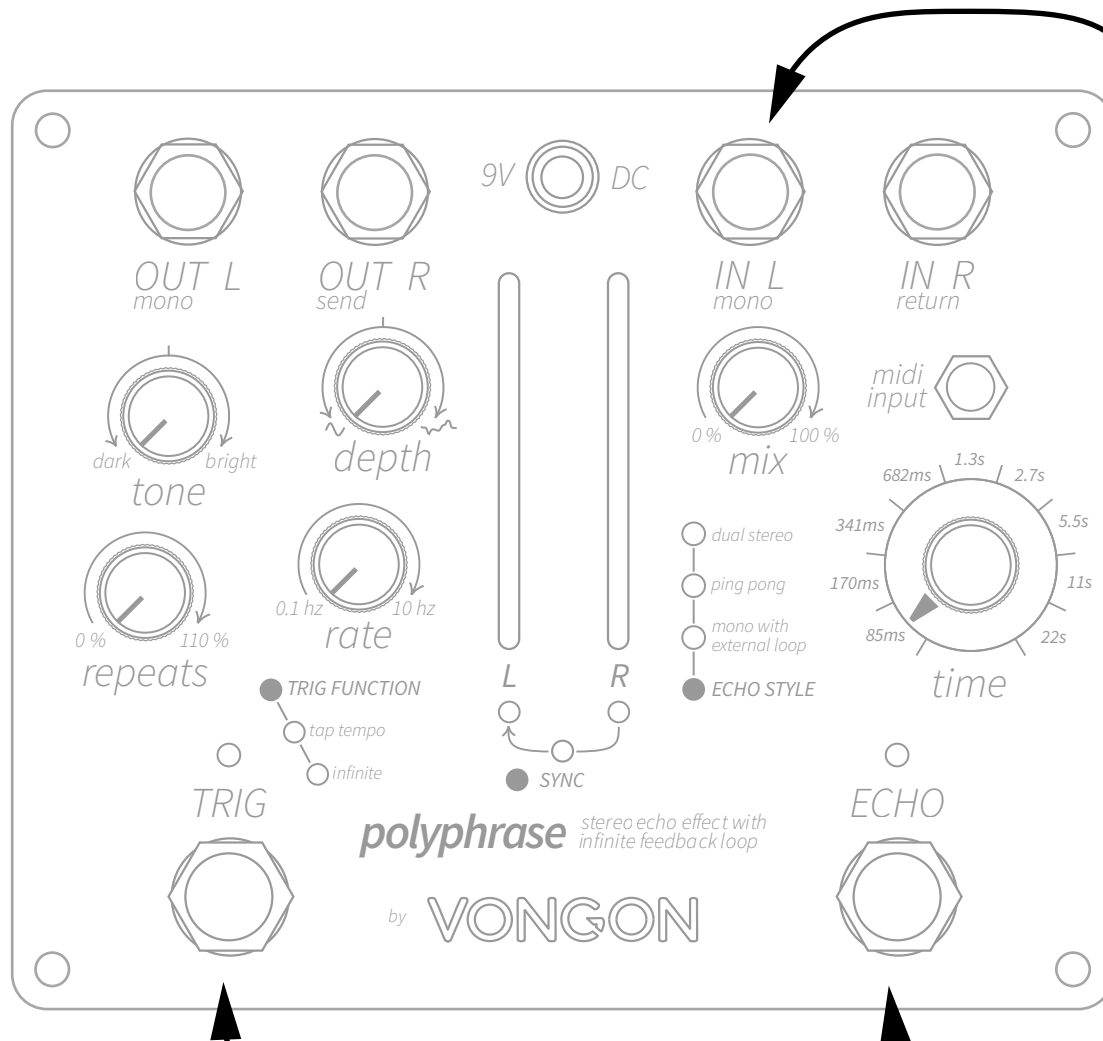
1. Power on POLYPHRASE while holding down both footswitches. Both purple LEDs should start to slowly blink, indicating that the pedal is ready to load new firmware.

2. Play the firmware .WAV file into the **IN L** jack. You can use a phone, computer, audio interface, etc.

If the pedal is correctly reading the firmware, the TRIG led will blink quickly for 5 to 10 seconds, then the ECHO led will blink once. This process will repeat until the firmware is compltely loaded.

If the pedal is not able to read the audio file, both purple LEDs will blink quickly. Try powering off the pedal and starting again. Try adjusting the volume of the audio file.

If your pedal has the new firmware, the purple TRIG light will blink twice when the pedal is powered on.

Please contact support@vongon.com for questions.