

VxMark Hardware Setup

VxMark has three primary components: the ballot-marking device (BMD) in a hard case, the printer, and a Goldenmate 1500VA/1000W uninterruptible power supply (UPS).

VxMark Setup


- ☐ Place the VxMark case on a standard height table



- ☐ Open the VxMark case, breaking and documenting seals per the jurisdiction's procedures
- ☐ Tilt the screen forward and rotate it clockwise 90° so it faces the voter



- ☐ Remove the headphones from the compartment to the left of the screen, plug them into the accessible controller, and hang them on the hook above the card reader
- ☐ Open the compartment on the back of the case by lifting the release knob behind the screen to reveal the power cable and printer USB cable

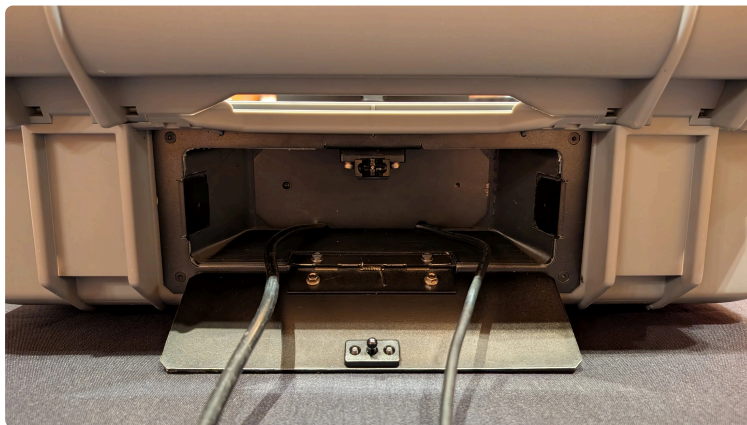

- ☐ Plug the VxMark power cable into the Goldenmate 1500VA/1000W UPS
- ☐ Plug the UPS into an outlet
- ☐ Turn the UPS on

Printer Setup

- ☐ Remove the printer from its case and set it next to VxMark
- ☐ Connect the printer power cable to the printer
- ☐ Plug the printer power cable into the Goldenmate 1500VA/1000W UPS
- ☐ Connect the printer USB cable exiting the back of VxMark to the USB port on the printer
- ☐ Press the power button on the front of the printer

