


❖ Tools :

- Angled Nipper (For removing servo mounts) Screw Drivers (For M1 and M2 screws), Flat Nose Pliers(For pressing down bearings), Tweezers (for M1 screws)






❖ Preparation :



- Remove the servo mounting tabs and stickers, save the servo horns and screws.


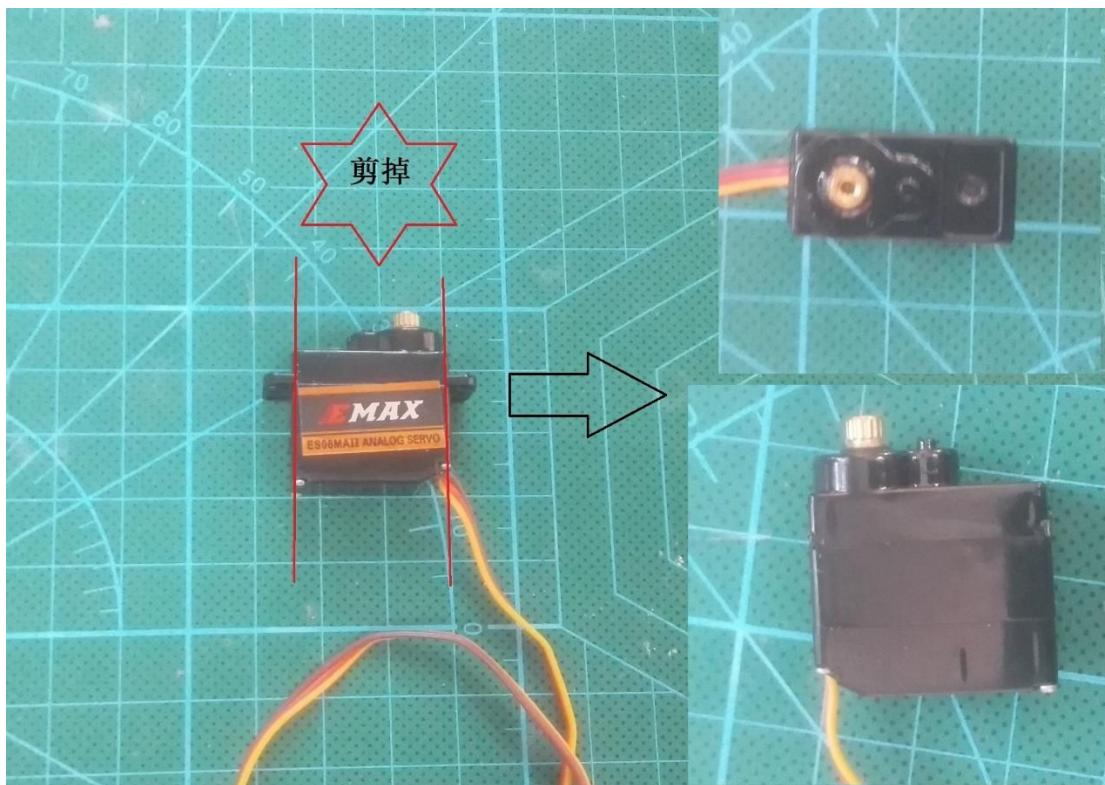



- ❖ Connect the wires and battery to check everything is working (the LED eyes should light up)


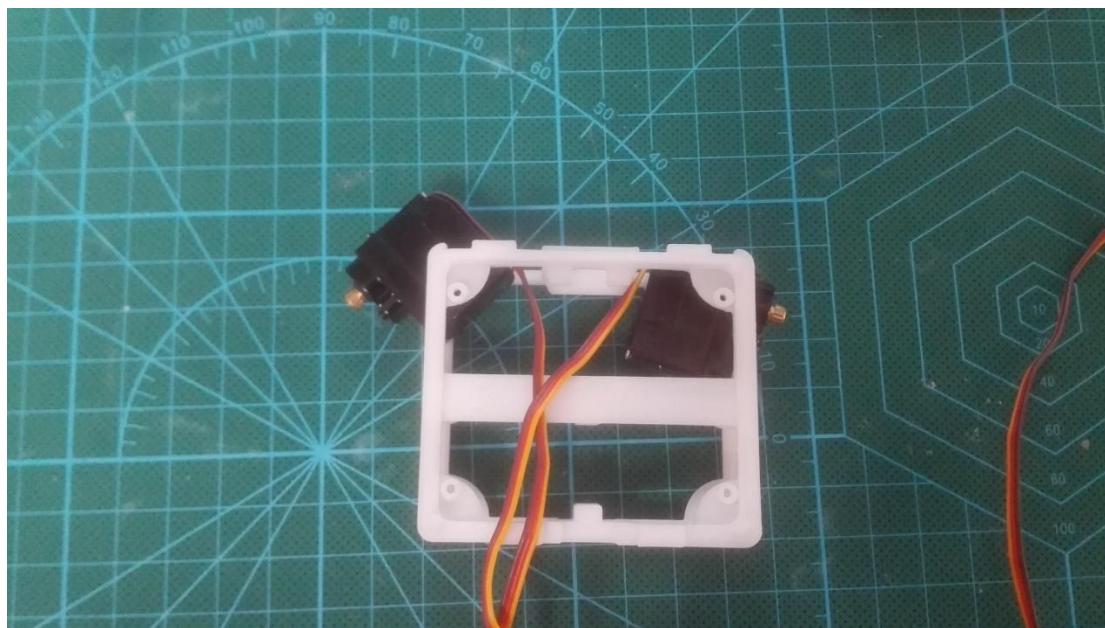


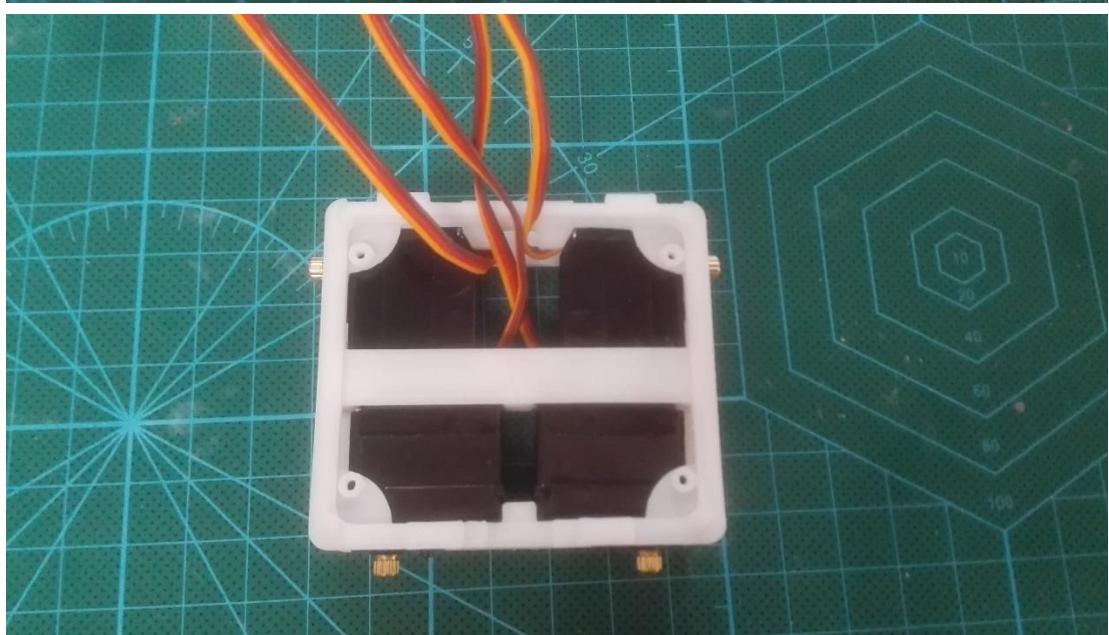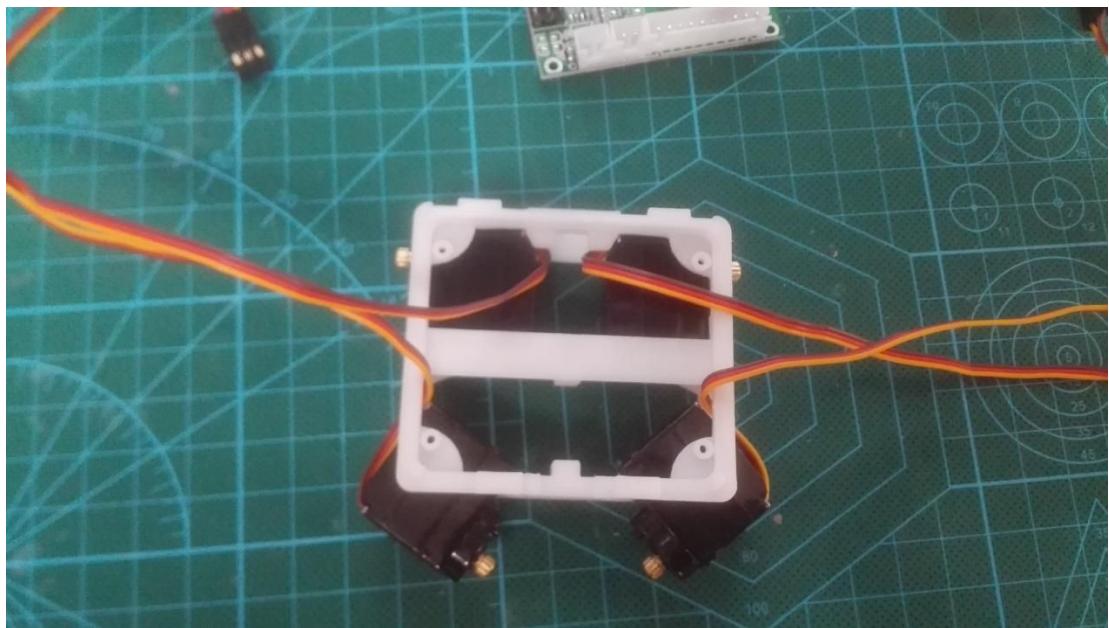

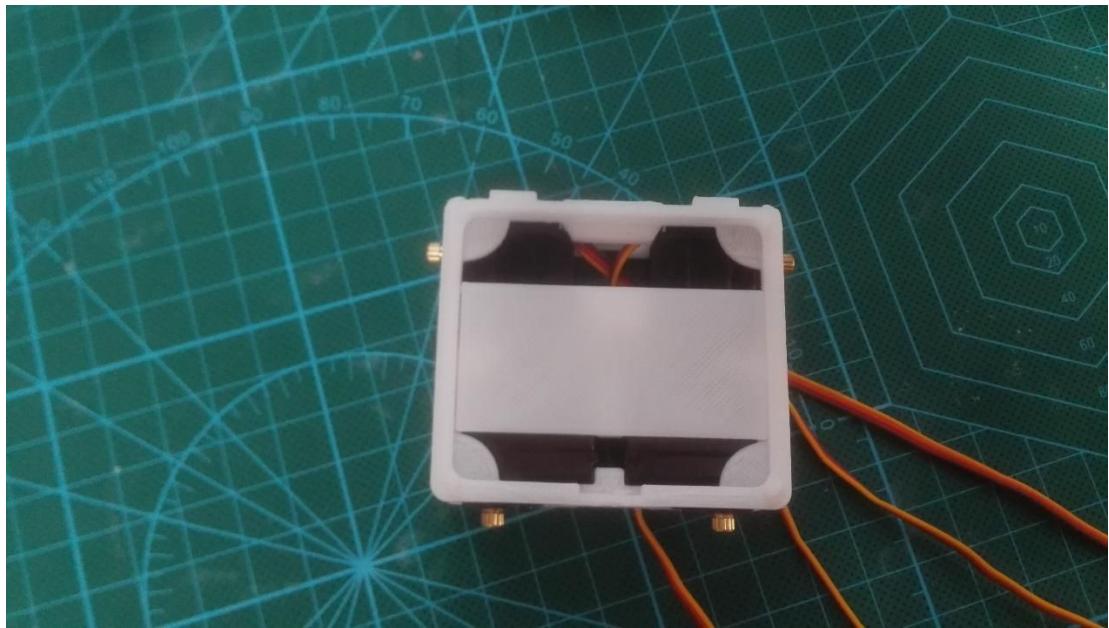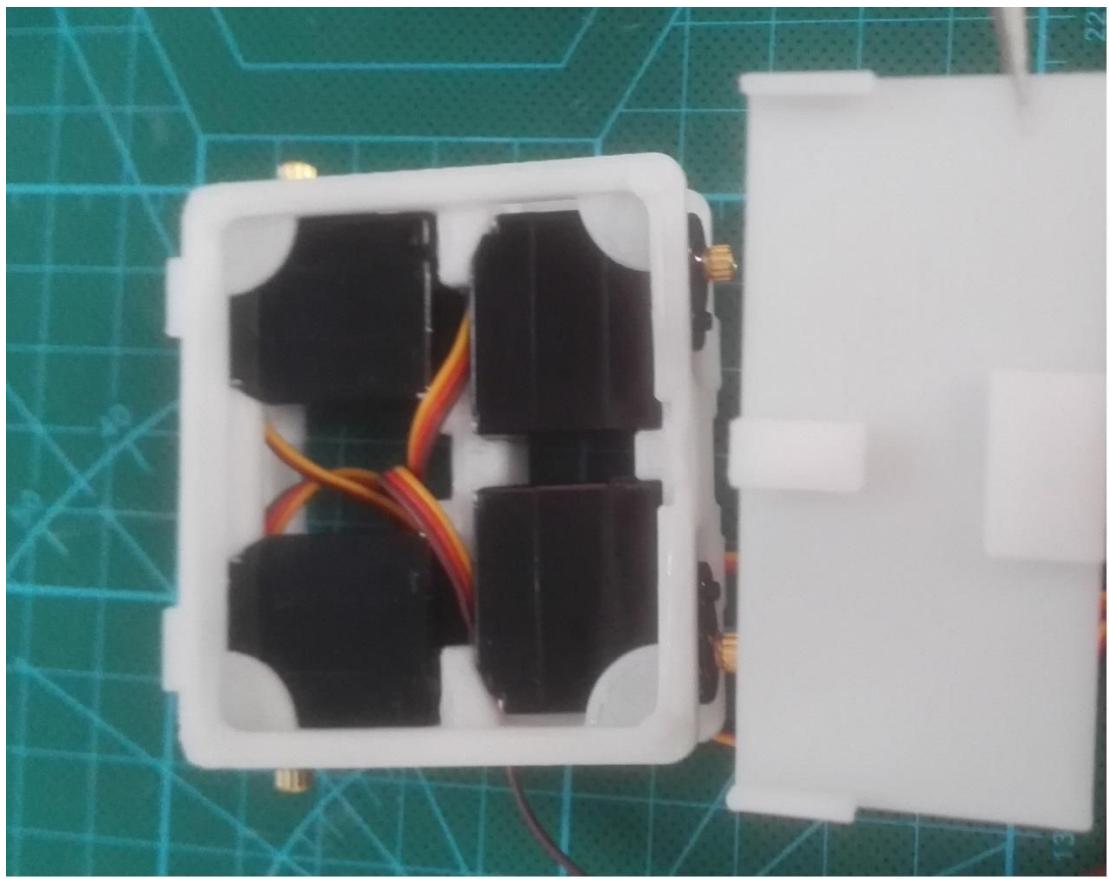

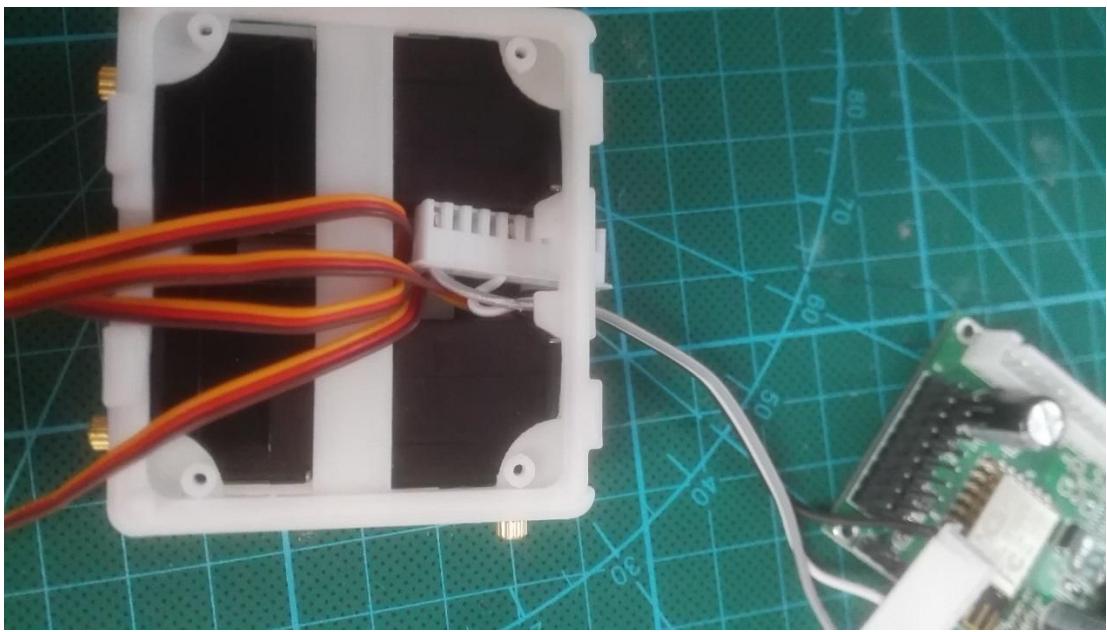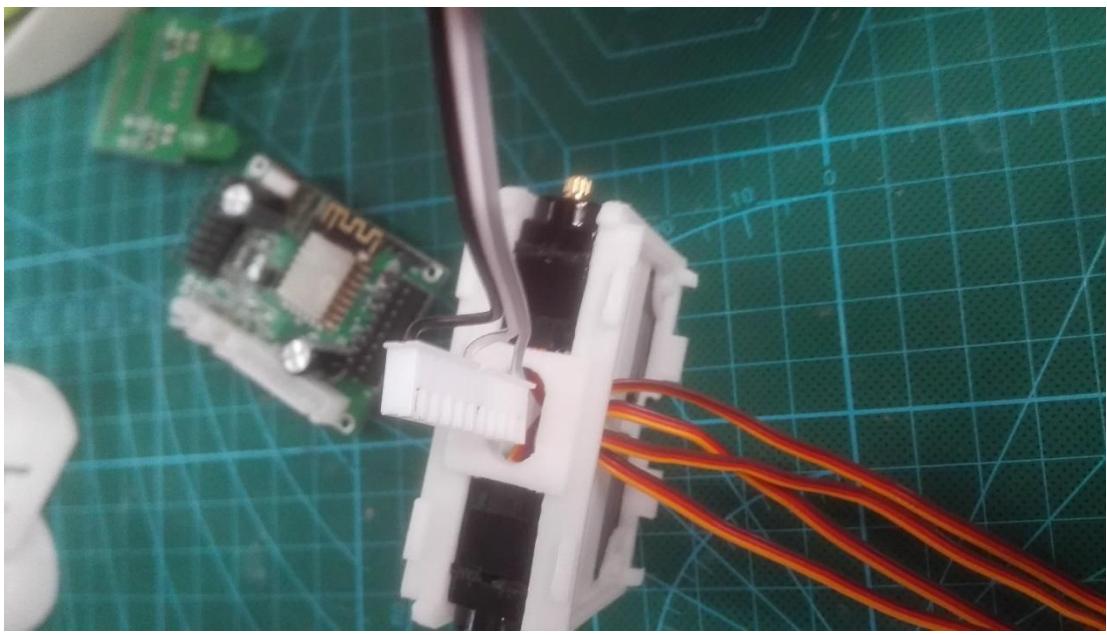

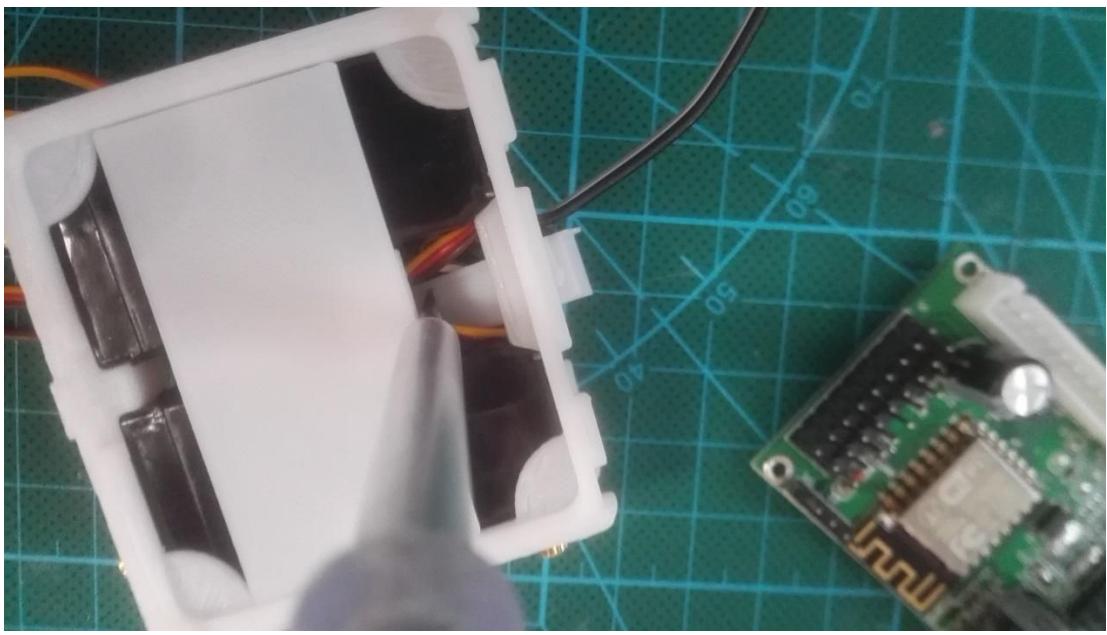

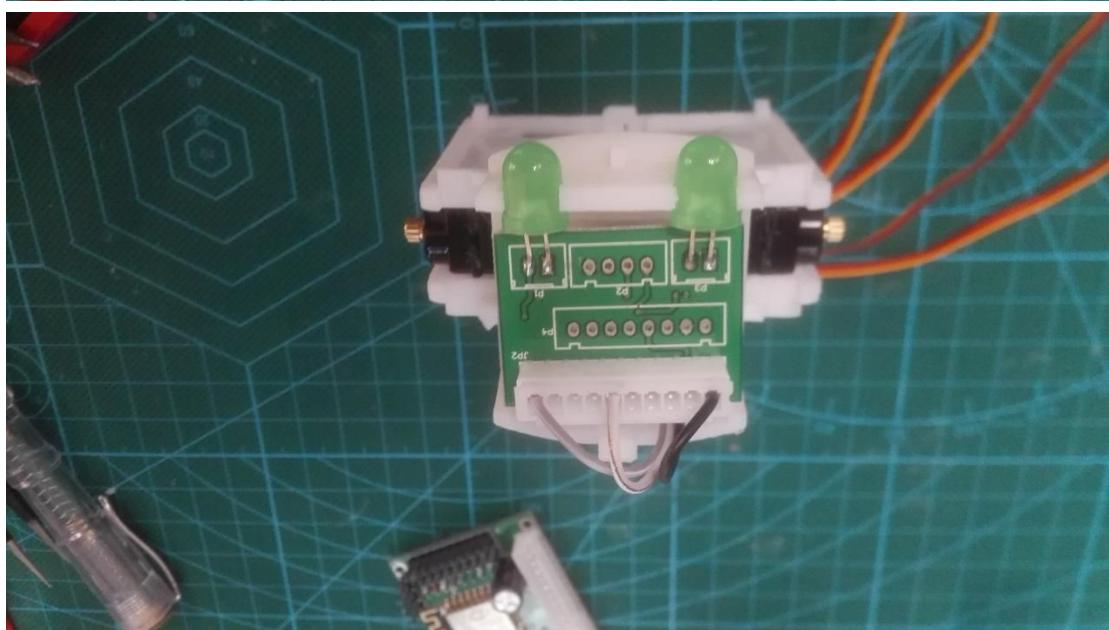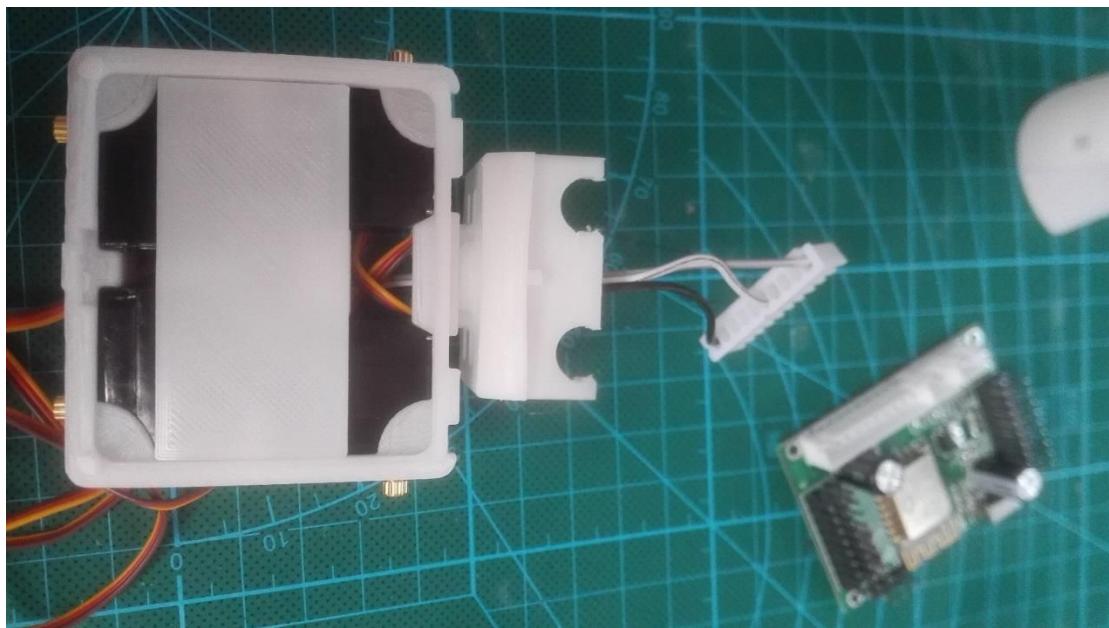








❖ Arms assembly







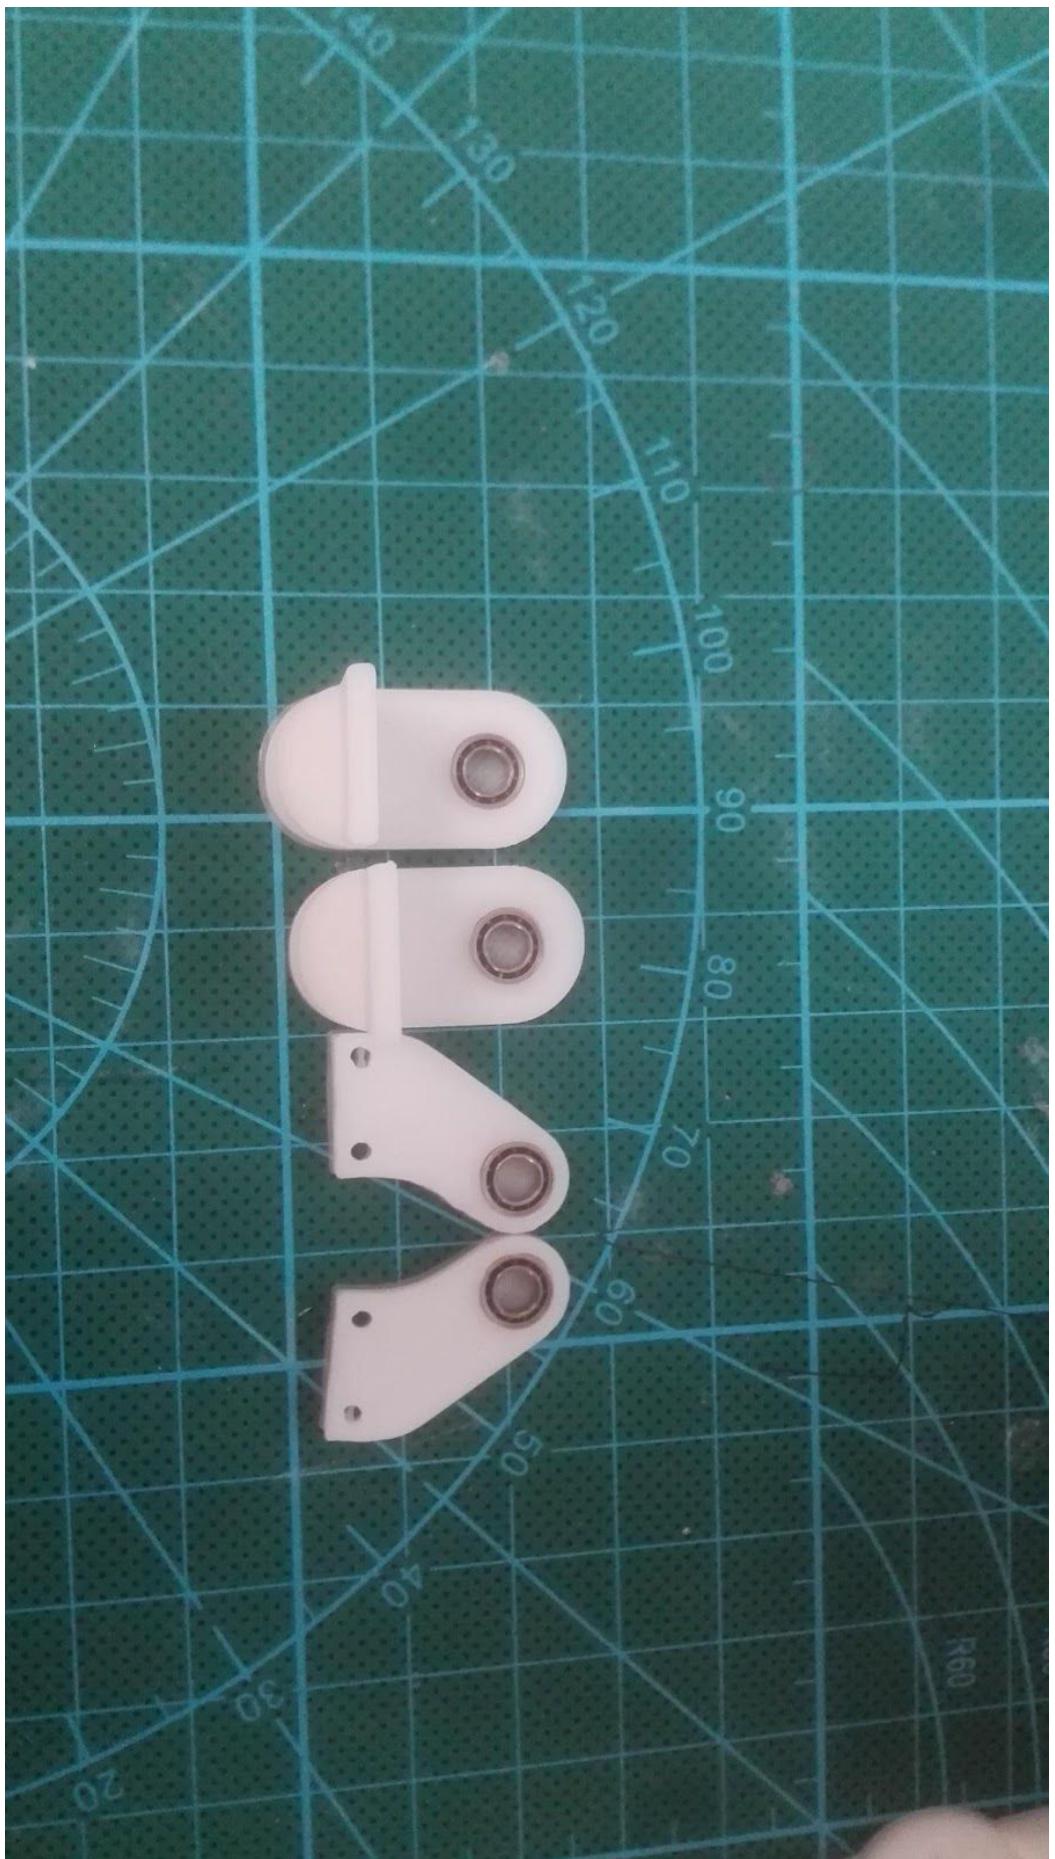


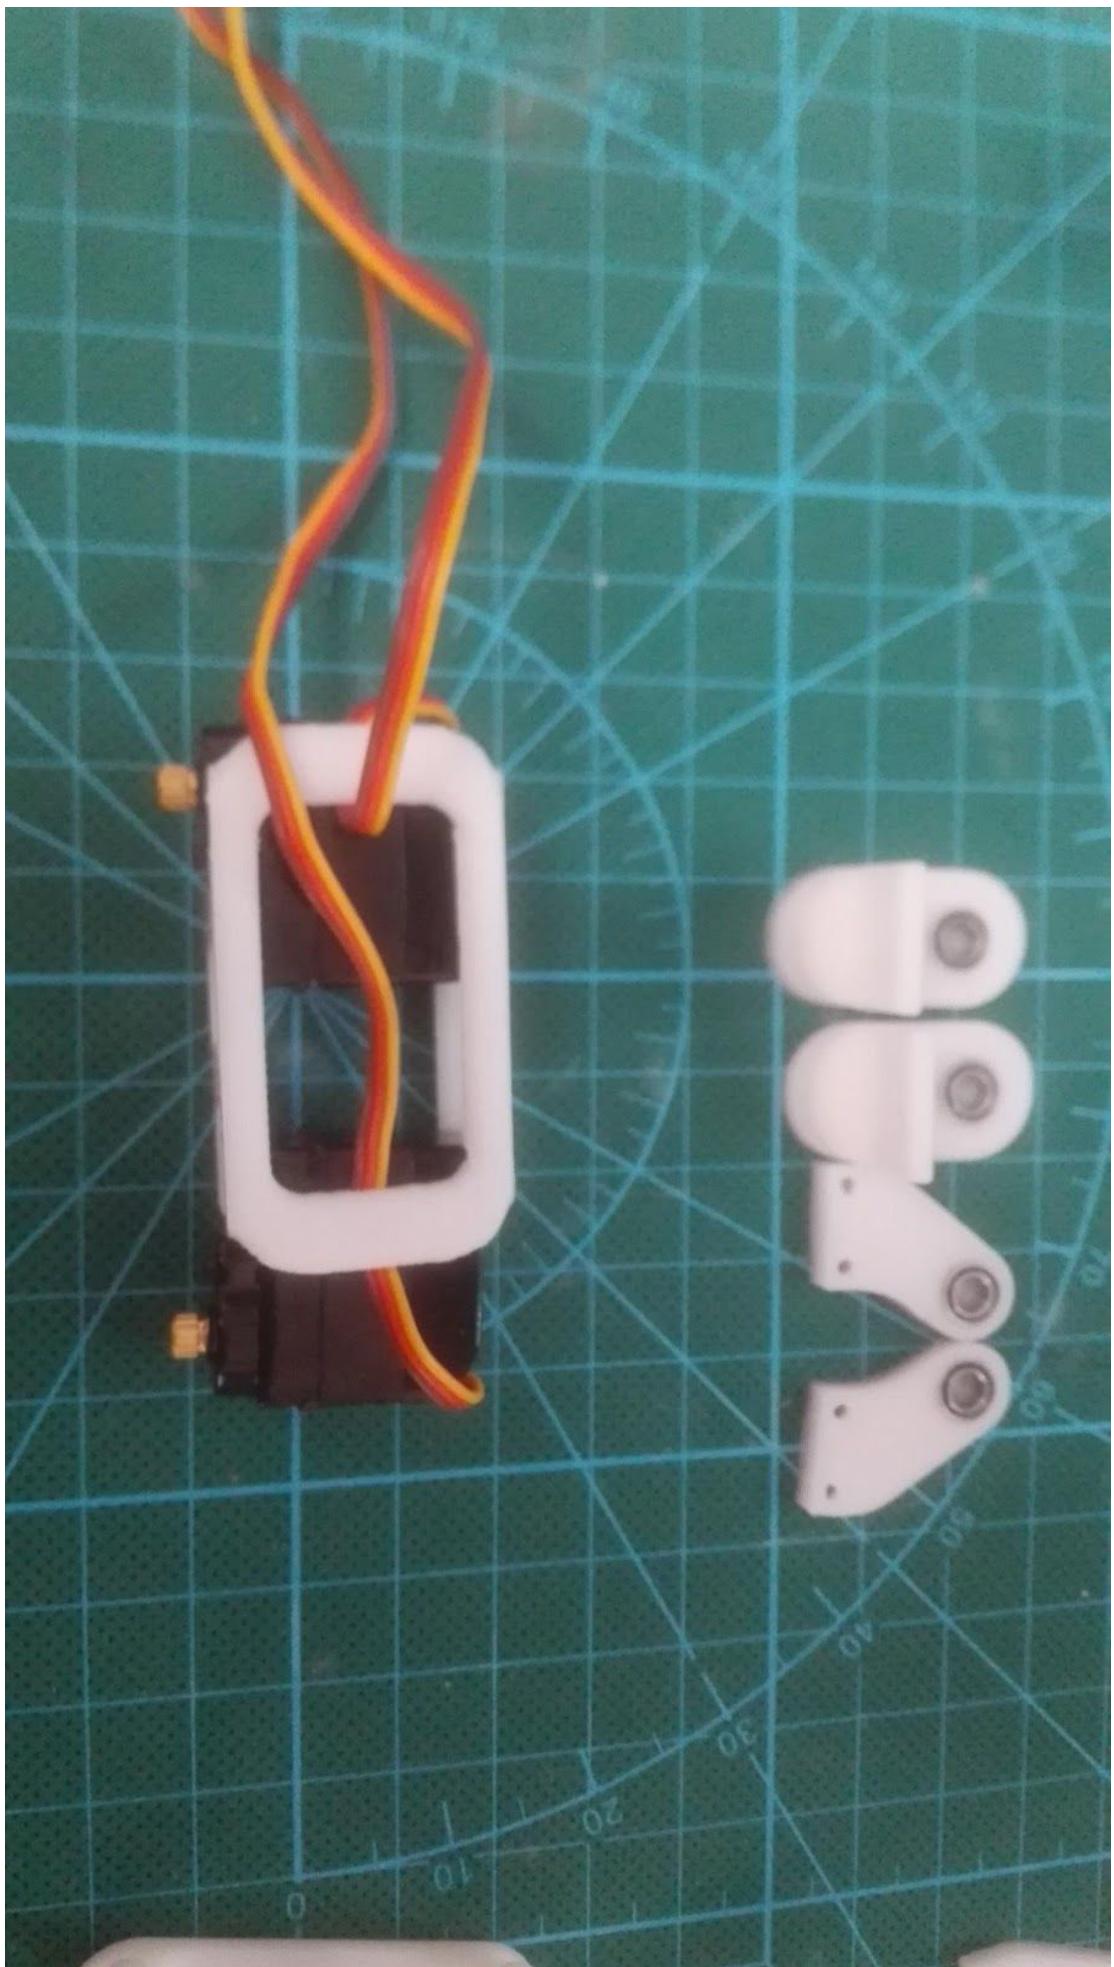


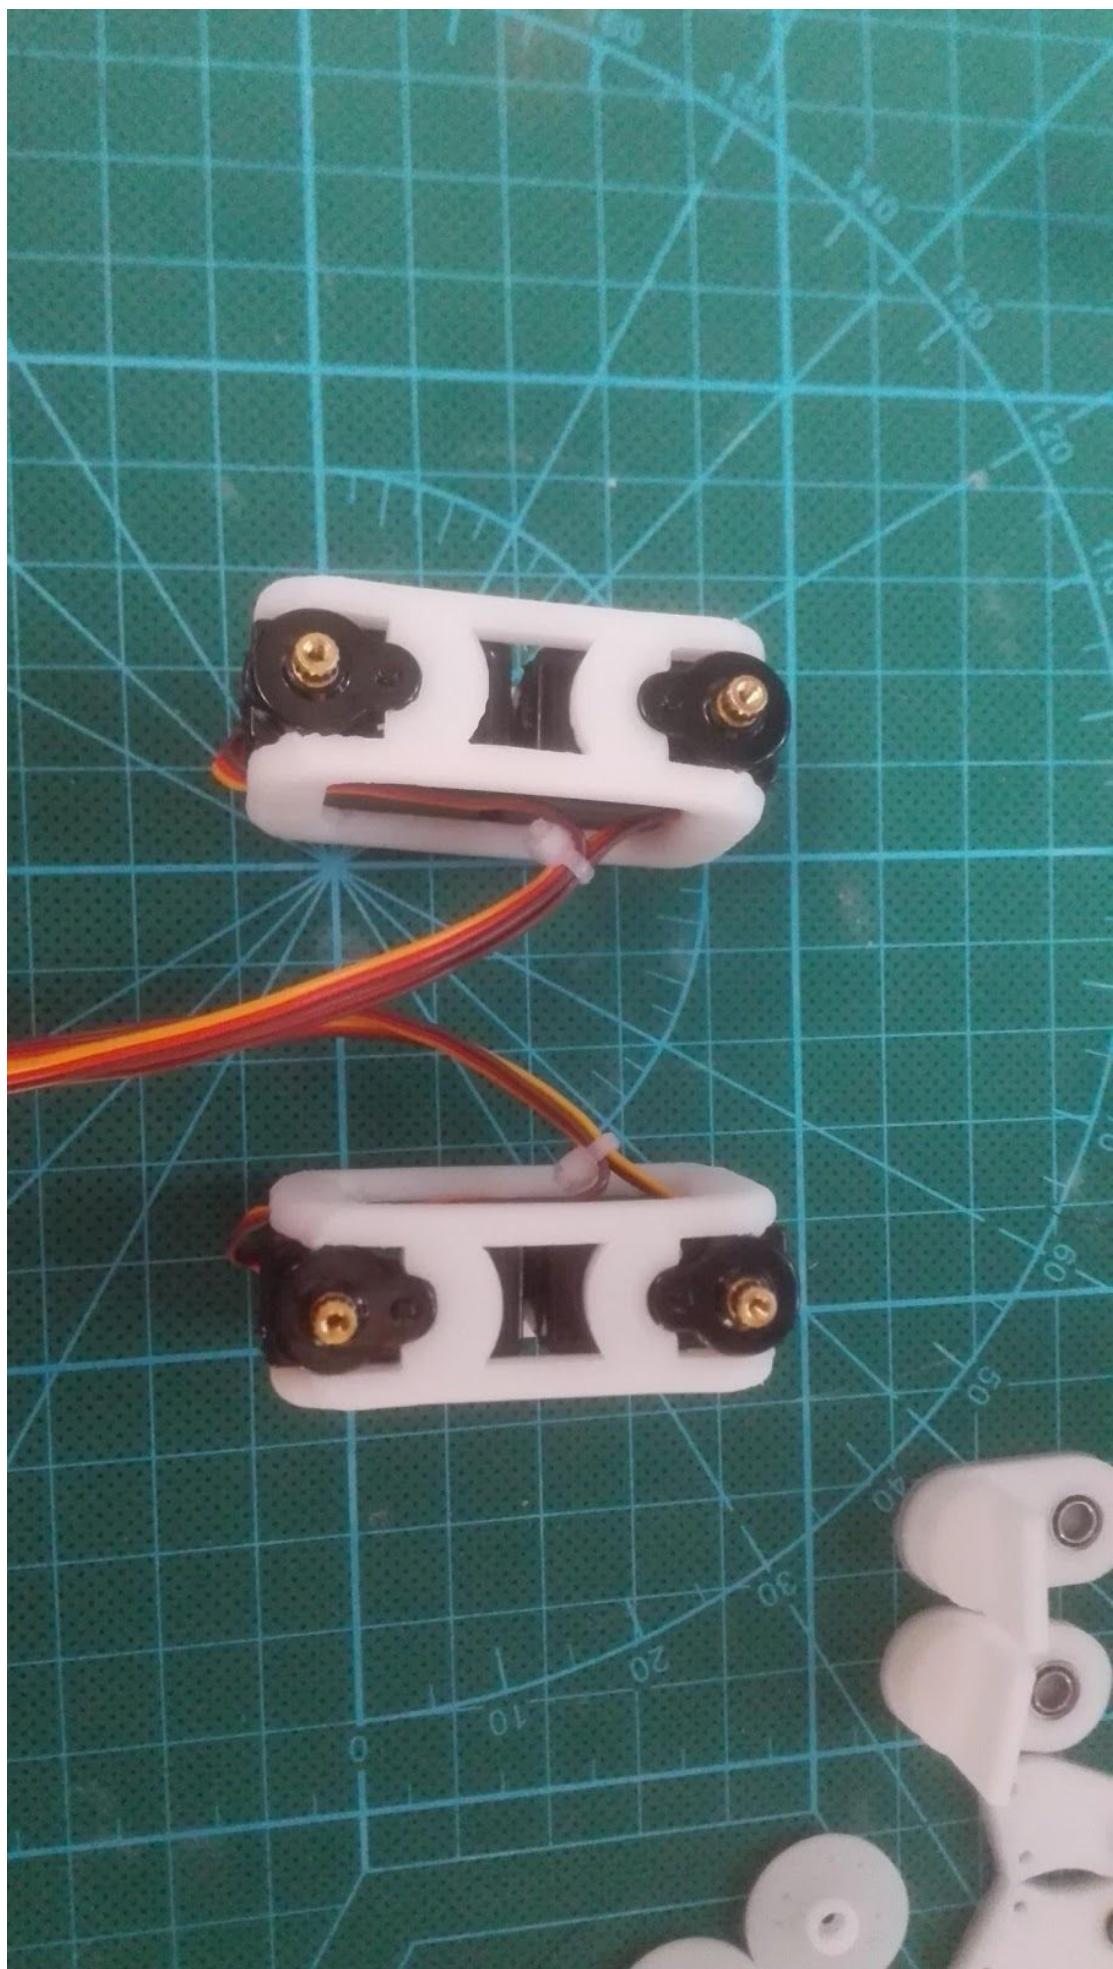


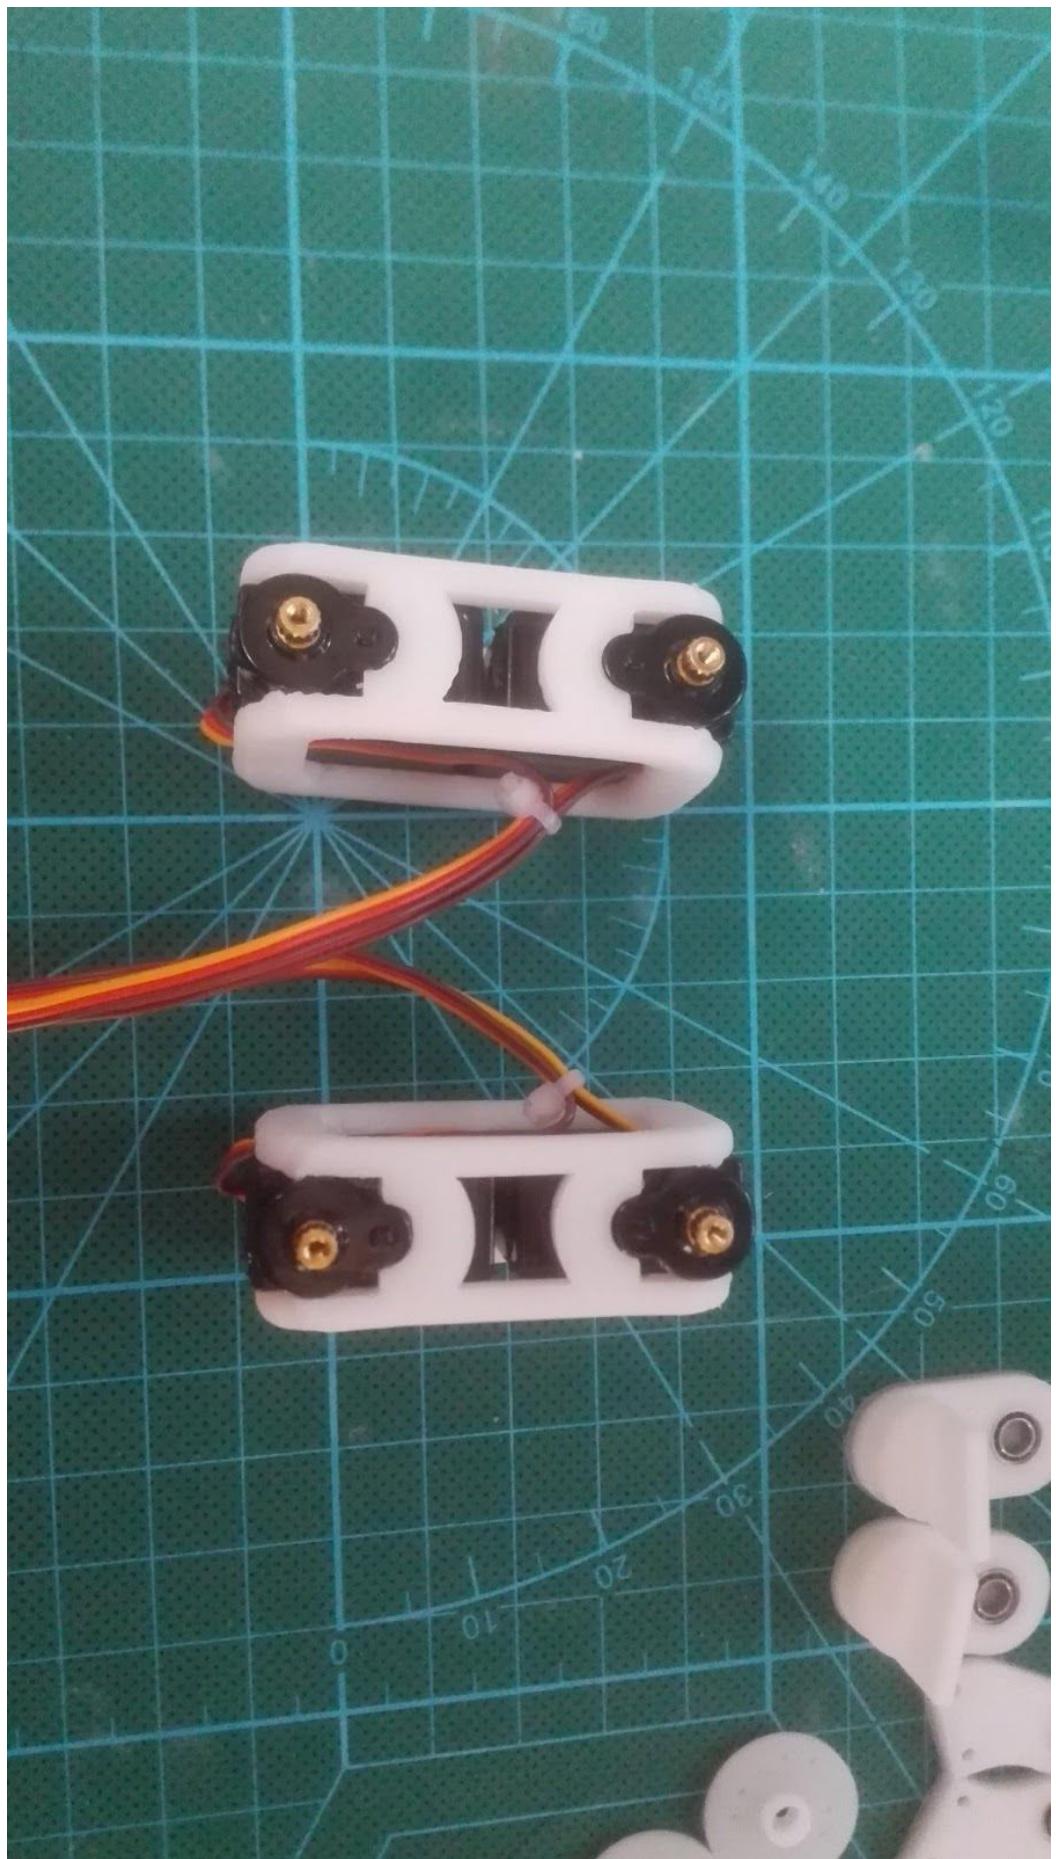

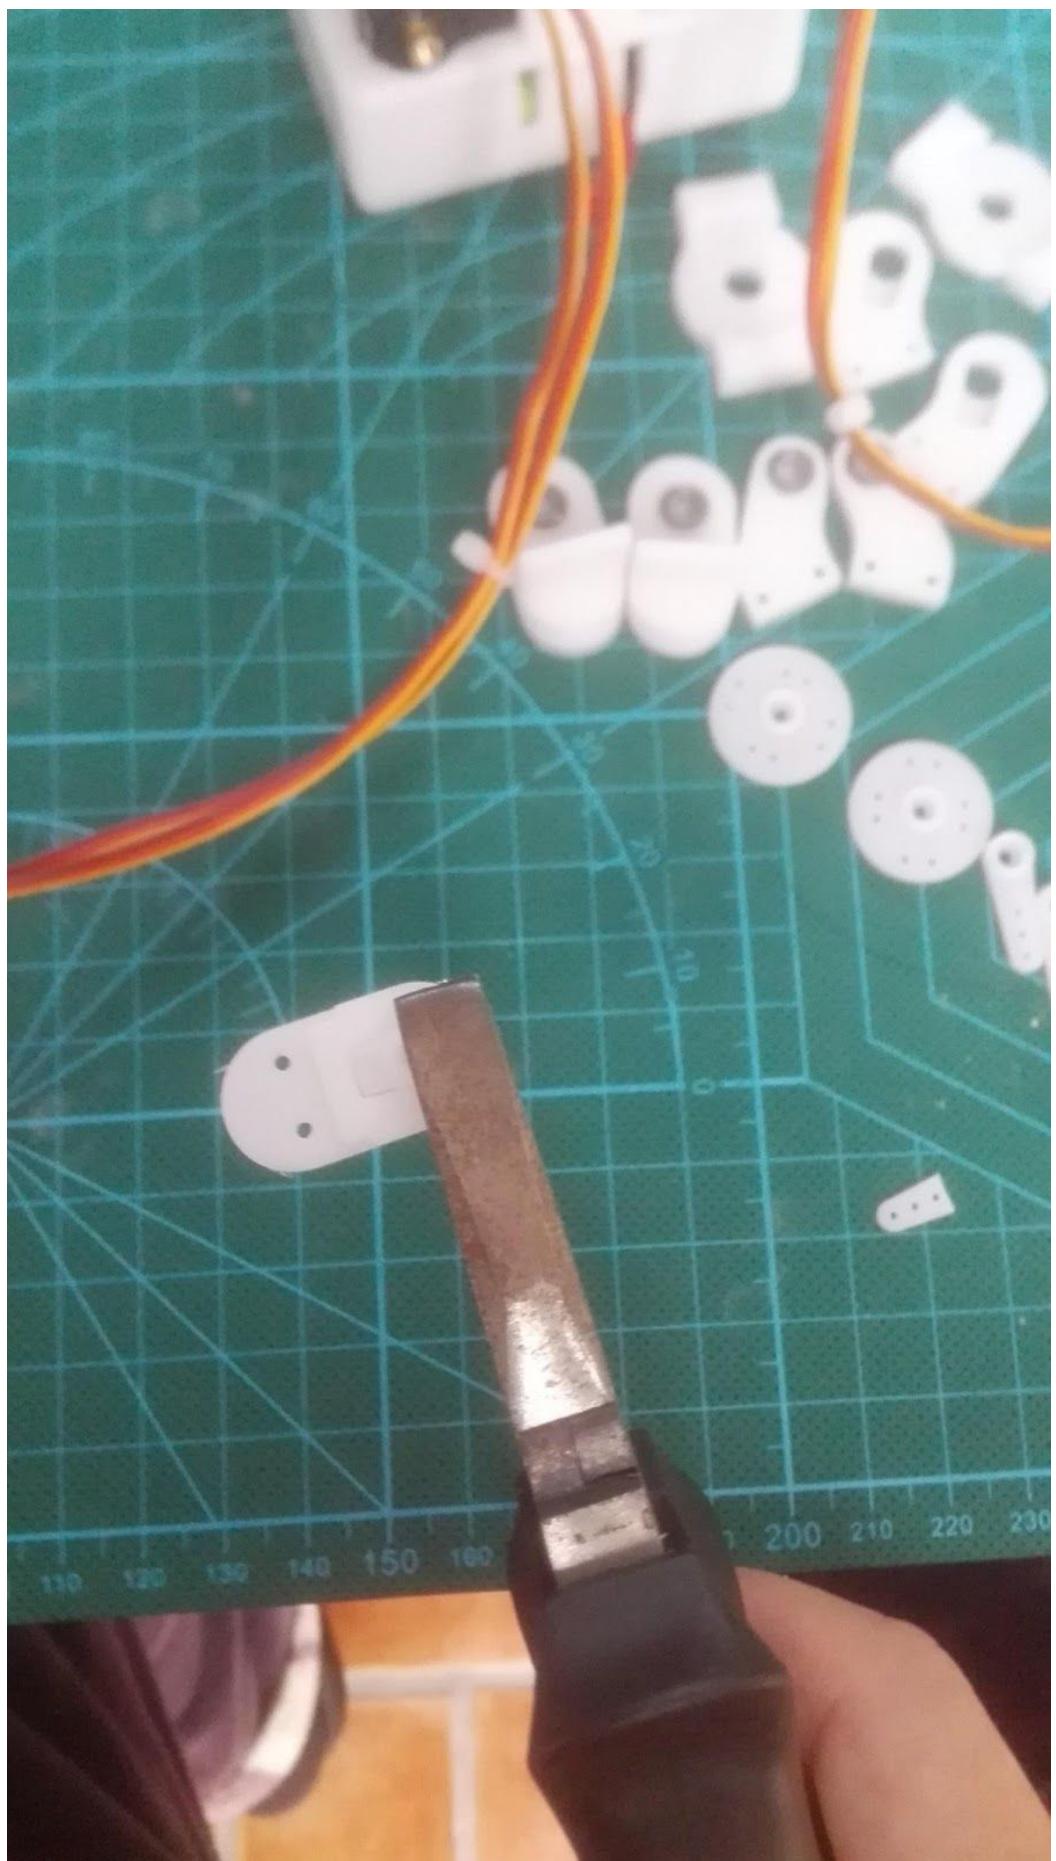


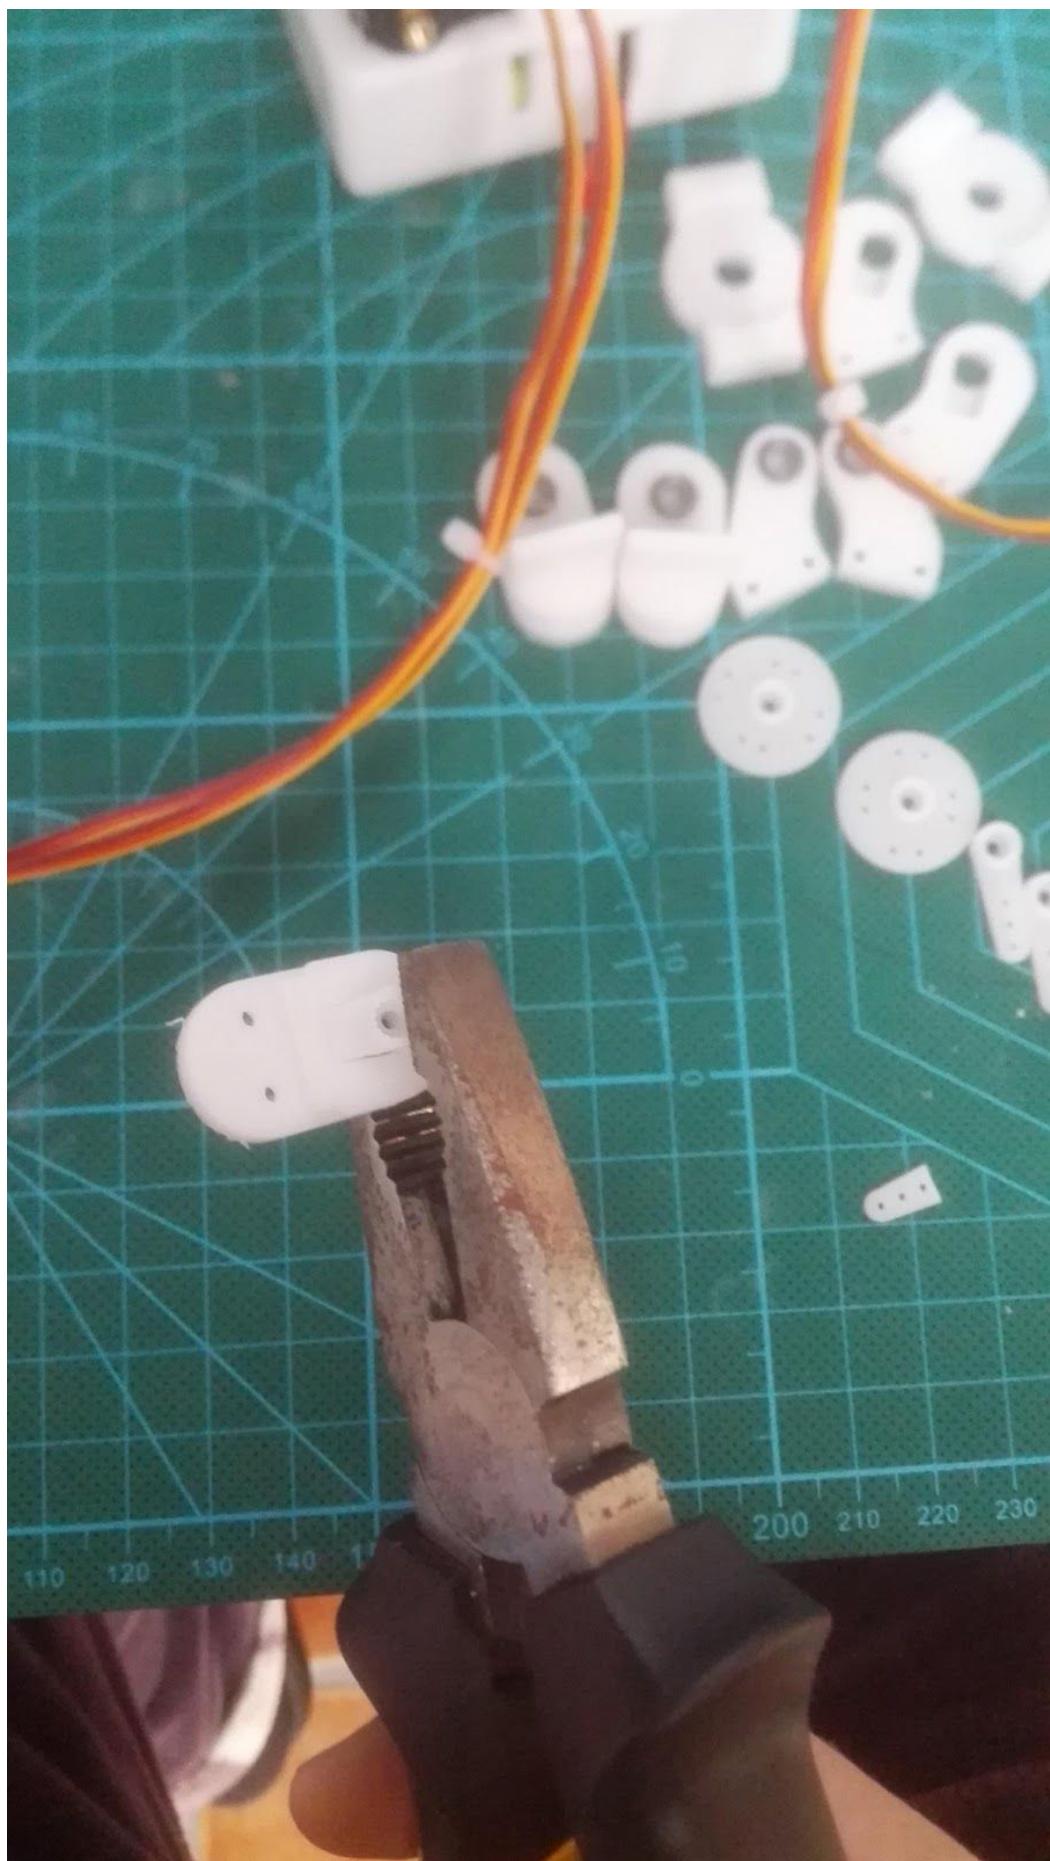


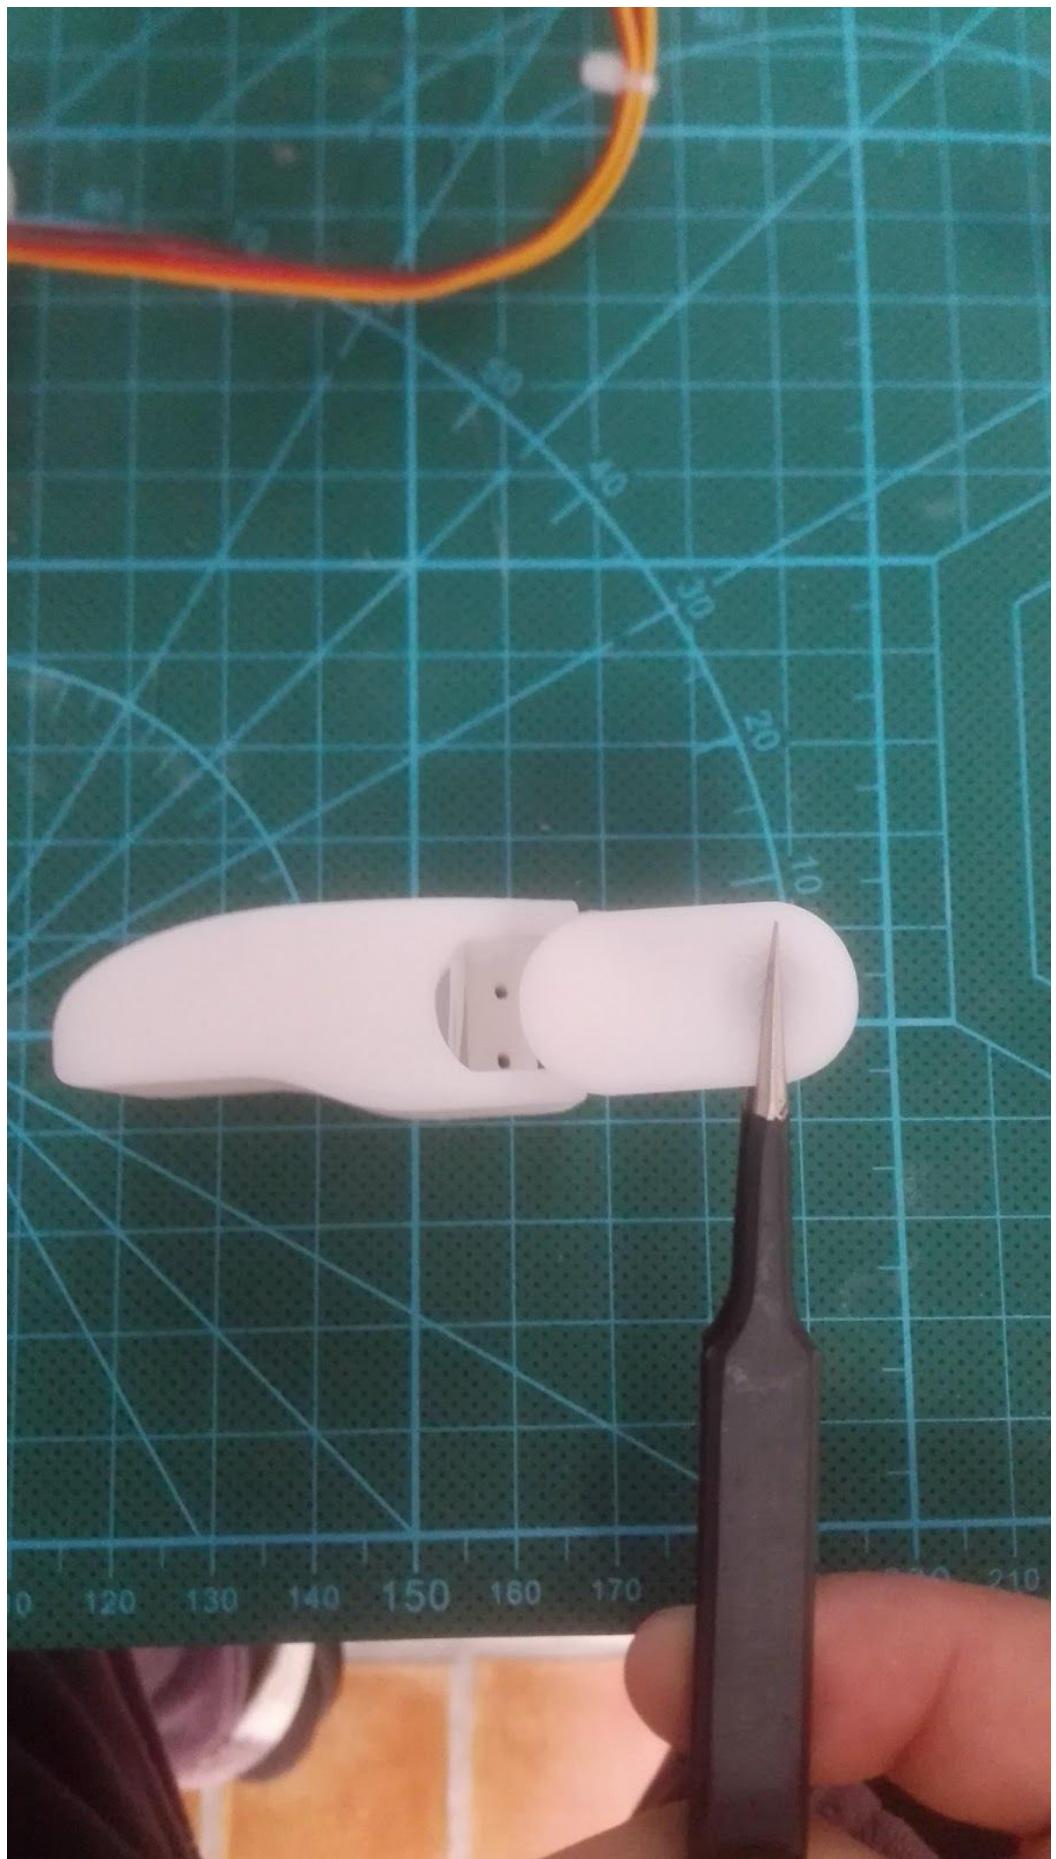


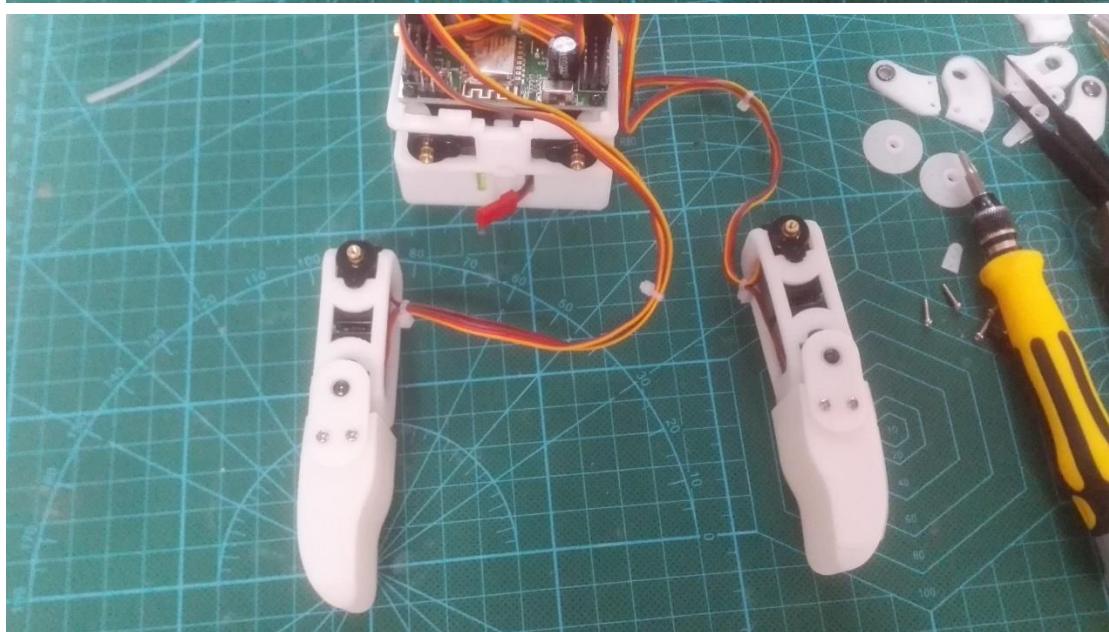



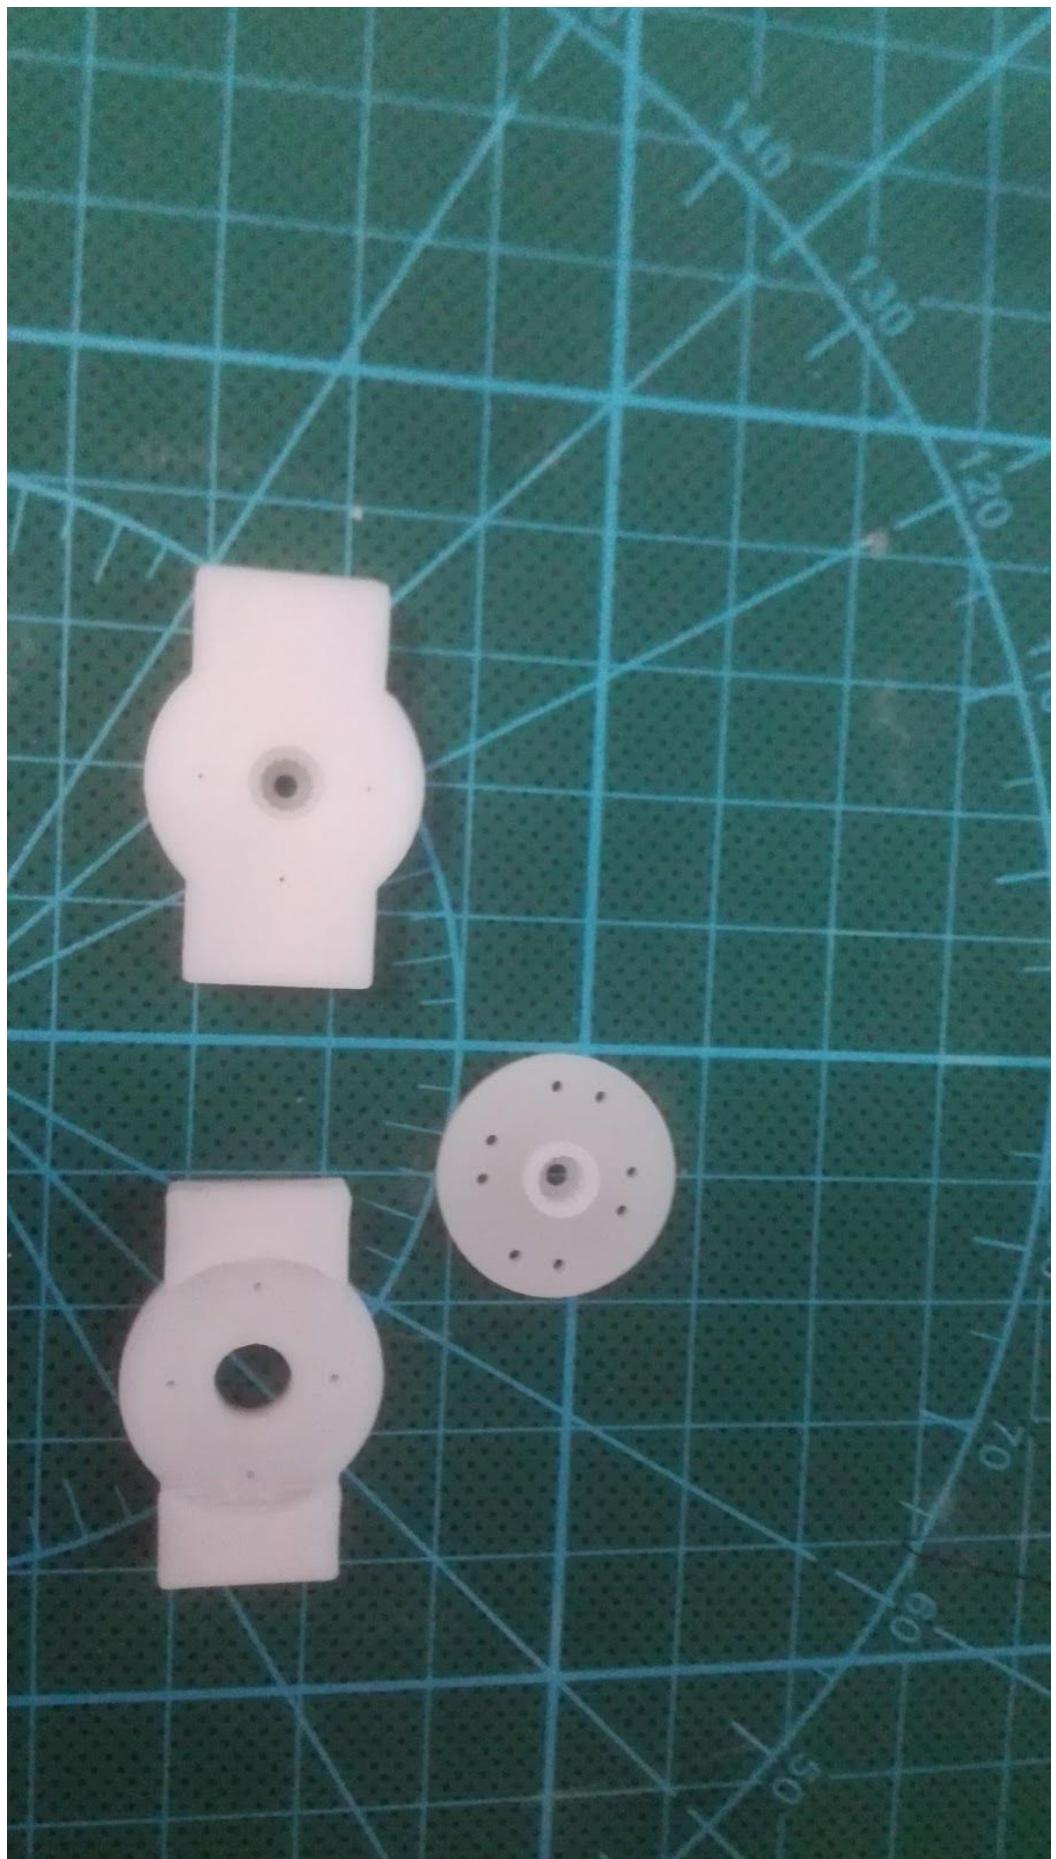


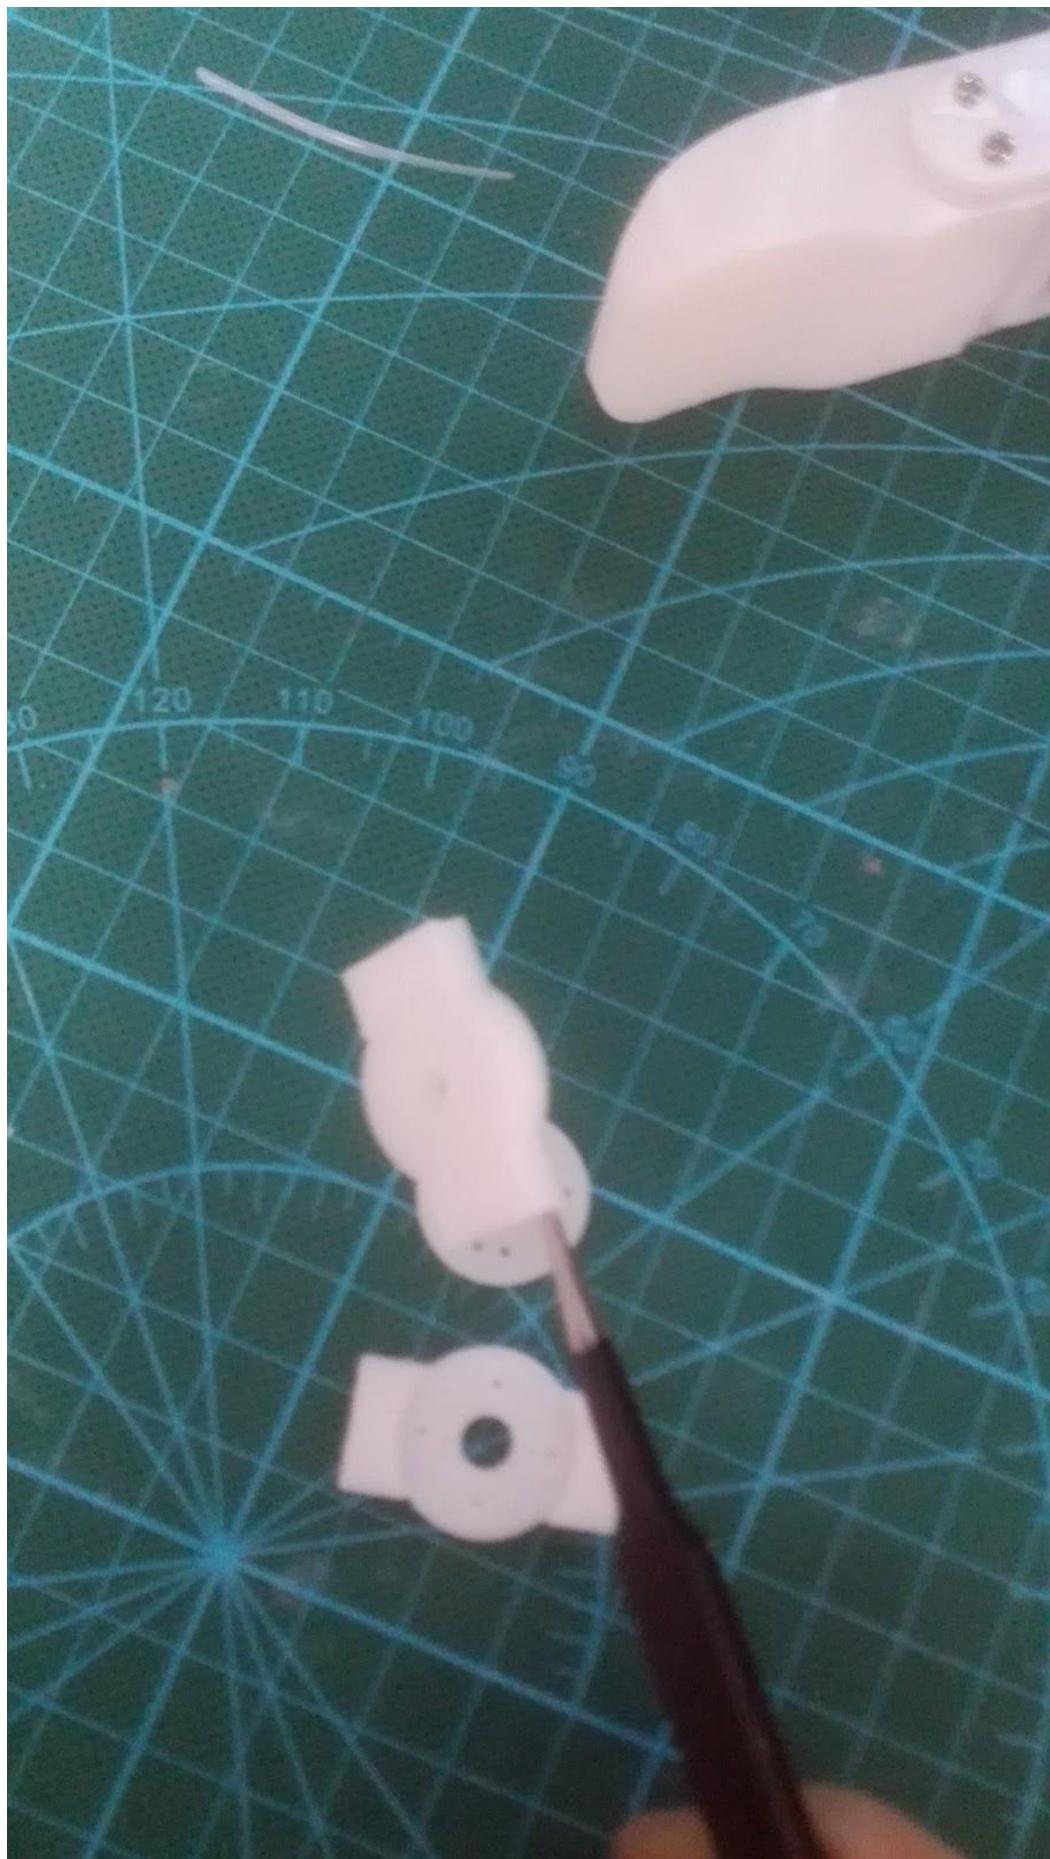

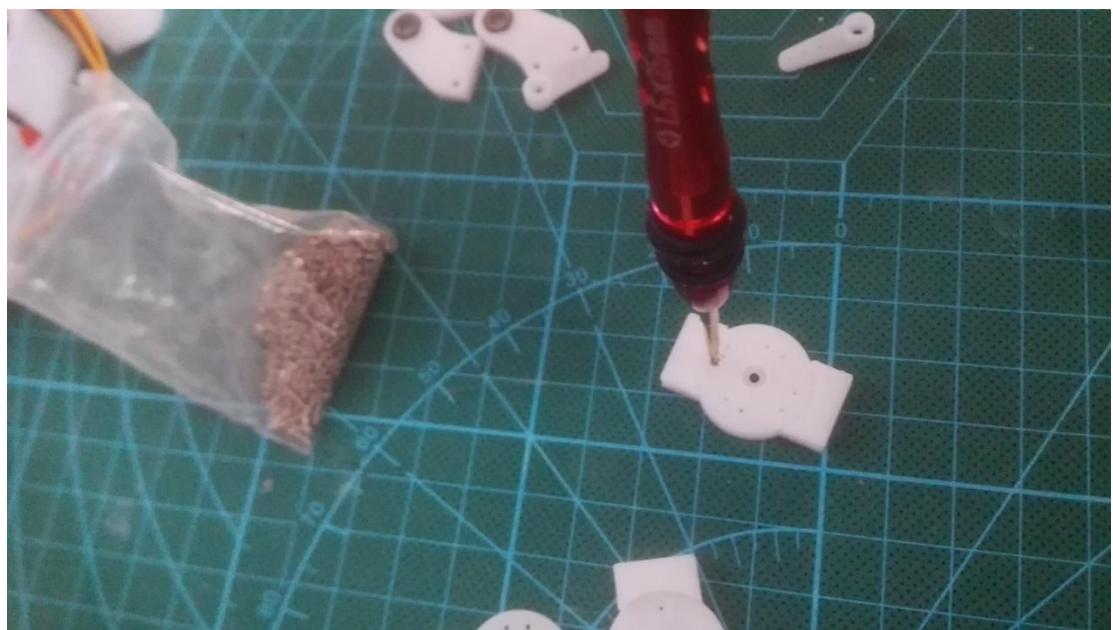






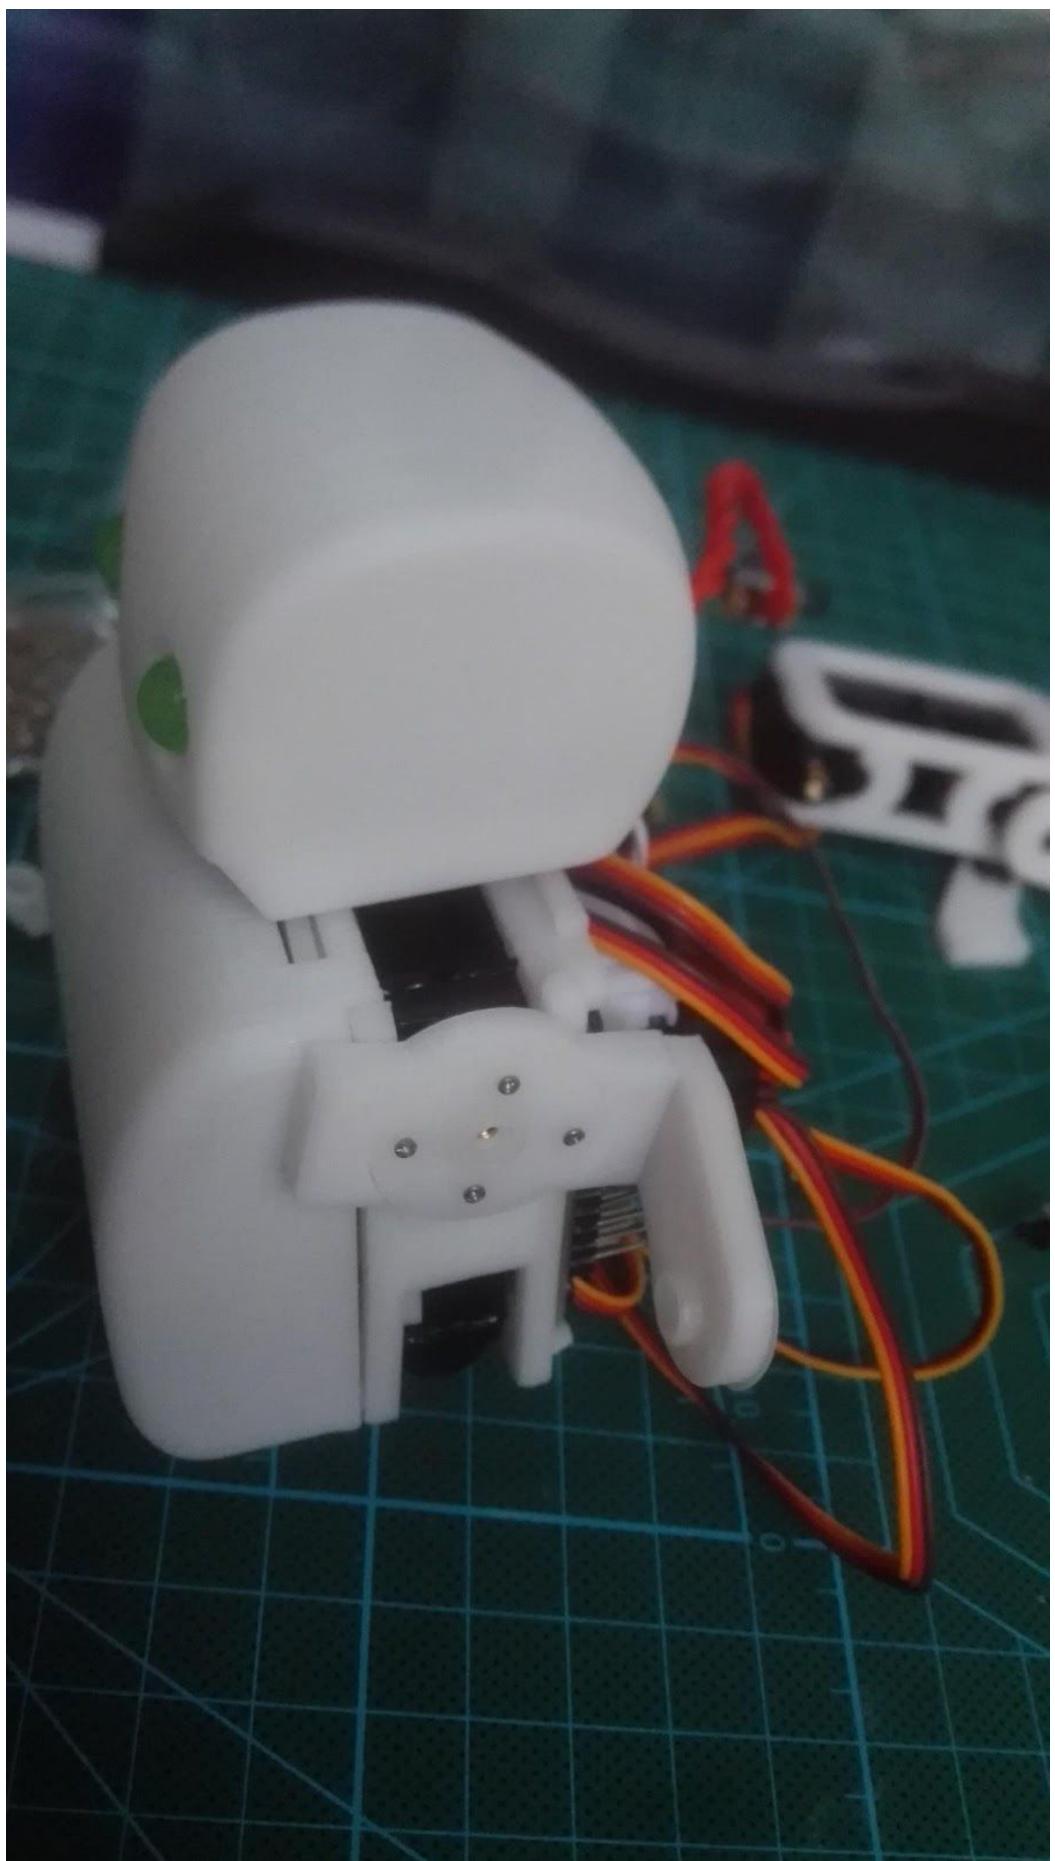



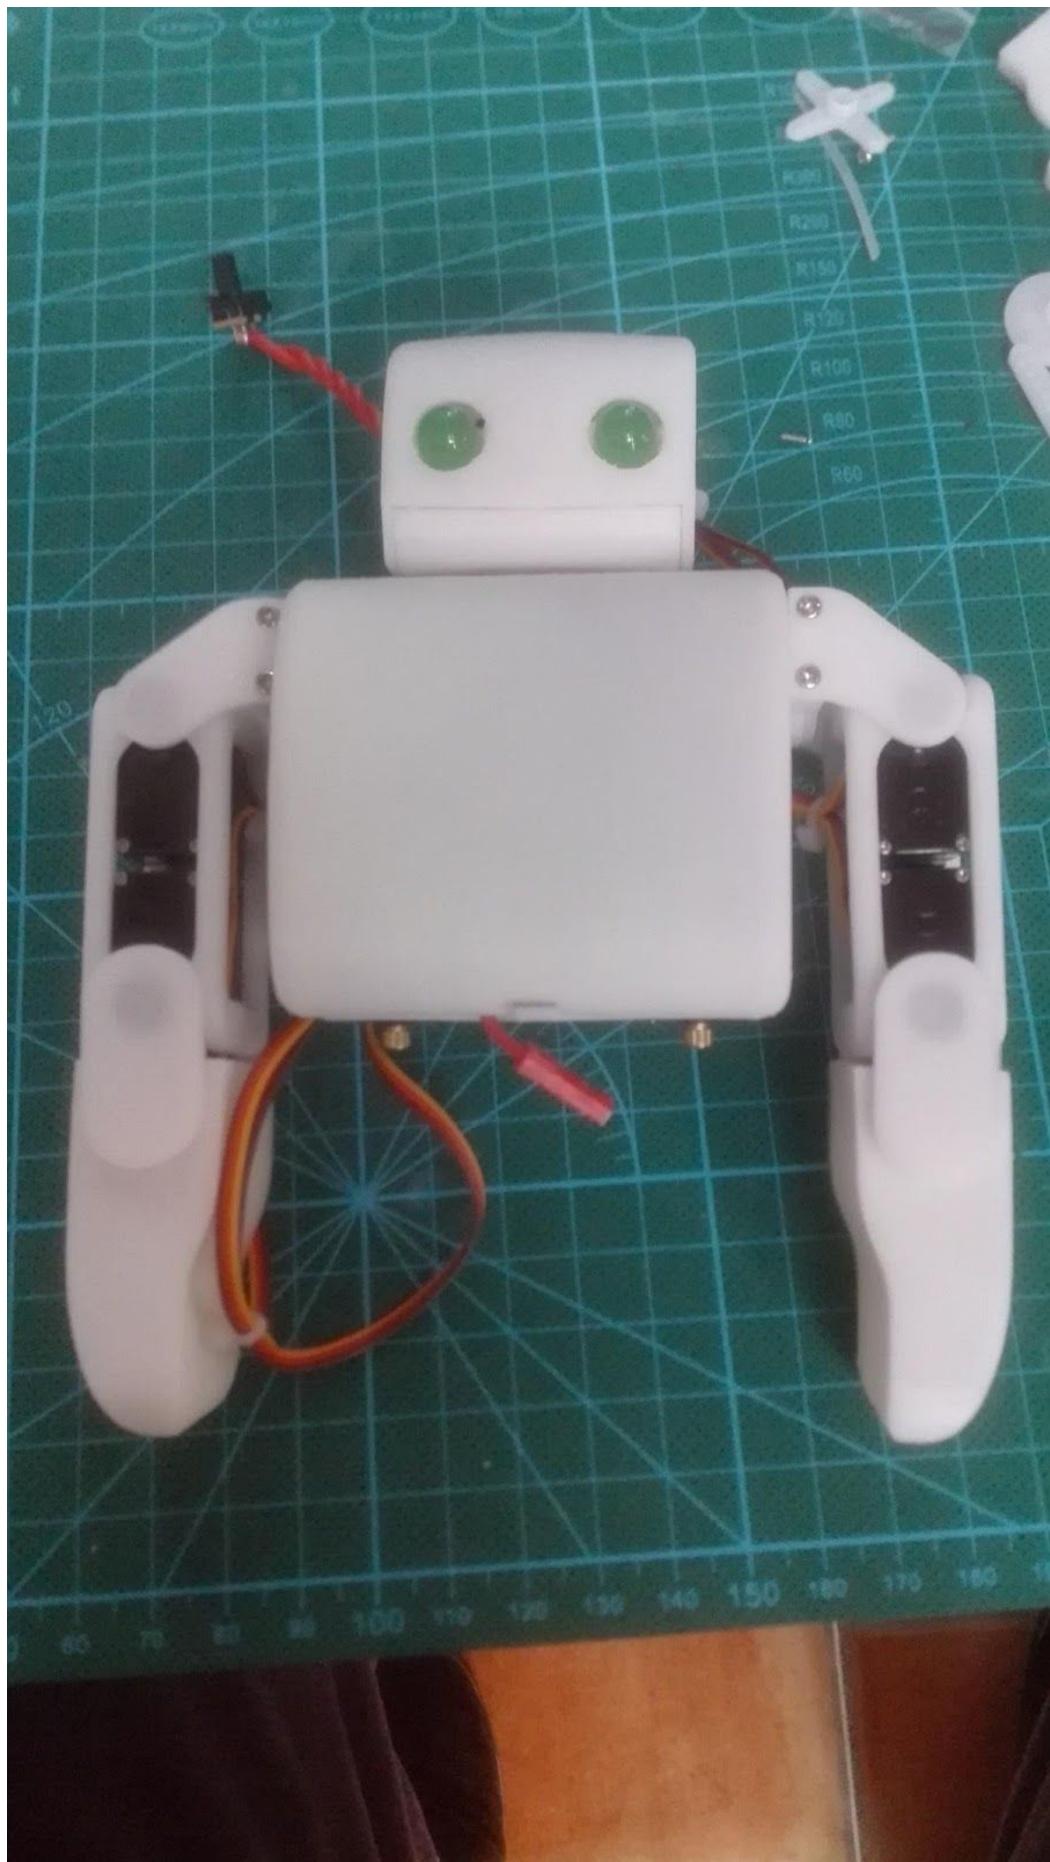

❖ Legs assembly



