



MSCC Operator's Guide — Remote Operation (Preliminary)

Multus SDR Control Console for Proficio, Geminus and Ultimus transceivers

Instructions based on MSCC Avalonia and MSCC NET9

This preliminary edition covers remote operation: MSCC client on one computer; radio and MSCC servers on a host on the same LAN (Windows 11 WPF client or Linux Avalonia client → Raspberry Pi or Ubuntu host). Local install, calibration and firmware are in the Linux and Windows local guides — not here.

Copyright © 2026 Multus SDR, LLC · Revision Date: 9/29/26



MSCC Operator's Guide — Remote Operation (Preliminary)

Table of Contents

WELCOME.....	3
1. Overview (READ THIS FIRST!)	5
2. What you need	6
3. On the host	7
3.1 Start the MSCC servers	7
3.2 Find the host IP address	7
4. On the Windows client (WPF / MSCC NET9).....	9
4.1 Prepare the client	9
4.2 Host, Port, and Start.....	9
4.3 Remote audio: Phones vs Digital	11
4.4 Remote Phones window	12
4.5 Remote Digital window and VAC wiring.....	13
4.6 Changing Host while connected	15
5. On the Linux / Avalonia client.....	16
5.1 Connect.....	16
5.2 Remote Phones on Avalonia (VirtualA)	17
5.3 Suggested COM / tnt pairings (Avalonia only)	18
6. Digi with WSJT-X (remote client).....	19
6.1 Mode in MSCC and in WSJT-X	19
6.2 Audio in WSJT-X.....	20
6.3 Operate	20
7. Troubleshooting.....	22
Appendix A: Port summary.....	23
Appendix B: Related guides	24



MSCC Operator's Guide — Remote Operation (Preliminary)

□ WELCOME

This guide covers **remote operation** of MSCC, the Multus SDR Control Console: you run the client on one computer, while the radio and the MSCC servers run on another computer (the **host**) on your local network. MSCC is the control program for Multus SDR, LLC transceivers: Proficio, Geminus and Ultimus, in both Legacy and MKII versions. It works only with Multus SDR equipment.

MSCC still comes in two parts:

- **The servers.** These small programs talk to the radio over USB and do the receive and transmit signal processing. They run on the **host** — the computer the radio is plugged into. Their names are `sdrcore-recv`, `sdrcore-trans` and `ms-sdr`; you will see these names in some messages.
- **The client.** This is the window you operate from. On Windows it is **MSCC for Windows** (WPF / MSCC NET9). On Linux and the Raspberry Pi it is **MSCC UI** (window title **MSCC Avalonia**).

Preferred setup: a Windows 11 client talking to Raspberry Pi (or Ubuntu) servers on the host. The same Host / Port / Remote flow also works with an Avalonia Linux client → Pi, or a Windows client → Ubuntu host.

This guide does **not** cover installing MSCC, calibrating the radio, or updating firmware on the host. Do those with the local guides first:

- *MSCC Operator's Guide — Linux and Raspberry Pi* for a Linux or Pi host (and for Avalonia as a local client).
- *MSCC Operator's Guide — Windows* for a Windows host (and for WPF as a local client).



MSCC Operator's Guide — Remote Operation (Preliminary)



Windows client ready to connect remotely: Host and Port set, Auto Start / Launch Servers unchecked, Remote visible



MSCC Operator's Guide — Remote Operation (Preliminary)

□ 1. Overview (READ THIS FIRST!)

Please read this section before you try a remote connection.

1. **Firmware and host first.** The radio must already be set up, calibrated and running with current firmware on the **host**. The client window title shows Core and FW after you connect. Install, calibrate and flash using the local Linux or Windows guide for that host — not this one.
2. **LAN focus for this draft.** These instructions are for a client and host on the **same local network** (same house / same Wi-Fi or Ethernet). Using remote over the public internet (port forwarding, VPN, etc.) is **To confirm: out of scope for this draft — brief caution only, or a short VPN note later**. Do not expose port 8888 (or 9101) directly to the open internet without a VPN or equivalent.
3. **Servers on the host, client only on the operator PC.** On the host, start the MSCC servers (**MSCC Start**, or Auto Start / Launch Servers when operating locally on that machine). On the **remote client**, leave **Auto Start / Launch / Launch Servers unchecked** — you are connecting to servers that are already running elsewhere.
4. **Default remote port is 8888.** Remote AF microphone transmit uses port **9101** on the same host IP. See the Appendix.
5. **Version numbers in this guide are examples.** Names such as `mscc-ui_0.6.xx`, `mscc-net9-R9-26-6`, or a title bar reading `MSCC Avalonia 0.6.67 / MSCC WPF 9.27.0` stand for whatever version you were given. Always use the newest files you have.
6. **Bug reports and feature requests:** post them on our forum, <https://multusdr.groups.io/g/main>



MSCC Operator's Guide — Remote Operation (Preliminary)

□ 2. What you need

- A **host** computer with the radio plugged in, MSCC installed and set up (MSCC Init on Linux/Pi; local Windows setup on a Windows host), and the **MSCC servers running**.
- A **client** PC on the same LAN (or a VPN into that LAN):
 - **Windows 11** with MSCC for Windows (WPF / NET9), or
 - **Linux** with MSCC Avalonia (MSCC UI).
- The host's **IP address** and port **8888**.
- For **Digital** modes (WSJT-X etc.):
 - On Windows: a virtual audio cable such as **VB-Audio Virtual Cable** (VAC), with CABLE Input / CABLE Output.
 - On Linux: MSCC's virtual sinks (**VirtualA** / related devices from MSCC Init).
- **WSJT-X** (optional) on the client for FT8 and similar modes.

Your IP addresses will differ. The pictures in this guide use example LAN addresses from one test network (Ubuntu / stew-HP host **192.168.1.234**, Raspberry Pi host **192.168.1.193**). Use the addresses your host reports — not these examples.

□ 3. On the host

Do this on the computer the radio is plugged into.

3.1 Start the MSCC servers

1. Power the radio on and confirm its USB cable is connected to the host.
2. Start the servers:
 - **Linux / Raspberry Pi:** use **MSCC Start** from the MSCC menu (or the equivalent you use when operating locally).
 - **Windows host:** start MSCC locally with **Launch Servers / Auto Start** as in the Windows local guide, or otherwise leave the servers running before you walk over to the client.
3. Leave the servers running. You do not need the client open on the host while you operate from elsewhere. **To confirm:** any host-side tip for "Auto Start on host so servers come up after reboot"?


3.2 Find the host IP address

The client needs the host's LAN IP.

Linux PC or Raspberry Pi — open a Terminal and run:

```
hostname -I
```


The first address is usually the LAN IPv4 address (for example 192.168.1.234 on an Ubuntu host, or 192.168.1.193 on a Pi). Ignore the long IPv6 addresses for this guide unless you know you need them.

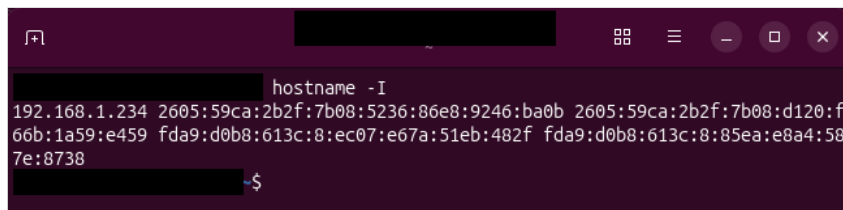A screenshot of a terminal window with a dark purple background. The command 'hostname -I' has been entered, and the output shows the IPv4 address '192.168.1.234' followed by several long IPv6 addresses. The first address is highlighted. The prompt is '-\$'.

```
hostname -I
192.168.1.234 2605:59ca:2b2f:7b08:5236:86e8:9246:ba0b 2605:59ca:2b2f:7b08:d120:f
66b:1a59:e459 fda9:d0b8:613c:8:ec07:e67a:51eb:482f fda9:d0b8:613c:8:85ea:e8a4:58
7e:8738
-$
```

Ubuntu host: hostname -I shows the LAN address (example 192.168.1.234). Login name and hostname are blacked out.

MSCC Operator's Guide — Remote Operation (Preliminary)

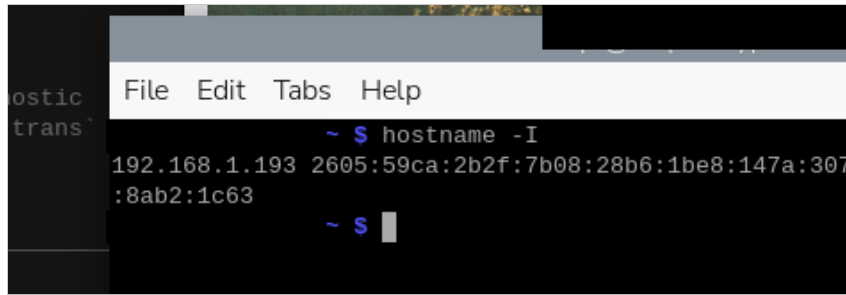A screenshot of a terminal window on a Raspberry Pi. The window has a menu bar with 'File', 'Edit', 'Tabs', and 'Help'. The terminal shows a prompt '~ \$' followed by the command 'hostname -I'. The output is '192.168.1.193 2605:59ca:2b2f:7b08:28b6:1be8:147a:307:8ab2:1c63'. The prompt '~ \$' is followed by a cursor.

Raspberry Pi: hostname -I in a Terminal (example 192.168.1.193). Cropped to the Terminal only.

Windows host — open **Settings** → **Network & internet** and note the IPv4 address for Wi-Fi or Ethernet, or run `ipconfig` in Command Prompt / PowerShell and read the IPv4 Address for that adapter.

Write the address down; you will type it into the client's **Host** field.



MSCC Operator's Guide — Remote Operation (Preliminary)

☐ 4. On the Windows client (WPF / MSCC NET9)

These steps use MSCC for Windows on a PC that is **not** the radio host. Instructions are based on MSCC Avalonia and MSCC NET9; the WPF pictures here show an example build such as MSCC 9.27.0.

4.1 Prepare the client

1. Install MSCC for Windows on the client PC if it is not already there (Windows local guide). You do **not** need the radio plugged into the client.
2. For Digital modes, install **VB-Audio Virtual Cable** (or your chosen VAC) so **CABLE Input** and **CABLE Output** appear in Windows sound devices.
3. Start **MSCC** on the client.

4.2 Host, Port, and Start

1. On the left **SERVER** panel, **uncheck Auto Start** and **uncheck Launch Servers**. The servers must run on the host, not on this PC.
2. Set **Host** to the host's LAN IP (example 192.168.1.234).
3. Set **Port** to **8888** (default).
4. Press **Start**.


When the connection works, the button becomes **Stop**, the spectrum and waterfall come alive, and the title bar shows Core and FW from the host radio.

MSCC Operator's Guide — Remote Operation (Preliminary)



Before connect: Host and Port entered, Auto Start / Launch Servers unchecked, VFO blank, Remote button visible

MSCC Operator's Guide — Remote Operation (Preliminary)

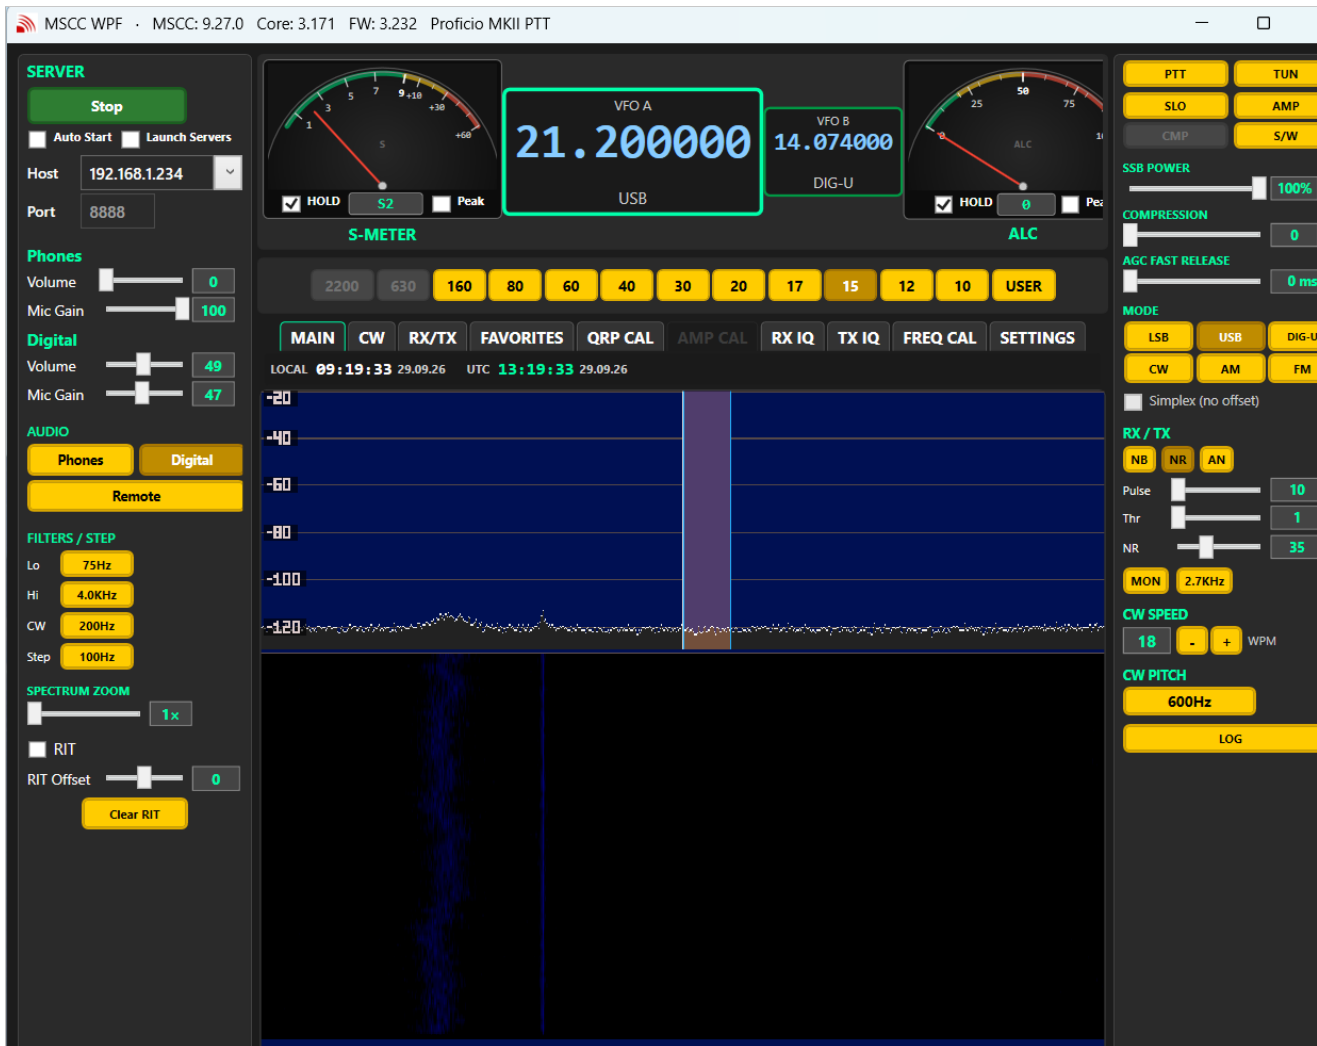


Connected with Remote and Phones on: live spectrum, Core/FW in the title bar

4.3 Remote audio: Phones vs Digital

1. Press **Remote** on the left **AUDIO** section. Remote is for operating when the radio is on another computer. It opens the Remote Audio window (Remote Phones or Remote Digital).
2. Choose the path you need:
 - **Phones** — hear the radio on this PC's speakers or headset; use this PC's microphone for voice TX.
 - **Digital** — route audio through VAC for WSJT-X (or similar). You can light **Phones** and **Digital** together when you need both paths.

MSCC Operator's Guide — Remote Operation (Preliminary)

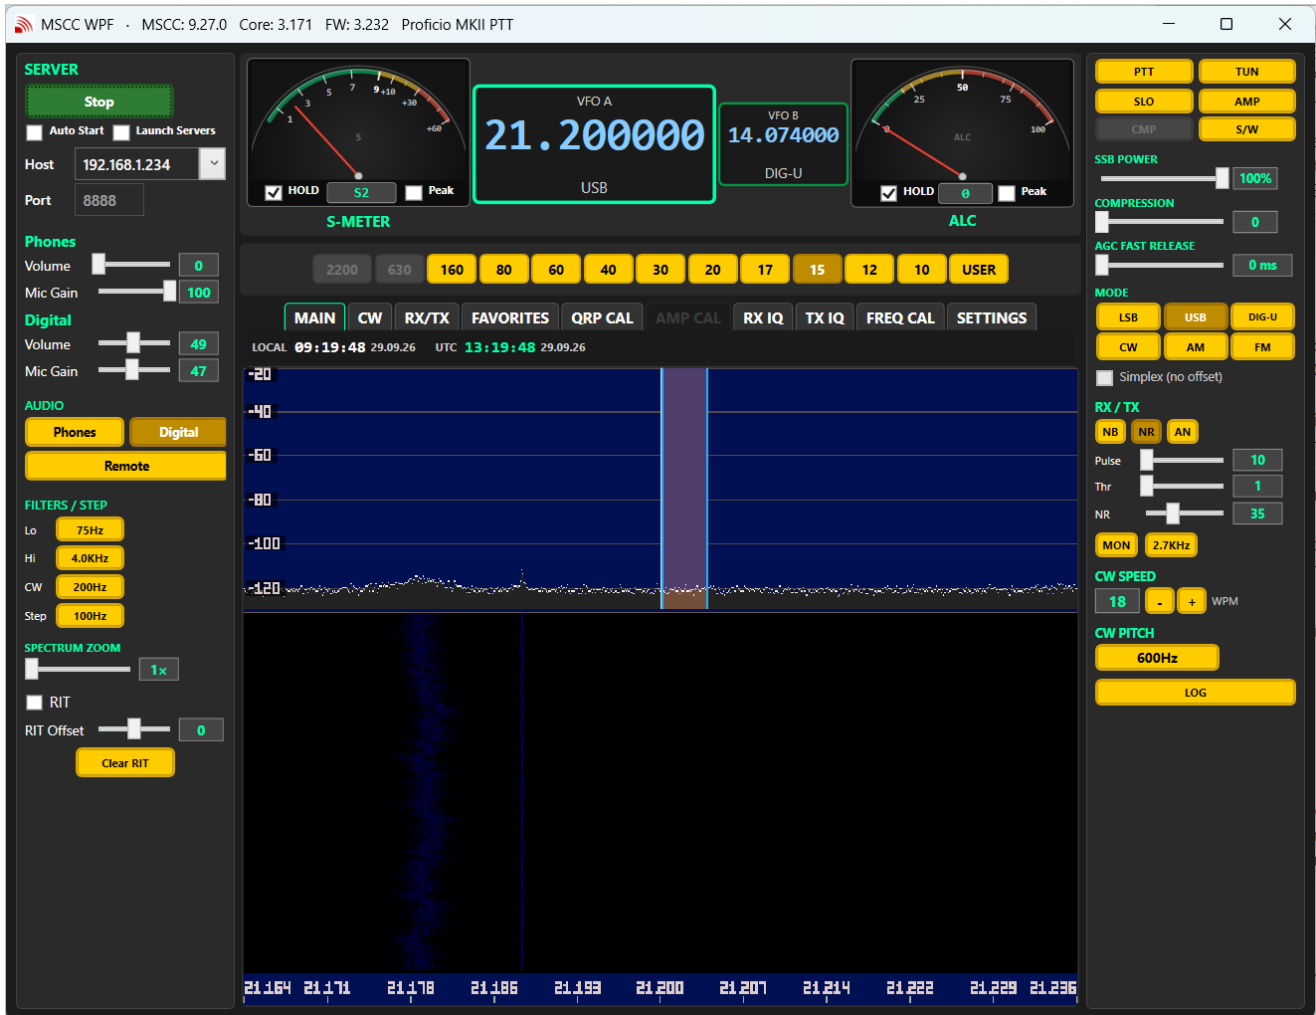

Connected with Remote, Phones and Digital lit

Remote stays available only for a remote Host. If Host is 127.0.0.1 or Launch Servers is checked, Remote is for local use rules in the Windows guide (often grayed). For remote, keep Launch Servers off and Host set to the other computer's IP.

4.4 Remote Phones window


With **Remote** and **Phones** selected, the **Remote Phones** window sets playback and mic on this PC.

Typical voice / phones setup:

- **Device** (playback): your headset or speakers — or CABLE Input if you are feeding another program. The example shot uses **CABLE Input (VB-Audio Virtual Cable)** while testing.

MSCC Operator's Guide — Remote Operation (Preliminary)

- **Mic**: this PC's microphone (example: Microphone Array).
- Status lines show **Mic TX ... → :9101** when microphone audio is being sent to the host. Port **9101** is the remote AF mic TX port.

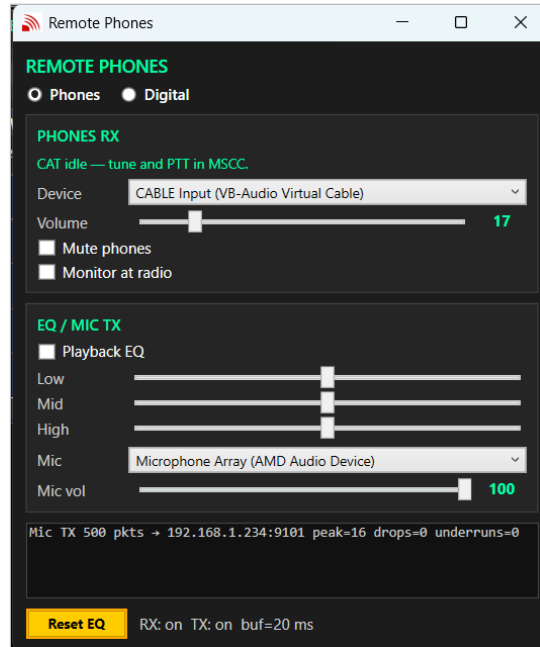

Remote Phones window: playback device, mic, Mic TX to host:9101

4.5 Remote Digital window and VAC wiring


With **Remote** and **Digital** selected, the **Remote Digital** window is for WSJT-X (and similar) on this PC.

Typical VAC wiring on Windows:

Path	Device
MSCC Digital playback (radio → WSJT-X)	CABLE Input (VB-Audio Virtual Cable)
MSCC Digital mic (WSJT-X → radio)	CABLE Output (VB-Audio Virtual Cable)
WSJT-X Input	CABLE Output
WSJT-X Output	CABLE Input


The Remote Digital hints also remind you: WSJT-X as **Kenwood TS-2000**, CAT on the COM port shown in Settings, **PTT = CAT**, audio CABLE Output / CABLE Input, Tx tone near 1500 Hz. CAT/freq/mode/PTT go to the radio through the MSCC connection on port **8888**; mic audio for remote AF uses **:9101**.

MSCC Operator's Guide — Remote Operation (Preliminary)

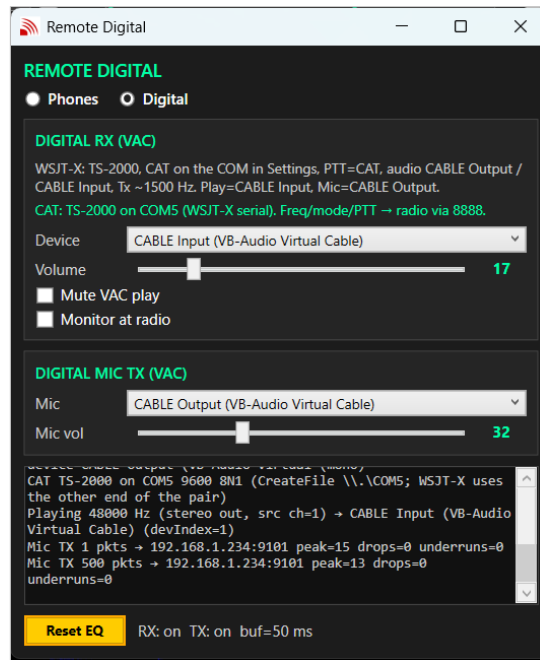

Remote Digital window: VAC devices, CAT COM hint, Mic TX to :9101


MSCC Operator's Guide — Remote Operation (Preliminary)

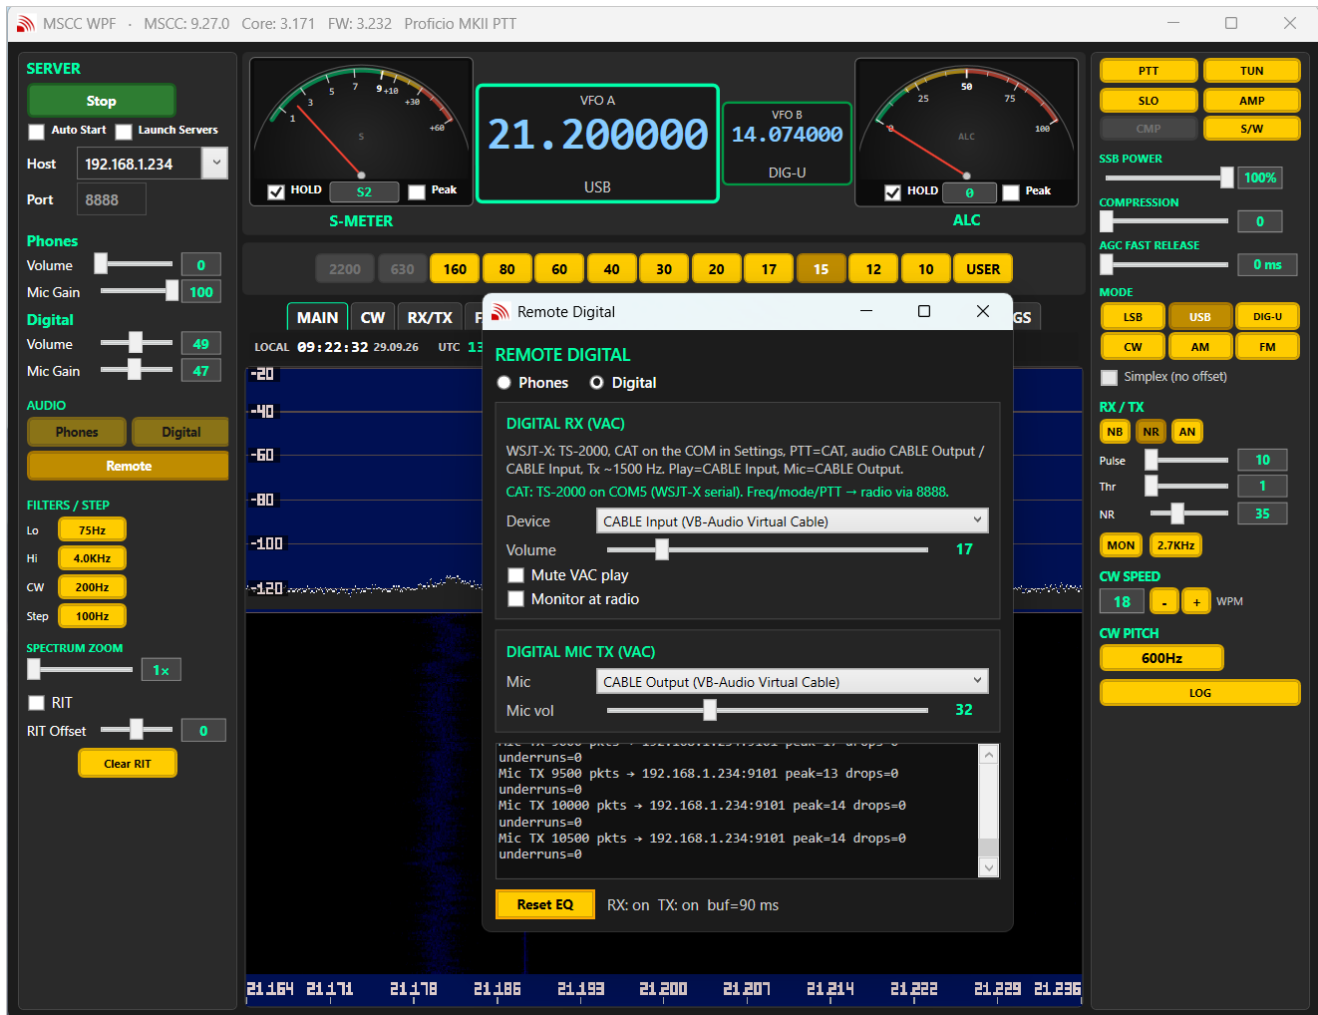

Remote Digital open over the main WPF window while connected

4.6 Changing Host while connected

If you edit **Host** (or **Port**) while the client is already started, MSCC shows a dialog: you have entered a new server address — press **Stop**, then **Start**, to connect to it.

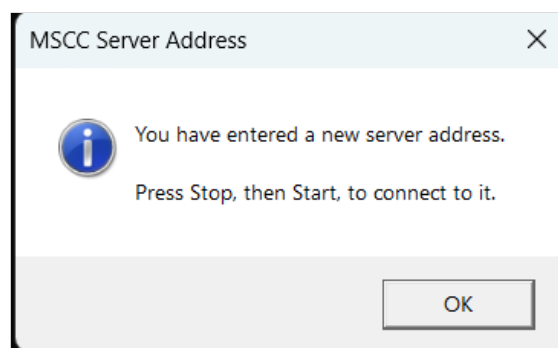


Dialog: new server address — press Stop, then Start

□ 5. On the Linux / Avalonia client

The Host / Port / Remote flow on MSCC Avalonia matches the Windows client. These pictures use an Ubuntu client connecting to a Pi host at example **192.168.1.193**. **Screenshot coming:** fresh Avalonia overview on 0.6.69 if the chrome still shows 0.6.67 — current shots may show 0.6.67 in the title bar.

5.1 Connect

1. On the host (Pi or Ubuntu), servers must already be running (**MSCC Start**).
2. On the client, start **MSCC UI**.
3. **Uncheck Auto** and **uncheck Launch**.
4. Set **Host** to the host IP (example 192.168.1.193) and **Port** to **8888**.
5. Press **Connect**. Status should read **Connected** — **spectrum OK**, and Core / FW appear in the title bar.
6. Press **Remote**, and use **Phones** and/or **Digital** as on Windows.

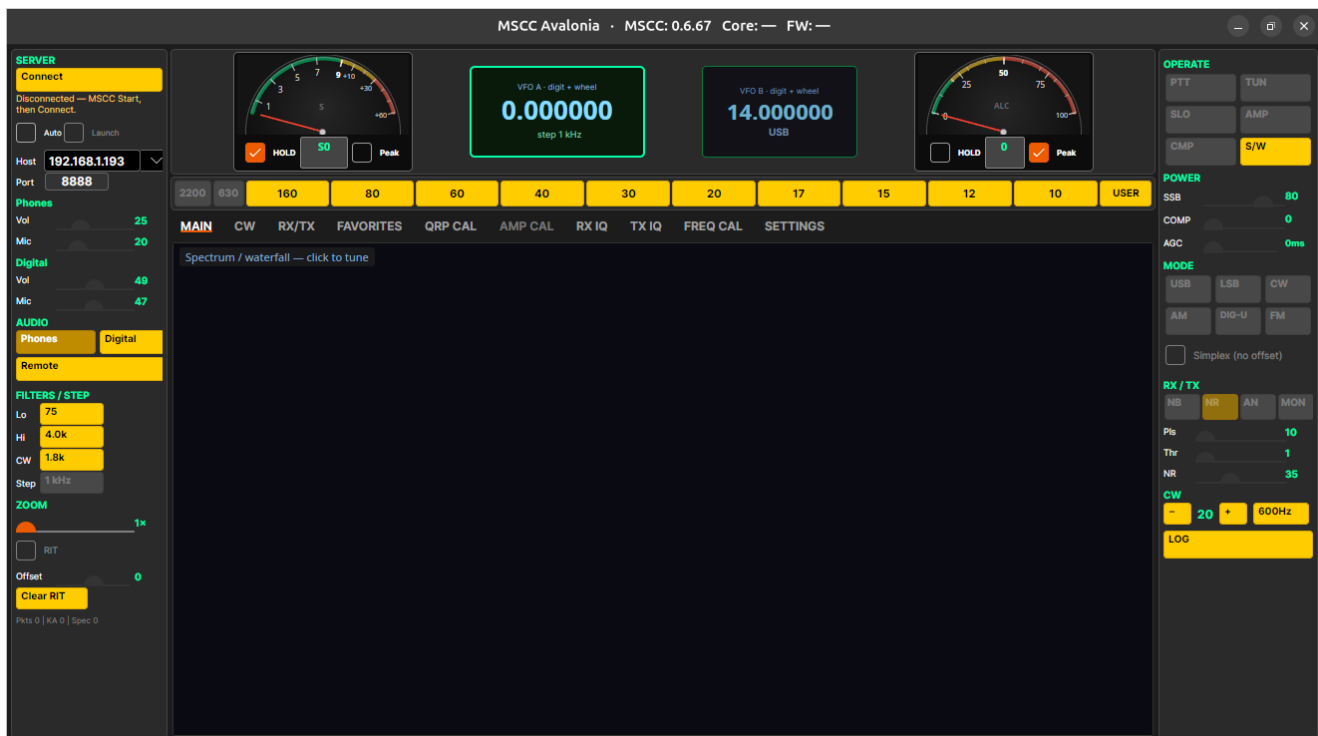

Avalonia pre-connect to Pi: Host set, Auto/Launch unchecked, Remote lit

MSCC Operator's Guide — Remote Operation (Preliminary)




Avalonia connected with Remote + Phones, DIG-U, live spectrum

5.2 Remote Phones on Avalonia (VirtualA)

On Linux, operator / remote phones playback often uses MSCC's **VirtualA** PulseAudio device (created with the MSCC install / Init), rather than VB-Audio.

MSCC Operator's Guide — Remote Operation (Preliminary)

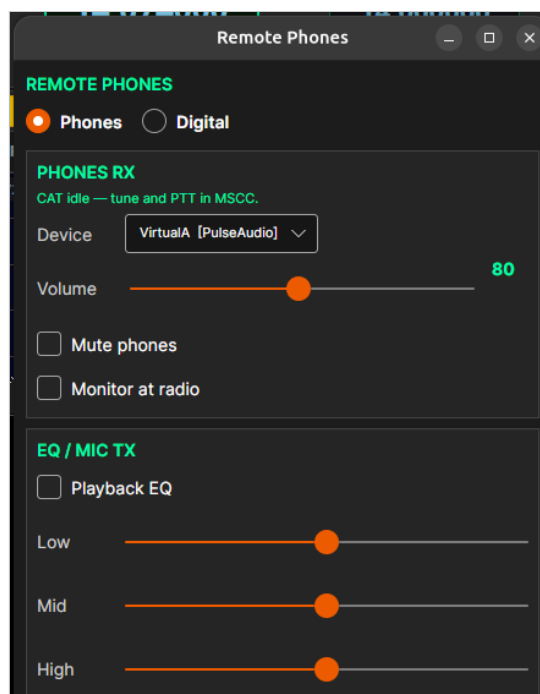

Avalonia Remote Phones window with Device VirtualA

5.3 Suggested COM / tnt pairings (Avalonia only)

On a **Linux or Pi** install, MSCC Init sets up /dev/tnt pairs for Kenwood CAT. Suggested COM/tnt pairings for WSJT-X in the Linux local guide apply when WSJT-X runs **on that same Linux/Pi machine**.

Avalonia-only note. Those /dev/tnt0 ↔ /dev/tnt1 pairings are for the Linux/Avalonia (and Pi) stack. They are **not** the Windows COM-pair story. A **Windows client → Pi host** remote session still uses Host / Port **8888** and Remote the same way; WSJT-X on the **Windows** client uses Windows COM ports / VAC as in Section 4 and Section 6 — not the Pi's /dev/tnt devices.


Question for Stew: for Win client → Pi host digital, does WSJT-X CAT always stay on the Windows COM pair that MSCC Remote Digital opens, with the Pi only seeing CAT via the 8888 path — confirm wording.

□ 6. Digi with WSJT-X (remote client)

These steps assume the client is already connected with **Remote** and **Digital** on, VAC (Windows) or virtual sinks (Linux) wired, and the host servers running.

6.1 Mode in MSCC and in WSJT-X

- In **MSCC**, select **DIG-U** (or **DIG-CW** when that is what you use).
- In **WSJT-X** → **Settings** → **Radio**, Stew's preferred setup is **Mode: None**, so **MSCC owns the mode**. Do not let WSJT-X fight MSCC over USB/LSB/DIG.
- **Rig:** Kenwood TS-2000.
- **PTT Method:** CAT.
- **Serial Port:** the COM port that pairs with MSCC's CAT (example shots show COM15 on the Radio tab; Remote Digital hints may mention another COM — use the pair MSCC opens on your PC). **To confirm:** document the exact COM pair MSCC NET9 creates for Remote Digital on Windows.

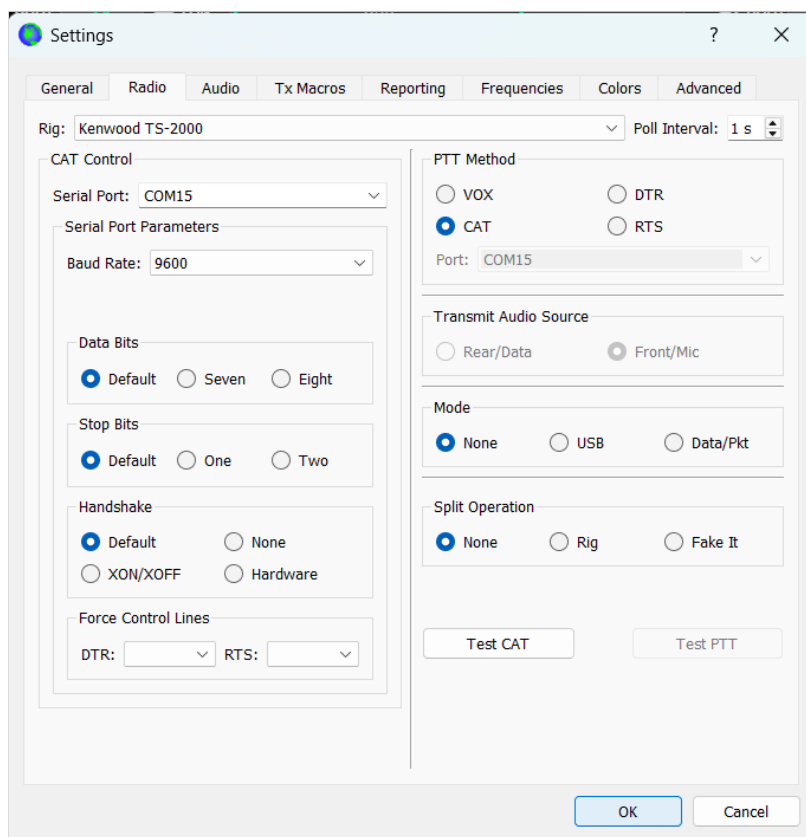


WSJT-X Radio tab: TS-2000, CAT, Mode None, Split None

6.2 Audio in WSJT-X

On Windows with VB-Audio:

- **Input:** CABLE Output (VB-Audio Virtual Cable)
- **Output:** CABLE Input (VB-Audio Virtual Cable)

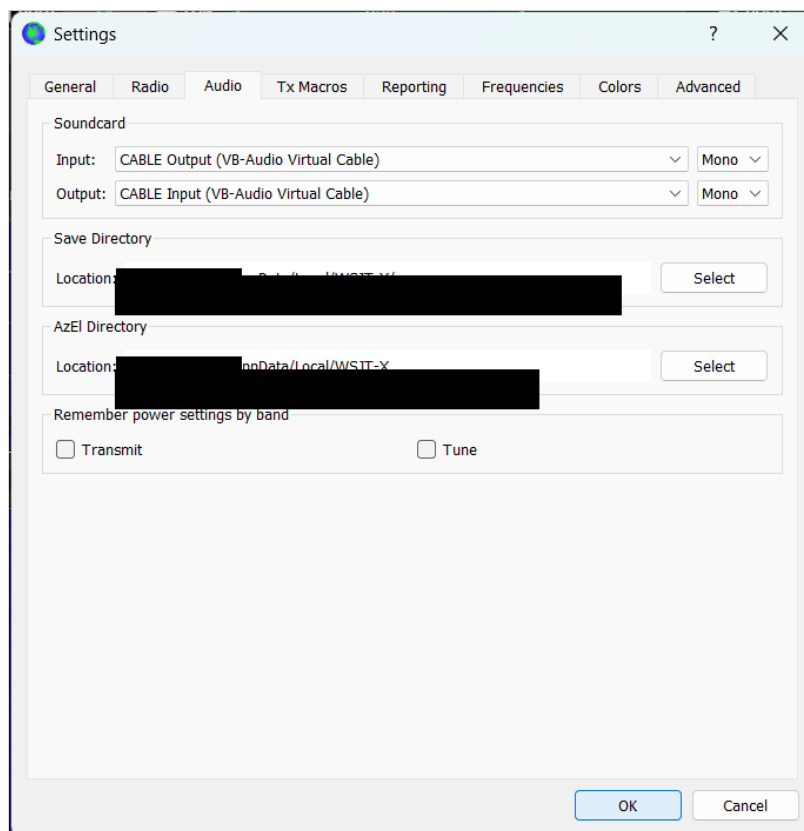


WSJT-X Audio tab: CABLE Output in, CABLE Input out

6.3 Operate

1. In MSCC, tune to the digi frequency (for example 14.074 on 20 m) and set **DIG-U**.
2. In WSJT-X, select the band / frequency and **Monitor**.
3. Decodes should appear when the path is correct. Transmit only when you are allowed to on that frequency and with ALC under control (use Digital Mic vol in Remote Digital if ALC is high).

MSCC Operator's Guide — Remote Operation (Preliminary)

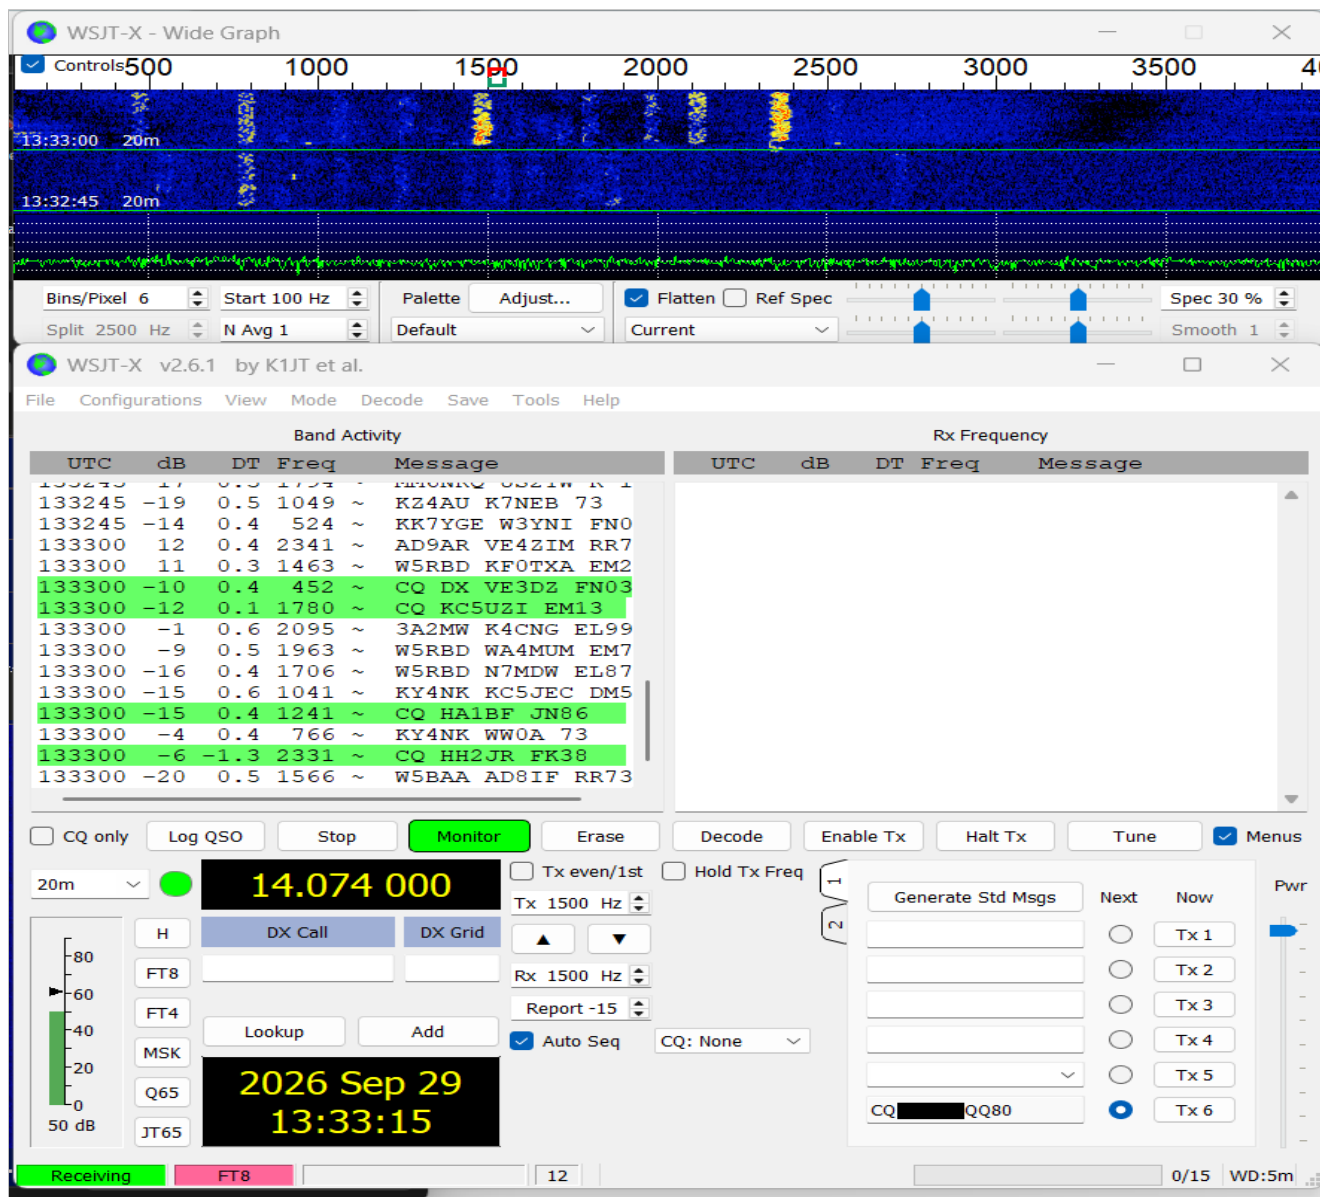

WSJT-X main window decoding on 20 m FT8 while MSCC runs remotely

Screenshot coming: SA CQ — screenshot of a successful CQ / QSO path (Stew) for the digi section.



MSCC Operator's Guide — Remote Operation (Preliminary)

□ 7. Troubleshooting

Symptom	Things to check
Client will not connect	Are servers running on the host (MSCC Start)? Is Host the correct LAN IP? Is Port 8888 ? Same LAN (or VPN)? Firewall on host or client blocking 8888?
Connects but no audio	Is Remote on? Did you pick Phones vs Digital for what you need? Is the Remote Audio window still open? Correct playback / mic / VAC device?
Digital / WSJT-X silent	VAC direction (Input vs Output) swapped? WSJT-X Audio devices match Section 6.2? Remote Digital Mic TX line showing packets to <i>host:9101</i> ?
Host field changed but still on old server	Press Stop , then Start (see the “new server address” dialog).
Remote button grayed / unavailable	Host is 127.0.0.1, or Launch Servers / Launch is checked — clear those for remote.
Spectrum OK but Mic TX fails	Host firewall allowing 9101 UDP/TCP as used by remote AF? To confirm: 9101 protocol and firewall note.



MSCC Operator's Guide — Remote Operation (Preliminary)

☐ Appendix A: Port summary

Port	Use
8888	Default MSCC client ↔ servers control / spectrum / CAT path (Host field + Port).
9101	Remote AF microphone transmit (Mic TX from the Remote Phones / Remote Digital window to the host).

Both ports are on the **host** IP you typed into **Host**. Keep them on the LAN (or inside a VPN). **To confirm:** any other remote ports the operator must open?



MSCC Operator's Guide — Remote Operation (Preliminary)

☐ **Appendix B: Related guides**

- Local install, MSCC Init, calibration, and firmware: *MSCC Operator's Guide — Linux and Raspberry Pi* and *MSCC Operator's Guide — Windows*.
- This remote guide assumes those steps are already done on the host.