

Smart Power Switch-1

(SPS-1)

BETA

Software: V1.21

User Manual

2026 May 5

By: A2Z Tech, LLC



Contact: support@a-2-z.tech for more information

Contents

Overview	1
Three protection layers work together to keep your equipment safe	1
Three operating modes let it adapt to your exact setup	1
Features	2
Operation	3
Protection	3
Connections and Controls	4
Power Connections	4
Local Control	4
Switch Settings	6
Mobile Mode Operation	9
Timeout Extension	9
Configuration Utility	10
Serial Port (DCN) Operation	11
DCN Message format	12
SPS-1 DCN Commands	13
Calibration	20
Calibration procedure	20

Overview

The Smart Power Switch (SPS-1) is a solid-state power control and protection device designed for 12-volt electrical systems. It safeguards transceivers, station accessories, and other sensitive electronics from the electrical faults that can shorten equipment life or cause unexpected failures.

As vehicle manufacturers and modern electronics move away from mechanical fuses and circuit breakers, the SPS-1 brings that same solid-state approach to a versatile standalone product. With no mechanical switching components, the SPS-1 responds to fault conditions far faster than traditional devices — and eliminates the risk of welded or stuck contacts entirely.

Three protection layers work together to keep your equipment safe

- Overcurrent Protection** — Acts like a smart fuse, allowing normal inrush currents while tripping instantly on a hard short, or after a continuous overcurrent.
- Overvoltage Protection** — Shields your gear from damaging voltage spikes before they can cause harm.
- Undervoltage Protection** — Prevents erratic operation and unexpected behavior when supply voltage drops too low.

Three operating modes let it adapt to your exact setup

- Stand-Alone Mode** — Simple power control with a low current momentary or toggle switch and LED status indication.
- Remote (DCN) Mode** — Full power control, status updates, and telemetry via Device Control Network or any RS-485 serial interface.
- Mobile Mode** — Automatic power-off and resume based on vehicle battery voltage, perfect for on-the-go operation.

Any or all of these modes can be combined based on your specific setup and needs. You can connect a switch to locally switch power on and off in a remote station setup. You can connect a local switch and external status LEDs in Mobile Mode for additional control, or connect a jumper to have power always on when the vehicle battery is charging and automatically turn off after a timeout when the vehicle is turned off.

The SPS-1 is your station's peace of mind, engineered in silicon.

Features

- Overcurrent protection configurable from 5 to 25 amps nominal fuse equivalent
- Smart inrush handling — trips instantly on hard short-circuits, tolerates normal startup currents
- Configurable for manual or automatic reset after an overcurrent trip
- Overvoltage protection with user-selectable threshold (default: 14.5V)
- Undervoltage protection with user-selectable threshold (default: 10.5V)
- Internal Watchdog monitor shuts off power in the unlikely event of a software failure or lockup
- Local hardwired control via simple low-current switch closure
- Built-in status and fault LED indicators with support for external LED drivers
- Industry-standard 45-amp Anderson Power-Pole connections
- Remote operation via RS-485 serial interface, fully compatible with the *Sierra Radio Systems* **Device Control Network** protocol

Operation

Protection

The protection features of the SPS-1 are active in every mode of operation to protect any devices connected to the switch. The primary protections are over-current and over-voltage. Under-voltage protection is also provided. However, this is less critical as low voltage can cause erratic operation, but does not typically cause any damage to electronic equipment.

The SPS-1 uses an Infineon PROFET™ series smart high-side switch. These switches are specifically designed for automotive applications. They include self-protection for over-current and over-temperature conditions. The SPS-1 combines the smart power switch with a microcontroller to monitor voltage and current. This allows trip points to be adjusted to precise levels in order to protect sensitive electronics.

The SPS-1 uses interrupt based software to read voltage and current 1000 times/second. The controller also incorporates an independent watchdog monitor that will turn off the switch and reset the controller in the unlikely event of a software malfunction or lockup.

Over-voltage protection is performed in the interrupt routine. An over-voltage condition will turn off the switch within 1 millisecond. Once the over-voltage condition clears, the switch will automatically turn back on after a ½ second delay.

Over-current protection is based on an i2t (i-squared-t) model. This mimics how fuses operate and defines a specific amount of energy required to trip an over-current fault. This allows the switch to pass a small, brief inrush overload without tripping and still trip instantly for a high-current short circuit. The time to trip is based on how severe the overload is.

Where over-current protection differs from a fuse is during constant, small overloads. With a 10 amp fuse (for example), a steady current of 11 amps might not open the fuse for minutes, hours, or possibly ever. With the SPS-1 a trip setpoint of 10 amps and a steady current of 11 amps will cause an overcurrent within a few seconds. In this way, the SPS-1 can detect and help protect equipment that may be starting to degrade or fail slowly before a catastrophic failure occurs.

Over-current faults can be reset manually or automatically at the user's option. Manual reset simply requires turning the switch off and back on again. The default delay before an automatic reset is 5 seconds. The delay time can be changed through the serial interface. If 3 over-current faults occur in rapid succession with automatic reset enabled, the controller will discontinue automatic resets and wait for a manual reset.

Under-voltage monitoring requires that the under-voltage condition persists for ½ second before the switch will be turned off. This allows for brief power supply droops without causing false trips. Similar to over-voltage, the switch will turn back on once the voltage rises above the under-voltage limit for ½ second.

Connections and Controls

Power Connections

The power source is connected to the IN PowerPoles. The load is connected to the OUT PowerPoles as seen in Figure 1. The power source can be a power supply, battery, multiple sources, or an automotive 12 volt source. Since the SPS-1 includes the fuse function, consider placing it as close as possible to the power source.

IMPORTANT: The SPS-1 is not designed to withstand the engine compartment environment and should NOT be mounted under the hood or in any vehicle compartment exposed to outside weather conditions or directly exposed to engine heat.

The switched load is connected to the OUT PowerPoles.



Figure 1: Power Input & Output Connections

If the SPS-1 is mounted some distance from the primary power source the following must be considered:

- Use a large enough wire gauge to minimize voltage drop based on the expected load current.
- Place a fuse at the power source to protect the wiring from the source to the SPS-1 in the event of a catastrophic wiring or other failure. This fuse can be sized based on the wiring and not based on the loads connected to SPS-1. For example, for 10 AWG wire, a 40 amp fuse can be used at the power source.

Local Control

The SPS-1 can be controlled locally through the DB-9 connector shown in Figure 2. This allows you to use the SPS-1 as an intelligent power switch to protect your equipment with no need for a computer or any programming. A small switch can be located conveniently on the bench or in a vehicle to control power to a radio, other electronic equipment, or to a power distribution panel.

The default operating mode uses a momentary, pushbutton switch. One press for ON, and press again for OFF. A configuration parameter allows the switch type to be changed to Toggle. When the switch is closed, power turns on until the switch is opened (or a fault occurs).

The DB-9 connector includes outputs for remote Status and Fault indicator LEDs as well as a current limited 12V source to power the LEDs. The pinout for the DB-9 connector is provided in Figure 3. An example control setup is shown in Figure 4.

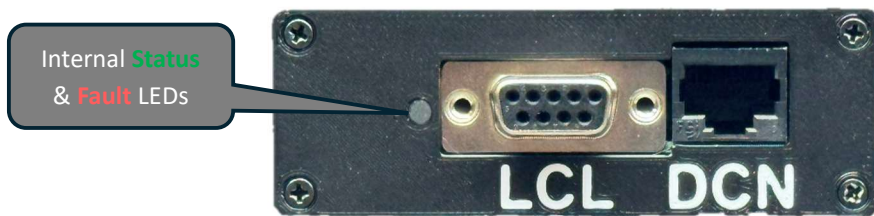


Figure 2: Local and Remote control connectors

PIN	Name	Description
1	Power Enable	Ground this pin to enable the output.
2	Power Status	This pin will be grounded when the output is ON. (see below for other status conditions)
3	Fault	This pin will be grounded when there is a fault condition. (see below for other indications)
4	NC	
5	NC	
6	NC	
7	NC	
8	12V	12V power 100ma Max. Suitable for powering Status and Fault indicator LEDs.
9	Ground	Ground reference for Power Enable signal.

Figure 3: DB-9 Connector pinout

The Power Status and Fault Pins can be used to connect external status LED indicators. It is suggested to use Green for status and Red for fault to match the internal LED indicators.

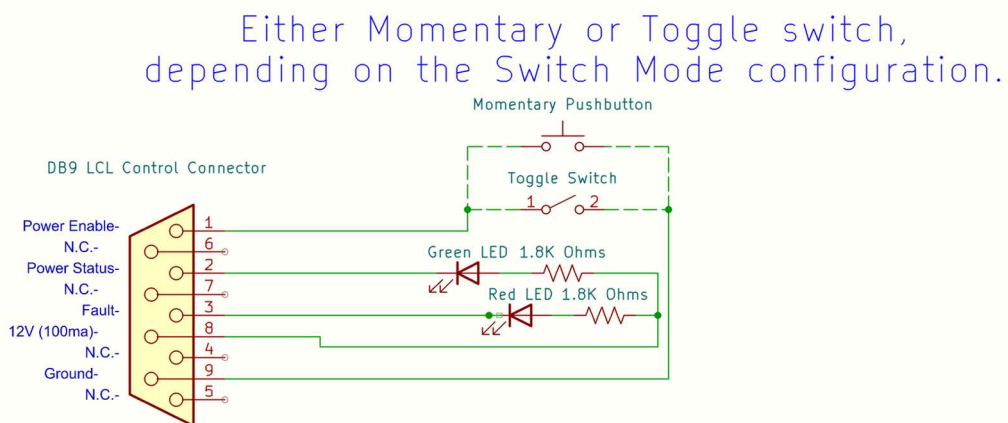


Figure 4: Example local control setup

Table 1: Status and Fault LED Indications

Power Status	FAULT	DESCRIPTION
OFF	OFF	Power output is OFF. Switch is in Idle state.
ON	OFF	Power output is ON. No Fault Conditions exist.
OFF	ON	Power output is OFF. An overcurrent trip has occurred.
Slow Flashing ("Winking")	ON	Power output is OFF. Undervoltage condition exists.
Rapid Flashing	ON	Power output is OFF. Overvoltage condition exists.
Slow Flashing ("Winking")	OFF	Power output is OFF. SPS-1 is in Mobile Mode. Low voltage (default 12.8V) timer has expired. Switch is in Standby, waiting for voltage to go above upper voltage setpoint (default 13.3V).
OFF	Rapid Flashing	A WATCHDOG RESET has occurred! NOTE: This condition should not occur during any normal operation. If watchdog resets occur repeatedly, contact support.

Switch Settings

Common control settings and options can be selected with 2 rotary switches on the SPS-1 circuit board. To access the switches, remove 4 screws from either end plate on the case and slide the circuit board out of the case. The 2 control switches are the SET switch and the DCN ADDR switch, as shown in Figure 5.

The DCN ADDR switch set's the device address for connection to a Device Control Network. See *Serial Port (DCN) Operation*

. The switch allows an SPS-1 to be configured with addresses 01 through 0E. Switch position 0

The SET switch selects common over-current and operating mode options. The DCN ADDR switch selects the device address for this switch when connected to a Device Control Network.



Figure 5: DCN Address and SET Switches

DCN ADDR

The DCN ADDR switch sets the device address for this switch when connected to a DCN or compatible RS-485 serial network via the DCN connector.

Switch positions **1 – E** set the device address to 01 through 0E Hex, as indicated on the switch. Switch position **F** is reserved for future use.

In position **0**, the SPS-1 will read it's address from the EEPROM Configuration Parameters. This allows many more address options to be programmed, other than 01-0E in a DCN system with many devices. Refer to the sections *Configuration* and *Serial Port (DCN) Operation* later in this document for information on configuring device parameters.

SET Switch

The SET switch allows you to select any of several overcurrent settings and operating modes without the need to a computer or RS-485 serial port. These common settings will cover many typical operating scenarios without any additional changes. The available current limits and operating modes can be found in Table 2: SET Switch options

The SET switch is checked when power is applied to the SPS-1. The overcurrent trip point and operating mode is set based on the switch setting. Voltage limit values, timeout, and time delay values are not affected by the SET switch. These values will initially be the factory default values, or they remain at the last configured value, if they have been changed. The factory default values for these parameters are shown in Table 3: Factory Default Values.

Table 2: SET Switch options

POSITION	SETTING
0	Settings taken from EEPROM (Use the configuration tool to adjust all settings)
1	5 amp fuse – Manual Reset
2	10 amp fuse – Manual Reset
3	15 amp fuse – Manual Reset
4	20 amp fuse – Manual Reset
5	25 amp fuse – Manual Reset
6	5 amp fuse – Auto Reset – 5 sec delay
7	10 amp fuse – Auto Reset – 5 sec delay
8	15 amp fuse – Auto Reset – 5 sec delay
9	20 amp fuse – Auto Reset – 5 sec delay
A	25 amp fuse – Auto Reset – 5 sec delay
B	5 amp fuse – Mobile Mode
C	10 amp fuse – Mobile Mode
D	15 amp fuse – Mobile Mode
E	20 amp fuse – Mobile Mode
F	25 amp fuse – Mobile Mode

Table 3: Factory Default Values

Parameter	Factory Default Value
Undervoltage fault	10.5 Volts
Overvoltage fault	15.7 Volts
Mobile Mode Shutoff Voltage	12.8 Volts
Mobile Mode Turn-on Voltage	13.3 Volts
Overcurrent Reset Delay	5 Seconds
Mobile Mode Shutoff Timer Delay	10 Minutes

Mobile Mode Operation

Mobile Mode is intended for use when powering equipment in a vehicle. When connecting radio gear in a vehicle, it is often desirable to have the power cable for the radio wired directly to the vehicle battery. It is often also desirable to have power removed from the radio equipment when the vehicle is off. This requires wiring a relay into the power wires and also finding a suitable ignition controlled 12 volt source to connect to the relay coil.

With Mobile Mode, the SPS-1 can be connected between the power cable and the radio and no additional ignition-controlled source is necessary. A remote switch and status LEDs can optionally be wired in (shown in Control Connections) and located near the driver's position, if desired. An example implementation can be seen in Figure 6.

In Mobile Mode, the SPS-1 will monitor the input voltage. When the power is enabled, the load will remain powered as long as the input voltage is above 12.8 volts (factory default). When the voltage drops below this level, a timeout-timer is started. The radio will remain powered until the timer expires. (The default timeout period is 10 minutes). When the timer expires, the output will turn off and the SPS-1 will enter Stand-by mode. This mode is indicated by the Power Status LED "winking" at 1 second intervals.

Timeout Extension

If the Local Power Enable input is configured for Pushbutton operation, the timeout period can be extended by Double-Pressing the Enable button during the timeout period. This will reset the timer to the starting value.

During the timeout period, the STATUS LED will begin flashing during the final 30 seconds of the timeout period. It will flash rapidly during the final 10 seconds of the timeout period.

While the SPS-1 is in stand-by mode, the output can be re-enabled by toggling the enable input signal off and back on. This will turn-on the output. If the input voltage remains below the lower threshold, the output will turn off again after another timeout period.

When the input voltage goes above 13.3 volts (factory default), the power output will be re-enabled and the switch will continue with normal operation. If the input voltage goes above the upper threshold during the timeout period, the timeout timer will be cancelled and normal operation will continue.

The lower and upper trigger voltages and the timeout period can all be modified through the DCN serial port.

In stand-by mode, the SPS-1 has a current draw of approximately 7ma. It can remain in stand-by mode for weeks without causing excessive discharge from a typical car battery..



Figure 6: Example local control switch and LEDs

Configuration Utility

The SPS-1 parameters can be configured to support a wide range of use cases. All of the parameters can be adjusted using DCN commands. However, manually entering DCN commands and protocol in a terminal program can be somewhat tedious. Additionally, reading the status and configuration messages sent in DCN protocol format can be also difficult and can be error prone.

To simplify configuring the SPS-1 a simple browser based utility has been created. The utility will run in any Chromium based browser such as Edge or Chrome. It requires no installation and no extensions or other accessory code. A sample screen can be seen in Figure 7.

The configuration tool can be accessed at: https://wa2ivd.github.io/SPS1_ConfigTool/

Once the page is loaded, the tool runs in JavaScript, completely locally within your browser. The URL above only serves to load the page. You must have a USB to RS485 converter connected to use the tool with an SPS-1. The tool includes a simulation mode that can be used to familiarize yourself with the tool.

This github site is completely open source. So all of the source code can be viewed, checked, and/or modified if you like. The tool shows the DCN ADDR and SET SWITCH positions and allows modification of all voltage, time, and overcurrent parameters.

When the page is initially loaded and you click the Connect button, you will be prompted to select the appropriate serial port. Once connected you can easily view and modify all SPS-1 parameters. At the bottom of the page there is a Serial Trace that can be unhidden to allow you to see all of the DCN commands and responses as they are sent.

The screenshot displays the SPS-1 Configuration Tool interface. At the top, there are buttons for 'Connect', 'Disconnect', and 'Simulate', along with a status bar indicating 'Simulating - DCN address FF'. A yellow warning box states: 'IMPORTANT: SET SWITCH must be set to 0 for updated settings to remain in effect after SPS is power cycled.' The main configuration area includes sections for 'Overcurrent Protection' (with fields for Overcurrent Limit (A) at 12,000, Auto-Reset set to Disabled (Manual), and Reset Delay (s) at 30), 'Voltage Fault Limits' (with Undervoltage Limit (V) at 10,700 and Overvoltage Limit (V) at 15,000), and 'Mobile Mode (Auto Power Off/On voltage and timeout settings)' (with Mobile Mode set to Disabled, Off Threshold (V) at 12,500, On Threshold (V) at 13,500, and Timeout (min) at 10). A color-coded progress bar is shown below these settings. The 'Live State' section at the bottom provides real-time monitoring for Input Voltage (13.189 V), Switch Current (0.000 A), Power Request (OFF), Power Switch (OFF), Fault (None), OC Retries (0), Watchdog (OK), and Firmware Version (V1.2 (51H)).

Figure 7: Configuration Tool

Serial Port (DCN) Operation

The SPS-1 supports multi-drop serial port operation over an RS-485 network. It conforms to the DCN message protocol defined by Sierra Radio Systems.

You can learn more about the Device Control Network and Station controllers on the SRS website here:

<https://www.packtenna.com/station-controller.html#/>

Or on their Groups.io group here:

<https://srs.groups.io/g/station-controllers>

RS-485 communication is very robust allowing communications over very long distances, up to 1000 feet or more. It is a simple 2-wire protocol. Communication is half-duplex (one way at a time) so multiple devices can be connected and communicate over the same wire pair. The pinout for the DCN connector can be found in Table 4.

USB to RS-485 serial converters are inexpensive and widely available from Amazon and other sources. A WaveShare converter, a screw terminal RJ45 jack, and Ethernet patch cable are shown connected to an SPS-1 in Figure 8.

Table 4: DCN RJ-45 Connector Pinout

1	RS-485 A+
2	RS-485 B-
3	NC
4	+12 VDC
5	+12 VDC
6	NC
7	GROUND
8	GROUND

NOTE: This wiring DOES NOT conform to standard Ethernet wiring. However, a straight-through Ethernet jumper cable can be used to connect 2 DCN compatible devices together.

The DCN definition also provides for 12 volt power to be available on the RJ-45 network jack. **The SPS-1 controller can be powered by this network power (if available).** This allows the controller to continue to operate and respond to DCN commands and queries if the primary switch input power is lost.



Figure 8: SPS-1 DCN Connection example

DCN Message format

DCN messages use a human-readable, simple ASCII format. This allows messages to be easily sent and read using a terminal program, such as PuTTY or similar.

General Message format:

```
/FFTT:CMD,P1,P2,P3<etc>:XX<cr>
```

Where:

- '/' is required as the first character of the message
- FF is the address of the device sending the message. This can be any 2 characters, but is typically a 2 digit number. By convention, the master controller has an address of 00.
- TT is the address of the device that the message is directed to. It is the same format as the 'from' address.
- ':' is required to separate the addresses from the main message content.
- CMD is the command or message type string. (See supported commands below)
- P1, P2, P3, etc. are the message parameters. These are specific to each command or message type.

Parameters are separated by commas.

The maximum number of parameters supported varies by device.

NOTE: The Command and Parameters combined are the message Payload and fall between the 2 ':' characters.

- ':' is a required separator character.
- 'XX' is a future CRC error check. Currently, it is the literal characters 'XX'
- <cr> - Carriage Return terminates the command string.

Special broadcast message format:

```
//CMD,P1<etc><cr>
```

- '/' - 2 consecutive start characters indicate a broadcast message. No From or To addresses are included. All devices on the network will respond to this message.
- CMD,P1 – Command and parameters follow the same format as described above.
- <cr> - The message is terminated with a Carriage Return. There is no terminating separator nor CRC characters.

The broadcast message format can be used to send a command to all devices. It is also typically used for programming or configuring a device that is directly connected to a computer with no other devices connected.

SPS-1 DCN Commands

Summary of Commands

COMMAND	Parameters	Description
PWR	0 or 1	Power output Enable
STATE	None	Returns the current operating state in UPDATE message
UVSET	Millivolts	Sets the under-voltage trip level in millivolts
OVSET	Millivolts	Sets the over-voltage trip level in millivolts
OCSET	Milliamps, Reset type, Delay	Sets over-current trip level in milliamps and over-current behavior.
MOBSET	Enable, Off-Millivolts On-Millivolts Timeout min.	Sets Mobile Mode operation parameters.
SWMODE	0 or 1	Configures local enable switch to be in momentary mode or not.
CONFIG	None	Returns current configuration settings in SETTINGS message
VERSION	None	Returns current firmware version in FWVER message (V1.1)
CALLO	Milliamps	Calibration Low current setting IMPORTANT: Read calibration section before using this command.
CALHI	Milliamps	Calibration High current setting IMPORTANT: Read calibration section before using this command.
CALSET	Scale Setting Offset Setting	Updates the stored calibration setting to the values provided. Can be used to restore calibration parameters if EEPROM data is cleared or becomes corrupted. (V1.1)
LOGS	None	Returns SPS-1 log data
SETADDR	2 character DCN address	Sets device DCN address
RSTLOGS	None	Resets log data (except total on time)
REBOOT	None	Forces a processor restart – equivalent to removing and restoring power. (V1.1)

NOTE: The SPS-1 ignores invalid commands or any message that is not formatted correctly. There is no response or direct acknowledgement of operational commands. The execution of PWR and the various SET commands can be confirmed by checking the response to STATE, CONFIG, or LOGS commands.

Command Details

- **PWR,n**

n=1 requests output power ON

n=0 requests output power OFF

Power will only be turned ON if the input voltage is within Undervoltage & Overvoltage limits.

This command works in conjunction with the local, hardwired Enable signal. If either the local enable or the DCN Enable is on (1), then power will be enabled. BOTH enable signals must be OFF to turn power off.

- **STATE** <no parameters>

Returns the current state of the SPS-1 in the following format:

```
/fftt:UPDATE,SPS1,R,P,FS,r,VV.VVV,AA.AAA,WD:XX<cr>
```

Where:

- ff = The address of this device
- tt = The address of the device that sent the STATE command (or 00 if State was sent in a broadcast message)
- UPDATE = Response message identifier
- SPS1 = The name of this device
- R = 1 Power is Requested ON, 0 if power is requested OFF (either Local or DCN Request)
- P = 1 if output power switch is ON, 0 if output power switch is OFF
- FS = Fault Status – “ – No Fault, “UV”- Undervoltage Fault, “OV”- Overvoltage Fault
“OC”- Overcurrent Fault
- r = The number of OverCurrent reset retries that have been attempted.
(NOTE: This only applies if OverCurrent Auto Reset is set to TRUE, otherwise this value will be zero)
- VV.VVV – The voltage on the power input terminals
- AA.AAA – The current in amps flowing through the switch

NOTE: The current reading comes directly from the MOSFET power switch. The accuracy is sufficient for overcurrent protection. However, it does not have instrument grade accuracy. The Scaling and Offset for each SPS-1 are calibrated at the time of manufacture. Even so, currents of less than 4 amps may read as zero, depending on the characteristics of each device.

- WatchDog status -

This field should normally be “--”. If this field contains WD, then the internal controller has experienced a WatchDog reset. The FAULT LED will flash rapidly and the Output will be turned off if this occurs. The DCN and Local Enable signals must be turned Off to reset the switch. Then the switch will operate normally again. The FAULT LED flashing will be reset the next time the Output is turned on.

“WD” will remain in this field until power is removed from the SPS-1 or until a REBOOT command is executed.

NOTE: If this condition continues to occur, contact support.

- **UVSET,nnnnn**

Sets Undervoltage trip limit

nnnnn= trip limit in millivolts.

This command will ONLY be processed if the switch is in the IDLE state (enables OFF). Otherwise it is ignored.

Value must be between 6000 and 18000. Any other values or non-numeric characters are invalid and the command will be ignored.

The result of this command is written to EEPROM and persists through power cycles. The new undervoltage limit takes effect immediately.

- **OVSET,nnnnn**

Sets Overvoltage trip limit

nnnnn= trip limit in millivolts.

This command will ONLY be processed if the switch is in the IDLE state (enables OFF). Otherwise it is ignored.

Value must be between 6000 and 18000. Any other values or non-numeric characters are invalid and the command will be ignored.

The result of this command is written to EEPROM and persists through power cycles. The new overvoltage limit takes effect immediately.

- **OCSET,nnnnn,a,t**

Sets Overcurrent trip limit

nnnnn= trip limit in milliamps

NOTE: The minimum trip current allowed is 5000 and the maximum allowed is 35000.

a= Automatic Reset selection – 0= Manual Reset 1= Automatic Reset

t= Reset Delay in seconds (Whole seconds only. No decimals)

When configured for Manual Reset an overcurrent trip is reset by toggling the enable OFF and then back ON.

This command will ONLY be processed if the switch is in the IDLE state (enables OFF). Otherwise it is ignored.

The result of this command is written to EEPROM.

IMPORTANT: The new over-current parameters take effect immediately. However, unless the SET switch is set to the 0 position, the over-current level will be reset based on SET switch position whenever input power to the SPS-1 is removed and restored.

- **MOBSET,e,mmmmm,nnnnn,ttt**
Mobile Mode Settings

e= 0 to Disable Mobile Mode, 1 to Enable Mobile Mode

mmmmm= Off Threshold in mv. If voltage dips below this voltage, the timeout timer starts counting down.

NOTE: This must be at least 1V (1000mv) greater than the Under Voltage trip level.

nnnnn= On Threshold in mv. When the voltage goes above this level, the output will be turned back on if the timeout has expired.

If the output is on and timeout timer is counting down, the timer will be cancelled.

NOTE: This must be at least 1V (1000mv) less than the Over Voltage trip level.

ttt= Timeout Timer period in minutes. This is how long the output will remain on once input voltage dips below the Off Threshold. This value must be at least 1 and no more than 100 minutes.

This command will ONLY be processed if the switch is in the IDLE state (enables OFF). Otherwise it is ignored.

The result of this command is written to EEPROM.

IMPORTANT: The new Mobile Mode parameters take effect immediately. However, unless the SET switch is set to the 0 position, Mobile Mode parameters will reset based on the SET switch position whenever input power to the SPS-1 is removed and restored.

- **SWMODE,m**
Switch mode setting

m= 0= Momentary Mode false. Enable switch is a toggle switch. Power enable is based on switch position.

1= Momentary Mode true. Enable switch is a momentary pushbutton. Power enable is toggled On to Off or Off to On with each single press.

If Mobile Mode is enabled and Timeout Timer is active, a double press resets the Timeout Timer to its starting value.

- **CONFIG** <no parameters>

Returns the current configuration of the SPS-1 in the following format:

/fftt:SETTINGS,SPS1,xx,uuuuu,ooooo,cccc,a,t,m,moff,mon,mto,cal,ofst,s,y,z:XX

Where:

- ff= The current DCN Address of this device
- tt= The address of the device that sent the CONFIG command. (00 if received in a broadcast command)
- SETTINGS= The message type of this response
- SPS1= The name of this device
- xx= The 2 digit hex address currently programmed in EEPROM for this device.
NOTE: This is not necessarily the current address of the device.
- uuuuu= Undervoltage trip level in millivolts
- ooooo= Overvoltage trip level in millivolts
- ccccc= Overcurrent trip level in milliamps
- a= Autoreset setting. 0= Manual Reset 1= Automatic Reset
- t= Autoreset time delay in seconds
- m= Mobile Mode Status 1=Mobile Mode Enabled, 0=Mobile Mode Disabled
- moff= Mobile Mode Off Threshold in mv
- mon= Mobile Mode On Threshold in mv
- mto= Mobile Mode Timeout time in minutes
- cal= Calibration scaling for current sensing readout & trip level (See Calibration section)
- ofst= Calibration offset for current sensing readout & trip level (See Calibration section)
- s= Switch mode. 0= Momentary mode is false. 1= Momentary mode is true.
- y= Physical DCN ADDR Switch setting on power up.
- z= Physical SET Switch setting on power up.

- **VERSION** <no parameters (Version 1.1 and later)

Returns the current firmware version in the following format:

/fftt:FWVER,SPS1,<ver>:XX

Where:

- ff= The current DCN Address of this device
- tt= The address of the device that sent the CONFIG command. (00 if received in a broadcast command)
- SETTINGS= The message type of this response
- SPS1= The name of this device
- <ver>= The current firmware version as a string (10 characters max)

-

- **CALLO,cccc**
Calibration Low command
cccc= measured current in milliamps

IMPORTANT: See Calibration section for details on using this command.

- **CALHI,cccc**
Calibration High command
cccc= measured current in milliamps

IMPORTANT: See Calibration section for details on using this command.

- **CALSET,ss.sss,oooo (V1.1 firmware and later)**
ss.sss= Current reading scale factor. This is always a positive number.
oooo= Current reading offset in milliamps. This may be positive or negative.

Calibration Set Command. This sets the SPS-1 current reading calibration to the values sent in the command. The command is provided to reload the calibration data in the event that the SPS-1 internal EEPROM settings get corrupted. The scale and offset values are the same values reported in the SETTINGS response to the CONFIG command.

You can use the CONFIG command to get these values and record them for safe keeping. You can also contact A2Z Tech and provide your SPS-1 serial number and the factory calibration values will be sent to you.

- **LOGS <no parameters>**
Returns the fault history of the SPS1 in the following format:

/fftt:HISTORY,SPS1,tot,uv,ov,oc:XX<cr>

Where:

- ff = The address of this device
- tt = The address of the device that sent the LOGS command (or 00 if State was sent in a broadcast message)
- HISTORY = Response message identifier – Historical Data
- SPS1 = The name of this device
- Tot= The total amount of time the output has been ON in tenths of a second.
NOTE: This value can be up to 4,294,967,296 tenths (~ 13.5 years)
This value is NOT reset by the RSTLOGS command.
- uv= The number of Undervoltage trips since production or since data was reset
- ov= The number of Overvoltage trips since production or since data was reset

- uc= The number of Overcurrent trips since production or since data was reset

SEE: RSTLOGS Command

- **SETADDR,xx**

Set the DCN Address of this device

xx= 1 or 2 hex digits

The SPS-1 internally stores it's address as a single byte of data. Therefore it supports any one of 255 addresses from 01 through FF. It will not accept an address of 00.

The result of this command is stored to EEPROM. The current DCN address of this device is also **immediately set to the commanded address.**

IMPORTANT: In order for this address to persist after power is removed from the SPS-1, the ADDR switch must be set to '0', otherwise the DCN Address will revert to the address set on the switch after power is removed and re-applied to the SPS1.

- **RSTLOGS** <no parameters>

This command resets the stored fault memory of the device to zero for each fault type.

NOTE: This does not reset the total accumulated ON time value.

- **REBOOT** <no parameters> **(Version 1.1 firmware and later)**

This command reboots the SPS-1 as if a power cycle had occurred.

Calibration

IMPORTANT: Your SPS-1 unit was calibrated at the time of manufacture. It is not necessary to perform the calibration procedure unless you wish to experiment or attempt to further improve the accuracy of current monitoring around a specific current range or in specific temperature conditions.

The calibration procedure is straightforward, and the calibration calculations are automatically performed by the SPS-1. **HOWEVER, there is no way to restore the factory calibration once you perform your own calibration procedure.**

Version 1.1 firmware: The CALSET command has been added to load predetermined scale and offset values into the device. This allows the original factory values to be restored.

NOTE:

Calibration can improve the accuracy of the SPS-1. However, the SPS-1 is not designed as a measurement instrument. It may not reliably report current levels of less than 3-4 amps. The current values reported are not suitable for measuring battery state-of-charge or for any use case requiring high accuracy measurements.

The power switching device used in the SPS-1 is smart power switch that includes internal thermal protection, overcurrent protection and current sensing. The switch is designed to support intermittent loads of over 100 amps. Because of this, the scaling factor used for current sensing built into the switch is very large. The SPS-1 uses the internal current sensing of the switch both for overcurrent fault trips and for reading out load current from the STATE command.

The current sensing built into the switch can have scaling errors as much as 20% and offset errors amounting to several amps in either direction. The calibration performed during the SPS-1 manufacture allows overcurrent protection to be performed with reasonable accuracy down to levels as low as 5 amps.

If more accurate current protection is desired at lower levels, or if a more accurate load current readout is desired, the SPS-1 supports a calibration procedure based on the power switch manufacturer's calibration instructions. The SPS-1 will calculate calibrated scaling and offset values based on a simple procedure using the CALLO and CALHI calibration instructions.

After calibration, the SPS-1 will typically report load currents within 100ma of the actual value for load currents of 1.5 amps or higher. The offset correction will also prevent erroneously reporting small load currents when no load is present.

Calibration procedure

The calibration procedure is fairly simple. All scaling and offset calculations are automatically performed by the SPS-1. However, it is very important that procedure be performed in the proper sequence and using loads that meet the stated requirements. To perform a calibration you must be able to apply 2 different steady-state loads to the switch. You must also have the ability to accurately measure the load current applied.

Calibration is performed in two steps. First with a lower load, and then with a higher load. The loads must meet the following requirements:

- Minimum load for Lower calibration: 3 amps.

- Minimum difference between Higher and Lower loads: 5 amps.
(The greater the difference, the better. A difference of at least 10-15 amps should be used, if possible.)

The loads need to be steady-state loads. DO NOT use loads with active electronics such as a transceiver or amplifier. Suitable loads would be high-power resistors, incandescent car headlamps (several in parallel are required), a 12 volt heater, or an electronic load instrument designed to produce constant DC loads.

You must be able to accurately measure the current being drawn by your load. This could be done with a multi-meter capable of reading currents of at least 20 amps, an accurate ammeter, or a calibrated current shunt used in conjunction with a multi-meter.

The procedure is as follows:

1. (optional) Issue a CONFIG command and note the Scale and Offset calibration values.
2. Insure that the Overcurrent trip level is set higher than the maximum test load you intend to use.
3. Insure that you have a power supply or battery capable of delivering more than the higher test load.
4. Insure that you have an accurate current measuring device for the load levels you will be applying.
5. Enable the SPS-1 Power output. (This can either be via the local enable or DCN command)
6. Connect the 1st (lower current) load.
7. Measure the actual load current.
8. Issue the CALLO,cccc command where ccccc is the measured current in milliamps.
9. Connect the 2nd (higher current) load.
10. Measure the actual load current.
11. Issue the CALHI,cccc command where ccccc is the measured current in milliamps.

The CALHI command will calculate scaling and offset values and store them to EEPROM. Your SPS-1 is now calibrated. You can issue the CONFIG command and see updated calibration values. You should find that current values reported are within 100 ma of the actual load value.