

# Smart Fingerprint Padlock



## CAUTION!

Contains a coin battery. Hazardous if swallowed.

## CAUTION!

A coin battery can cause serious internal chemical burns if swallowed.

## CAUTION!

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. If the battery compartment does not close securely, stop using the product and keep it away from children.

## NO OBVIOUS SYMPTOMS:

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe).

There are no specific symptoms associated with this. The child might:

- Cough, gag or drool a lot;
- Appear to have a stomach upset or a virus;
- Be sick;
- Point to their throat or stomach;
- Have a pain in their abdomen, chest or throat;
- Be tired or lethargic;
- Be quieter or more clingy than usual or otherwise "not themselves";
- Lose their appetite or have a reduced appetite; and
- Not want to eat solid food / be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding. A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help. The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

03

"Congratulations on your purchase and Thank You for choosing the Smart Fingerprint Padlock."

## IMPORTANT SAFETY INFORMATION

Please read this important information carefully before you use the My Tag and save it for future reference.

1. Keep this product and all of its parts out of reach of small children.
2. Batteries are to be inserted with the correct polarity.
3. The supply terminals are not to be short-circuited.
4. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
5. Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
6. Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
7. Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
8. Keep it away from bright sunlight or heat sources, such as a radiator.
9. Never place any type of candle or naked flame on top of, or near the product.


### KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

01

## IN THE BOX

- 1 x Smart Lock (including 2 x CR2032 coin batteries)
- 1 x User Manual

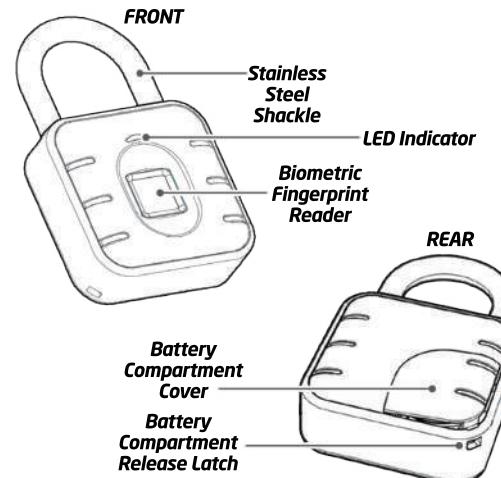

### IP67 WATERPROOF & DUST TIGHT

Your My Lock is waterproof, dust tight, as well as weatherproof in temperatures between -10 to 45 degrees.

04

"Congratulations on your purchase and Thank You for choosing the Smart Fingerprint Padlock."

## IMPORTANT SAFETY INFORMATION

Please read this important information carefully before you use the My Tag and save it for future reference.

1. Keep this product and all of its parts out of reach of small children.
2. Batteries are to be inserted with the correct polarity.
3. The supply terminals are not to be short-circuited.
4. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
5. Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
6. Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
7. Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
8. Keep it away from bright sunlight or heat sources, such as a radiator.
9. Never place any type of candle or naked flame on top of, or near the product.

## BATTERY WARNING!

### KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.



02


## OPERATION

### Power On

Remove the plastic strip on the back of the lock to power on for the first time.

### How to Unlock for the first time

Place your fingerprint against the Biometric fingerprint reader. The LED indicator light will flash blue and the stainless steel shackle will open.

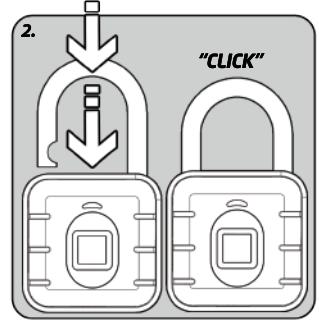

### Biometric Fingerprint Recognition

The locks default setting is set to unlock with any fingerprint contact. The Blue indicator light is displayed to show that no fingerprints have been added to the padlocks memory when unlocking.

You must register new fingerprints to exit the default model. (The My Lock can store a total of 20 fingerprints to its memory). The Green indicator light is then displayed to show that a registered fingerprint is saved to the padlocks memory when unlocking.


05

## OPERATION

### Registering Fingerprints

1. Press your fingerprint against the biometric reader. The LED light will flash blue and the padlock will open.
- With the padlock in the open position press and hold your fingerprint against the biometric reader for around 5 seconds. Keeping it there until there the LED light turns to solid blue.
- Now lock the padlock (You have around 5-6 seconds to lock the padlock whilst the LED is illuminated).
- With the padlock in the locked position press different parts of your fingerprint against the biometric reader (approx 5 times). The LED light will flash purple with every fingerprint press.
- Once enough fingerprint impressions have been recorded the padlock will unlock and your fingerprint will have been saved.
2. To add another fingerprint the padlock needs to be unlocked by a current registered fingerprint and then you follow the process of registering fingerprints again. Once 20 fingerprints are registered the light will flash red if you try to register more.

### Correct way to register fingerprints

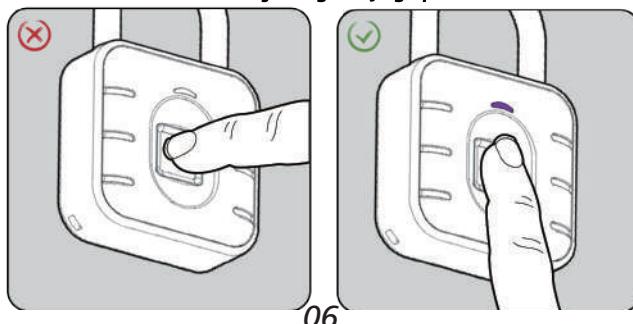

## OPERATION

### Delete all saved Fingerprints


1. Press and hold a pre-registered fingerprint against the fingerprint reader.
2. The color of LED indicator light will change from blue to white and then to red. Release your finger once the light turns red. All registered fingerprints are now successfully deleted.

## TROUBLE SHOOTING

If fingerprints are not recognised by your My Lock please refer to the previous steps for registering fingerprints. Then try deleting all saved fingerprints and start again. If this fails to fix the problem please change the button cell and try again.


## BATTERY REMOVAL

Using a slotted screwdriver release the latch to open the battery cover. Place the button cell batteries in anode face up and cathode face down. Then replace the battery cover.

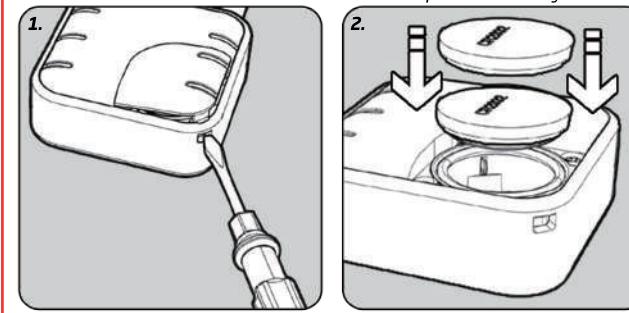

## OPERATION

### When padlock is locked

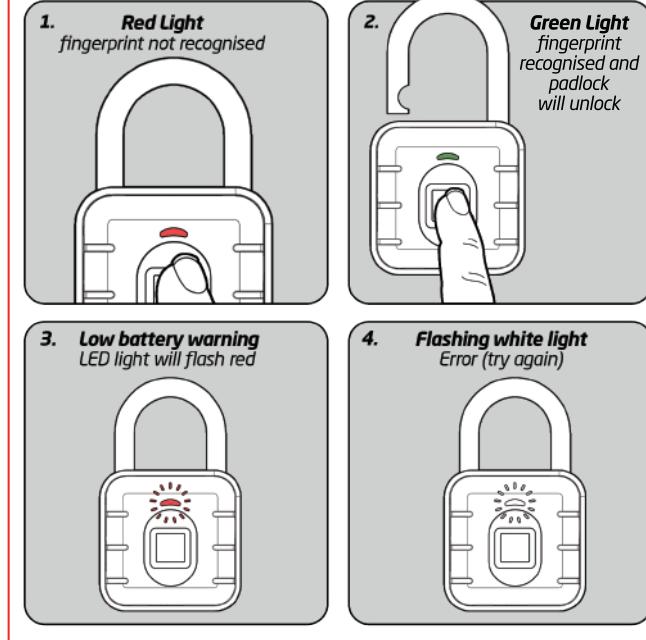

## BATTERY DISPOSAL

### CAUTION!

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. If the battery compartment does not close securely, stop using the product and keep it away from children.

This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

### Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



## FEATURES

- Easy to use - your finger is the key!
- No keys, password or apps required
- Secure your luggage, gates, sheds, garages, lockers at gyms, schools & work
- Zinc alloy with stainless steel shackle
- Biometric fingerprint recognition
- Multi-user: 20 fingerprints memory
- IP67 Weatherproof
- LED light indicator
- Low battery warning
- Standby time: 12 months
- 2 x CR2032 batteries (included)

