

Smart Fingerprint Padlock



"Congratulations on your purchase and Thank You for choosing the P-80 Smart Fingerprint Padlock."

IMPORTANT SAFETY INFORMATION

Please read this important information carefully before you use the My Tag and save it for future reference.

1. Keep this product and all of its parts out of reach of small children.
2. Batteries are to be inserted with the correct polarity.
3. The supply terminals are not to be short-circuited.
4. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
5. Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
6. Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
7. Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
8. Keep it away from bright sunlight or heat sources, such as a radiator.
9. Never place any type of candle or naked flame on top of, or near the product.

KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

⚠ IMPORTANT SAFETY INFORMATION

Please read this important information carefully before using my label, and keep it for future reference.

1. Keep this product and all its components out of reach of children.
2. Batteries should be inserted with the correct polarity.
3. Power terminals must not be short-circuited.
4. This product contains no user-serviceable parts. Unauthorised handling of the device may damage it and void the warranty.
5. Keep dry. Avoid exposure to precipitation, humidity, and liquids, as these can affect the product's circuitry.
6. Do not place it in a cold environment, as moisture may form inside the product and damage the circuit board.
7. Do not place it in a hot environment, as electronic devices and plastic parts may deform in the heat.
8. Keep away from direct sunlight or heat sources such as radiators.
9. Never place any type of candle or open flame on or near the product.

⚠ Battery Warning!

Keep batteries out of reach of children. Ingestion may cause chemical burns, soft tissue perforation, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.



01

02

⚠ CAUTION!

Contains a coin battery. Hazardous if swallowed.

⚠ CAUTION!

A coin battery can cause serious internal chemical burns if swallowed.

⚠ CAUTION!

Dispose of used batteries immediately. Keep both new and used batteries out of reach of children. If you suspect a battery has been swallowed or inserted into any part of the body, seek medical attention immediately. If the battery compartment cannot be securely closed, stop using the product and keep it away from children.

No Obvious Symptoms:

Unfortunately, when a button battery or coin cell gets stuck in a child's esophagus (food pipe), the symptoms are not always obvious. There are no specific symptoms associated with this condition. However, the child may:

- Cough, choke, or drool excessively;
- Appear to have stomach discomfort or signs of a cold;
- Vomit;
- Point to their throat or abdomen;
- Experience pain in the abdomen, chest, or throat;
- Feel tired or lethargic;
- Be quieter or more clingy than usual, seeming somewhat off;
- Have a reduced appetite or completely lose their appetite;
- Be unwilling or unable to eat solid foods.

These symptoms often manifest as changes or fluctuations, with pain intensifying at times and easing at others.


03

One symptom specific to the ingestion of button batteries and coin cells is vomiting bright red blood. If a child exhibits this symptom, seek medical attention immediately. Due to the lack of obvious symptoms, it is crucial to remain vigilant at home and with products containing these batteries, especially with "flat" or spare button and coin batteries.

OVERVIEW

IN THE BOX

- 1 x Smart Lock (including 2 x CR2032 coin batteries)
- 1 x User Manual

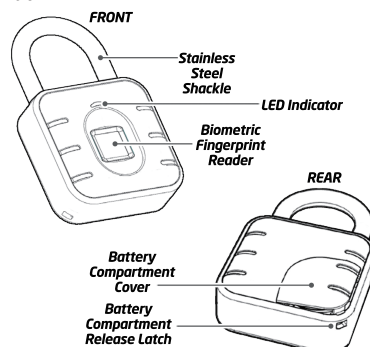

IP67 WATERPROOF & DUST TIGHT

Your smart fingerprint lock is waterproof, dust tight, as well as weatherproof in temperatures between -10 to 45 degrees.

04

Power on



Remove the plastic strip on the back of the lock to power on for the first time.

How to Unlock for the first time

Place your fingerprint against the Biometric fingerprint reader. The LED indicator light will flash blue and the stainless steel shackle will open.

How to Lock

Press the stainless steel shackle down into the locking mechanism until you hear it click into place. (To unlock repeat step 1.)

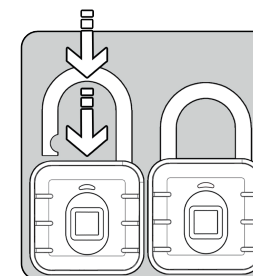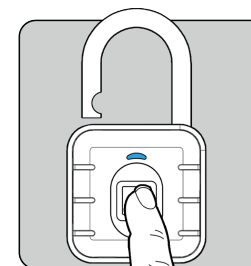

Biometric Fingerprint Recognition

The lock's default setting allows it to unlock with any fingerprint. When unlocked, a blue indicator light will illuminate to indicate that no fingerprints have been added to the fingerprint lock's memory.

You must register new fingerprints to exit the default mode. The smart fingerprint lock can store up to 10 fingerprints in its memory (the P-70 model can store up to 20 fingerprints for the fingerprint-only model). Once registered fingerprints are saved in the lock's memory, a green indicator light will illuminate when unlocking with a registered fingerprint.

05


Note: Applicable to P-70, not applicable to P-80 (TUYA model).

This process is for the P-70 fingerprint lock. For the P-80 model, you can skip this section and refer to pages 9, 10, and 11 of the manual for relevant information.

Registering Fingerprints

1. Place your fingerprint on the biometric reader. The LED light will flash blue, and the padlock will open. While the padlock is in the open position, press and hold your fingerprint on the biometric reader for about 5 seconds. Keep holding until the LED light turns solid blue. Now, lock the padlock (you have approximately 5-6 seconds to lock the padlock after the LED light turns on). While the padlock is in the locked position, press different parts of your fingertip on the biometric reader (about 5 times). With each fingerprint press, the LED light will flash purple. Once enough fingerprint impressions are recorded, the padlock will unlock, and your fingerprint will be saved.
2. To add another fingerprint, the padlock must be unlocked with a currently registered fingerprint, then you can follow the fingerprint registration process again. Once 10 fingerprints are registered, if you attempt to register more, the LED light will flash red.

Correct way to register fingerprints

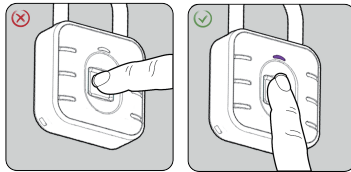

06

Delete All Saved Fingerprints


1. Press and hold a registered fingerprint on the fingerprint reader.
2. The LED indicator will change from blue to white, and then to red. Once the light turns red, release your finger. All registered fingerprints are now successfully deleted.

Troubleshooting


If your smart fingerprint lock fails to recognize fingerprints, refer to the fingerprint registration steps. Then try deleting all saved fingerprints and start again. If the issue persists, replace the button cell battery and try again.

OPERATION

Using a slotted screwdriver release the latch to open the battery cover

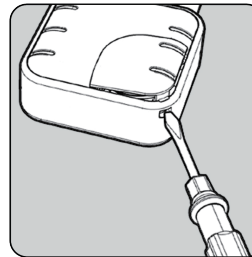

Place the button cell batteries in anode face up and cathode face down. Then replace the battery cover.

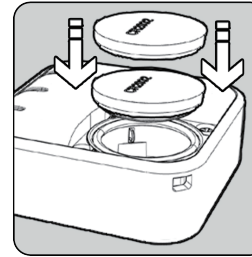

Note: Removing the batteries will not delete the saved fingerprints in the padlocks memory.

07

BATTERY DISPOSAL

CAUTION: Battery Safety and Disposal

Dispose of used batteries immediately. Keep new and used batteries away from children. If you suspect a battery has been swallowed or inserted into any part of the body, seek medical attention immediately. If the battery compartment cannot be securely closed, stop using the product and keep it away from children.

This product contains a battery and should not be treated as regular household waste. It must be recycled. Please take it to the nearest recycling facility or contact your local government for more information. Batteries contain substances that may be harmful to the environment and human health. Keep them out of reach of children. If accidentally swallowed, seek medical attention immediately.

Environmental Protection

Discarded electronic products should not be thrown away with household waste. Please recycle them at designated recycling facilities. For recycling guidance, consult your local government or retailers.



FEATURES

- Easy to use- your finger is the key!
- No keys, password or apps required
- Secure your luggage, gates, sheds, garages, lockers at gyms, schools & work Zinc alloy with stainless steel shackle
- Biometric fingerprint recognition
- Multi-user: 10 fingerprints memory (P-70 20 fingerprints)
- IP67 weatherproof
- LED light indicator
- Low battery warning
- Standby time: 12 months
- 2 x CR2032 batteries (included)

08

1. Thank you for choosing our smart padlock!

Before using the padlock, make sure to remove the plastic film from the battery cover to power the device.

2. Download the "Tuya Smart" App


Scan the QR code below to download the "Tuya Smart" app.

3. Enable Bluetooth on Your Phone

Open the app and log in. To grant the app access to Bluetooth, go to "Me", then tap the "Settings" icon in the top-right corner, and select "Privacy Settings".

4. Wake Up the Padlock


Press the "Fingerprint Recognition Area" on the padlock to wake it up. Then, click "Add Device" to add your padlock to the app.

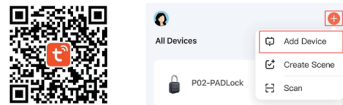

5. Unlock the Smart Padlock

On the main page of the smart padlock app, unlock the padlock by sliding the Key icon at the bottom from left to right until it reaches the Lock icon.



Attention: If the Bluetooth connection is lost, place your finger on the fingerprint area to wake up the smart padlock. Then, tap "Tap to connect"

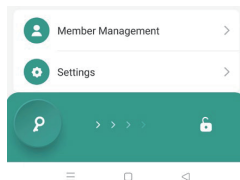

09

6. Add Fingerprints

To add a fingerprint, click "Member Management", then select "Me". Follow the app's instructions to place your finger on the fingerprint reading area five times to register the fingerprint.

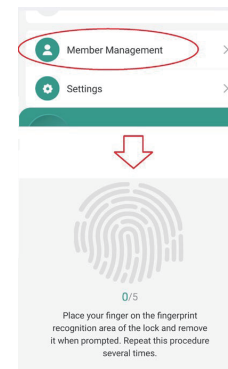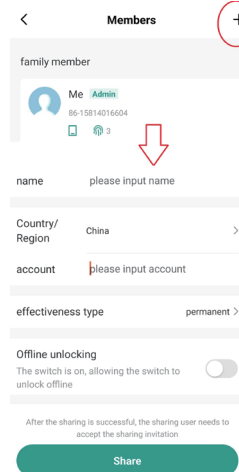

7. Share Unlock Permissions


To set up temporary unlocking sharing, click "Temporary", then tap the "+" icon in the upper right corner. Click "Share" to share access with visitors.

Attention: Ensure the visitor's account is registered in the same app and the account information is correct.

10

8. Resetting the Smart Padlock

To reset the padlock, click the edit icon in the top right corner of the main page. Select "Remove the device", then click "Disconnect and wipe data" to reset. Attention: Make sure the smart padlock is connected before attempting to wipe all data. If the padlock is not connected, you can only remove it without wiping data. If data is not deleted, all registered fingerprints can still unlock the smart padlock.

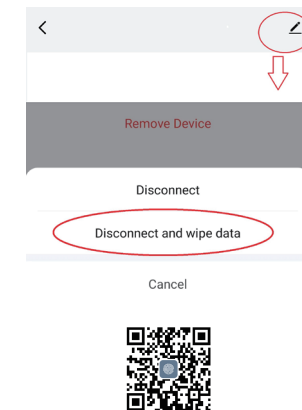

Scan the code for detailed User Manual



11