


Cross-vendor AP status-LED master comparison

Find the vendor, read its lights at a glance. The same color means opposite things across vendors, so there is no universal "green = good" key. Undocumented states are marked honestly, never guessed. Companion sheet to the interactive LED Decoder.

LED COLOR (AS IT REALLY LOOKS)													
Green	Amber / yellow	Red	Blue	White	Magenta	Purple							
PATTERN													
Filled = solid	Haloed = flashing / blink												
HONEST MARKERS (NO GUESSED COLOR)													
Not documented - confirm on a lab AP	No distinct signal, by design	Blinks the existing LED (no set color)	No such signal on this hardware										
VENDOR / LINE		BOOTING	NO UPLINK / NO CONTROLLER	HEALTHY (OPERATIONAL)	FIRMWARE UPGRADING	FAULT (ERROR)	LOCATE (BLINK-TO-FIND)	FACTORY RESET					
Cisco Catalyst IOS-XE / controller		Boot G-R-off seq	Joining ctrl (G-R-B)	Up · blue = clients	Image download	Integrity / PoE	Flashes the LED	Blue → red clears					
Cisco Meraki MR cloud-managed		Rainbow / orange	No cloud	Up · blue = clients	Upgrading	HW fault	Flashes the LED	Reads as reboot					
Juniper Mist cloud-managed		Boot (R, then G/Y)	Joining · Y = codes	Configured · blue = clients	Upgrading	AP failed	Locate (green+purple)	White → red					
Aruba Campus AOS / Instant		Boot (1s blink)	No unadopted color	Ready · amber = low PoE	<i>Not documented</i>	System error	All LEDs blink green	Reset, reboots					
Aruba Instant On SMB cloud		Boot	Onboard (run app)	Connected	Upgrading (= boot)	Attention / issue	<i>Not documented</i>	Reads as reboot					
Extreme IQ Engine ExtremeCloud IQ · CAPWAP		Boot / no cloud	No CAPWAP	Cloud ready	Upgrading (fast)	Amber is the fault	<i>Not documented</i>	<i>Not documented</i>					
Extreme WiNG legacy controller		Boot / taken over	Adopting (slow)	Adopted	Upgrading	<i>Not documented</i>	Fading-white find	<i>Not documented</i>					
Ubiquiti UniFi controller / cloud		Boot flash	Needs adoption (act)	Adopted, normal	Upgrading (W+B)	Uplink loss	Rapid blue	Reset done					
Ruckus indoor R/H · 2 LEDs		Boot red → amber	Searching ctrl	green = clients · amber = none	Config / image push	<i>Not documented</i>	<i>Not documented</i>	Default, CONFIGURE.ME					
Netgear Orbi consumer mesh CONSUMER		Boot pulse	Ready to sync	Good · amber = fair	Update pulse	No backhaul / internet	<i>No such signal</i>	Reset = update pulse					
Amazon Eero consumer mesh CONSUMER		Boot blink	Set up in app	Operational	<i>Not documented</i>	No internet (WAN)	<i>No such signal</i>	Reset blink					
MikroTik RouterOS		No standardized status-LED scheme. RouterOS LEDs are user-configurable (/system leds) and cAP ax defaults to dark mode. Behavior is model- and config-dependent - read the specific product manual. A color legend here would fabricate meaning, so none is shown.											


THE REASON THIS REFERENCE EXISTS

One light, **many meanings**. A universal LED key is impossible.

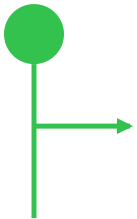


SOLID GREEN

Meraki: up, but **no clients**
Ruckus: up, **clients present** (opposite)
Mist: cloud-configured · **Aruba:** ready

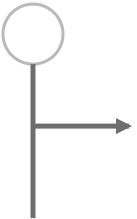

SOLID WHITE

UniFi: **needs adoption** (do something)
Extreme IQ: healthy on cloud (do nothing)
Eero: healthy · **Orbi:** ready to sync

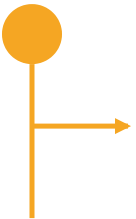

AMBER / ORANGE

Meraki: no cloud, or hardware fault
Extreme IQ: normal boot **and** its only fault cue
Aruba: restricted PoE · **Ruckus:** no clients