

Cockpit安装和使用

一、Cockpit安装

1、解压右下角压缩包，右键以管理员方式运行安装,安装路径默认C盘即可。

 NxpNfcCockpit_08.01.00.exe	2024/6/27 15:57	应用程序	10,683 KB
 UG10025.pdf	2024/6/27 15:58	WPS PDF 文档	12,760 KB



NxpNfcCockpit_v08.01.00.zip

Cockpit安装和使用

二、开启DUT设备权限-1

在路径

“C:\nxp\NxpNfcCockpit_v8.1.0.0\firmware\Secondary_Pn722x\Android”
点击 PN722x_UcBalAndroid_LogEnabled.bat




Cockpit安装和使用

二、开启DUT设备权限-2

在弹出的cmd窗口中输入以下指令

Pnscr ture

如红框所示即代表8059端口开启，开启权限

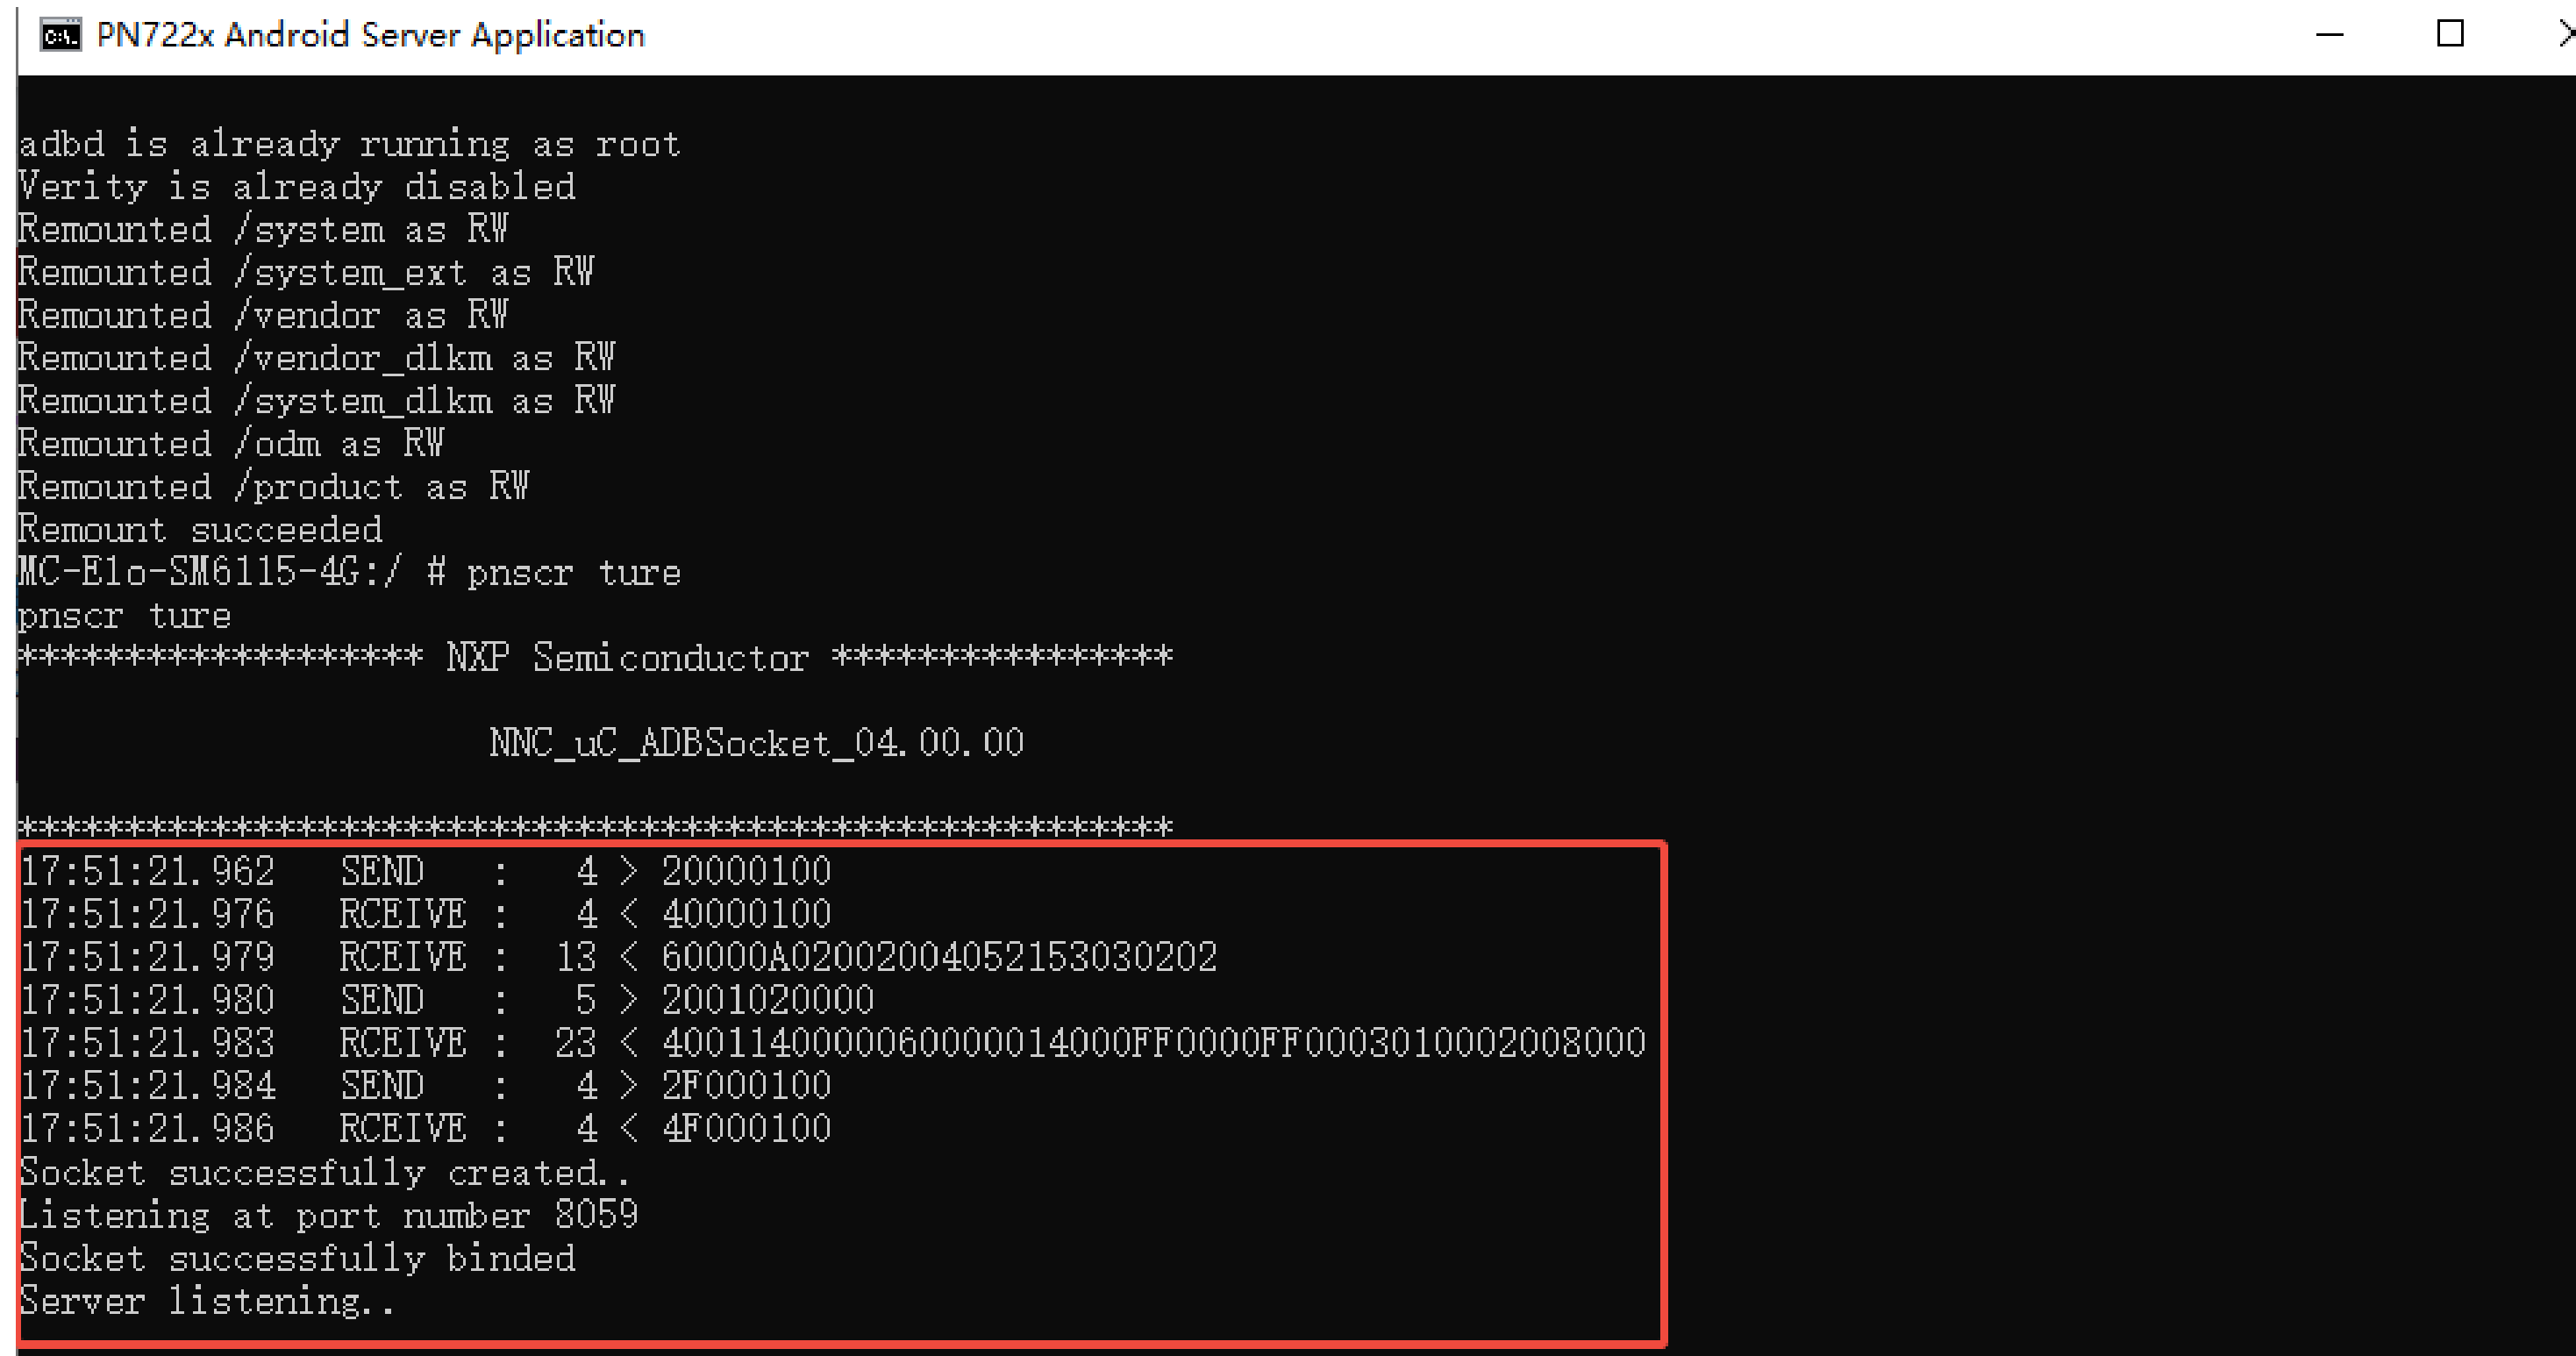

```
PN722x Android Server Application
adb is already running as root
Verity is already disabled
Remounted /system as RW
Remounted /system_ext as RW
Remounted /vendor as RW
Remounted /vendor_dlkm as RW
Remounted /system_dlkm as RW
Remounted /odm as RW
Remounted /product as RW
Remount succeeded
MC-E10-SM6115-4G:/ # pnscr ture
pnscr ture
***** NXP Semiconductor *****


      NNC_uC_ADBSocket_04.00.00

*****
17:51:21.962  SEND   :  4 > 20000100
17:51:21.976  RCEIVE  :  4 < 40000100
17:51:21.979  RCEIVE  : 13 < 60000A02002004052153030202
17:51:21.980  SEND   :  5 > 2001020000
17:51:21.983  RCEIVE  : 23 < 40011400000600000014000FF0000FF0003010002008000
17:51:21.984  SEND   :  4 > 2F000100
17:51:21.986  RCEIVE  :  4 < 4F000100
Socket successfully created..
Listening at port number 8059
Socket successfully binded
Server listening..
```


Cockpit安装和使用

三、打开Cockpit


- 1、打开Cockpit，如下图所示，电脑已和DUT设备连接成功；
- 2、点击红色箭头所示的“RF Field On”。

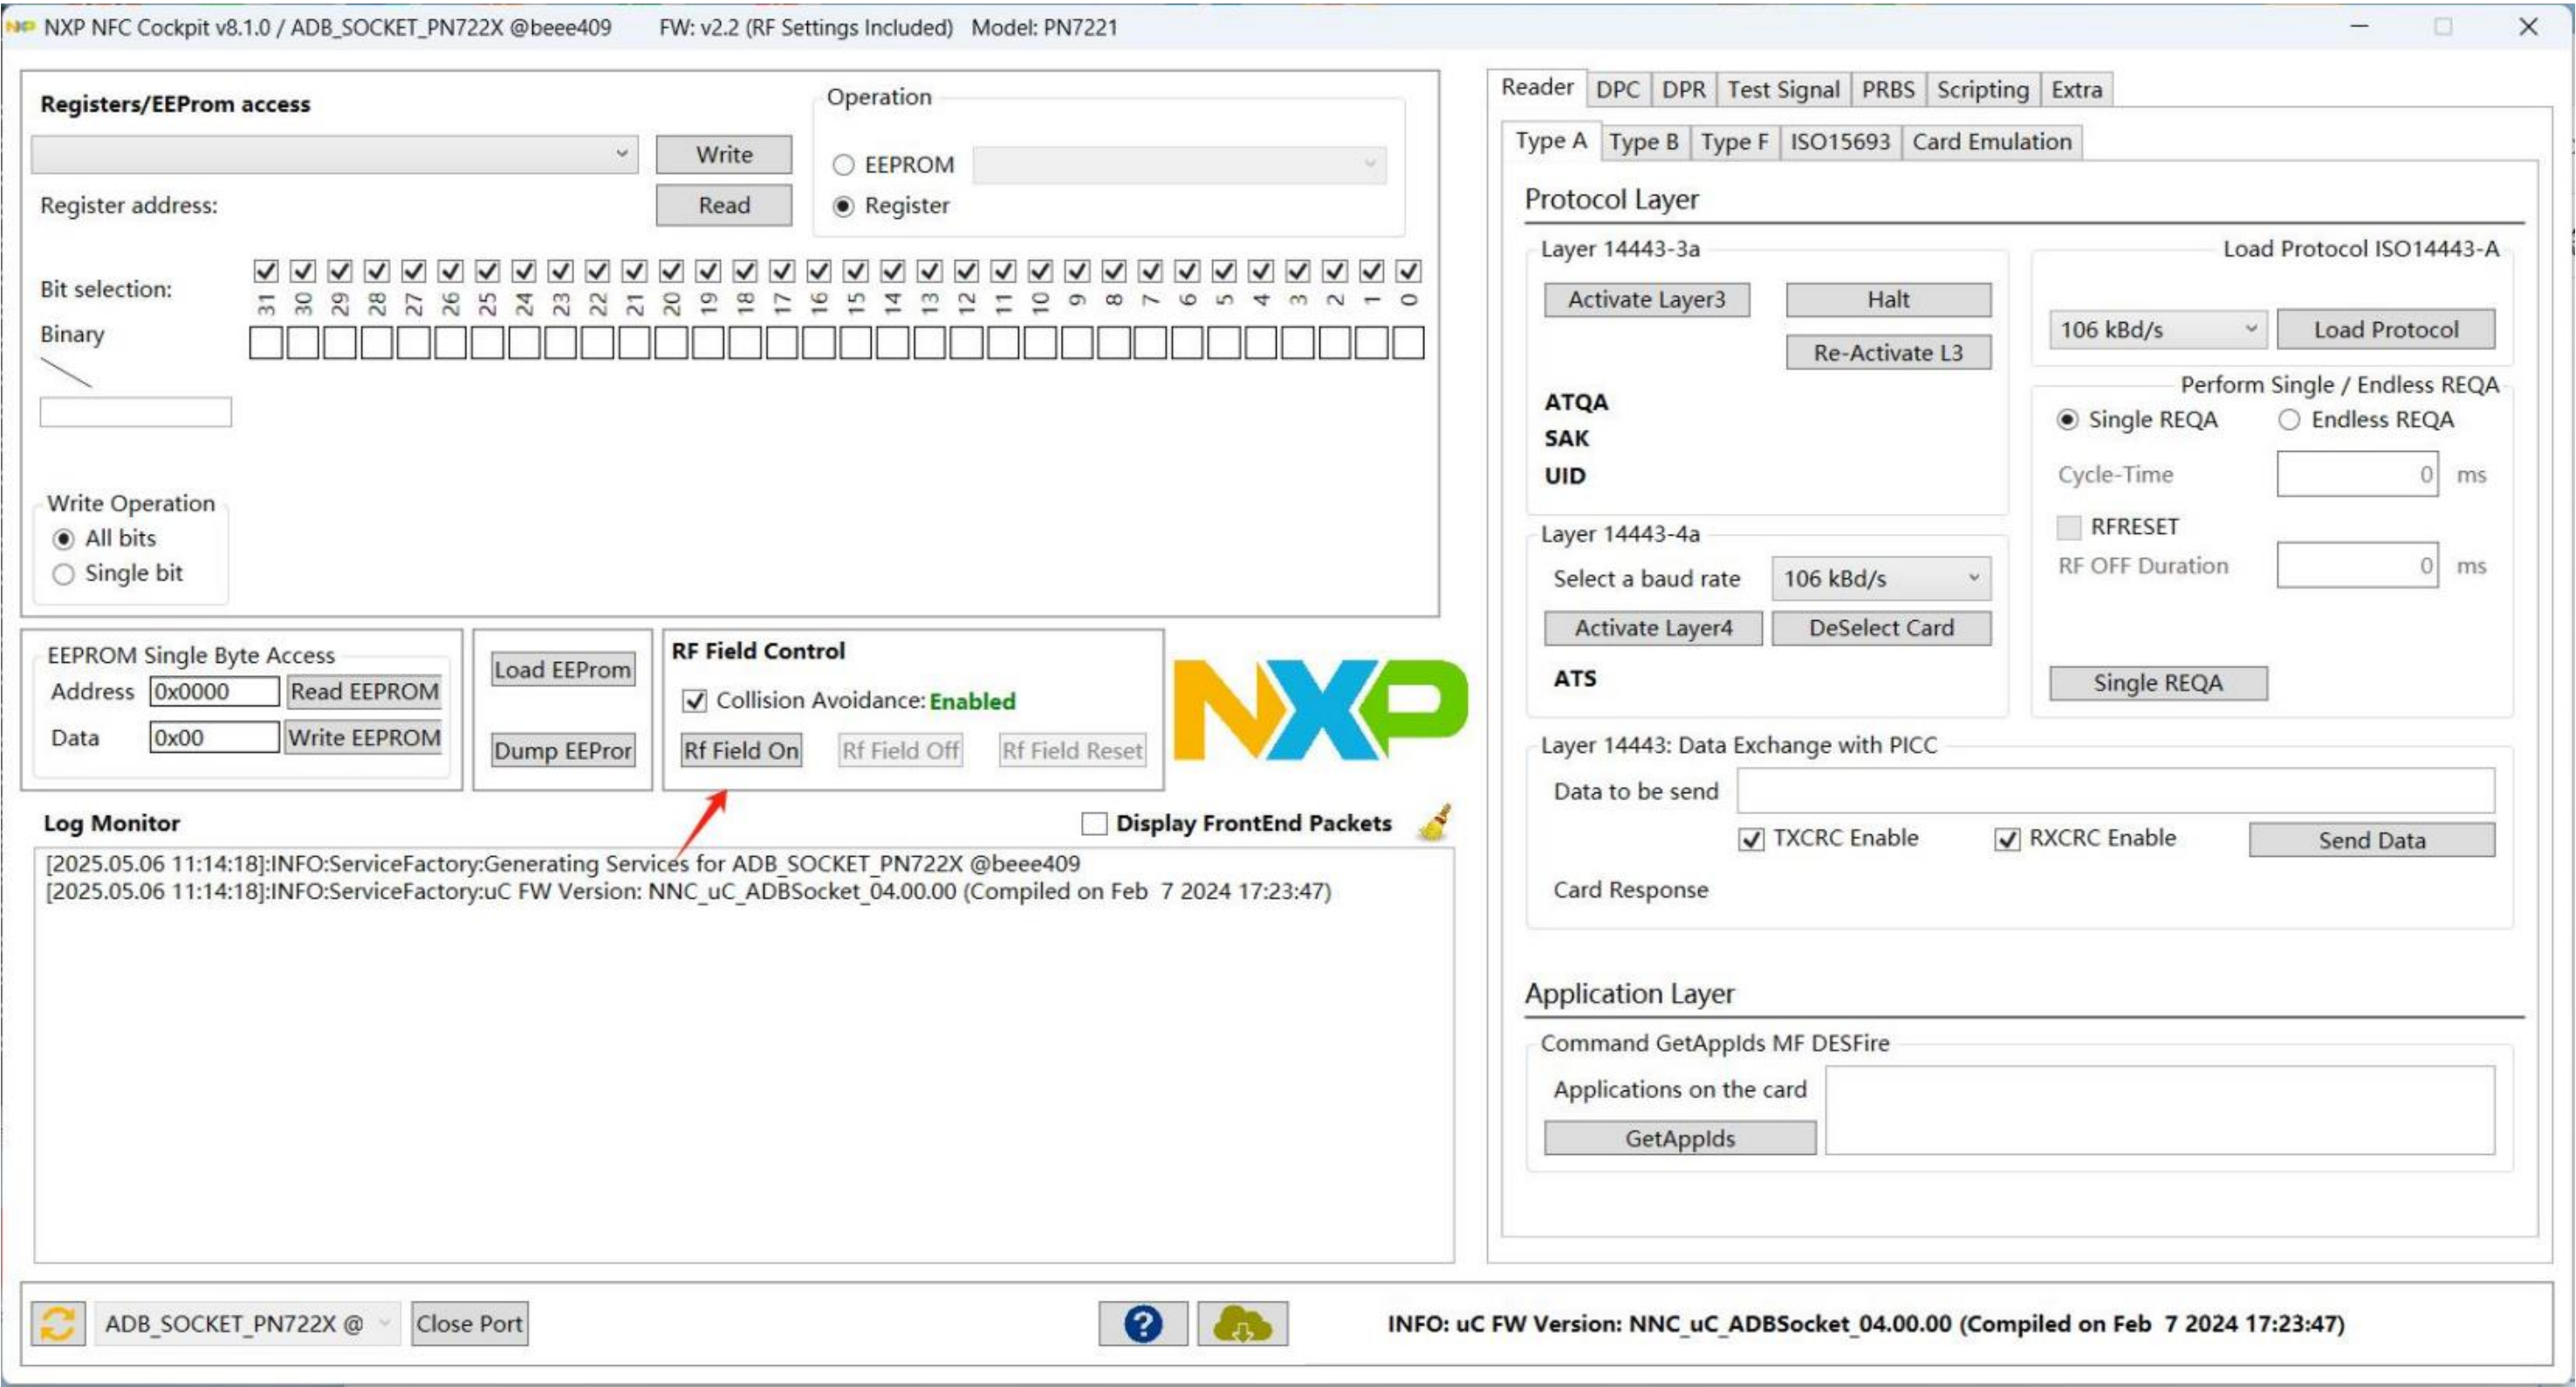

Cockpit安装和使用

四、电压设置-1


- 1、在图形界面右边点击“DPC”一栏；
- 2、点击红色箭头所示的“Start Calibration”；
- 3、DPC一定要关闭，可以尝试一下DPC先enable再disable，然后调电压。

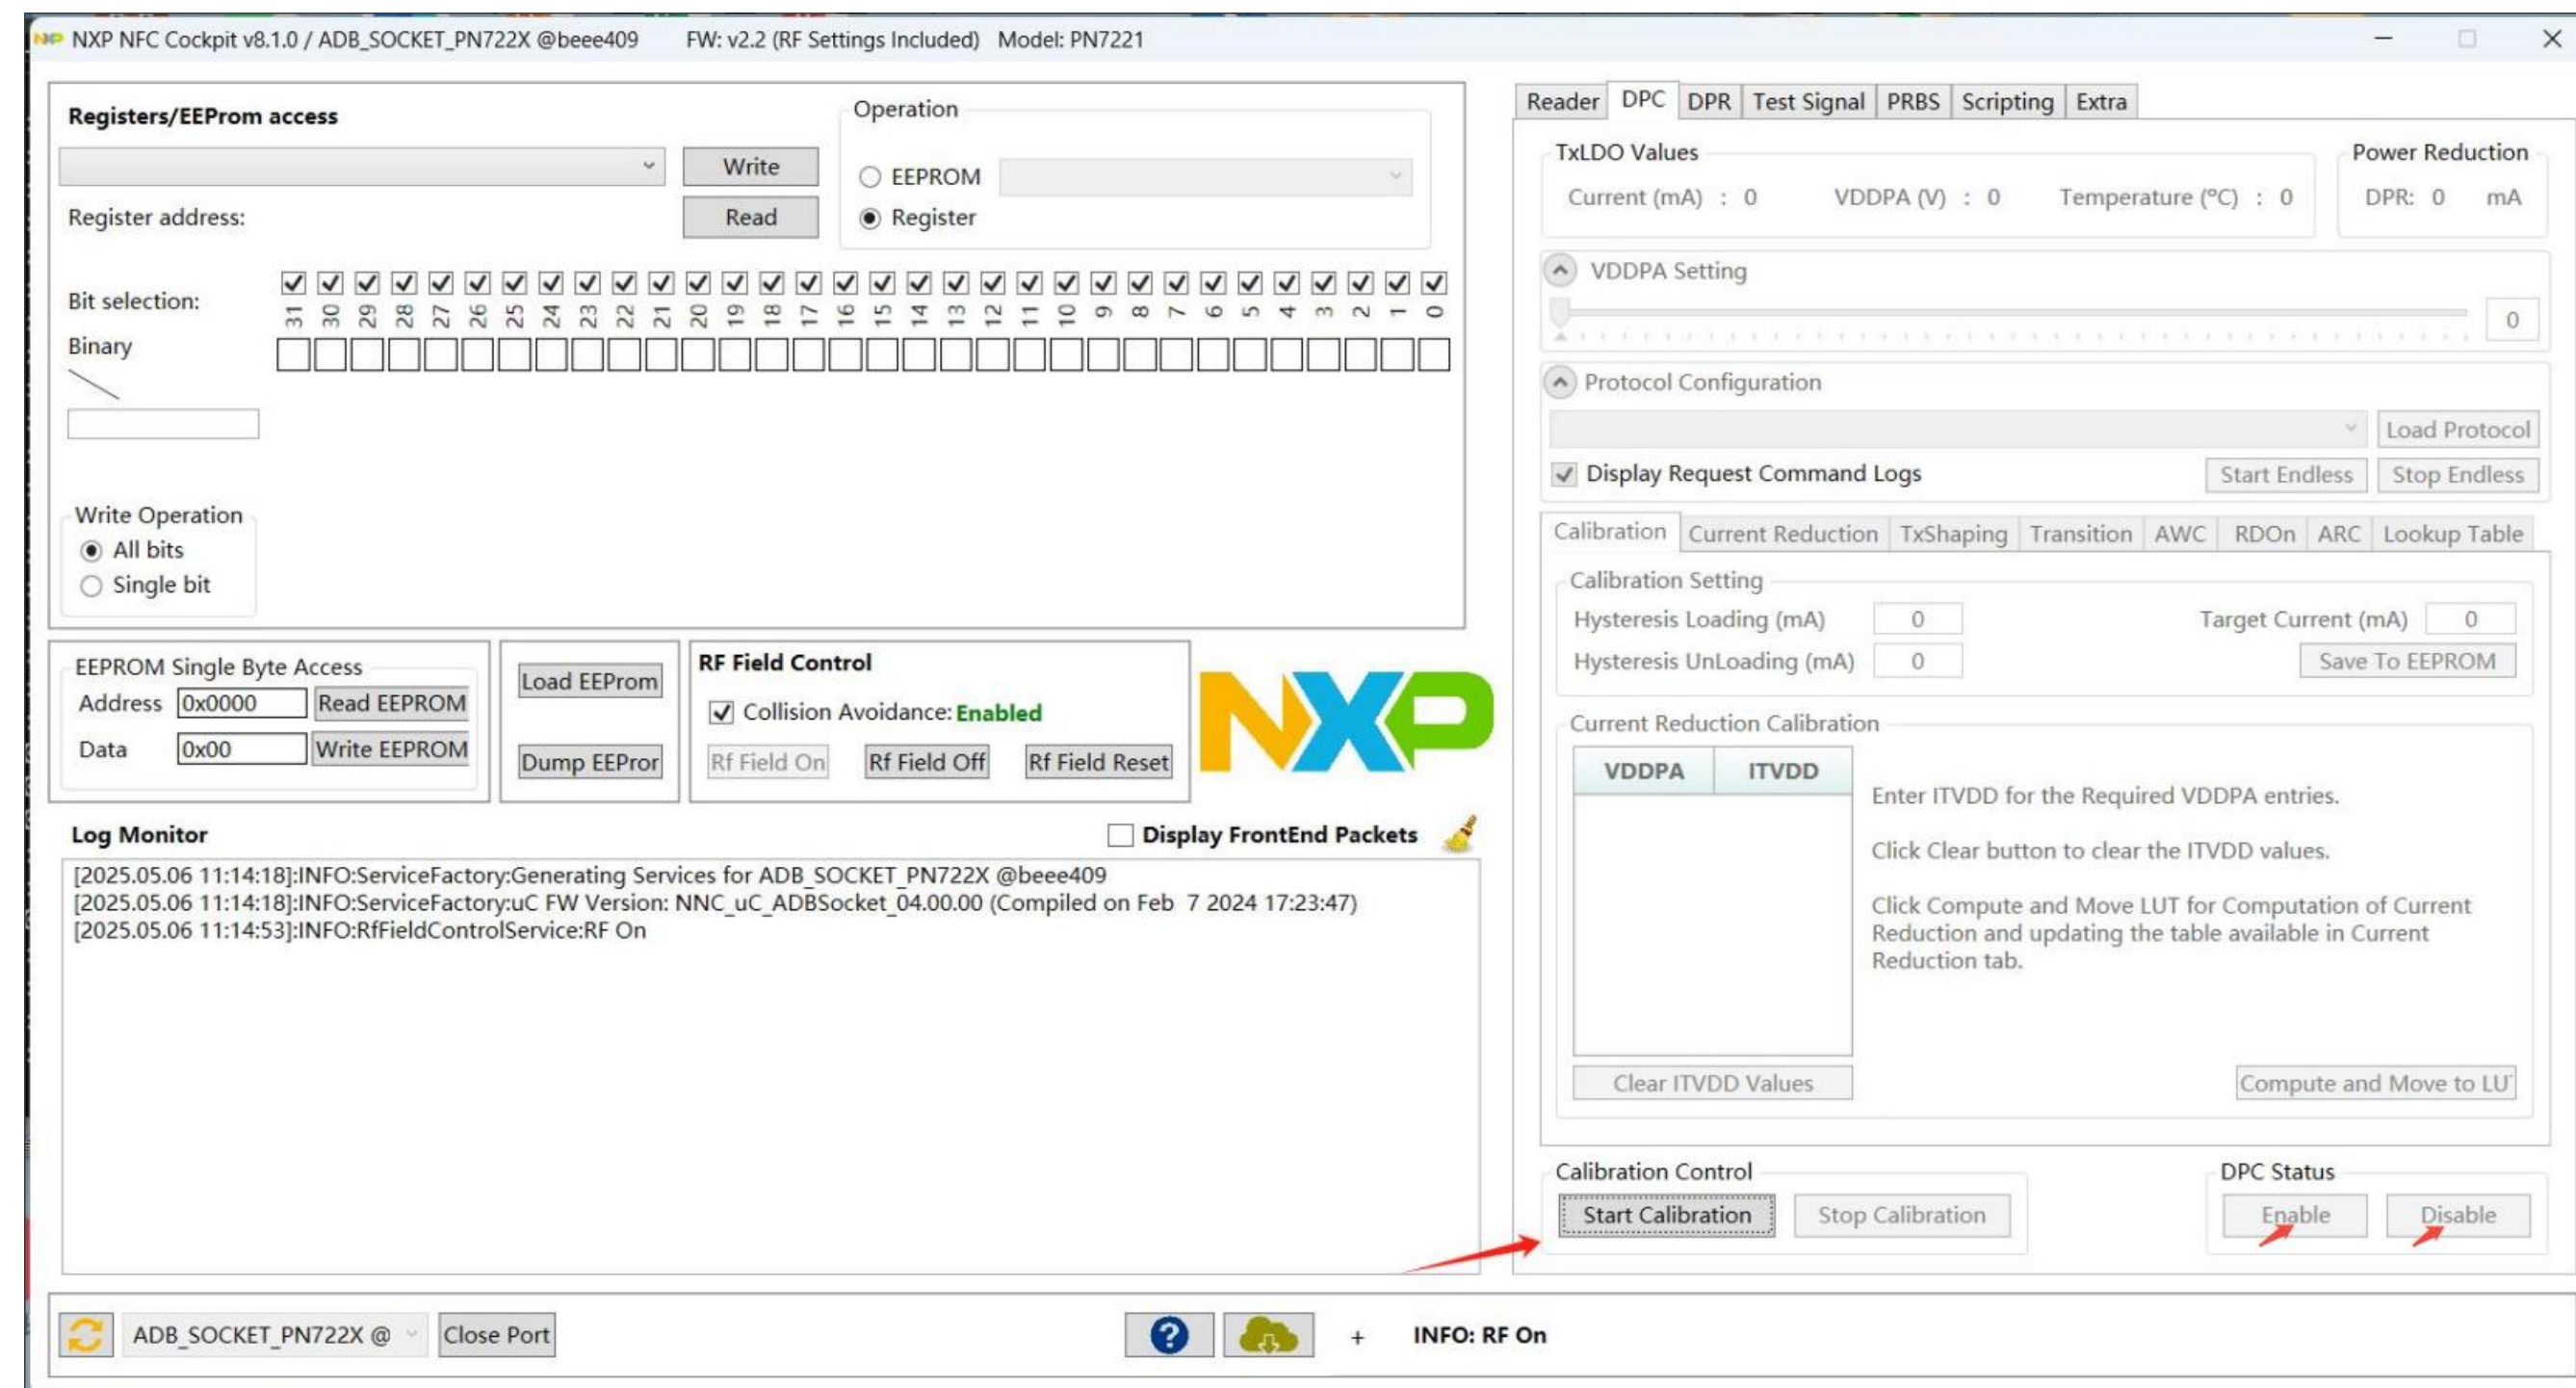

Cockpit安装和使用

四、电压设置-2

- 1、在“VDDPA Setting” 的滑条出，可以设置电压；
- 2、如下图，当前电压设置为5V， TxLDO电压为5V(通常电压支持1.5~5.7V)， 电流为284mA。

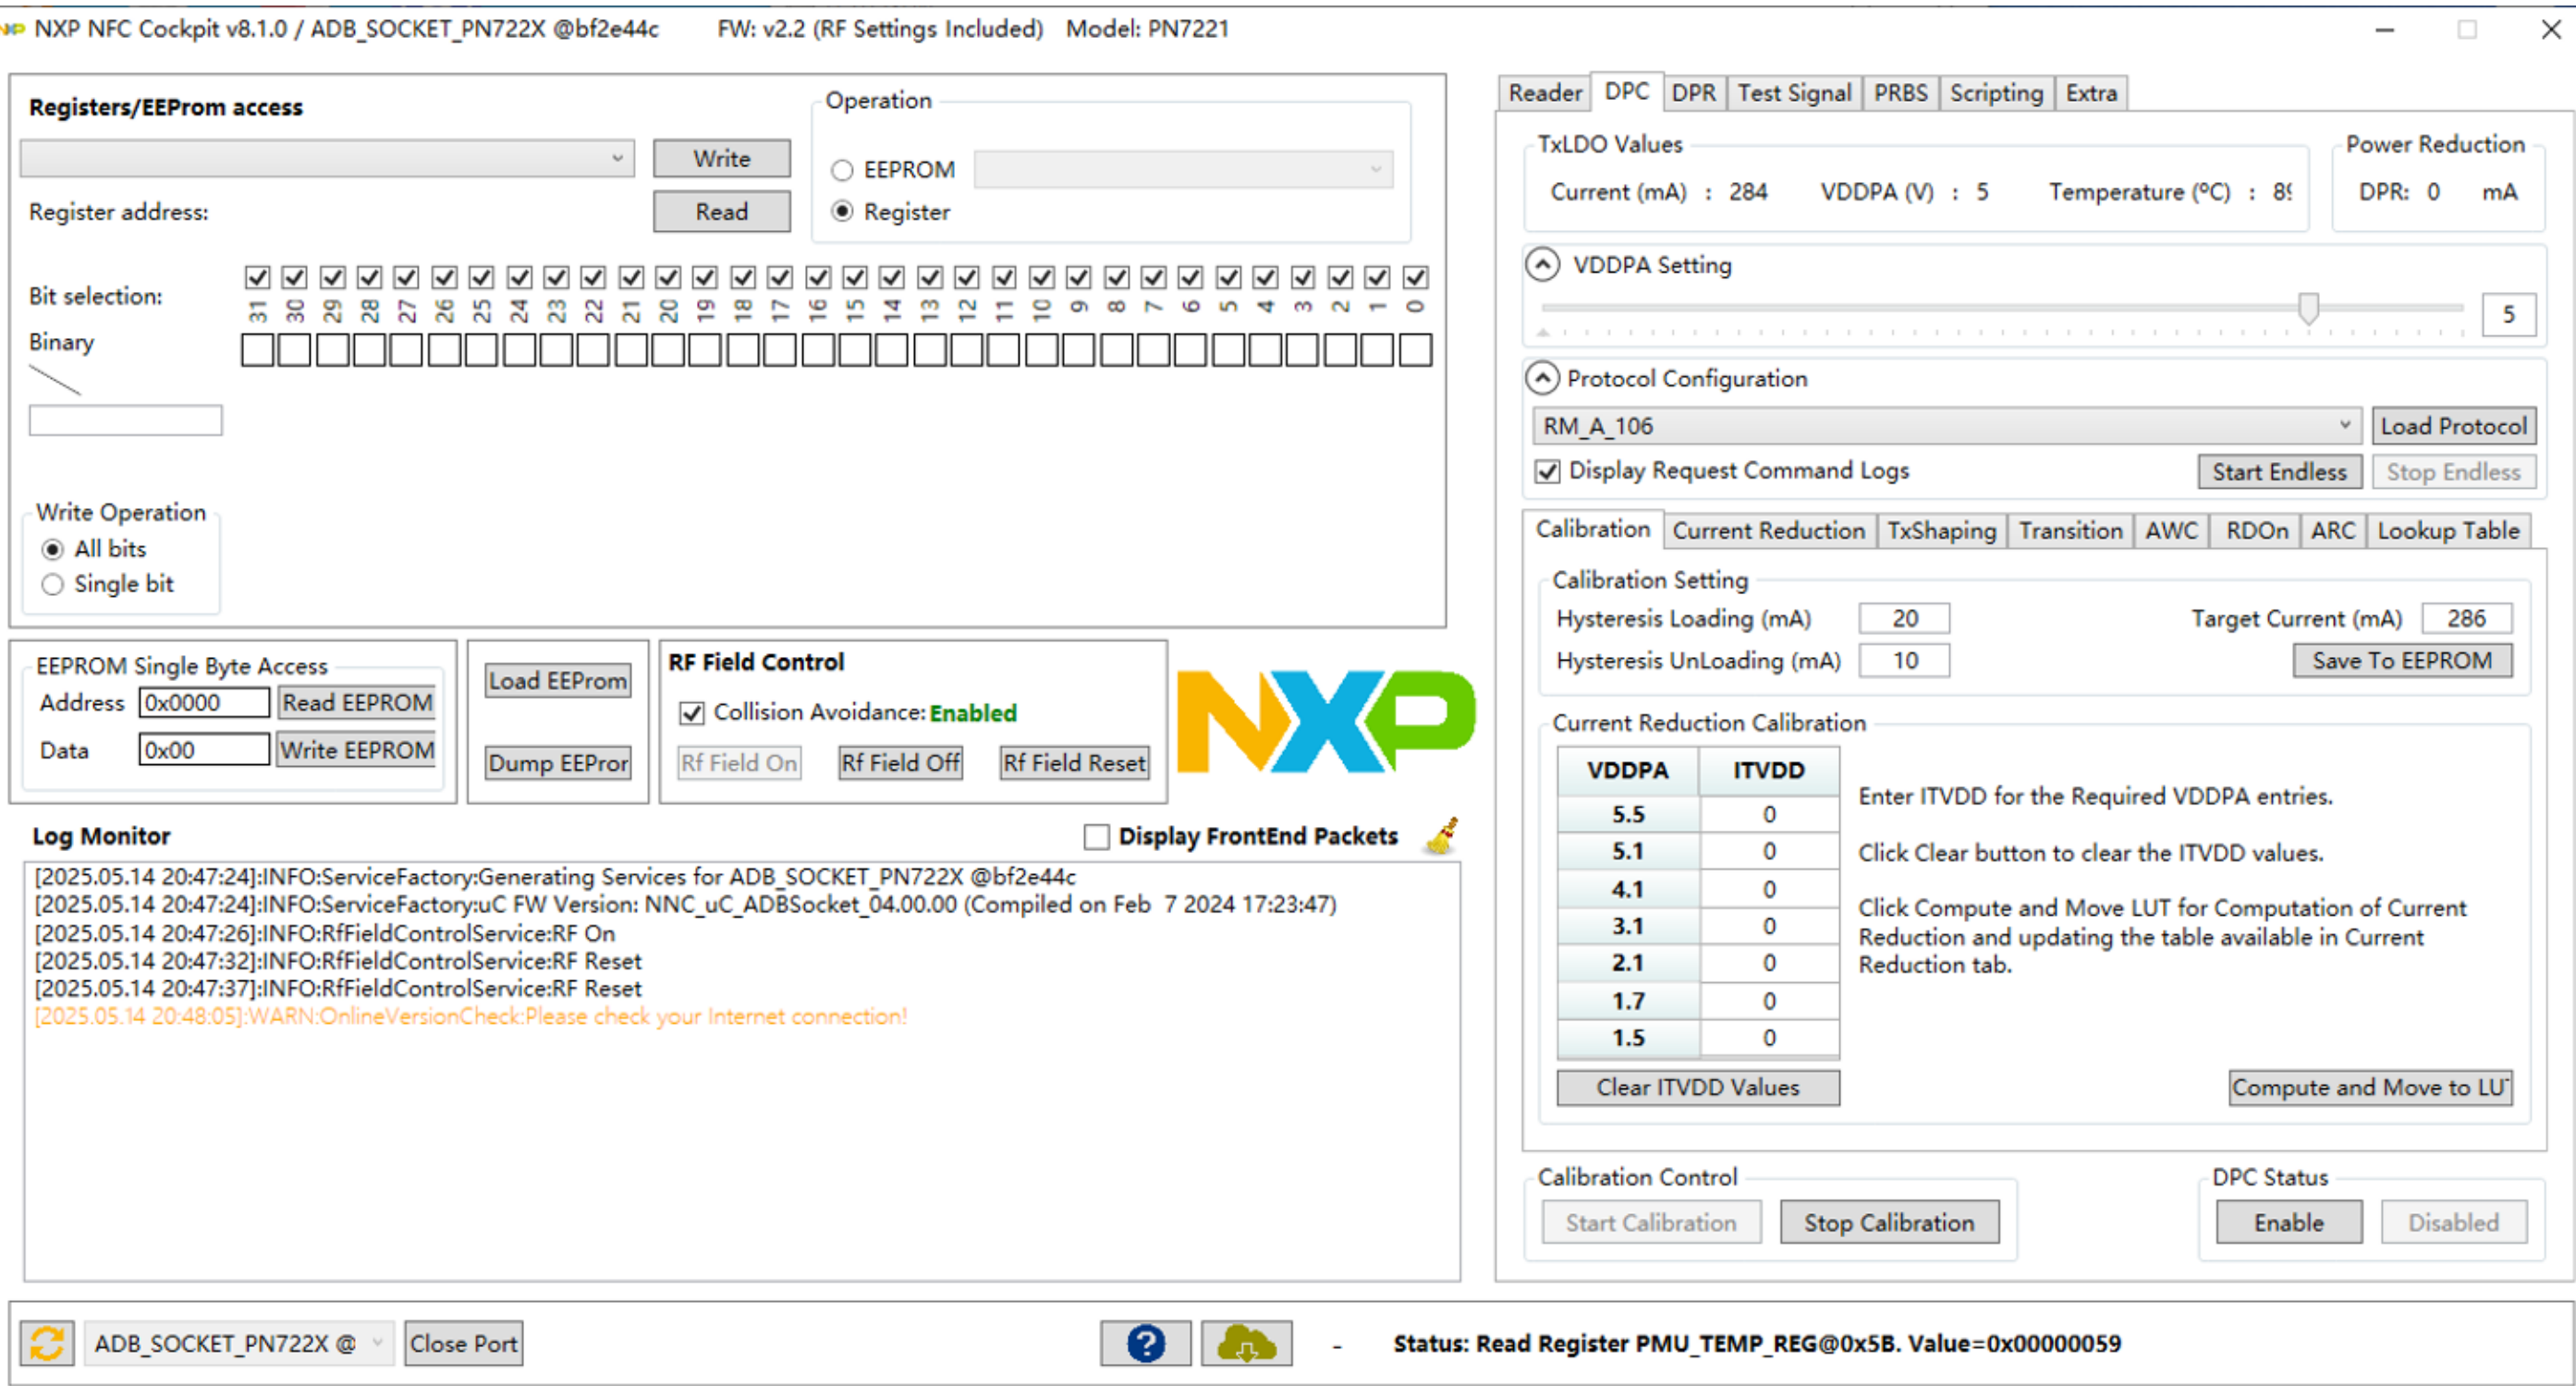

Thank you!

Copyright©2015 FORGE Precision components CO.,LTD. All Rights Reserved.

The information in this document may contain predictive statements including, without limitation, statements regarding the future financial and operating results, future product portfolio, new technology, etc. There are a number of factors that could cause actual results and developments to differ materially from those expressed or implied in the predictive statements. Therefore, such information is provided for reference purpose only and constitutes neither an offer nor an acceptance. FORGE may change the information at any time without notice.