
WAY4TECH SOLUTIONS

Live demo
fuelstation-demo.way4tech.com
w4demo / Demo2026 · Odoo 19, Community

COMPLETE GUIDE · THE TRADE, SETUP AND EVERY SCREEN

Petrol Pump Management for Odoo 19

A filling station run in Odoo: tank dips, nozzle meters, shift reconciliation to the penny, tanker deliveries corrected for temperature, wet stock variance, fleet accounts on monthly statements and the forecourt shop. Every screen and every step, shown on a live demo. No Odoo background needed.

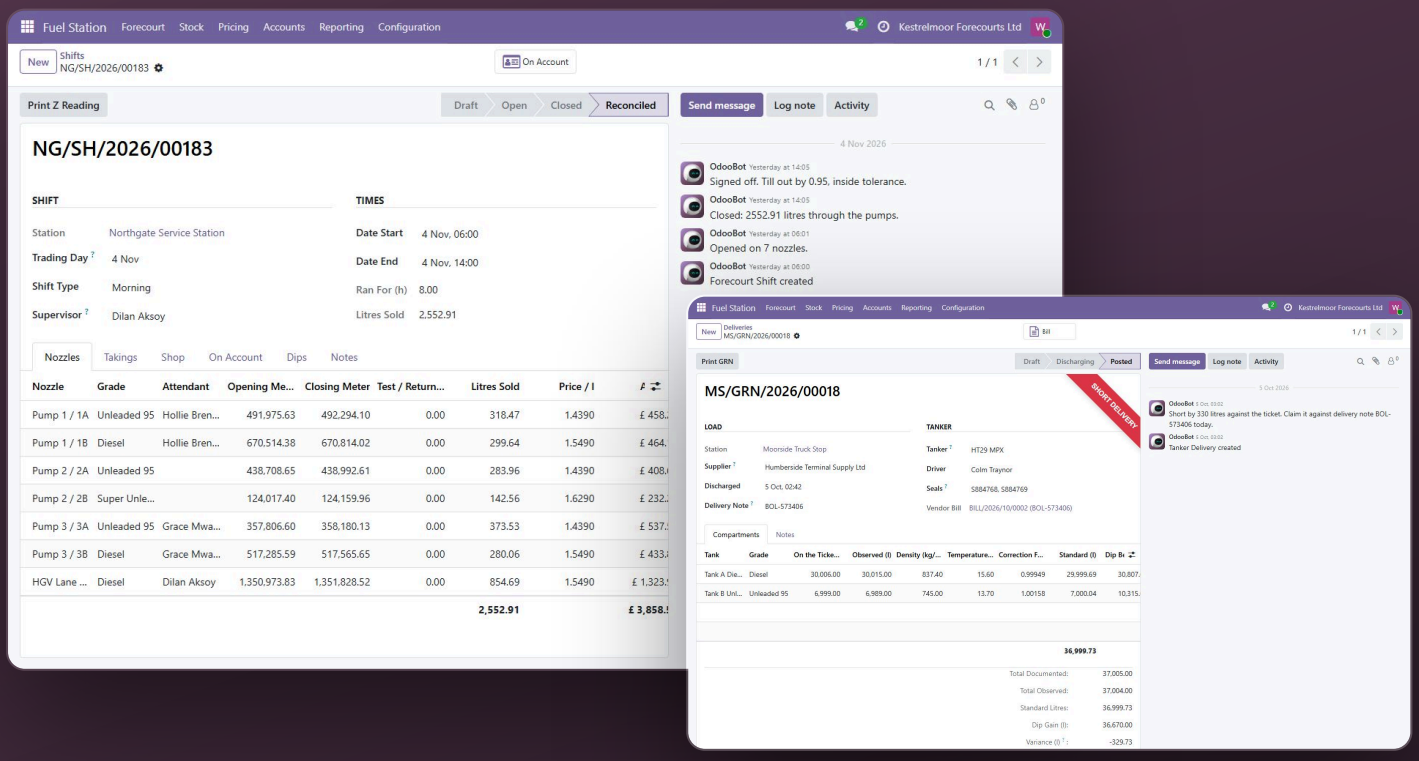

START

About this guide

A filling station sells a product nobody can see. It arrives in a tanker, sits underground and leaves through a meter, and the only way to know whether it all turned into money is to measure it at every step and compare. This guide shows how the Petrol Pump Management module does that in Odoo, one screen at a time. You do not need to have used Odoo before.

Who it is for

The owner or area manager setting a site up, the shift supervisor who opens, closes and counts the till, the person who signs for the tanker, and anyone being shown the system for the first time.

How to read it

Front to back the first time. Each part opens with what you will learn and a short thing to try on the live demo, then walks every field and every button.

The live demo

Kestrelmoor Forecourts Ltd, an invented operator in West Yorkshire with a town site on two shifts a day and a motorway truck stop on one daily shift, three months of trading, tanker deliveries, fleet accounts and a forecourt shop. Open it and follow along.

HOW IT WORKS

The demo forecourt

Address	**fuelstation-demo.way4tech.com**
Sign in	**w4demo** / **Demo2026**
Operator	Kestrelmoor Forecourts Ltd · Northgate Service Station (town, two shifts) and Moorside Truck Stop (motorway, one daily shift)
Currency	Pounds sterling, VAT 20%, fuel duty 52.95p a litre
Runs on	Odoo 19, Community edition, with Inventory and Invoicing

Every company, person, plate and number on the demo is invented. The demo is shared and is reset from time to time, so anything you change may be changed back or seen by the next person.

What is in the guide

PART 1	How a forecourt is run	PART 2	Signing in and setting up a site
PART 3	Pump prices and margin	PART 4	Tanks and dip readings
PART 5	Running a shift	PART 6	Counting the till and signing off
PART 7	Tanker deliveries	PART 8	Wet stock variance
PART 9	Fleet and credit accounts	PART 10	The forecourt shop
PART 11	Reporting	PART 12	Scheduled jobs, roles and limits
PART 13	A fifteen minute walk-through	PART 14	The menu map

PART 1 How a forecourt is run

Fuel margins are a few pence a litre, so a site that loses half a per cent of its throughput can lose its whole profit without anyone noticing. Everything in the module exists to catch that. This part is the trade in five minutes, so the screens make sense.

IN THIS PART YOU WILL LEARN

- Book stock against dipped stock, and why both are kept
- What the meters, the test litres and the till have to agree on
- Why a tanker delivery is corrected for temperature
- How a pump price splits into duty, VAT, cost and margin
- What a fleet account is and why it is billed once a month


Two numbers for every tank

Every underground tank has a **book stock**: what should be in it, worked out as deliveries in less metered sales out. It also has a **dip**: what a stick or a probe says is actually there. The gap between the two is the wet stock variance. A few litres either way is temperature and evaporation. A gap that keeps growing in one direction is a meter running fast, a short delivery, a leak, water, or fuel walking off the site. Oil companies and regulators expect the gap to be measured and explained, period by period, and around half a per cent of throughput is the usual line.

Meters, test litres and the till

Each nozzle has a totaliser that only counts up. The difference between the reading at the start and the end of a shift is what went through it. Some of that is **test litres**: fuel drawn into a calibrated measure to prove the meter and poured back. The rest was sold, and the money for it has to turn up as cash, card, wallet, voucher, fleet card or fuel on a customer's account. What is left after everything except cash is taken off is the cash that should be in the drawer. The difference against the count is the shift's **over or short**.

Where the litres go

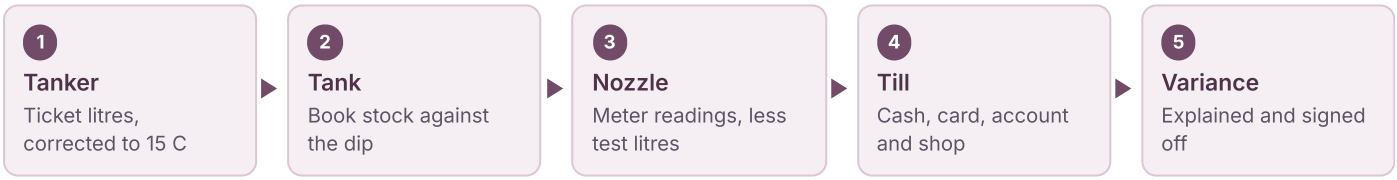

Why deliveries are corrected for temperature

Fuel expands when it is warm. A tanker loaded on a cold terminal and discharged on a warm afternoon shows more litres than were paid for, and the opposite in winter. Terminals bill in **standard litres** at 15 C, so the site has to bring the observed litres back to the same basis before booking them in. The module does it with the density off the loading ticket and the product temperature at discharge, using the ASTM table 54B coefficients for petrol and diesel.

The price on the board

The pump price includes everything. Inside it is VAT, a flat duty per litre, the landed cost of the fuel, and what is left, which is the margin. Duty is a fixed amount per litre and moves only when the government changes it; VAT is a percentage charged on top of the price including duty. That is why a small change in the wholesale price can wipe out the margin while the board hardly moves.

On a 1.529 litre of diesel	Worked out as	Per litre
Pump price	What the customer pays	1.5290
VAT at 20%	Price less price divided by 1.2	0.2548
Net of VAT	1.5290 / 1.2	1.2742

Fuel duty	Flat amount	0.5295
Net of duty	Net of VAT less duty	0.7447
Landed cost	From the last delivery	0.6510
Margin	Net of duty less cost	0.0937

Fleet and credit customers

Hauliers, coach firms, taxi operators and councils fuel on account. Their drivers sign a docket at the till, the fuel is taken off the shift's expected cash, and the account is billed once a month on one statement. Each vehicle is allowed one grade, a tank size and usually a monthly cap, so a fill that could not have gone into that vehicle is refused at the till.

PART 2 Signing in and setting up a site


Before a shift can run, the site needs its tanks, its pumps, which tank each nozzle draws from, and the people on the forecourt. This part walks the configuration in the order you would build it.

IN THIS PART YOU WILL LEARN

- Signing in and finding the Fuel Station app
- The company settings and what each one changes
- A site, its licence and the shift pattern
- Pumps, nozzles and the one field that must be right
- Attendants, logins and the three roles

TRY IT YOURSELF ON THE DEMO


1. Open Configuration, Sites, Northgate Service Station and read the three tabs
2. Open Configuration, Pumps and find the pump in red
3. Open an attendant and press On the Forecourt Now?

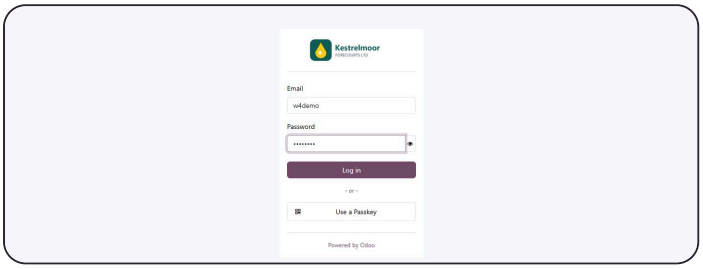

1

Sign in


Open the demo address and sign in with w4demo and Demo2026. On your own database use your own login; the module adds no separate sign in.

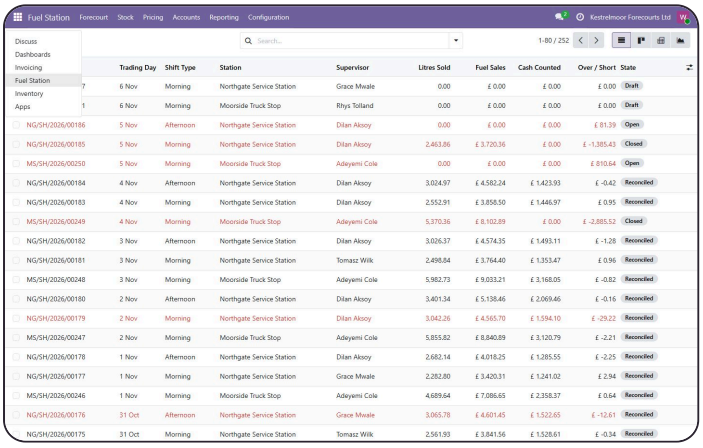

2

Open the Fuel Station app

The app sits on the home screen with your other Odoo apps. Everything in this guide is inside it.

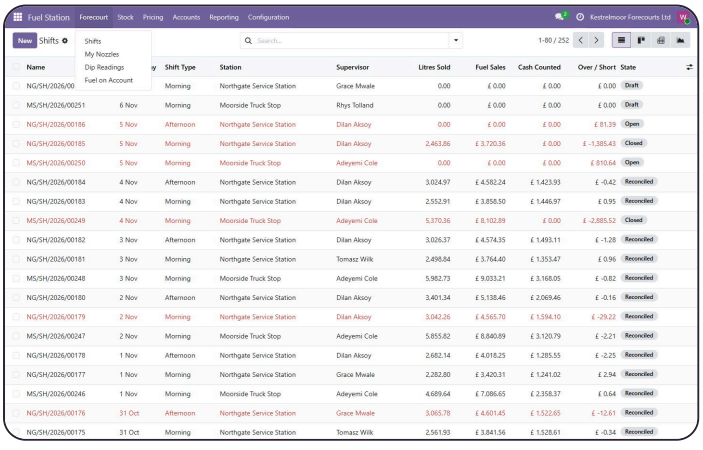

3


Find your way round

The top menu has Forecourt (the shift work), Stock (tanks, deliveries, wet stock and the shop), Pricing, Accounts, Reporting and Configuration. Which of them you see depends on your role.

An attendant sees only Forecourt, and inside it only their own nozzles and dips.

Company settings


Settings live under Configuration, Settings, in the Fuel Station block, and need the Odoo settings right. They apply to every site in the company.

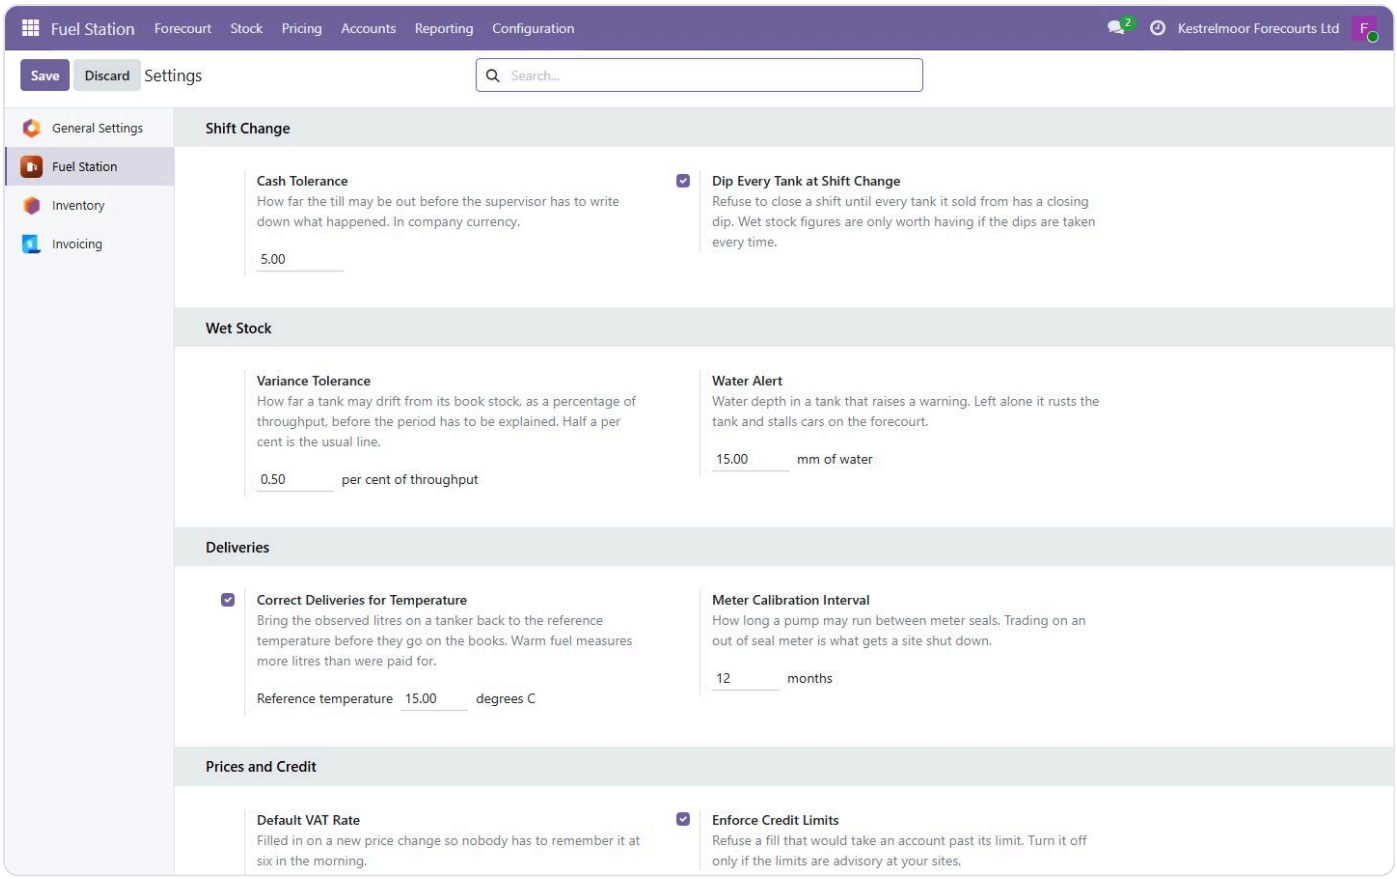

Fuel Station settings: shift change, wet stock, deliveries, prices and credit.

Setting	Default	What it does
Cash Tolerance	5.00	How far the till may be out before the supervisor has to write down why.
Dip Every Tank at Shift Change	On	A shift cannot close until every tank it sold from has a closing dip.
Variance Tolerance	0.5%	How far a tank may drift from book stock, as a share of throughput, before a cause is required.
Water Alert	15 mm	Water deeper than this lights the tank red and feeds the water job.
Correct Deliveries for Temperature	On, 15 C	Bring observed tanker litres back to the reference temperature.
Meter Calibration Interval	12 months	How long a pump may run between meter seals before it shows overdue.
Default VAT Rate	20%	Filled in on every new price change.
Enforce Credit Limits	On	Refuse a fill that would take an account past its limit.
Statement Day	1	Day of the month the monthly statements are raised by the scheduled job.


The site

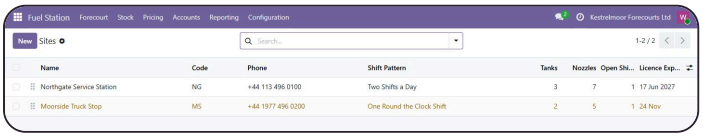

4

Configuration, Sites


One line per filling station, with its code, licence expiry and the number of tanks, nozzles and open shifts. A licence past its date shows in red.

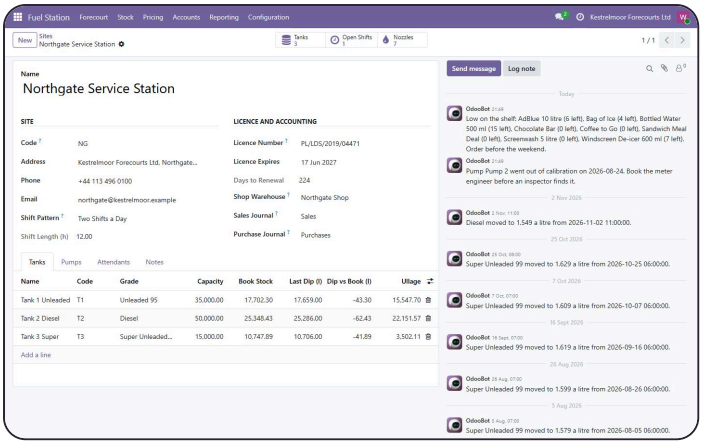

5 Open a site


The code prefixes every shift, delivery and fill number, so NG/SH/2026/... is a Northgate shift. Fill in the petroleum storage licence and its expiry; Days to Renewal counts down from it. Pick the Shop Warehouse that holds the forecourt shop stock, the Sales Journal used for credit statements and the Purchase Journal used for tanker bills.

The Shift Pattern sets how long a shift may stay open before the shifts left open job chases it: 12 hours for two shifts, 8 for three, 24 for one.

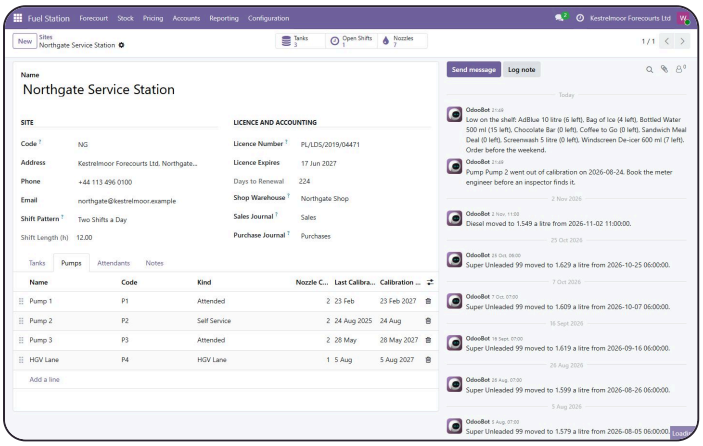


6 The Tanks and Pumps tabs

Tanks and pumps can be added straight from the site. Each pump has a kind: Attended pumps must have a named attendant on every shift, Self Service pumps do not, and an HGV Lane is a high flow diesel lane.

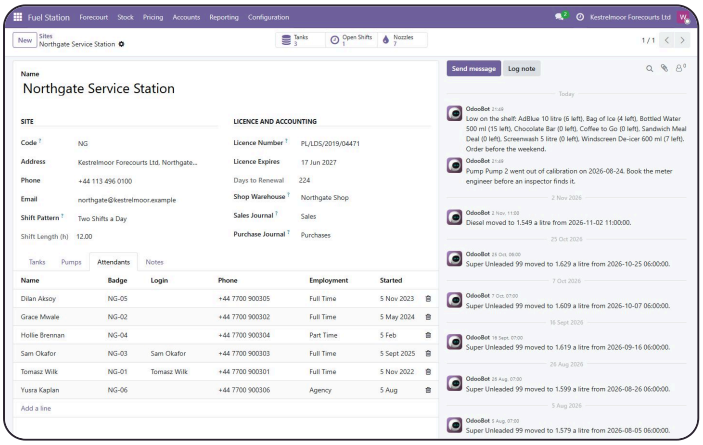

7 The Attendants tab


Everyone who works the forecourt, with their badge number.

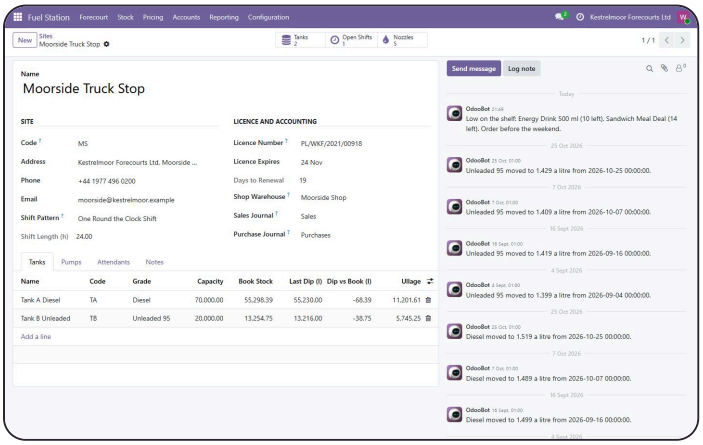

8 A second site

Moorside Truck Stop runs one 24 hour shift handed over at midnight. Its licence is due in under three weeks, which the Days to Renewal figure makes hard to miss.


Pumps and nozzles

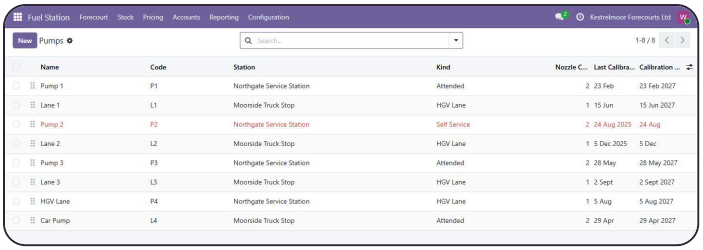

9

Configuration, Pumps


Each pump with its kind, brand and the date its meters were last sealed. Calibration Due is that date plus the interval in the settings. A pump past it shows red.

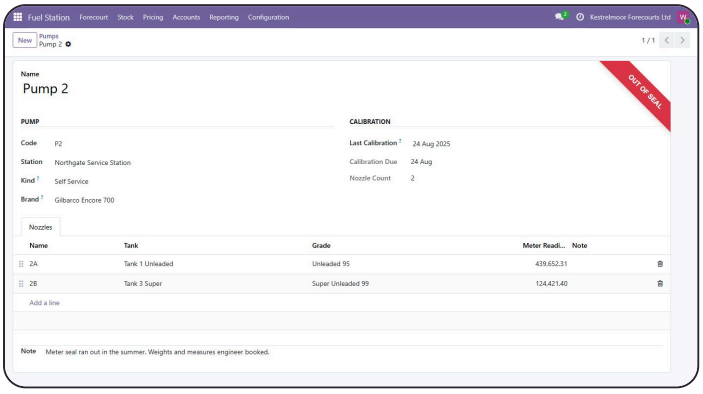

10

An overdue pump


Pump 2 at Northgate was last sealed fourteen months ago. Trading on an out of seal meter is what gets a site shut down, so the calibration job posts a warning on the site every week until the date is updated.

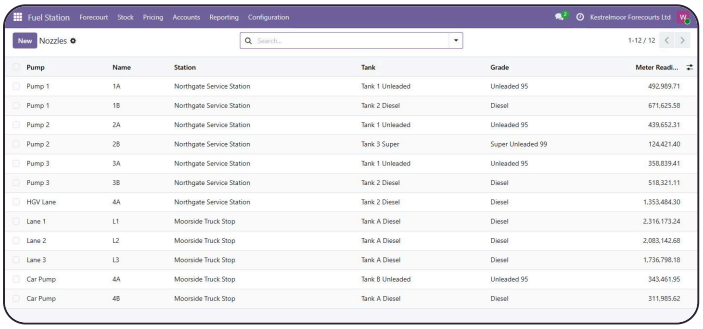

11

Configuration, Nozzles

Every nozzle, the pump it is on, the tank it draws from and the meter reading as it stands now.

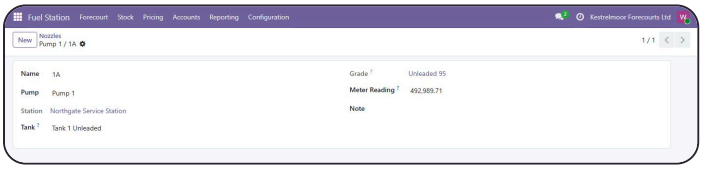


12

The tank it draws from

This is the one field that must be right. If a nozzle is linked to the wrong tank, every wet stock figure on the site is wrong with it. The module refuses a nozzle linked to a tank on another site. The meter reading moves on automatically each time a shift closes.

A capped off nozzle is archived rather than deleted, so its meter history stays.


Attendants and roles

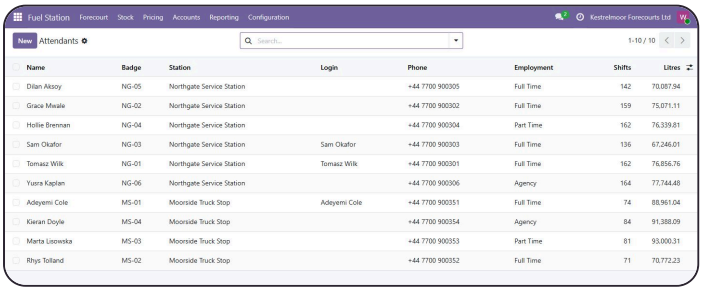

13

Configuration, Attendants

Badge, employment type (full time, part time, agency), the number of shifts worked and the litres they have put through a nozzle on closed shifts.

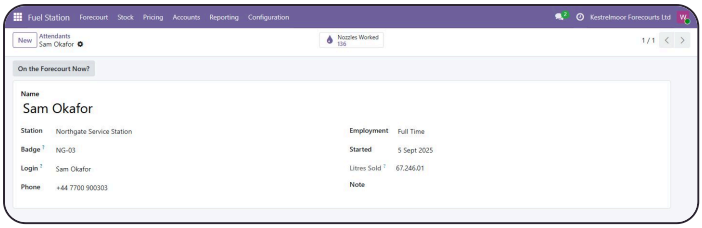

14

Link a login

Linking an attendant to an Odoo user is what lets that person sign in and see their own nozzle readings. One login can be linked to one attendant only. On the Forecourt Now? tells a supervisor whether this person is on an open shift and on which nozzles.

Role	Can	Cannot
Attendant	See the nozzles they were put on and the dips they took, read meters	See prices, costs, accounts, other people's nozzles
Shift Supervisor	Open, close and sign off shifts, take deliveries, dip tanks, manage the shop and accounts	See landed cost and margin, put a price on the board
Site Manager	Everything: prices, cost, margin, credit limits, wet stock sign off, reports	

PART 3 Pump prices and margin


Pump prices are kept as a log rather than a field on the product. Every change carries the minute it took effect, so a shift that ran across a price rise can still be valued line by line.

IN THIS PART YOU WILL LEARN

- Raising a price change and putting it on the board
- How the price splits into VAT, duty, cost and margin
- Applying a mid shift change to the open shifts
- Reading margin by grade

TRY IT YOURSELF ON THE DEMO


1. Open Pricing, Pump Prices and switch to the graph
2. Open the Unleaded change in Draft dated tomorrow
3. Open Pricing, Margin by Grade

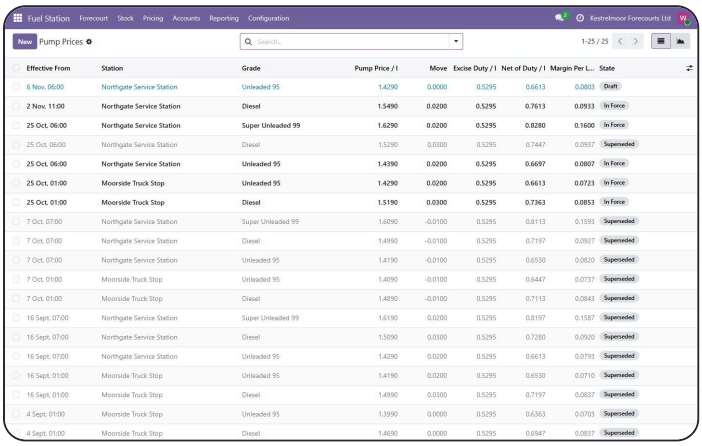

1

Pricing, Pump Prices


Every change for every site and grade, newest first. The one In Force for each grade is shown in bold; older ones are Superseded. Managers also see the landed cost, margin per litre and margin percentage.

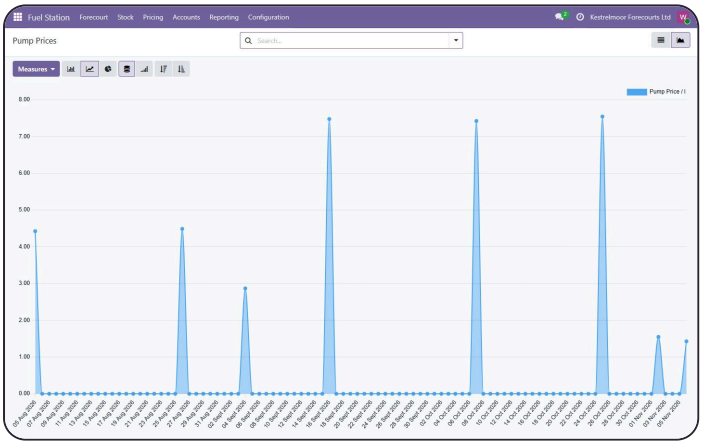

2

The price over time

The graph view plots the pump price by grade, which is the quickest way to see how often the board moved.

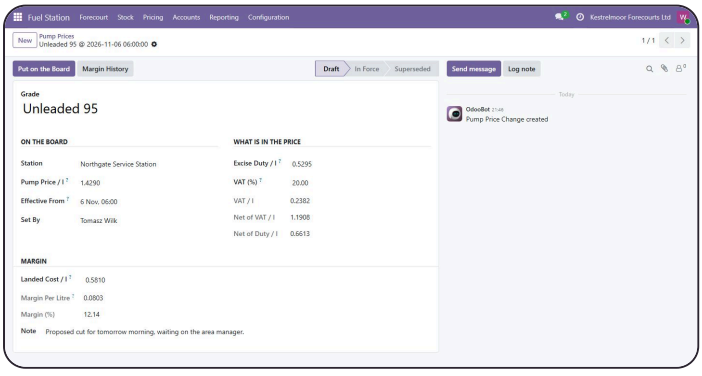


3

Raise a change

Pick the site and grade, type the pump price, the duty per litre and the VAT rate (filled from the settings) and, as a manager, the landed cost. Effective From is the minute the price takes effect. The figures underneath work themselves out: VAT per litre, net of VAT, net of duty, margin per litre and margin percentage.


The module refuses a duty bigger than the whole price net of VAT, which is the usual sign that the figure already had VAT in it.

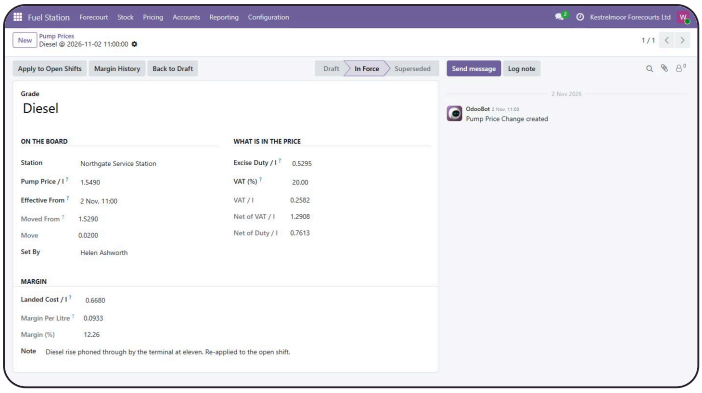

4

Put on the Board

Put on the Board makes the change In Force and supersedes the one before it in the same step, so a grade never has two prices at once. Moved From and Move record the size of the change, and a note goes on the site's chatter.

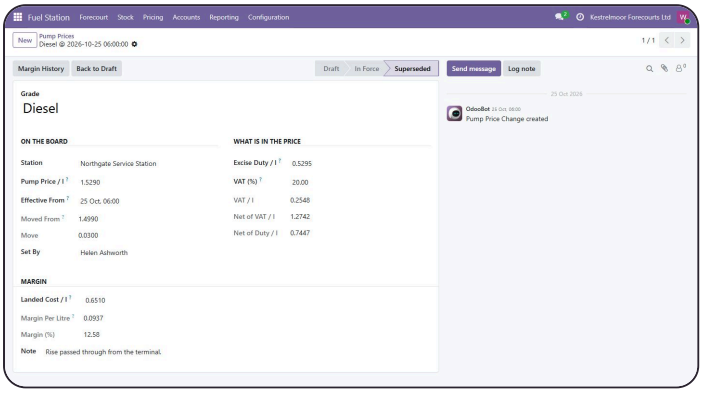


5

Apply to Open Shifts

When the terminal phones a rise through at eleven in the morning, a shift that opened at six was priced at the old figure. Apply to Open Shifts re-prices the nozzle readings of that grade on every open shift at the site and tells you how many lines it changed.

It re-prices the whole reading, not just the litres sold after the change. If you need the split to the litre, close the shift at the moment of the change and open a new one.

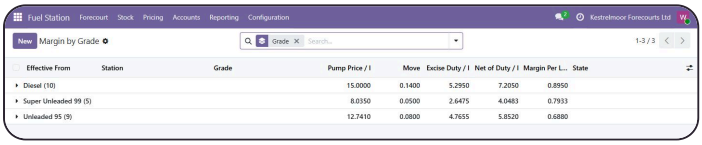

6

Margin by Grade

The managers' view of every price that has been In Force, with cost and margin. From a price form, Margin by Grade opens the same list for that grade only.

Back to Draft is refused once any nozzle reading has been valued at the price, and on a superseded price. Correct a wrong price with a new change so the history stays readable.

PART 4 Tanks and dip readings


A tank record holds the book stock, the last dip and the room left to the safe fill line. A dip is a record of its own, frozen against the book stock at the moment it was taken, so a reading can still be argued about a month later.

IN THIS PART YOU WILL LEARN

- Capacity, dead stock, safe fill and ullage
- Book stock against the last dip
- The five kinds of dip and where each comes from
- Recording an audit dip
- The water alert

TRY IT YOURSELF ON THE DEMO


1. Open Stock, Tanks and compare Last Dip with Book Stock
2. Open Tank A Diesel at Moorside and look at the water
3. Open Forecourt, Dip Readings and group by Kind

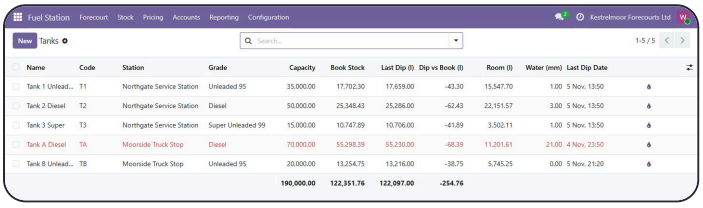

1

Stock, Tanks

One line per tank: grade, capacity, book stock, last dip, the difference between them, ullage, how full it is and the water depth. A tank with water past the alert depth shows red.

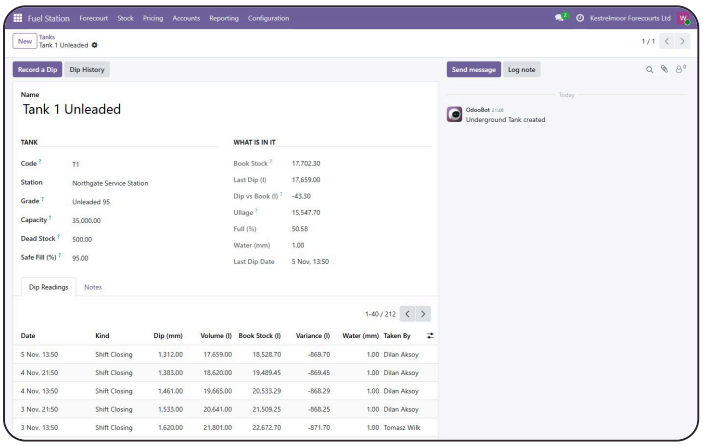


2

A tank

Capacity is the nominal size. Dead Stock is the fuel below the suction pipe that can never be pumped out; it sits in every dip and is not stock you can sell. Safe Fill is the highest a driver may take the tank, and **Ullage** is the room left to that line, which is the figure to give the terminal before the tanker is booked.

Book Stock is read only. It moves when a delivery is posted, when a shift closes and when a wet stock variance is confirmed, and nowhere else.

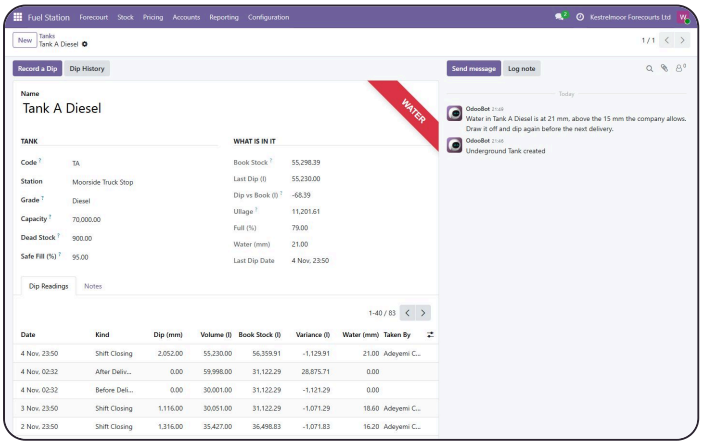

3


Water in a tank

Tank A Diesel at Moorside shows 21 mm of water after rain got into the fill point. Past the 15 mm in the settings the tank is flagged, and the water job posts a message on the tank asking for it to be drawn off before the next delivery.

Dip readings

Kind	Taken	Created by
Shift Opening	When a shift starts	Entered by the supervisor
Shift Closing	Before the meters are closed	Entered on the shift, required for every tank by default


Before Delivery	Before the hose goes on	Created by Start Discharge on the delivery
After Delivery	Once the hose is off	Created by Post to the Tank
Audit	Any time	Record a Dip on the tank

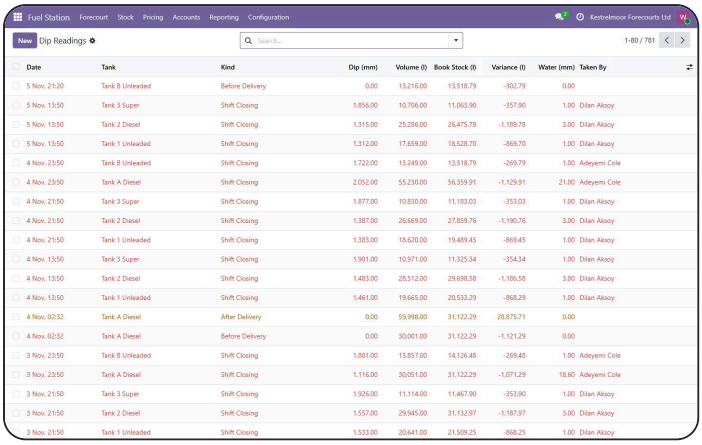

4

Forecourt, Dip Readings

Every reading on every tank, with the millimetres off the stick, the litres off the tank chart, water, temperature and who took it.

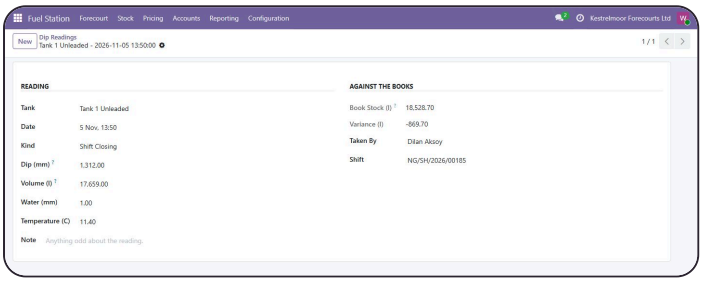


5

One reading

Book Stock is frozen when the reading is saved. For a closing dip taken while the shift is still open, the litres sold on that shift are taken off first, otherwise every closing dip would look like a large loss. Variance is the dip less that frozen book stock.

The millimetres are kept next to the litres so a wrong chart conversion can be found later.

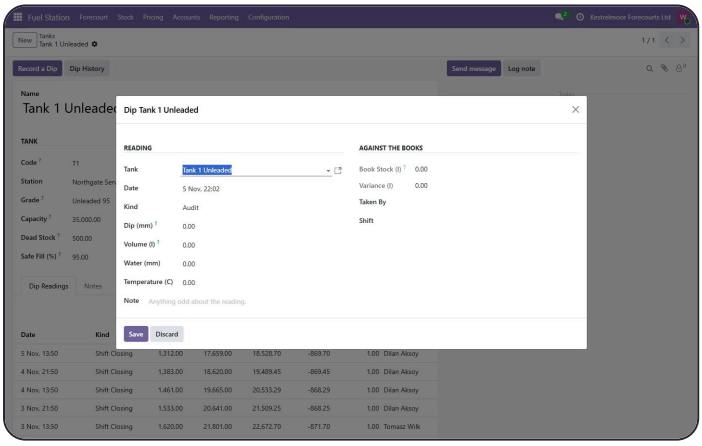

6

Record a Dip

On a tank, Record a Dip opens an audit reading in a dialog with the tank filled in. A dip bigger than the tank's capacity is refused, as is negative water.

PART 5 Running a shift


The shift is where the meters, the tanks and the money meet. Opening it pulls every nozzle on the site with its current meter reading and price. Closing it moves the meters on, takes the fuel off the tanks and the shop items off the shelf.

IN THIS PART YOU WILL LEARN

- Creating and opening a shift
- Nozzle readings, test litres and who was on each nozzle
- What an attendant sees
- The checks that run when the meters are closed

TRY IT YOURSELF ON THE DEMO


1. Open Forecourt, Shifts and switch to the kanban
2. Open the shift in Open and read the Nozzles tab
3. Open the shift in Draft for tomorrow

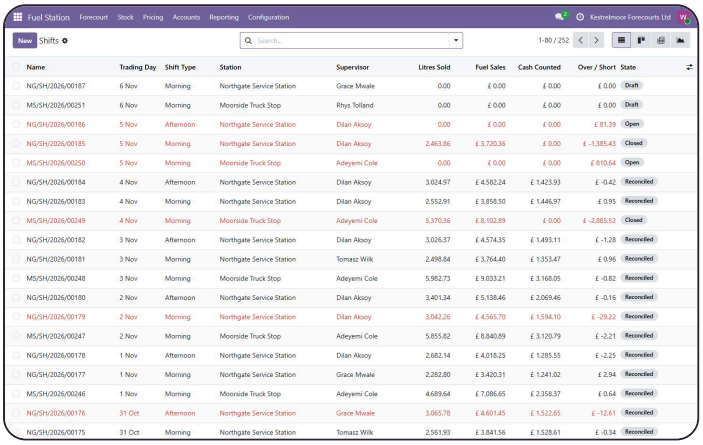

1

Forecourt, Shifts


Every shift with its trading day, type, supervisor, litres, sales, expected cash and over or short. A shift outside the cash tolerance shows in red.

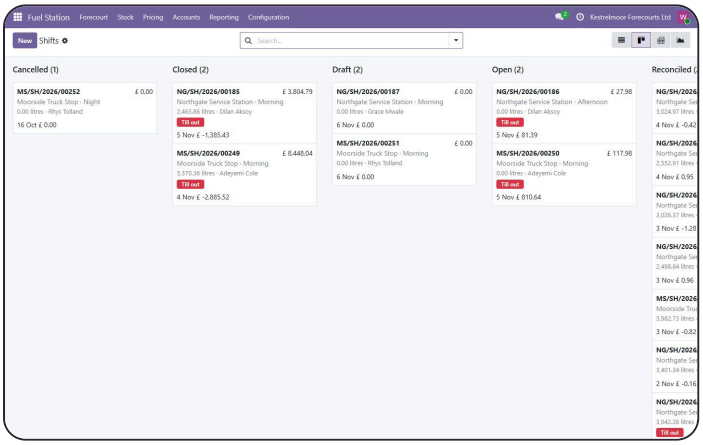

2

The kanban


Shifts grouped by status: Draft, Open, Closed and Reconciled. A site may have one shift open at a time; a second is refused, because overlapping meter readings never reconcile.

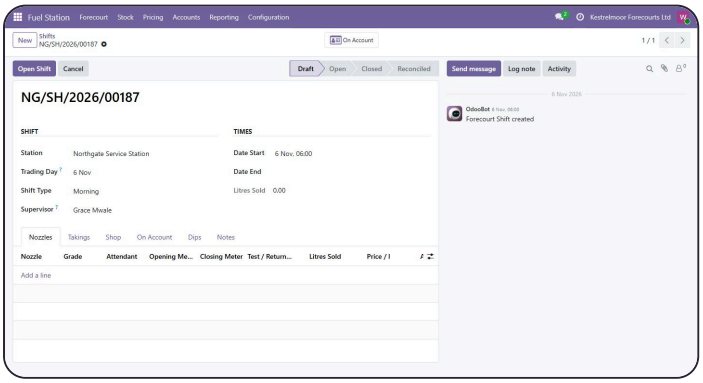

3

A new shift

Pick the site, the trading day, the type (morning, afternoon or night), the start time and the supervisor. The trading day is the day the takings belong to, so a night shift that runs past midnight stays on the day it started.

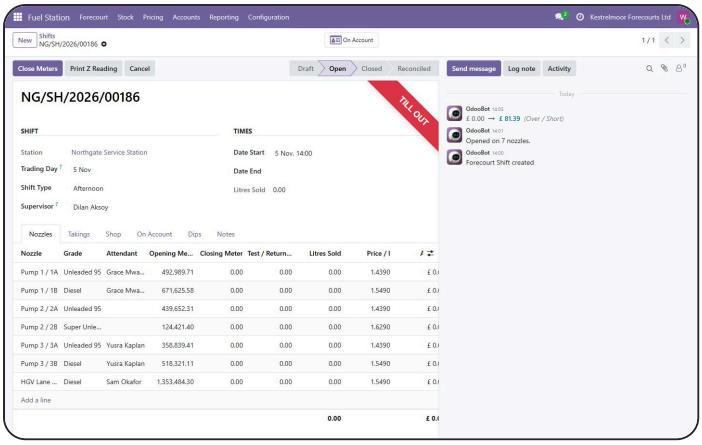


4

Open Shift

Open Shift adds a line for every nozzle on the site with its opening meter and the price in force at the start time. On each line, name the attendant. On an attended pump that is required before the shift will close; on a self service pump it is optional.

The price and the attendant can only be set by a supervisor. An attendant reads meters.

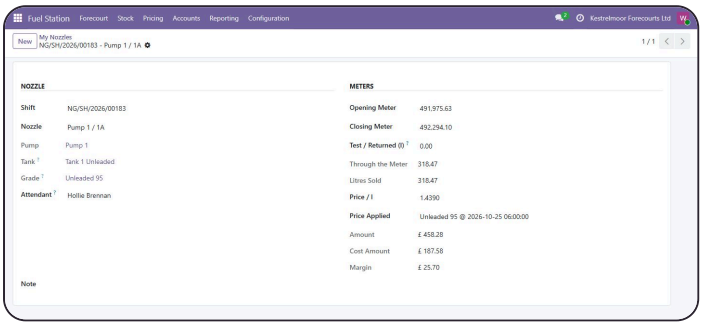


5

A nozzle reading

At the end of the shift put in the closing meter and any test litres. Through the Meter is closing less opening; Litres Sold is that less the test litres; Amount is litres sold at the price applied. Managers also see cost and margin.


A closing reading lower than the opening one is refused, and so are more test litres than went through the meter.

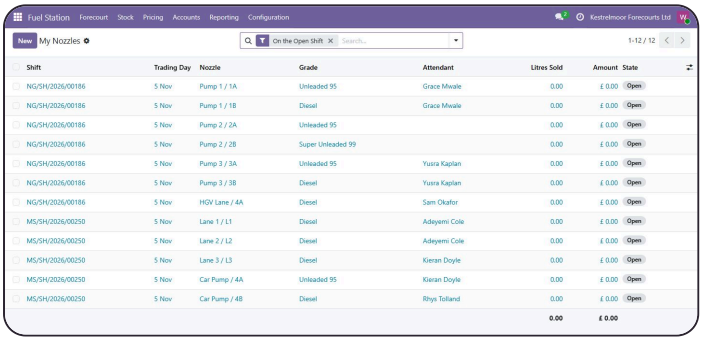

6

Forecourt, My Nozzles


The list of nozzle readings. A supervisor sees all of them; an attendant sees only the lines where they are named.

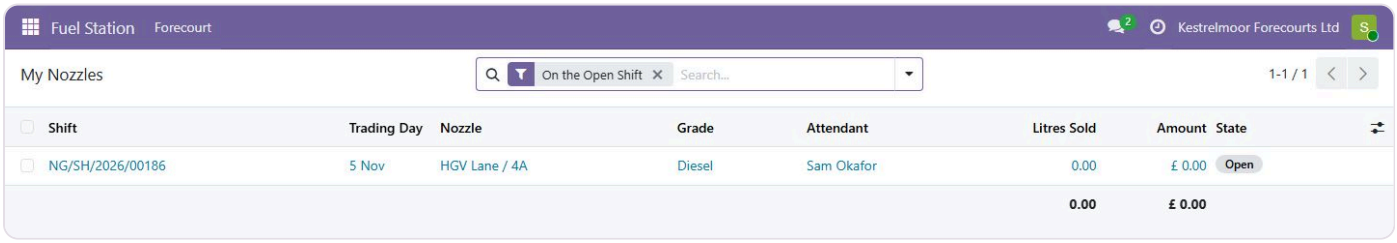

Signed in as an attendant: only his own nozzle readings, and only the Forecourt menu.

Close Meters


Close Meters runs four checks and stops at the first that fails: every nozzle has a closing reading, every attended nozzle has an attendant, and, with the setting on, every tank the shift sold from has a closing dip on this shift. Then it sets the end time if it is empty, moves each nozzle's meter on to the closing reading, takes the litres sold off each tank's book stock and takes the shop lines off the shelf counts. From that moment the readings and shop lines are locked.

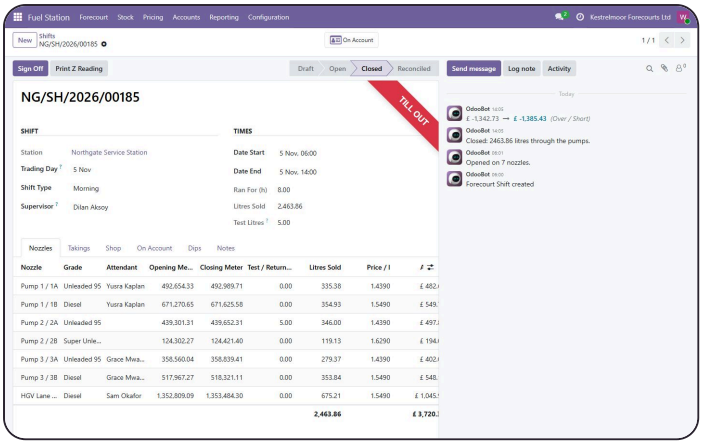

7

A closed shift

Northgate's morning shift is closed and waiting for the cash count. The litres, fuel and shop sales and the amount on account are final; the over or short will move until the takings are in.

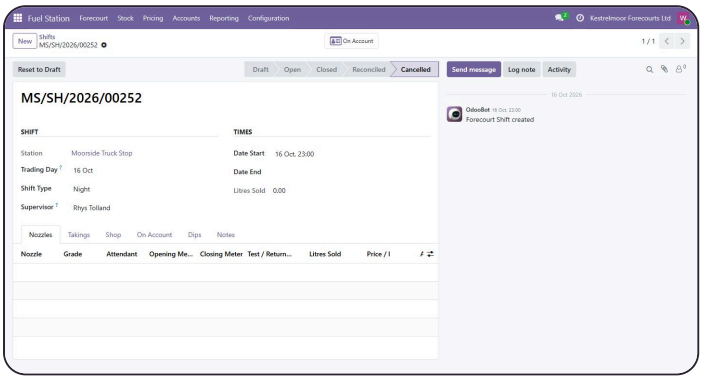

8

Cancel and Reset to Draft

A draft or open shift can be cancelled, for example one raised by mistake, and a cancelled one can go back to draft. A closed or signed off shift cannot be cancelled: the meters have already moved on.

PART 6 Counting the till and signing off


Fuel sold, plus the shop, less what went out on account, less card, wallet, voucher and fleet card takings, is the cash that should be in the drawer. Against the cash actually counted, that is the over or short. Past the tolerance, the supervisor cannot sign off without writing down what happened.

IN THIS PART YOU WILL LEARN

- Declaring takings by tender
- How expected cash and over or short are worked out
- Signing off inside and outside tolerance
- Card settlement and the Z reading slip

TRY IT YOURSELF ON THE DEMO

1. Open a Reconciled shift and read the Takings tab
2. Find a shift in red and read Why the Till Is Out
3. Print the shift reconciliation slip

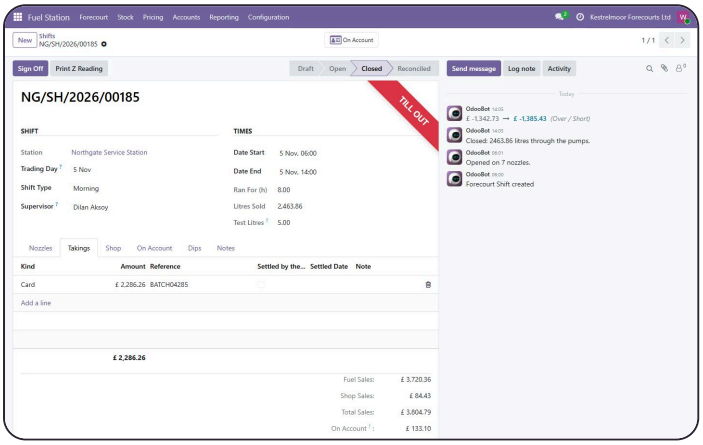


1

Takings

On a closed shift add one line per tender: Cash, Card, Mobile Wallet, Fuel Voucher or Fleet Card, with the amount. A card or fleet card total needs its terminal batch number, or a short card total cannot be chased with the acquirer.


Even a shift that took nothing needs a zero cash line before it can be signed off, so the count is on record.

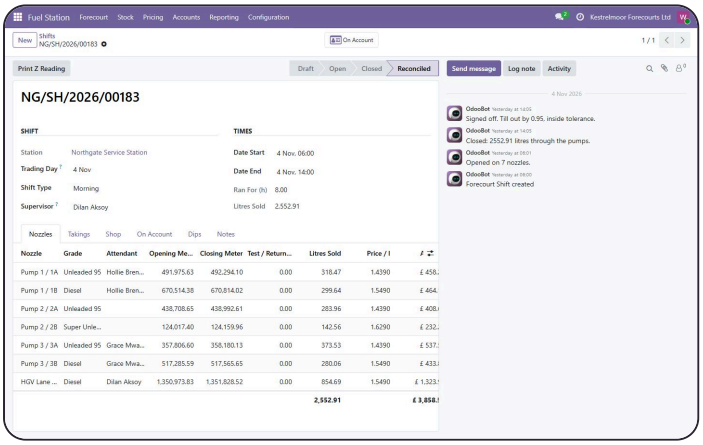

2

The figures


The Nozzles tab of a reconciled shift gives litres sold and the amount per nozzle. The money sum sits under the takings list: Fuel Sales, Shop Sales, Total Sales, On Account, Card, Other Tenders, Expected Cash, Cash Counted and Over / Short. Managers also see the fuel margin for the shift.

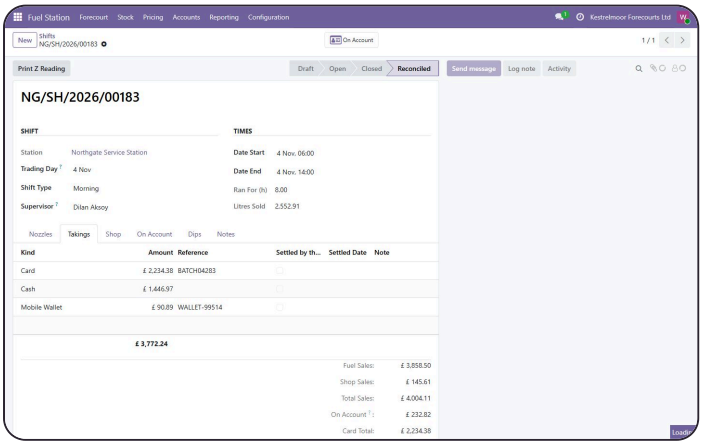

3

Takings on a signed off shift


Card lines carry Settled by the Bank and the date it landed, ticked with Mark Settled once the money arrives, usually a day or two later. The amount and reference are locked once the shift is signed off; settlement is not.

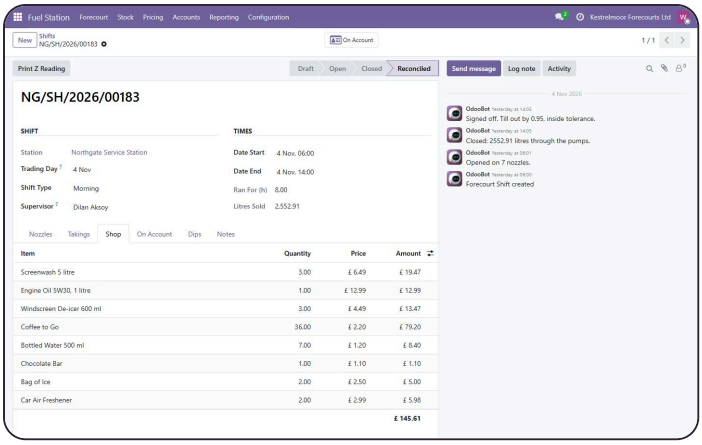

4

Shop sales on the shift


Each shop line is an item, a quantity and a price, taken off the shelf count when the shift closed.

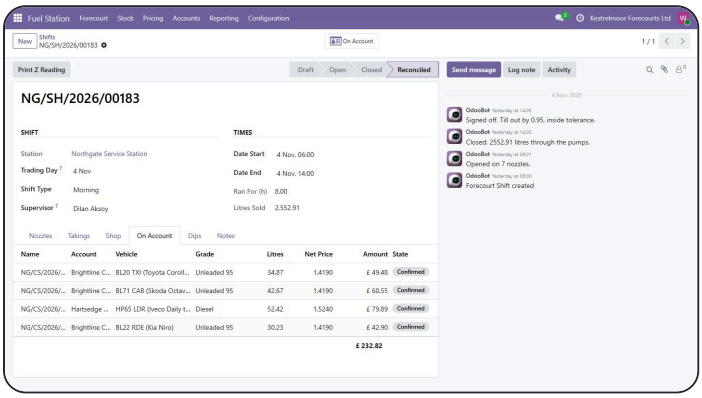

5

On Account

The fills that went out on credit accounts during the shift. They came through the nozzle but no money came over the counter, so they come off the expected cash.

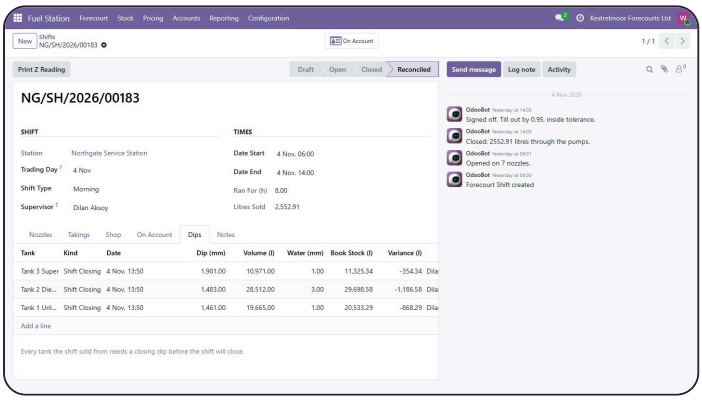


6

Dips

The closing dips taken on this shift, one per tank.

Sign Off


Sign Off moves a closed shift to Reconciled. It is refused if there are no takings lines, and if the over or short is beyond the company's cash tolerance with nothing written in Why the Till Is Out. Inside tolerance the chatter records the amount the till was out. Outside it, the chatter records the amount and the reason, and an email to the supervisor is queued when the supervisor's login has an address.

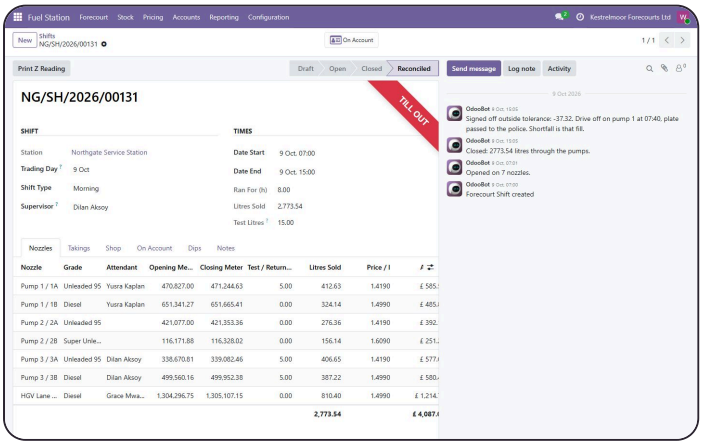

7

A shift outside tolerance


This shift was short by more than the 5.00 allowed and shows in red.

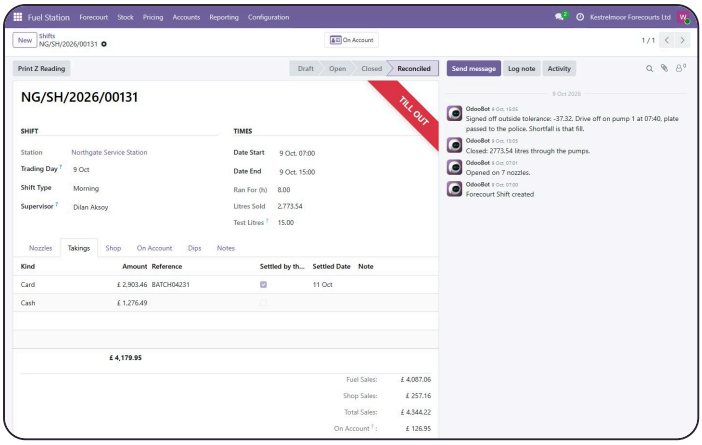

8

Why the Till Is Out

The reason is typed at the foot of the Takings tab before signing off, and the chatter keeps the amount and the reason: here a drive off with the plate passed to the police.

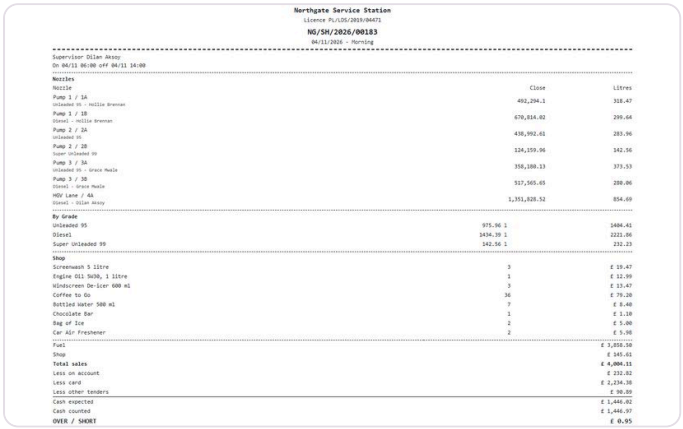
Northgate Service Station
Licence PL/DS/2019/04471
NG/SH/2026/00183
04/11/2026 · Morning
Supervisor Dilan Aksoy
On 04/11 06:00 off 04/11 14:00
Nozzles
Nozzle
Close
Litres
Pump 1 / 1A
Unleaded 95 · Hollie Brennan
492,294.1
318.47
Pump 1 / 1B
Diesel · Hollie Brennan
670,814.02
299.64
Pump 2 / 2A
Unleaded 95
438,992.61
283.96
Pump 2 / 2B
Super Unleaded 99
124,159.96
142.56
Pump 3 / 3A
Unleaded 95 · Grace Meale
356,180.13
373.53
Pump 3 / 3B
Diesel · Grace Meale
517,565.65
280.06
HGV Lane / 4A
Diesel · Dilan Aksoy
1,351,826.52
854.69
By Grade
Unleaded 95
975.96 l
1404.41
Diesel
1434.39 l
2221.86
Super Unleaded 99
142.56 l
232.23
Shop
Screenwash 5 litre
3
£ 19.47
Engine Oil 5W30, 1 litre
1
£ 12.99
Windscreen De-Icer 600 ml
3
£ 13.47
Coffee to Go
36
£ 79.20
Bottled Water 500 ml
7
£ 8.40
Chocolate Bar
1
£ 1.10
Bag of Ice
2
£ 5.00
Car Air Freshener
2
£ 5.98
Fuel
£ 2,850.58
Shop
£ 145.61
Total sales
£ 4,004.11
Less on account
£ 232.82
Less card
£ 2,234.38
Less other tenders
£ 90.00
Cash expected
£ 1,446.91
Cash counted
£ 1,446.97
OVER / SHORT
£ 0.95

The shift reconciliation slip on 80 mm paper.


Northgate Service Station
Licence PL/DS/2019/04471
NG/SH/2026/00131
09/10/2026 · Morning
Supervisor Dilan Aksoy
On 09/10 07:00 off 09/10 15:00
Nozzles
Nozzle
Close
Litres
Pump 1 / 1A
Unleaded 95 · Yusra Kaplan
471,244.63
412.63
Pump 1 / 1B
Diesel · Yusra Kaplan
651,665.41
324.14
Pump 2 / 2A
Unleaded 95
421,353.36
276.36
Pump 2 / 2B
Super Unleaded 99
116,328.82
156.14
Pump 3 / 3A
Unleaded 95 · Dilan Aksoy
339,802.46
406.65
Pump 3 / 3B
Diesel · Dilan Aksoy
499,952.38
387.22
HGV Lane / 4A
Diesel · Grace Meale
1,305,107.15
810.4
By Grade
Unleaded 95
1095.64 l
1554.71
Diesel
1523.76 l
2201.12
Super Unleaded 99
156.14 l
251.23
Test litres returned to tank: 15.0
Shop
Screenwash 5 litre
1
£ 6.40
Engine Oil 5W30, 1 litre
2
£ 25.98
AdBlue 10 litre
2
£ 29.98
Windscreen De-Icer 600 ml
3
£ 13.47
Coffee to Go
34
£ 74.80
Bottled Water 500 ml
20
£ 24.00
Chocolate Bar
12
£ 13.20
Sandwich Meal Deal
17
£ 63.75
Bag of Ice
1
£ 2.50
Car Air Freshener
1
£ 2.99
Fuel
£ 4,087.06
Shop
£ 257.16
Total sales
£ 4,344.22
Less on account
£ 126.95
Less card
£ 2,903.46
Cash expected
£ 1,313.81

A slip for a shift outside tolerance.

Print Z Reading on a closed or signed off shift prints the reconciliation slip on 80 mm roll paper: the site, the shift, the nozzle readings, litres by grade, the takings and the over or short.

> A signed off shift is the till record for that day. Nothing on it can be added, changed or cancelled afterwards, including fills on account; put a correction through the ledger instead.

PART 7 Tanker deliveries

A delivery records the bill of lading, the tanker, the driver and the seals, corrects the observed litres for temperature, and takes a dip before and after. The tank gain against the corrected litres is the only evidence a short delivery claim rests on.

IN THIS PART YOU WILL LEARN


- Raising a delivery with one line per compartment
- Temperature correction to standard litres
- Start Discharge, the second dip and Post to the Tank
- Spotting a short delivery
- The goods received note and the vendor bill

TRY IT YOURSELF ON THE DEMO

1. Open Stock, Deliveries and find a line in red
2. Open the delivery in Discharging at Moorside
3. Print the GRN of a short delivery


A delivery from start to bill

1. **Draft** — Ticket, tanker, seals, compartments
2. **Start Discharge** — Dip before, room checked
3. **Dip after** — Typed on each compartment
4. **Post to the Tank** — Standard litres on the books
5. **Create Bill** — Vendor bill to the terminal

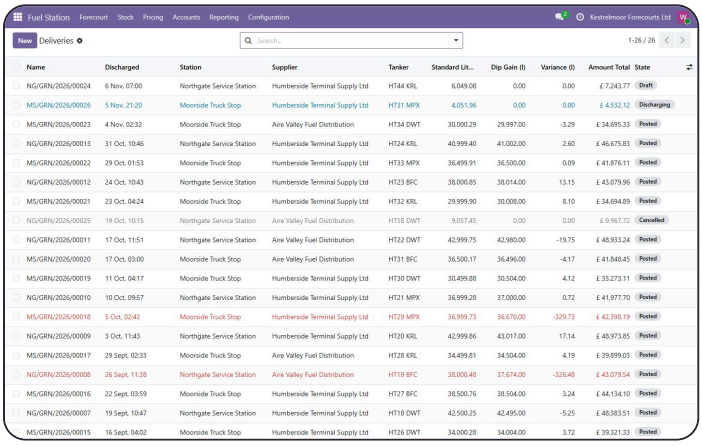

1 Stock, Deliveries


Each delivery with its site, supplier, date, delivery note, standard litres, dip gain and variance. A short delivery is in red.

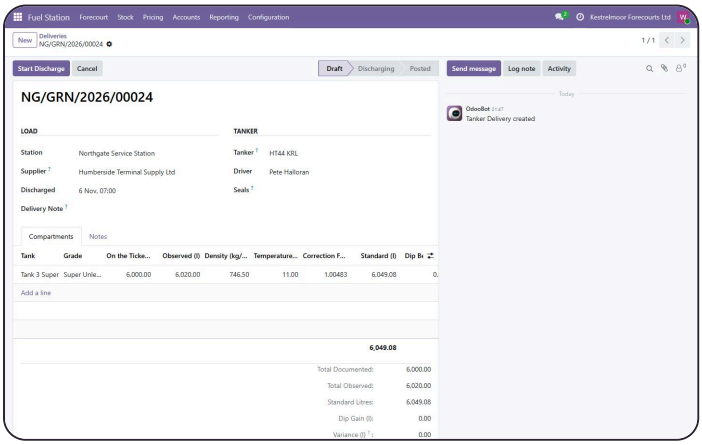

2 Raise the delivery

Pick the site and the supplier, then type the tanker plate, the driver, the delivery note (bill of lading) number and the seal numbers as they were on arrival. Add one compartment line per tank: litres on the ticket, observed litres at discharge temperature, the density at 15 C off the loading ticket, the product temperature, the cost per litre and the duty per litre.


Choosing the tank fills Dip Before from the tank's last dip; check it against the stick.

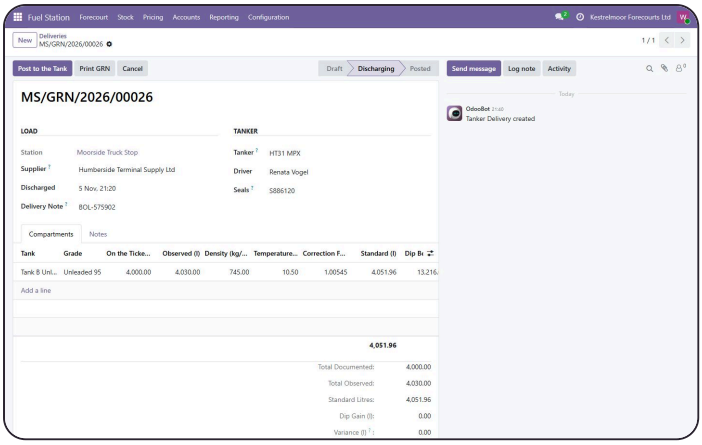

3

Start Discharge

Start Discharge is refused without a delivery note number, without compartments, with a compartment of zero litres, or when the standard litres will not fit under the safe fill line. It creates a Before Delivery dip on each tank and moves the delivery to Discharging.

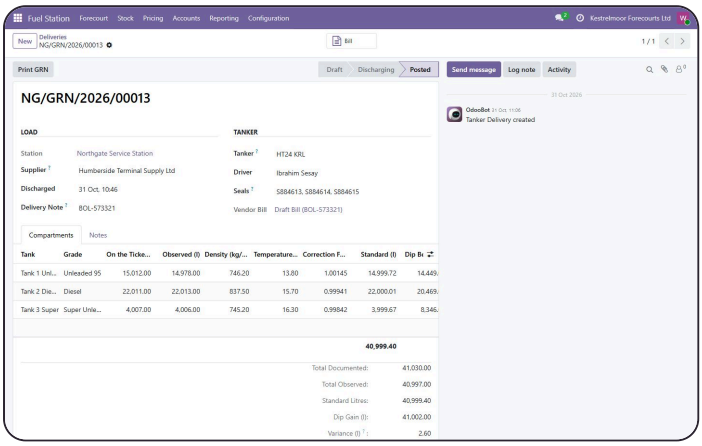

4

Post to the Tank


Once the hose is off, type Dip After on each compartment and press Post to the Tank. It creates the After Delivery dips, adds the standard litres to each tank's book stock and moves the delivery to Posted.

A dip that went down over a delivery is refused: either the readings are the wrong way round or fuel left while the tanker was on site.

Temperature correction


Correction Factor and Standard on each compartment come from the density and the temperature. The module picks the ASTM table 54B coefficients for petrol below 770 kg/m3 and for diesel above it, works out the expansion per degree and applies it across the gap between the discharge temperature and the reference temperature in the settings. Standard litres are what goes on the books and what the bill is checked against. With the setting off, standard equals observed.

Compartment field	Meaning
On the Ticket (l)	Standard litres the terminal says it loaded
Observed (l)	Gross litres at the temperature it arrived at
Density (kg/m3)	At 15 C, off the loading ticket. Must be between 500 and 1200
Temperature (C)	At discharge. Must be between -40 and 70
Correction Factor	Volume correction factor worked out from the two
Standard (l)	Observed times the factor
Dip Gain	Dip after less dip before
Variance (l) and %	Dip gain less standard litres

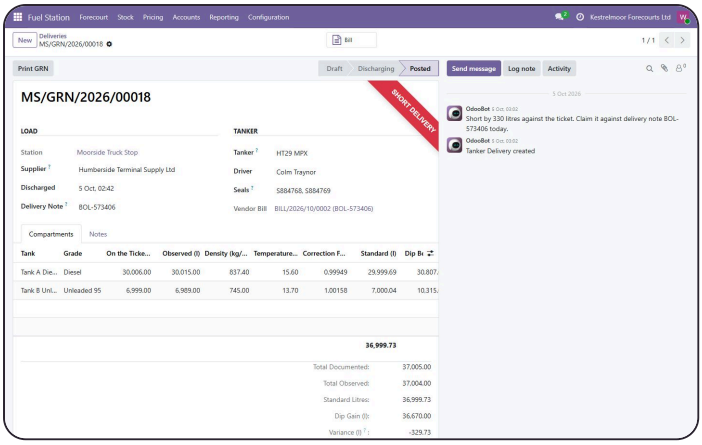

5 A short delivery


A delivery is flagged short when the dip gain falls below the standard litres by more than half a per cent or 20 litres, whichever is more. Posting it writes the shortfall and the delivery note number on the chatter so the claim goes to the terminal the same day.

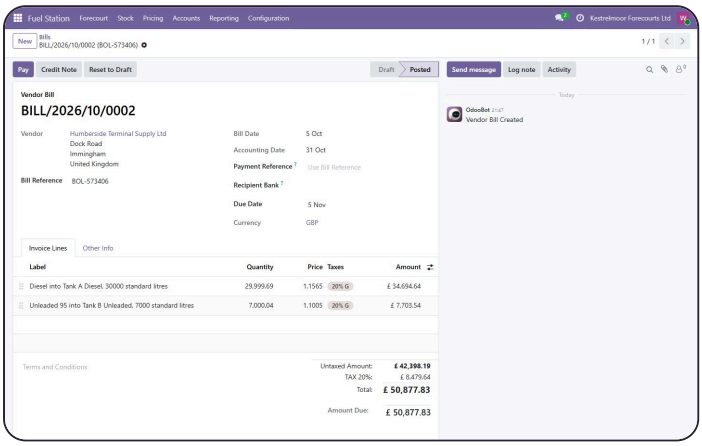

6 Create Bill


On a posted delivery, Create Bill raises a draft vendor bill to the supplier: one line per compartment, standard litres at cost plus duty, the delivery note as the reference, on the site's purchase journal. Vendor Bill opens it.

Posting the delivery does not raise the bill on its own; press Create Bill.

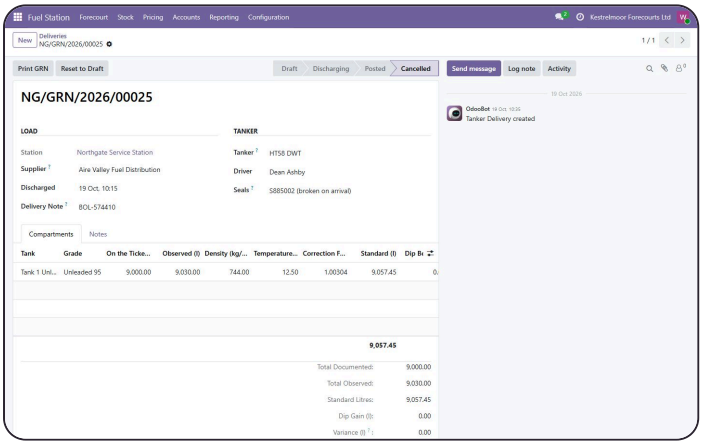

7 Cancel

A delivery refused at the gate, here for a broken seal, is cancelled. A posted delivery cannot be cancelled because the litres are already in the tank, and a delivery whose bill is posted must be credited instead.

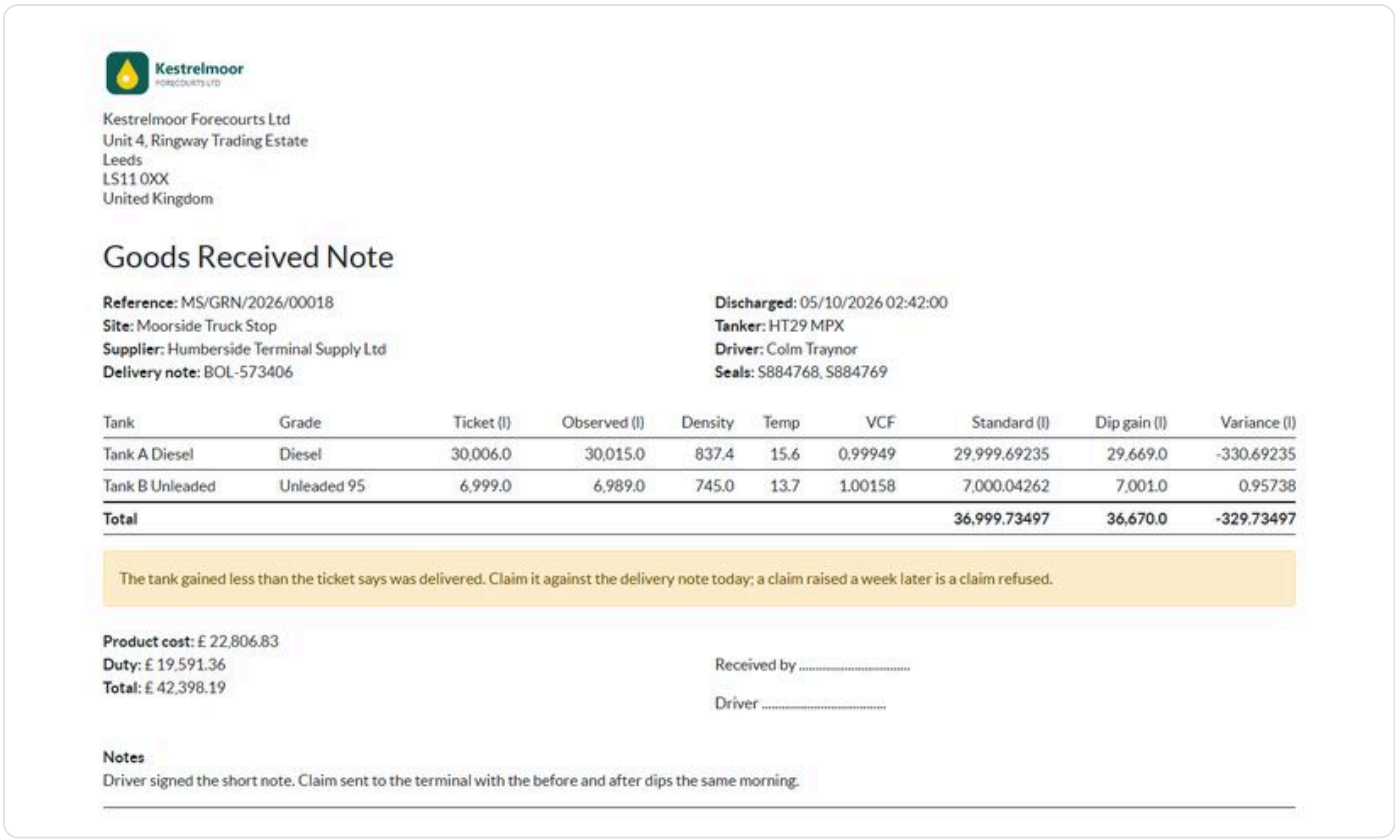

Kestrelmoor Forecourts Ltd
Unit 4, Ringway Trading Estate
Leeds
LS11 0XX
United Kingdom

Goods Received Note

Reference: MS/GRN/2026/00018
Site: Moorside Truck Stop
Supplier: Humberside Terminal Supply Ltd
Delivery note: BOL-573406

Discharged: 05/10/2026 02:42:00
Tanker: HT29 MPX
Driver: Colm Traynor
Seals: S884768, S884769

Tank	Grade	Ticket (l)	Observed (l)	Density	Temp	VCF	Standard (l)	Dip gain (l)	Variance (l)
Tank A Diesel	Diesel	30,006.0	30,015.0	837.4	15.6	0.99949	29,999.69235	29,669.0	-330.69235
Tank B Unleaded	Unleaded 95	6,999.0	6,989.0	745.0	13.7	1.00158	7,000.04262	7,001.0	0.95738
Total							**36,999.73497**	**36,670.0**	**-329.73497**

The tank gained less than the ticket says was delivered. Claim it against the delivery note today; a claim raised a week later is a claim refused.

Product cost: £ 22,806.83
Duty: £ 19,591.36
Total: £ 42,398.19

Received by .....

Driver .....

Notes
Driver signed the short note. Claim sent to the terminal with the before and after dips the same morning.

The goods received note shows the temperature correction line by line.

PART 8 Wet stock variance


Wet stock variance is opening dip, plus deliveries, less metered sales, against the closing dip. What is left over is what the site has lost or gained, in litres, as a share of throughput and in money. A period outside tolerance cannot be signed off without a cause.

IN THIS PART YOU WILL LEARN

- Raising a period for one tank and working it out
- Reading litres, percentage and value
- Confirming, investigating and closing
- The causes, and the daily job

TRY IT YOURSELF ON THE DEMO


1. Open Stock, Wet Stock Variance and look at the red lines
2. Open the Unleaded week marked Meter Out of Calibration
3. Switch to the pivot

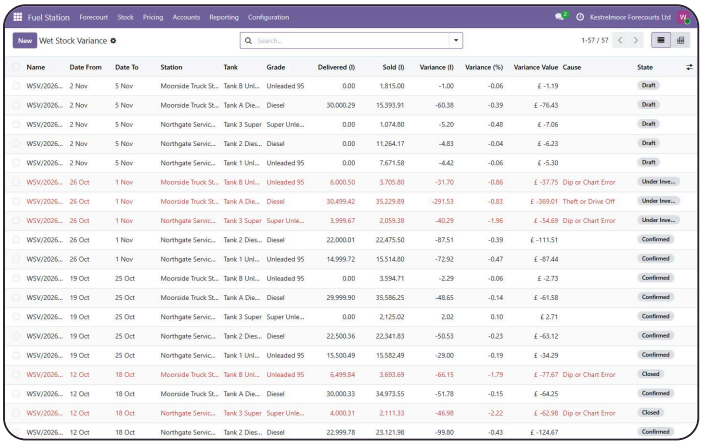

1

Stock, Wet Stock Variance

One record per tank per period, with opening dip, delivered, sold, closing dip, variance in litres and per cent, its value, the cause and the status. Outside tolerance shows red.

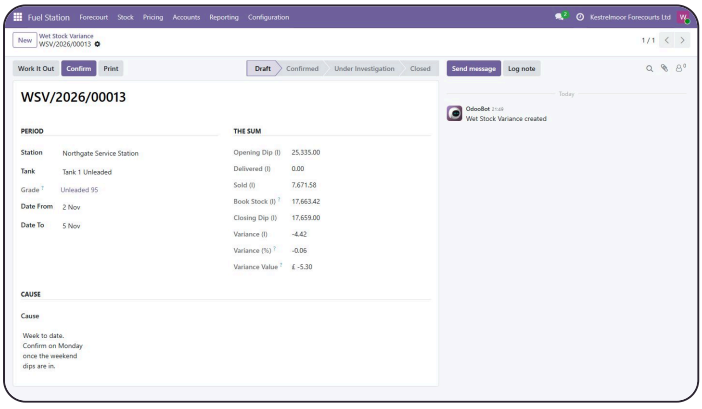


2

Work It Out

Pick the site, the tank and the period, then press Work It Out. It takes the last dip at or before the start as the opening, the last closing, audit or after delivery dip before the end as the closing, adds posted deliveries in the period and subtracts the litres sold on closed and signed off shifts that started in it.


Shifts are counted by their start time and dips by theirs, so periods line up best with a site whose shifts hand over at midnight or with a closing dip taken before midnight.

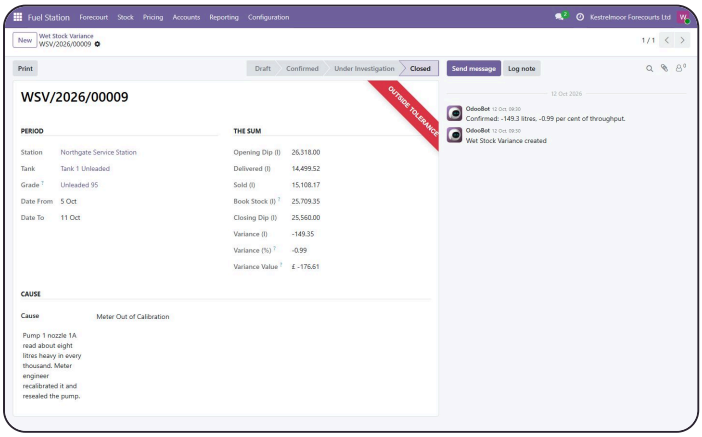

3


Outside tolerance

Variance is the closing dip less book stock. The percentage is against litres sold, which is how an oil company and a regulator read it; the value is the litres at the pump price net of VAT. Past the tolerance in the settings the record is flagged and Confirm needs a cause.

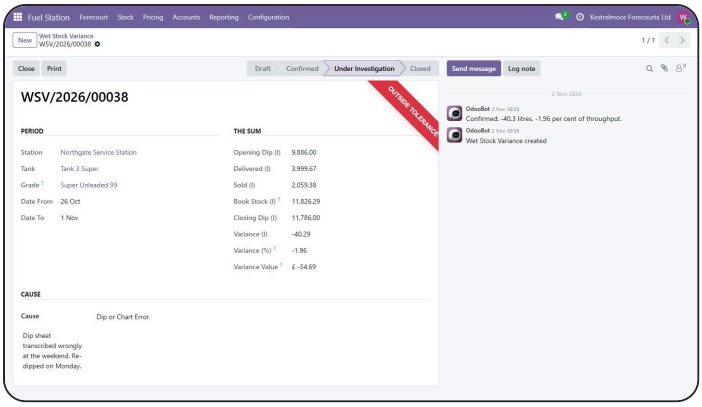


4 Confirm and Investigate

Confirm signs the period off and brings the tank's book stock back to the dip by the variance. It cannot be worked out again after that; raise a new period instead. Investigate marks a confirmed period as Under Investigation.

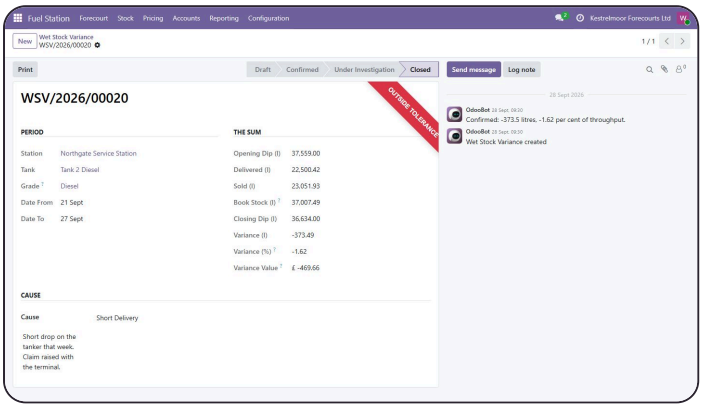

5 Close


Close needs a cause on every record, inside tolerance or not, so the next person can read what happened.

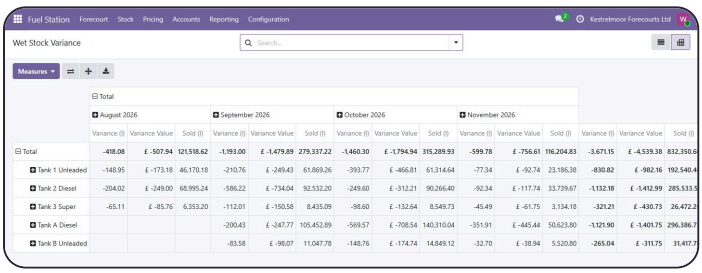

6 The pivot

Variance litres and value by tank and period.

Cause	Typical sign
Evaporation and Temperature	Small, steady, both directions
Meter Out of Calibration	Steady loss on one tank in proportion to its sales
Short Delivery	A step change in the week of a delivery
Water Ingress	Water depth rising on the dips
Dip or Chart Error	A one off jump that reverses next period
Line or Tank Leak	Loss that continues when the site is closed
Theft or Drive Off	Loss on one night or one shift
Not Established	Recorded when nobody knows yet

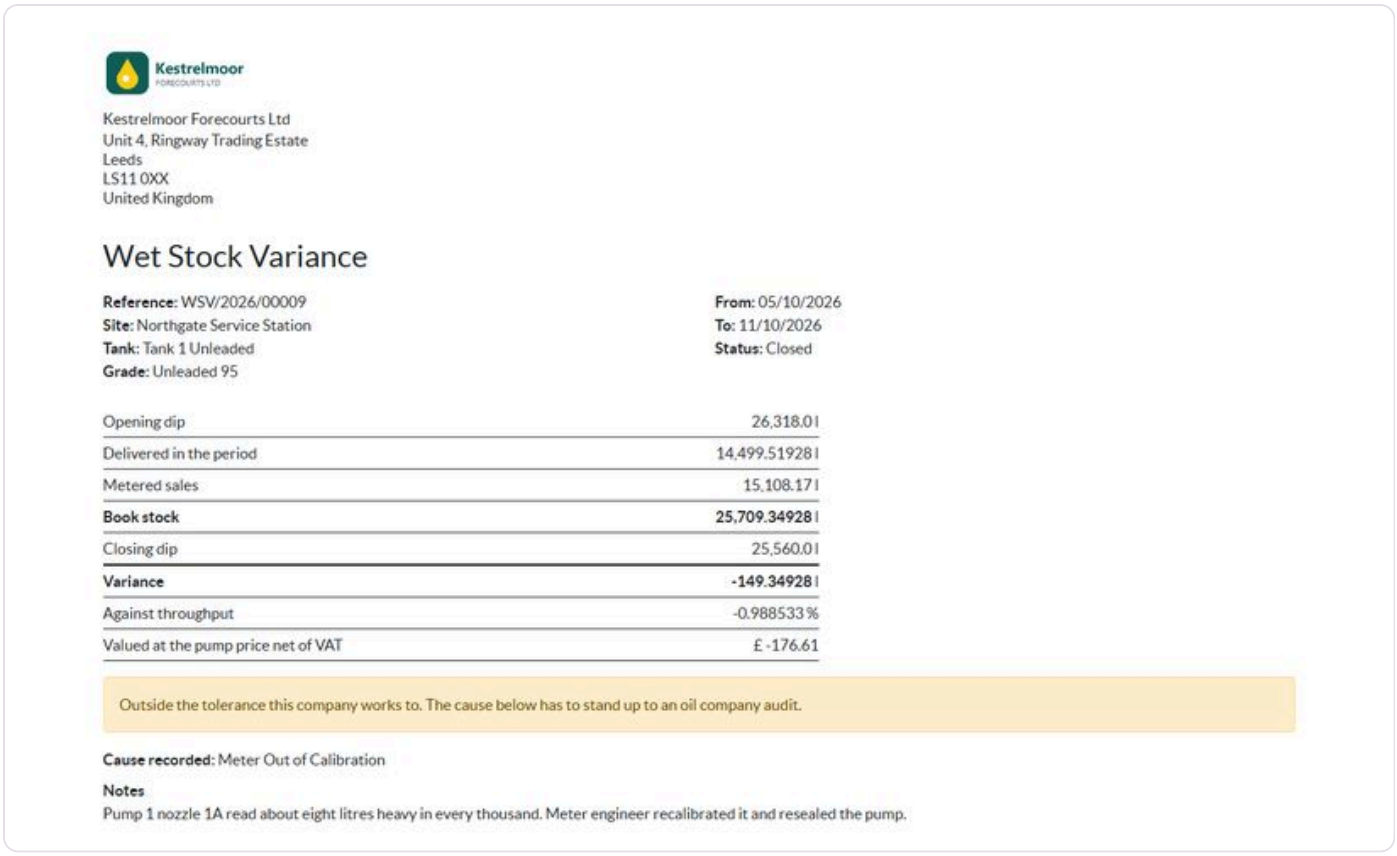

Kestrelmoor Forecourts Ltd
Unit 4, Ringway Trading Estate
Leeds
LS11 0XX
United Kingdom

Wet Stock Variance

Reference: WSV/2026/00009
Site: Northgate Service Station
Tank: Tank 1 Unleaded
Grade: Unleaded 95

From: 05/10/2026
To: 11/10/2026
Status: Closed

Opening dip	26,318.0 l
Delivered in the period	14,499.51928 l
Metered sales	15,108.17 l
Book stock	**25,709.34928 l**
Closing dip	25,560.0 l
Variance	**-149.34928 l**
Against throughput	-0.988533 %
Valued at the pump price net of VAT	£ -176.61

Outside the tolerance this company works to. The cause below has to stand up to an oil company audit.

Cause recorded: Meter Out of Calibration

Notes
Pump 1 nozzle 1A read about eight litres heavy in every thousand. Meter engineer recalibrated it and resealed the pump.

The wet stock variance report, laid out the way an oil company asks for it.

The scheduled job for yesterday's wet stock variance creates a one day record per tank, works it out, deletes it if the tank neither sold nor received anything, and queues the variance alert email when it is outside tolerance. Like every job in the module it ships switched off.

PART 9 Fleet and credit accounts


A haulier or a taxi firm fuels on account. Each account has its vehicles, a credit limit the pumps hold you to and a per litre discount, and the month closes with one statement invoice per account rather than a ticket at a time.

IN THIS PART YOU WILL LEARN

- Setting up an account and its vehicles
- Putting a fill on the account and the checks it runs
- Stopping and reopening an account
- Monthly statements and Invoice What Is Outstanding


TRY IT YOURSELF ON THE DEMO

1. Open Accounts, Credit Accounts and find the stopped account
2. Open Pennwick Haulage and read the Fills tab
3. Open Forecourt, Fuel on Account and filter Draft

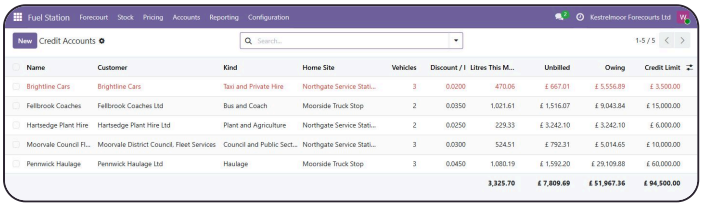

1 Accounts, Credit Accounts


Each account with its customer, kind, credit limit, what it owes, what is not yet billed, the credit still available and whether it is stopped (in red).

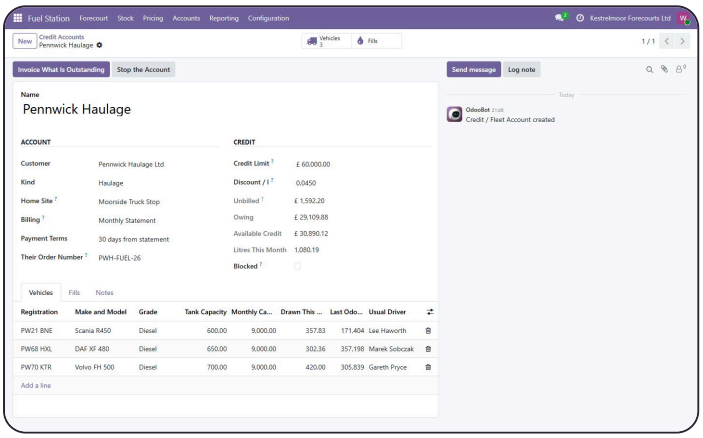

2 An account


Customer is the contact the statement goes to. Home Site is where it normally fuels; it does not stop vehicles filling elsewhere. Credit Limit of zero means no limit. Discount / l is taken off the pump price on every fill, because fleet deals are quoted in pence a litre. Their Order Number is printed on the statement for customers that will not pay without it.

Owing is posted unpaid invoices plus confirmed fills not yet billed. Available Credit is the limit less that.

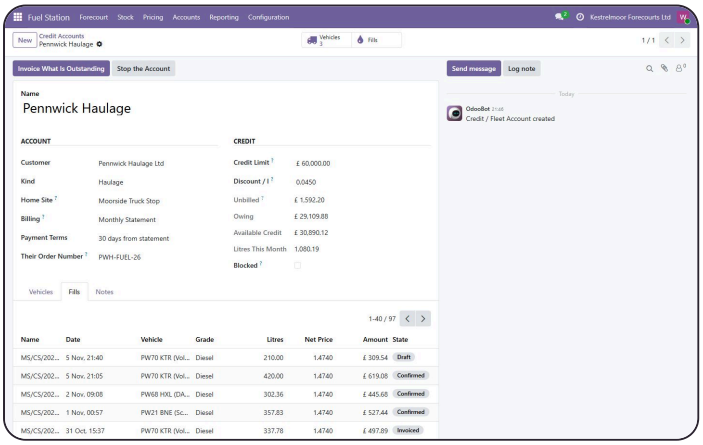


3 Vehicles and Fills

The Vehicles tab lists every plate on the account; the Fills tab lists every fill, with the smart buttons opening the same lists in full.

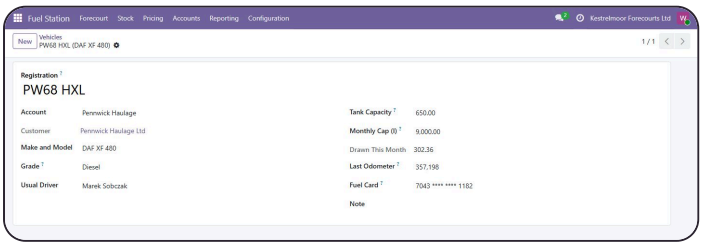

4 A vehicle

Registration, make and model, the one Grade it may take, its Tank Capacity, a Monthly Cap in litres and the Last Odometer. The fuel card number is visible to managers only.

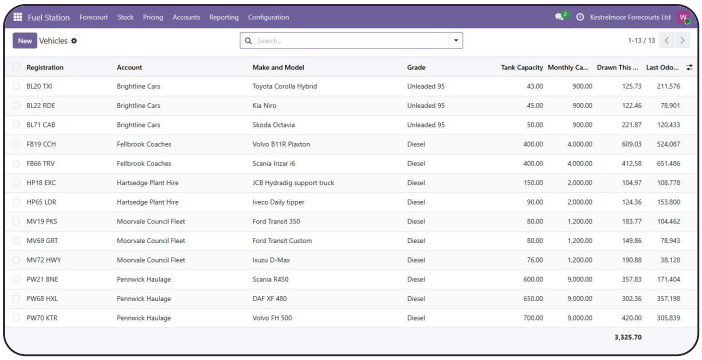


5

Accounts, Vehicles

Every vehicle with its account, grade, tank size, monthly cap and the litres drawn this month.


A fill on account

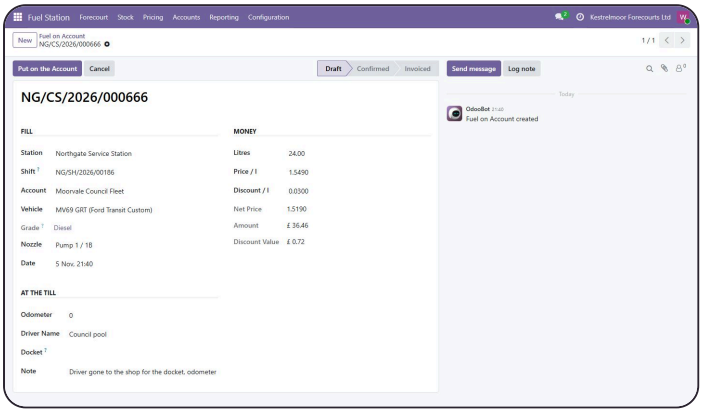

6

Raise the fill

Under Forecourt, Fuel on Account, pick the site, the shift, the account, the vehicle and the nozzle, and type the litres, the odometer and the docket number. The price in force and the account's discount are filled in.

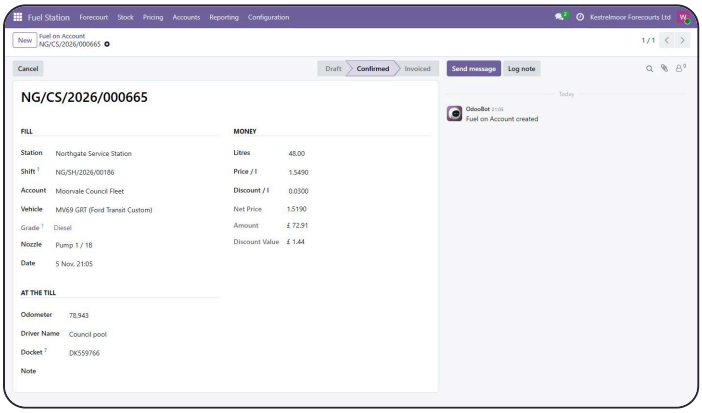


7

Put on the Account

Confirming runs the checks: the account is not stopped, the fill does not take it past its limit (with Enforce Credit Limits on), the vehicle has not passed its monthly cap, and the odometer is not lower than the last fill. The vehicle's odometer is updated.


Saving also refuses more litres than the vehicle's tank holds, a vehicle from another account, and a nozzle of a different grade, so petrol cannot be put on a diesel vehicle.

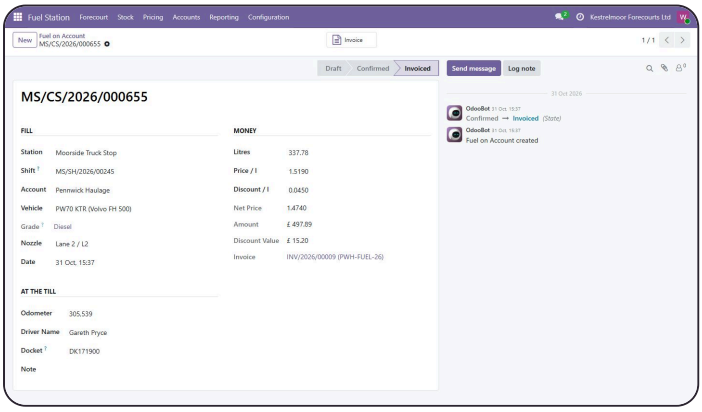

8

Invoiced


Once a fill is on a statement it shows the invoice and can no longer be cancelled; credit the invoice instead.

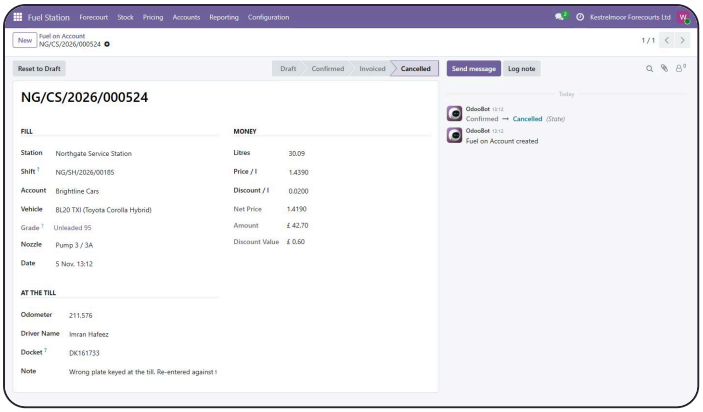

9

Cancel

A wrong fill can be cancelled while its shift is not yet signed off. After sign off it is refused, because the shift's expected cash would move.

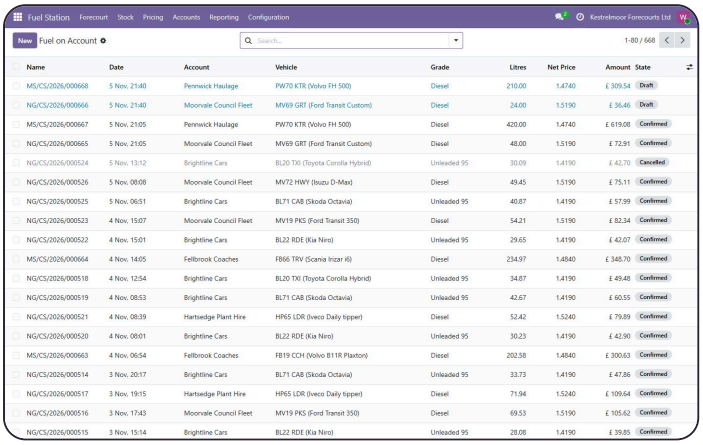


10

Forecourt, Fuel on Account

Every fill on every account, filterable by state.

Stopping an account

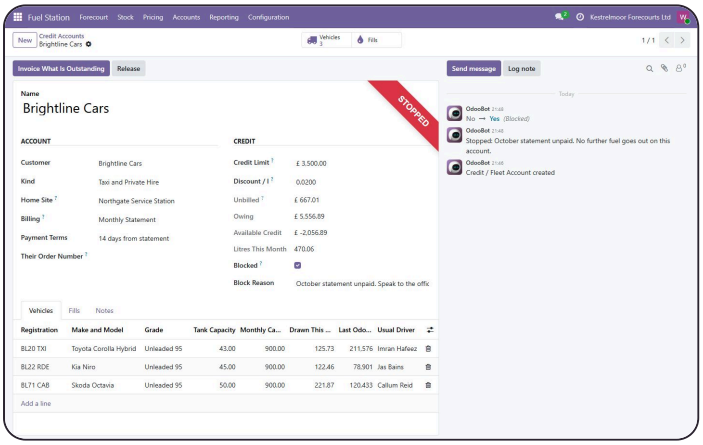


11

Stop the Account

Write the reason first, then press Stop the Account. No further fuel goes out on it whatever the limit says, the reason goes on the chatter and the account stopped email is queued to the customer. Release lifts the stop.


Statements

The monthly statements job runs on the Statement Day in the settings. For every account on Monthly Statement billing it collects the confirmed fills of the month just gone and raises one customer invoice: one line per fill with the date, plate, litres and net price. The pump price already includes VAT, so the unit price is worked back through the product's taxes until the line total, VAT included, equals the docket. Invoice What Is Outstanding on an account bills every confirmed fill straight away.

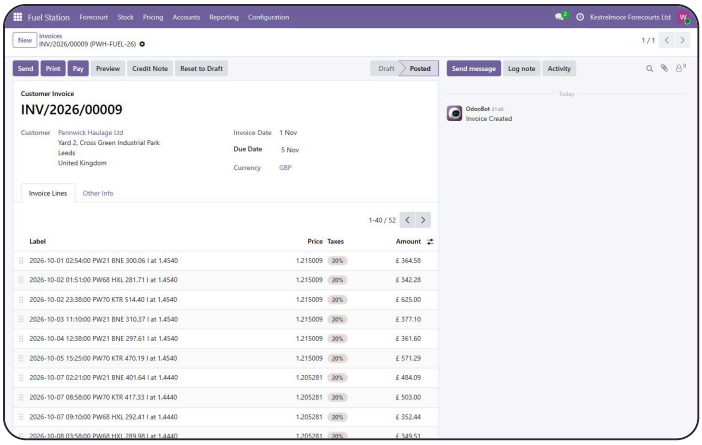

12 The statement invoice

A normal Odoo customer invoice, on the site's sales journal, with the account's order number as the reference. Post it, send it and record the payment as you would any invoice.

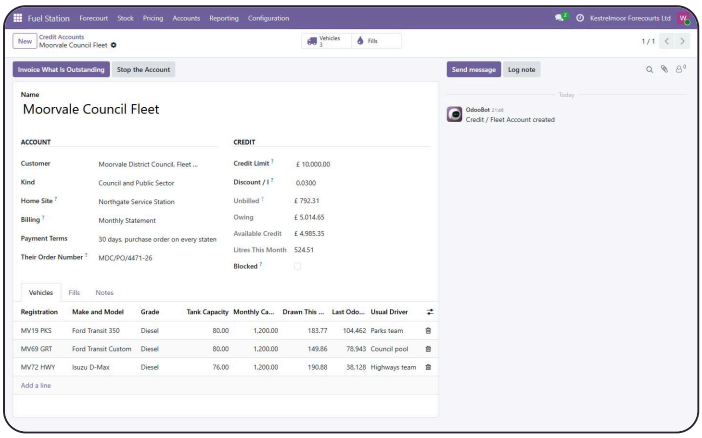

13 Their order number

Moorvale Council Fleet carries a purchase order reference that is printed on every statement.

> Invoice Each Fill can be chosen as the billing method, but no code acts on it: the monthly job only bills accounts on Monthly Statement. Use Invoice What Is Outstanding for those accounts.

PART 10 The forecourt shop


Dry stock on the shelf is counted by the shop and compared with what Odoo says is in the warehouse. Shop sales go on the shift alongside the fuel, so the till reconciles against everything that was sold, not just the pumps.

IN THIS PART YOU WILL LEARN

- Shop items, prices, cost and margin
- The shelf count, Odoo stock and shrinkage
- Low stock and the reorder level


TRY IT YOURSELF ON THE DEMO

1. Open Stock, Shop Stock and filter Low Stock
2. Open an item with negative shrinkage
3. Open Reporting, Shop Sales

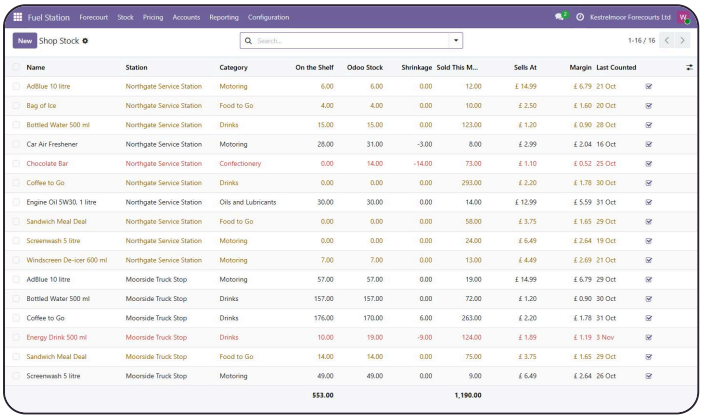

1 Stock, Shop Stock


One line per item per site, with category, the shelf count, Odoo stock, shrinkage, the reorder level and the selling price. Managers also see cost and margin. Items at or below the reorder level are highlighted; Counted Today on a line stamps the count date.

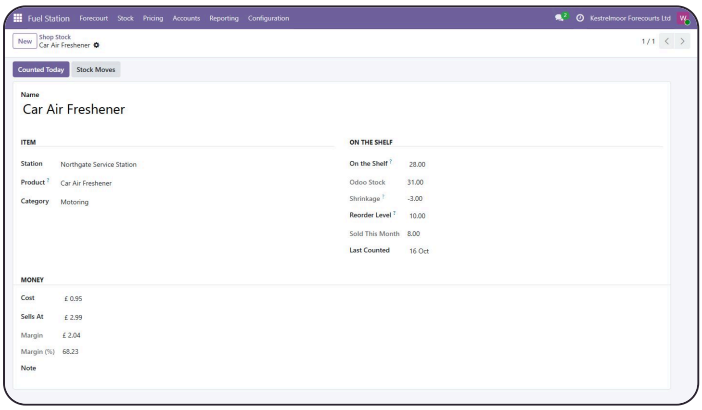

2 An item


Each item points at an Odoo product, which is what it is costed against. On the Shelf is the shop's own count, reduced by every closed shift's shop lines. Odoo Stock is what the site's shop warehouse holds; Shrinkage is the shelf less Odoo. Stock Moves opens the product's stock move history.

A shift that sells more of an item than the shelf holds cannot be closed: recount first, or the shrinkage figure is worthless.

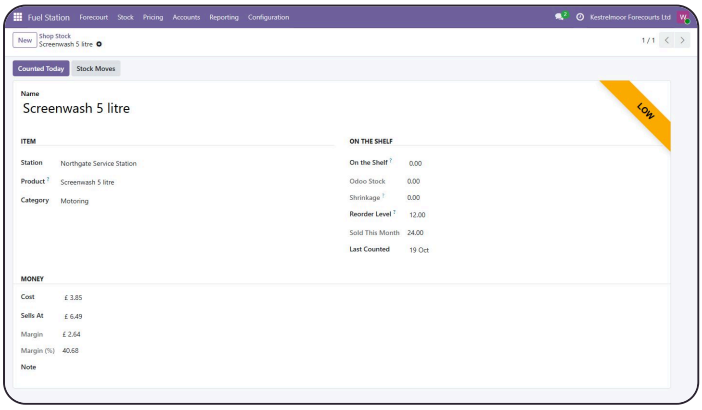

3 Running low

An item at or below its reorder level shows as Low Stock, and the shop lines running low job lists them on the site's chatter.

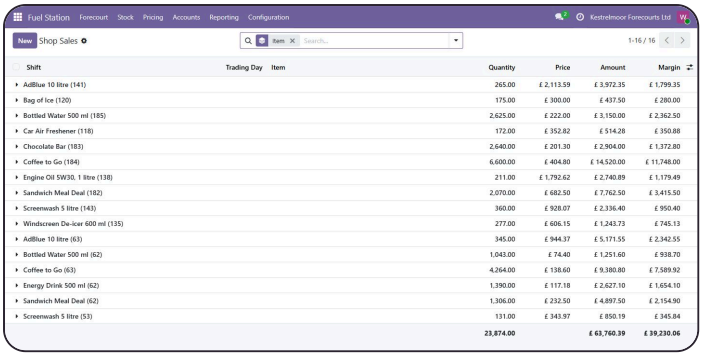

4


Reporting, Shop Sales

Every shop line on every shift, with quantity, price and amount, and cost and margin for managers.

> Shop sales reduce the shelf count but do not create stock moves in Odoo, so Odoo Stock only changes when you receive or adjust stock in Inventory. Shrinkage reads true only if the warehouse is kept in step, for example with a stock adjustment after each count.


PART 11 Reporting

Three report menus for managers, plus pivots and graphs on the main lists, and three printed documents.

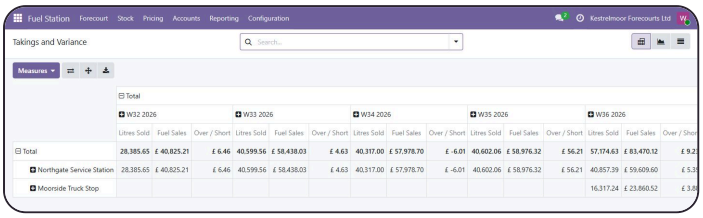


1 Takings and Variance

A pivot of shifts by trading day and site with sales, expected cash and over or short. Expand by supervisor to see whose shifts come out short.

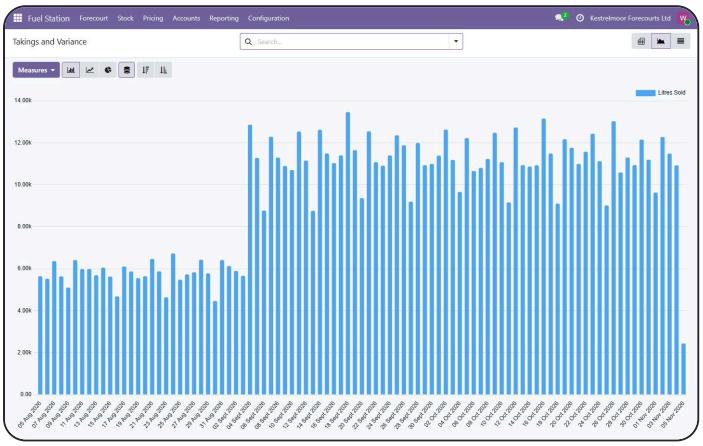


2 The graph

The same figures as a chart.

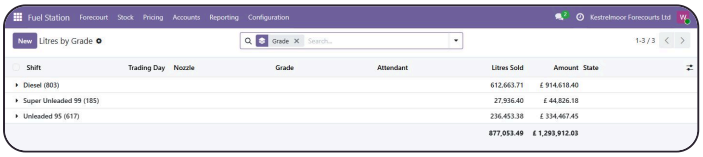

3 Litres by Grade

Nozzle readings on closed and signed off shifts, grouped by grade, with litres and amounts. Group by attendant to see who sold what.

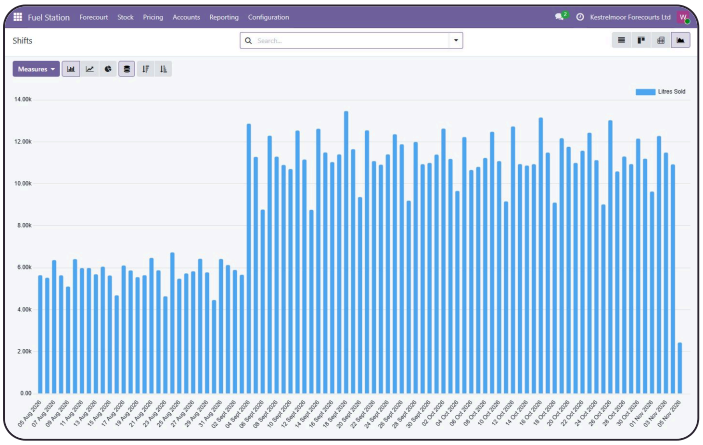

4 Throughput

Litres sold per trading day from the shift list's graph view.

Document	From	Paper
Shift Reconciliation	Shift, Print Z Reading or the Print menu	80 mm roll
Goods Received Note	Delivery, Print GRN	Company default
Wet Stock Variance	Variance, Print	Company default

Statement invoice	Customer invoice	Standard Odoo invoice

Kestrelmoor

Kestrelmoor Forecourts Ltd
Unit 4, Ringway Trading Estate
Leeds
LS11 0XX
United Kingdom

Pennwick Haulage Ltd
Yard 2, Cross Green Industrial Park
Leeds
United Kingdom

Invoice INV/2026/00009


Invoice Date	Due Date	Source	Reference
01/11/2026	05/11/2026	Pennwick Haulage - October 2026	PWH-FUEL-26

Description	Quantity	Unit Price	Taxes	Amount
2026-10-01 02:54:00 PW21 BNE 300.06 l at 1.4540	300.06	1.215009	20%	£ 364.58
2026-10-02 01:51:00 PW68 HXL 281.71 l at 1.4540	281.71	1.215009	20%	£ 342.28
2026-10-02 23:38:00 PW70 KTR 514.40 l at 1.4540	514.40	1.215009	20%	£ 625.00
2026-10-03 11:10:00 PW21 BNE 310.37 l at 1.4540	310.37	1.215009	20%	£ 377.10
2026-10-04 12:38:00 PW21 BNE 297.61 l at 1.4540	297.61	1.215009	20%	£ 361.60
2026-10-05 15:25:00 PW70 KTR 470.19 l at 1.4540	470.19	1.215009	20%	£ 571.29
2026-10-07 02:21:00 PW21 BNE 401.64 l at 1.4440	401.64	1.205281	20%	£ 484.09
2026-10-07 08:58:00 PW70 KTR 417.33 l at 1.4440	417.33	1.205281	20%	£ 503.00
2026-10-07 09:10:00 PW68 HXL 292.41 l at 1.4440	292.41	1.205281	20%	£ 352.44

A monthly statement as printed by Odoo.

PART 12 Scheduled jobs, roles and limits

Seven scheduled jobs ship with the module, all switched off. Turn on the ones the site needs once the tanks, pumps and accounts are set up.

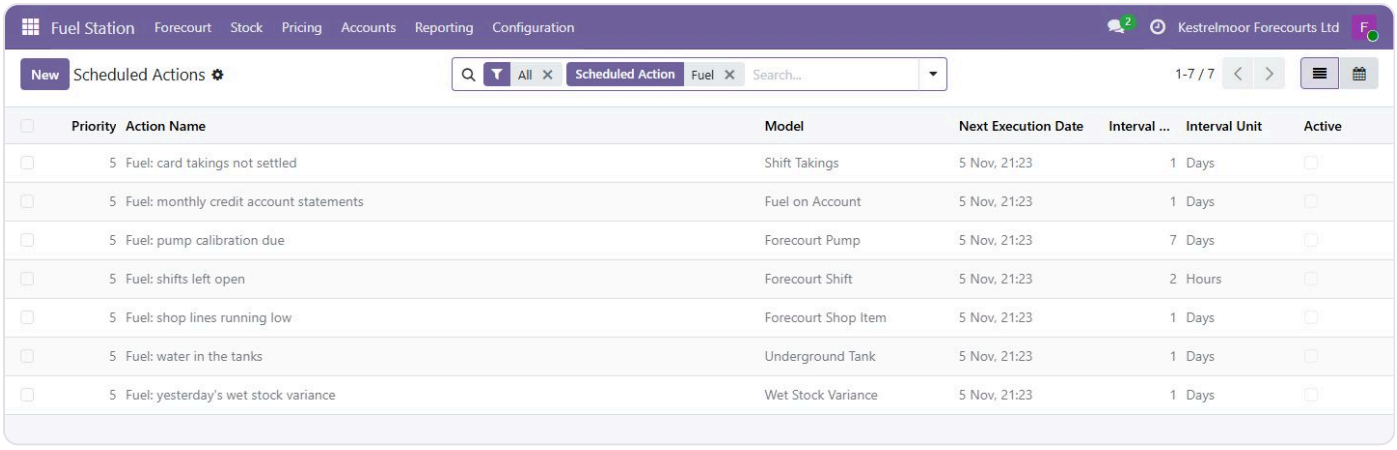

The seven Fuel jobs under Settings, Technical, Scheduled Actions.

Job	Runs	What it does
Yesterday's wet stock variance	Daily	A one day variance per tank, alert email when outside tolerance
Water in the tanks	Daily	Message on each tank whose water is above the alert depth
Shifts left open	Every 2 hours	Message on a shift open longer than its pattern plus an hour
Monthly credit account statements	Daily, acts on the statement day	One invoice per monthly account for last month
Pump calibration due	Weekly	Message on the site for each pump past its calibration date
Shop lines running low	Daily	List of low items on the site's chatter
Card takings not settled	Daily	Message on signed off shifts with card or fleet card totals unsettled after three days

What each role can see

Attendants see only the nozzle readings they are named on and the dips they took or created, and their own attendant record. Supervisors see every nozzle and dip and the whole roster. Landed cost, margin, the fuel card number and the shop cost are visible to Site Managers only. Every record carries its company, and each company sees only its own sites.

Limits worth knowing

LIMIT	WHAT TO DO
No pump controller or forecourt till integration. Meter readings, dips and takings are typed in.	Read the totalisers and the till Z report at shift change.

No tank gauge (ATG) integration.	Type the probe reading as a dip.
Apply to Open Shifts re-prices the whole nozzle reading.	Close and reopen the shift at a price change if you need the split.
Invoice Each Fill is a choice with no code behind it.	Use Invoice What Is Outstanding.
Shop sales do not move Odoo stock.	Adjust the shop warehouse after each count.
Variance periods are by date; a shift is counted by its start time.	Hand over at midnight or dip before midnight.
All scheduled jobs ship switched off.	Turn on the ones you need.

PART 13 A fifteen minute walk-through

If you have the demo open and fifteen minutes, this path shows the whole forecourt. It is also the order to show it to somebody else in.

#	DO THIS	AND NOTICE
1	Configuration, Sites, Northgate Service Station	*The licence countdown, the shift pattern, four pumps and three tanks.*
2	Configuration, Pumps	*Pump 2 in red: its meter seal ran out fourteen months after the last calibration.*
3	Pricing, Pump Prices, then the graph	*Five moves on each grade in three months, and the Unleaded cut waiting in Draft for tomorrow.*
4	Open the Diesel price In Force	*The split: VAT, duty, net of duty, landed cost and about nine pence of margin.*
5	Forecourt, Shifts, the kanban	*One shift open now, one closed waiting for the cash count, one draft for tomorrow.*
6	Open the Open shift, Nozzles tab	*Opening meters and prices pulled in, attendants named, the self service pump left blank.*
7	Open a Reconciled shift	*Fuel plus shop, less account, card and wallet, gives the cash expected; the count landed within pennies.*
8	Filter the shift list on Outside Tolerance	*A short till, and the reason the supervisor had to write before signing off.*
9	Print Z Reading on that shift	*The 80 mm slip with readings, grades and takings.*
10	Stock, Deliveries, a red line	*Over 300 litres short against the ticket after temperature correction.*
11	Stock, Wet Stock Variance	*Two Unleaded weeks out at nearly one per cent, put down to a meter running heavy.*
12	Stock, Tanks, Tank A Diesel	*Water at 21 mm, past the 15 mm alert, and the message the job left on it.*
13	Accounts, Credit Accounts	*Brightline Cars stopped for an unpaid statement; Pennwick Haulage on a 60,000 limit.*
14	Open a statement invoice	*One line per fill, dated, with plate, litres and the net price.*
15	Stock, Shop Stock	*De-icer and ice below their reorder levels, and the shrinkage on chocolate.*

Questions people ask

QUESTION	ANSWER
Does it need Odoo Enterprise?	No. It runs on Odoo 19 Community and installs Inventory and Invoicing, which are part of Community.
Does it read the pumps or the tank gauges?	No. There is no forecourt controller or ATG link. Meter readings and dips are typed in at shift change.
Is it a forecourt till?	No. Shop and card totals are declared on the shift from your till or terminal report.

Can it run several sites?	Yes. Each site has its own code, tanks, pumps, staff, prices and shifts, and several companies can share one database.
What currency and taxes does it assume?	The company's own. Duty is a flat amount per litre and VAT a rate, both set per price change.
Can an attendant see the margin?	No. Cost and margin are for Site Managers only, and an attendant sees only their own nozzles.
Are the statements sent automatically?	The monthly job raises the invoices as drafts on the statement day once you switch it on; posting and sending them is up to you.
What happens if the till is short?	Within tolerance the shift signs off. Past it, a reason is required and recorded, and an email to the supervisor is queued.

PART 14 The menu map

Every screen in the module, on one page.

Forecourt

Shifts	Open, close and sign off; takings and over or short
My Nozzles	Nozzle readings; an attendant sees only their own
Dip Readings	Every dip on every tank, frozen against book stock
Fuel on Account	Fills on fleet and credit accounts

Stock

Tanks	Book stock, last dip, ullage, water
Deliveries	Tankers, temperature correction, short deliveries, bills
Wet Stock Variance	Opening dip, deliveries, sales, closing dip, cause
Shop Stock	Shelf count, Odoo stock, shrinkage, low stock

Pricing

Pump Prices	The board as a log: duty, VAT, cost, margin
Margin by Grade	Managers only: cost and margin per litre

Accounts

Credit Accounts	Limit, discount, owing, stop and release, statements
Vehicles	Grade, tank size, monthly cap, odometer

Reporting

Takings and Variance	Shifts by day and site, over or short
Litres by Grade	Nozzle readings by grade and attendant
Shop Sales	Shop lines on every shift

Configuration

Settings	Tolerances, water alert, temperature, VAT, credit
Sites	Licence, warehouse, journals, shift pattern
Pumps	Kind, brand, calibration
Nozzles	The tank each nozzle draws from, meter reading
Attendants	Badge, login, shifts and litres

Want this on your forecourt?

We set it up from your tank charts, pump list and price board, load your fleet accounts and vehicles, connect the statements and tanker bills to your accounts and VAT, switch on the scheduled jobs you need and train the supervisors. The same module runs one site or a group of forecourts in one database.

way4tech.com · info@way4tech.com