
WAY4TECH SOLUTIONS

Live demo
weighbridge-demo.way4tech.com
w4demo / Demo2026 · Odoo 19, Community

COMPLETE GUIDE · THE TRADE, SETUP AND EVERY SCREEN

WT Weighbridge for Odoo 19

Truck scale tickets in Odoo: the live weight from the indicator, captured only when stable, camera snapshots, stored tare per vehicle, moisture and impurity deductions, manager only manual weights and the quantity set on the receipt or delivery. Every screen and every step, shown on a live demo.

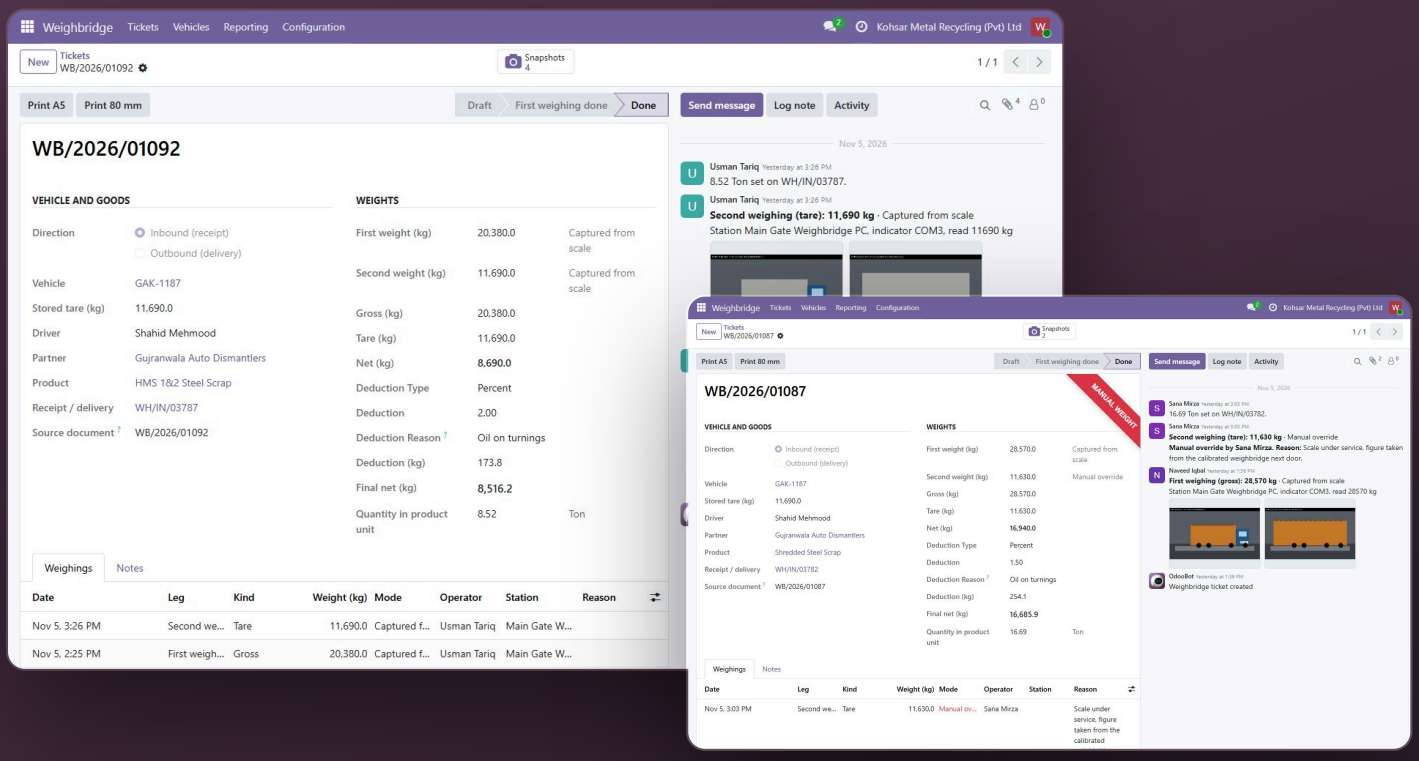

START

About this guide

A weighbridge ticket is money. A scrap yard pays for what the ticket says came in, a mill invoices for what it says went out, and the number on it is only as honest as the way it got there. This guide shows how WT Weighbridge takes that number from the scale indicator instead of from somebody's typing, one screen at a time. You do not need to have used Odoo before.

Who it is for

The yard or plant manager setting the weighbridge up, the operators in the weighbridge office, the stores team who receive and despatch against tickets, and anyone being shown the system for the first time.

How to read it

Front to back the first time. Each part opens with what you will learn and a short thing to try on the live demo, then walks every field and every button.

The live demo

Kohsar Metal Recycling (Pvt) Ltd, an invented scrap yard in Lahore with a 60 tonne weighbridge, three months of inbound scrap and outbound sales to mills, stored tares, deductions, camera snapshots and a few manual overrides. Open it and follow along.

HOW IT WORKS

The demo weighbridge

Address	**weighbridge-demo.way4tech.com**
Sign in	**w4demo / Demo2026**
Operator	Kohsar Metal Recycling (Pvt) Ltd · one paired weighbridge PC at the main gate
Runs on	Odoo 19, Community edition, with Inventory

Every company, person, plate and number on the demo is invented, and the camera snapshots are drawn, not photographs. There is no scale behind the demo, so the live weight on a ticket says Not paired: the weighings you see were recorded as if a paired PC had captured them. The demo is shared and reset from time to time.

What is in the guide

PART 1 How a weighbridge is run

PART 2 Signing in, settings and pairing the weighbridge PC

PART 3 Vehicles and stored tare

PART 4 A ticket from first to second weighing

PART 5 Outbound loads, stored tare, deductions and cancelling

PART 6 Manual weights

PART 7 Stock and printed tickets

PART 8 Reporting and the audit trail

PART 9 A fifteen minute walk-through

PART 10 The menu map

PART 1 How a weighbridge is run

Every truck is weighed twice: once loaded and once empty. The difference is what was delivered or collected. Everything else on a ticket, the deductions, the stored tare, the camera snapshot, exists to make that difference trustworthy.

IN THIS PART YOU WILL LEARN

- Gross, tare and net, and which comes first
- What a stored tare is and why it expires
- Deductions for moisture and impurities
- Where the fraud and the mistakes come from

Two weighings

An **inbound** truck, bringing scrap or grain in, is weighed loaded on arrival (the **gross**), unloads, then is weighed empty on the way out (the **tare**). An **outbound** truck is the other way round: empty on arrival, loaded on the way out. Net is gross less tare. The module knows which leg is which from the direction of the ticket, so the operator only ever presses Capture weight.

An inbound ticket

1. **Draft** — Vehicle, partner, product
2. **First weighing** — Gross, captured loaded
3. **Unload** — Sorting bay, deductions
4. **Second weighing** — Tare, captured empty
5. **Done** — Final net on the receipt

Stored tare

A truck that comes back empty from the same run every day does not always need a second weighing. Its empty weight, the **stored tare**, is kept on the vehicle and can stand in for the tare weighing. Because fuel, a spare wheel or a new body change what a truck weighs, a stored tare is only valid for a set number of days and is refreshed each time the truck is weighed empty.

Deductions

A scrap load soaked by rain, a grain load with too much moisture, turnings dripping oil: the buyer pays for the metal or the grain, not the water and the dirt. A deduction takes a percentage or a fixed number of kilograms off the net, with a written reason. Final net is what goes on the receipt or delivery.

Where it goes wrong

PROBLEM	HOW THE MODULE ANSWERS IT
The operator misreads or mistypes the indicator	The weight comes from the indicator through the agent; nobody types it
A reading taken while the truck is still rolling	Capture works only on a stable reading
A weight copied from another ticket or an old reading	Every capture is signed, tied to this ticket, used once and must be fresh
The wrong truck on the deck	Camera snapshots are taken at the moment of capture
A weight changed afterwards	Weights cannot be written, not even over the API; only capture, stored tare or a manager override set them

A "manual" weight nobody can explain	Only managers can type one, with a reason, and every case is reported

PART 2

Signing in, settings and pairing the weighbridge PC


WT Weighbridge has two halves: the Odoo module, and a free Windows agent on the weighbridge office PC that reads the indicator. This part sets up the module, pairs the PC and explains the stations list.

IN THIS PART YOU WILL LEARN

- Signing in and finding the Weighbridge app
- The settings and what each one changes
- The four step setup checklist on the weighbridge PC
- Stations, pairing keys and the simulator
- Operator and Manager

TRY IT YOURSELF ON THE DEMO


1. Open Configuration, Setup and pairing and read the four steps
2. Open Configuration, Stations, Main Gate Weighbridge PC
3. Open the Back Gate PC and see why it cannot capture

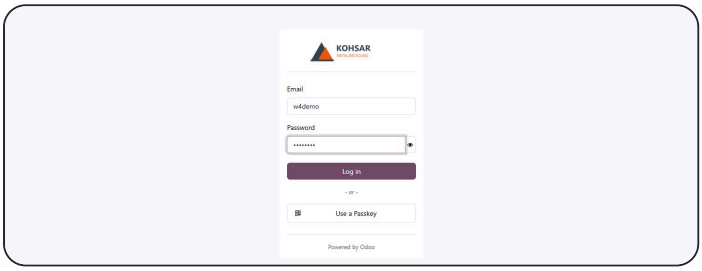

1

Sign in


Open the demo address and sign in with w4demo and Demo2026.

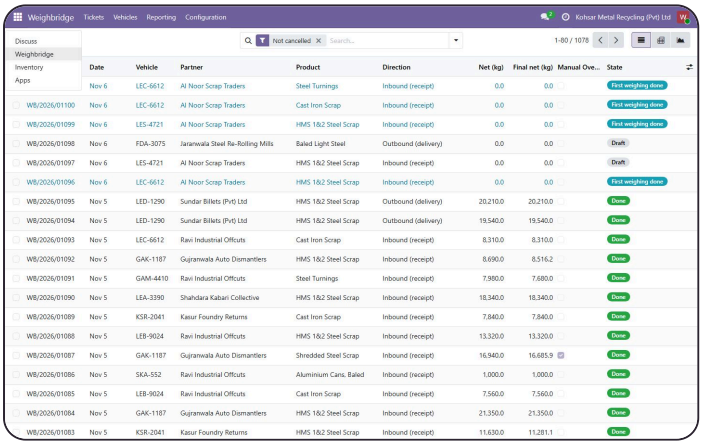

2

Open the Weighbridge app

It sits on the home screen with the other apps. The menu has Tickets, Vehicles, Reporting and Configuration.

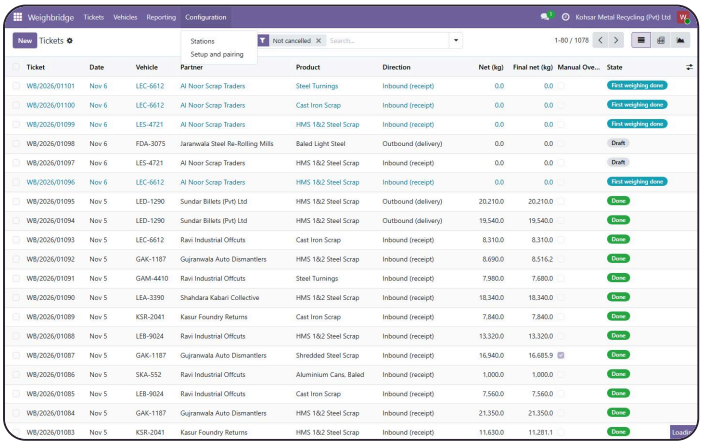


3

Configuration

Settings, Stations and Setup and pairing. Configuration is for Weighbridge Managers; Settings also needs the Odoo settings right.

Settings

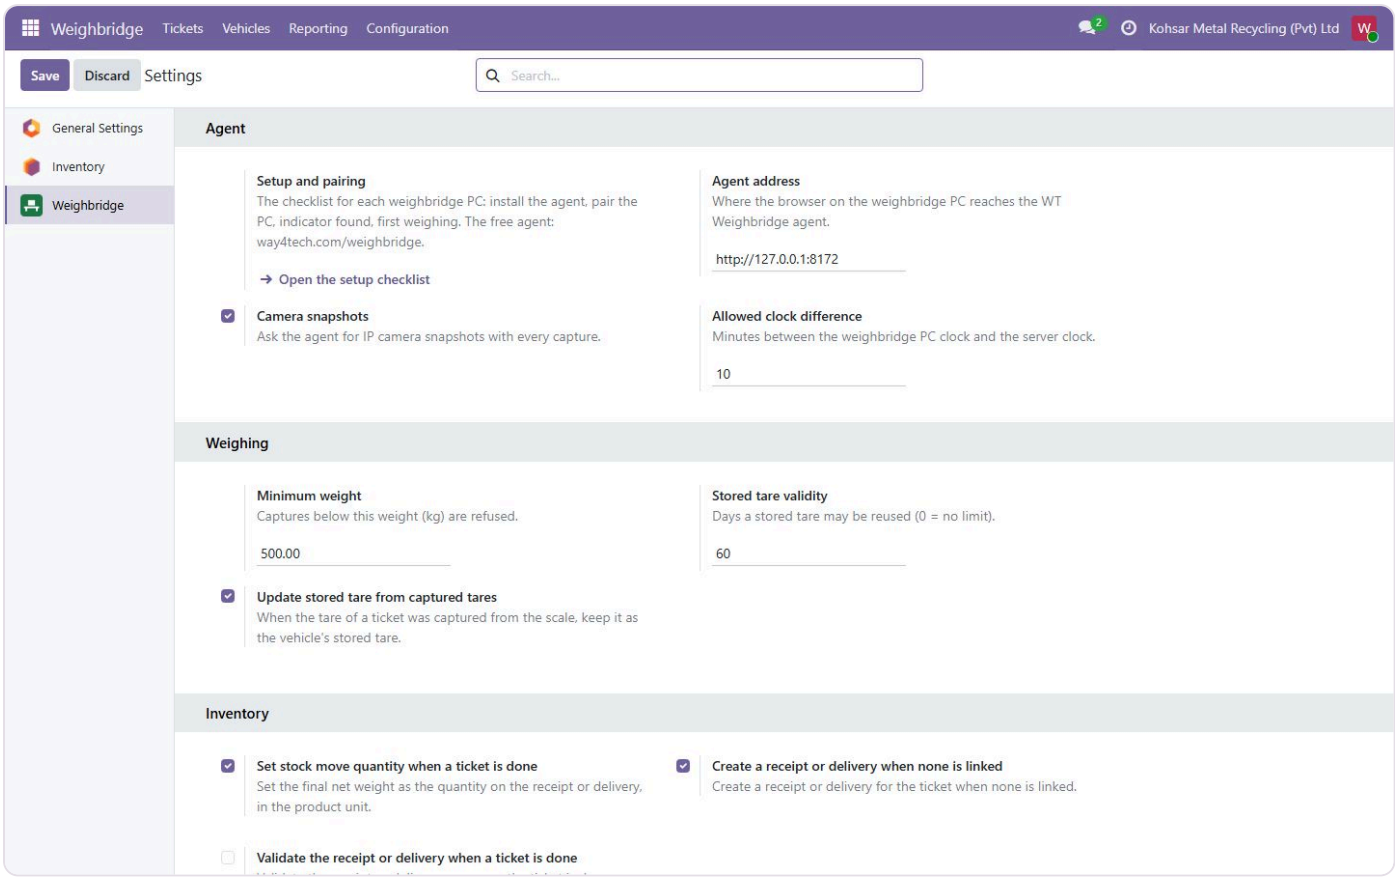


The Weighbridge settings: agent, weighing and inventory.

Setting	Default	What it does
Agent address	http://127.0.0.1:8172	Where the browser on the weighbridge PC reaches the agent
Camera snapshots	On	Ask the agent for IP camera snapshots with every capture
Allowed clock difference	10 minutes	A capture whose time differs more than this from the server is refused
Minimum weight	100 kg (demo 500)	Captures below this are refused: an empty platform
Stored tare validity	90 days (demo 60)	How long a stored tare may be reused; 0 means no limit
Update stored tare from captured tares	On	A captured tare becomes the vehicle's stored tare when the ticket is done
Set stock move quantity when a ticket is done	On	The final net goes on the receipt or delivery in the product unit
Create a receipt or delivery when none is linked	Off (demo on)	The ticket raises its own receipt or delivery
Validate the receipt or delivery when a ticket is done	Off	Validate it straight away

The setup checklist

Pairing is done once on each weighbridge PC, in the browser the operators use, under Configuration, Setup and pairing. The checklist ticks each step itself as it finds the agent, the pairing, a reading and a first weighing.

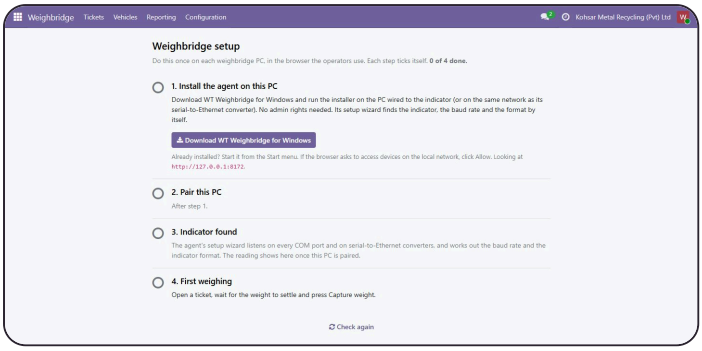


4

Weighbridge setup

Step 1 looks for the agent at the agent address and offers the download. Step 2 pairs this PC. Step 3 shows the indicator reading once paired. Step 4 ticks after the first captured weighing on that station.

On the demo you see 0 of 4 done, because there is no agent on your computer. That is exactly what an unpaired PC looks like.

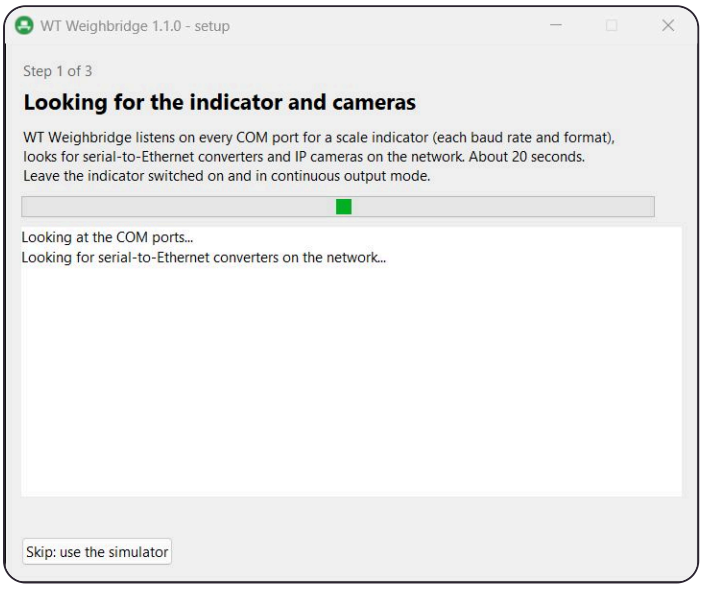


5

The agent finds the indicator

On its first run the agent's setup wizard listens on every COM port and looks for serial-to-Ethernet converters and IP cameras.

The agent windows in this guide come from the module's own store listing, not from the demo.

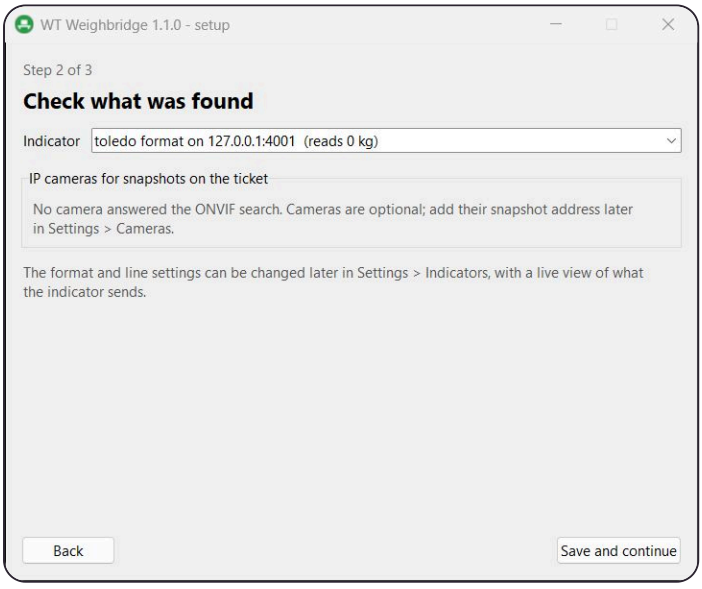

6

Check what was found


The wizard shows the indicator and format it recognised and the weight it read. Cameras are optional.



7

Pair this PC

In Odoo, name the PC and press Pair this PC. The browser asks to open the agent; the agent asks whether to allow this Odoo. Click Allow. No code to type.

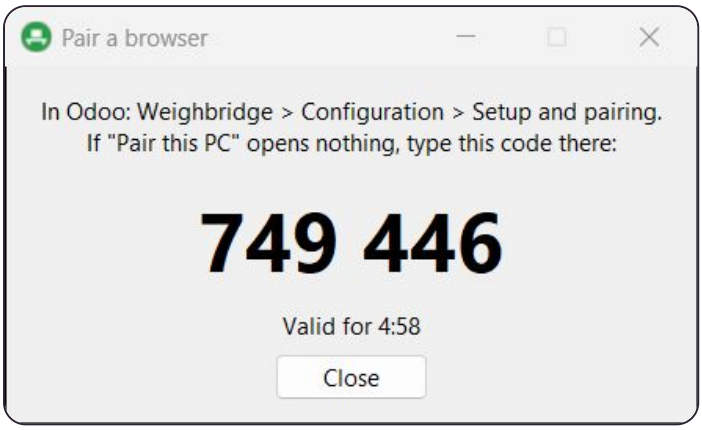


8

The fallback code

If nothing opens, the agent's tray menu shows a six digit code to type into the checklist instead.


Stations

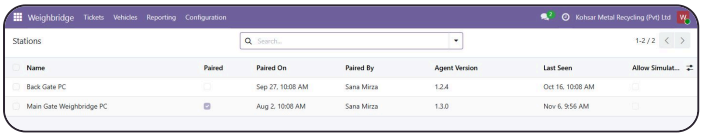

9

Configuration, Stations


Each paired PC is a station, with its agent version, when it was last seen and the indicator it reads. Stations are created only by pairing; there is no New button.

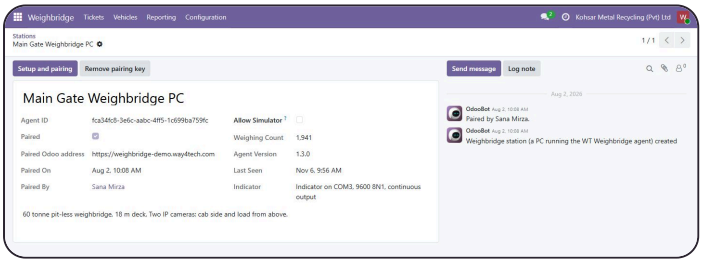

10

A paired station

The agent ID, the Odoo address it was paired from, when and by whom, and the number of weighings captured on it. The pairing key itself is visible only to Odoo administrators. Allow Simulator accepts readings from the agent's built in simulator: for training only, never on a live site.

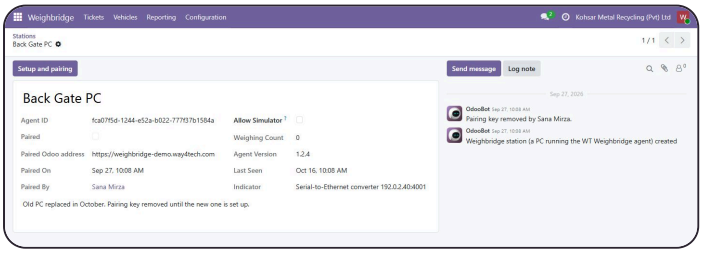

11

Remove pairing key

The Back Gate PC had its key removed when the old PC was replaced. Until it is paired again, any capture from it is refused.

Role	Can
Operator	Create tickets, capture weights, use stored tare, print tickets, cancel a ticket still in draft
Manager	Also pair PCs, enter manual weights with a reason, set stored tare by hand, cancel any ticket, see the manual overrides and all weighings reports

PART 3 Vehicles and stored tare


Every truck that crosses the bridge is a vehicle record: its plate, who owns it, its usual driver and its stored tare.

IN THIS PART YOU WILL LEARN

- Adding a vehicle, and why plates are normalised
- How the stored tare is kept up to date
- Setting a stored tare by hand

TRY IT YOURSELF ON THE DEMO


1. Open Vehicles and sort by Tare taken on
2. Open LES-4721 and read the chatter
3. Open LXR-718, whose tare was set by hand

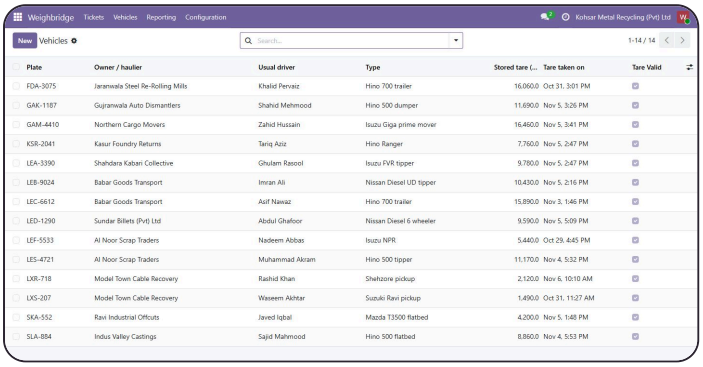

1

Vehicles

Every truck with its owner or haulier, usual driver, type, stored tare, when it was taken and whether it is still valid.

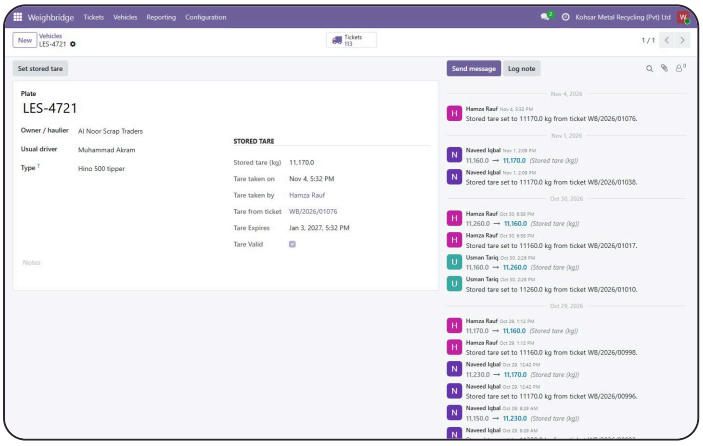


2

A vehicle

The plate is stored in capitals, and spaces, dashes and dots are ignored when checking for duplicates, so LES-4721 and les 4721 are the same truck. The Stored Tare block shows the weight, when and by whom it was taken, the ticket it came from and when it expires. The chatter keeps every change.


With Update stored tare from captured tares on, every done ticket whose tare was captured from the scale refreshes the stored tare.

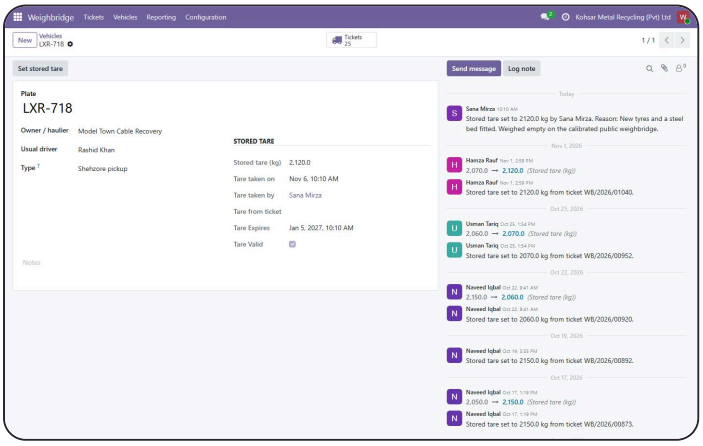

3

A tare set by hand

This pickup had new tyres and a steel bed fitted and was weighed empty elsewhere, so a manager set its stored tare by hand with the reason.

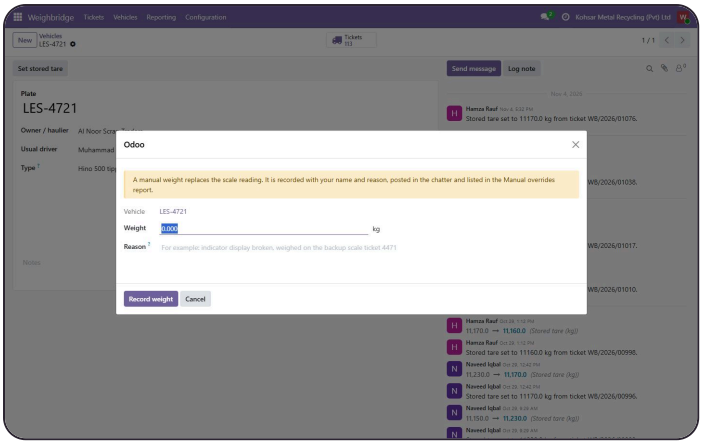

4

Set stored tare

Managers only. Type the weight in kg, t or lb and the reason (at least ten characters). The stored tare fields cannot be edited any other way.

PART 4 A ticket from first to second weighing


The ticket is the whole job: which truck, whose goods, which direction, and two weighings taken from the indicator.

IN THIS PART YOU WILL LEARN

- Raising a ticket
- The live weight and Capture weight
- What Odoo checks on every capture
- Camera snapshots and the chatter


TRY IT YOURSELF ON THE DEMO

1. Open Tickets and filter Waiting for second weighing
2. Open a done inbound ticket and press Snapshots
3. Read the chatter of the same ticket

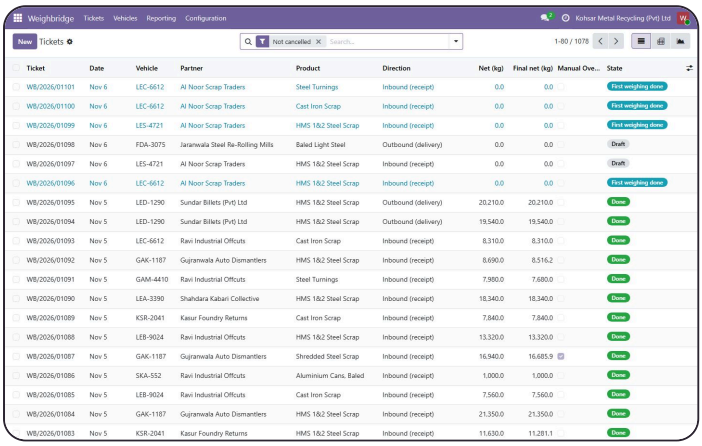


1 Tickets

Every ticket with date, vehicle, partner, product, direction, net and final net, whether a weight was typed by hand, and the status. Tickets waiting for their second weighing are in blue. Cancelled tickets are hidden by the default filter.

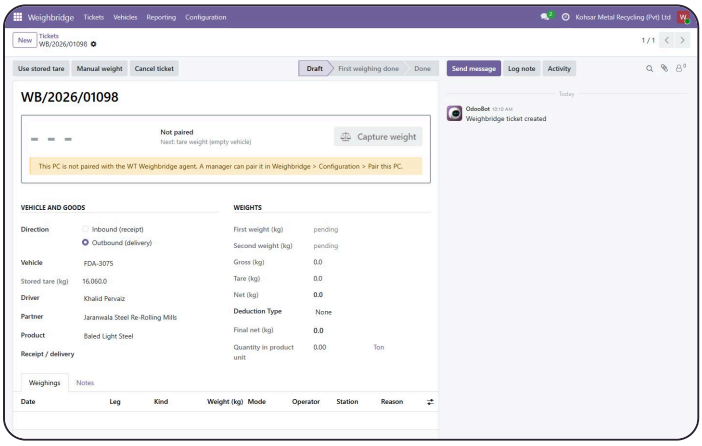

2 A new ticket


Choose Inbound (receipt) or Outbound (delivery), the vehicle, the partner (filled from the vehicle's owner), the driver and the product. The product must be counted in a weight unit such as kg or tonnes. A receipt or delivery can be linked now, or created when the ticket is done.

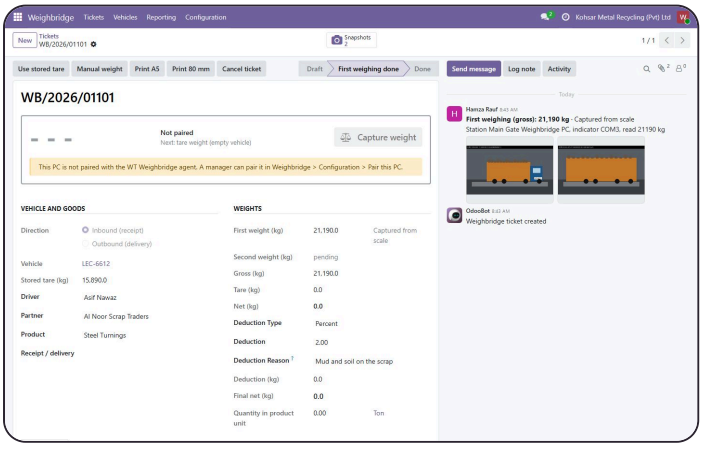

3 The live weight

On the weighbridge PC the top of the ticket shows the indicator reading in large figures, green when it is stable, with what the next weighing will be (gross or tare). Capture weight is enabled only on a stable reading. On a PC that is not paired, as here, the panel says so and tells a manager where to pair it.

Direction, vehicle and company are fixed after the first weighing.

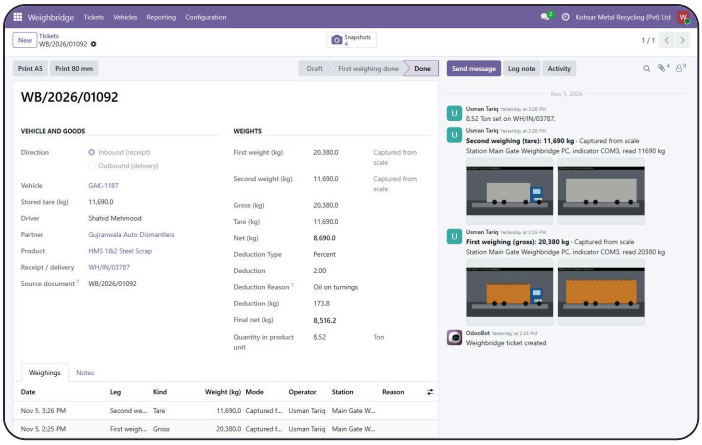

4

Done

The second capture completes the ticket: gross, tare, net, the deduction and the final net, converted into the product's unit. The Weighings tab lists each weighing with its time, leg, kind, weight, mode, operator and station.



5

Snapshots

With camera snapshots on, the agent sends a picture from each configured camera with every capture. They are attached to the ticket and the chatter; the Snapshots button lists them.

What Odoo checks on every capture

Check	Refused when
Paired station	The PC is not paired for this company, or its key was removed
Signature	The capture is not signed with the station's key, so the weight was not recorded
Stable	The reading was not stable
Simulator	The reading came from the agent simulator and the station does not allow it
Ticket	The capture was taken for another ticket
Time	The PC clock differs from the server by more than the allowed minutes
Used once	The same capture was already used
Cameras	An image does not match the signed capture
Weight	Below the minimum weight, or a gross not higher than the tare

> Weights and the status cannot be written on a ticket by a user or over the API. They move only through a capture, Use stored tare or a manager's manual weight.

PART 5 Outbound loads, stored tare, deductions and cancelling


The same ticket handles a delivery the other way round, can skip a weighing with a valid stored tare, and takes moisture or impurities off the net.

IN THIS PART YOU WILL LEARN

- Outbound tickets
- Use stored tare
- Percent and kilogram deductions
- Cancelling and what is locked

TRY IT YOURSELF ON THE DEMO


1. Open a done outbound ticket
2. Find a ticket whose second weighing says Stored tare
3. Open a ticket with a kilogram deduction

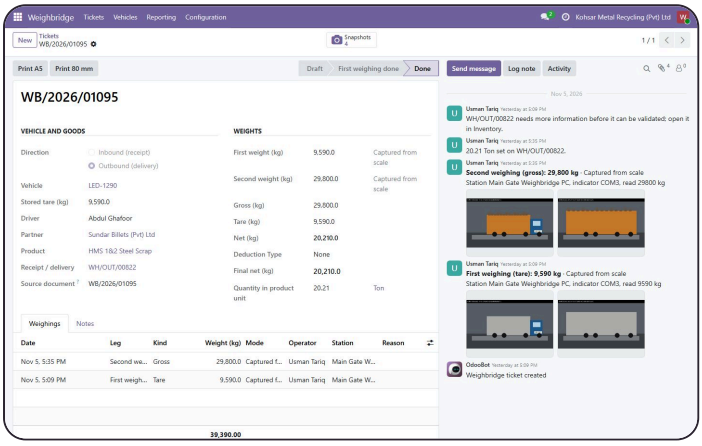

1

An outbound ticket

Empty on arrival (tare first), loaded on the way out (gross second). The final net goes on the delivery to the customer.

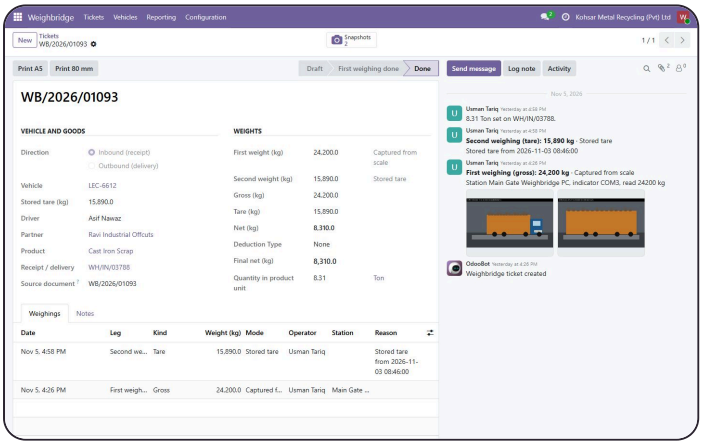


2

Use stored tare

When the next weighing is the tare and the vehicle has a valid stored tare, Use stored tare appears. After a confirmation it records the stored tare as that weighing, with the date it was taken in the reason, and the truck does not have to cross the bridge empty.


A stored tare used this way does not refresh the vehicle's stored tare; only a captured tare does.

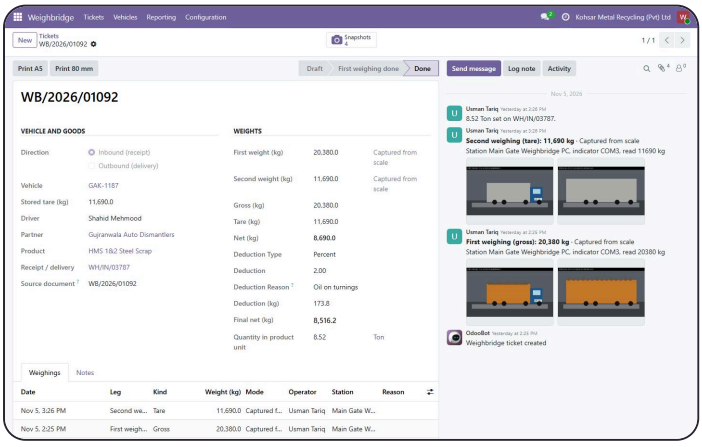

3

Percent deduction


Deduction Type Percent with a value and a reason, for example moisture. Deduction (kg) is the net times the percentage, rounded to 0.1 kg, and Final net is the net less it. A percentage above 100 is refused.

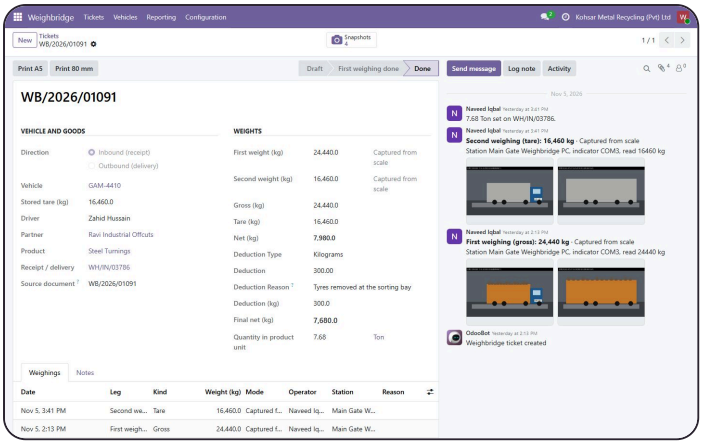

4

Kilogram deduction

Deduction Type Kilograms takes a fixed weight off, for example wooden pallets picked out of the load. It cannot be larger than the net.

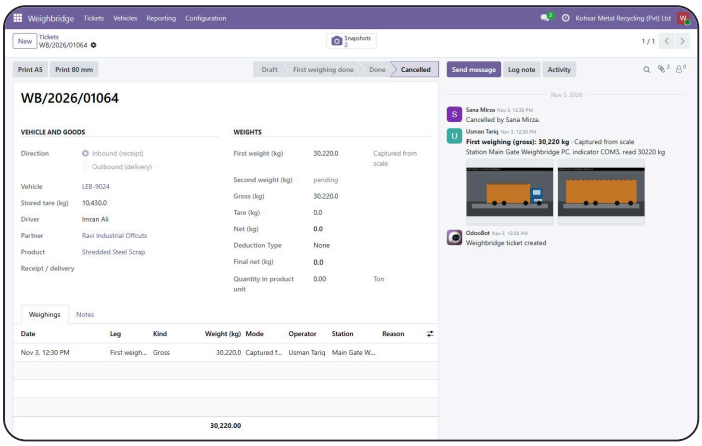

5

Cancel ticket

An operator can cancel a draft ticket. After the first weighing only a manager can, and the weighings stay in the audit trail. A ticket whose stock move is already done cannot be cancelled until the transfer is returned in Inventory.

A done or cancelled ticket is locked except for its notes, and a ticket with weighings cannot be deleted.

PART 6 Manual weights


Sometimes the indicator cannot be used: a power cut, a scale under service, a frozen PC. A manager can then type the weight, and the module makes sure everybody can see that it happened.

IN THIS PART YOU WILL LEARN

- Who can enter a manual weight and how
- The red ribbon, the chatter and the report


TRY IT YOURSELF ON THE DEMO

1. Open Reporting, Manual overrides
2. Open one of the tickets in it

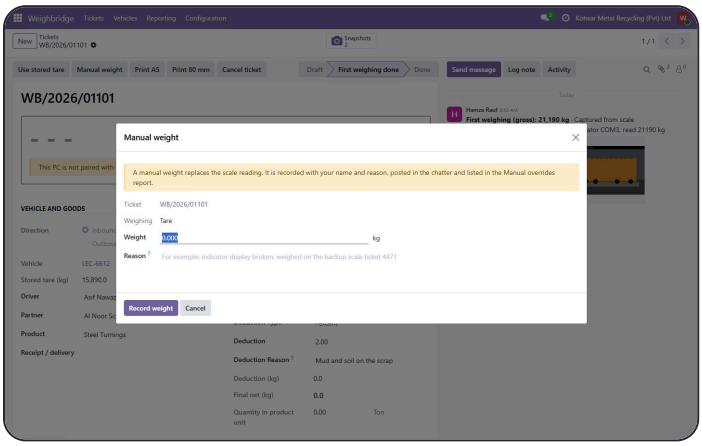


1 Manual weight

On a ticket that still needs a weighing, a manager presses Manual weight, types the weight in kg, t or lb and the reason, at least ten characters. The same minimum weight and gross above tare checks apply.

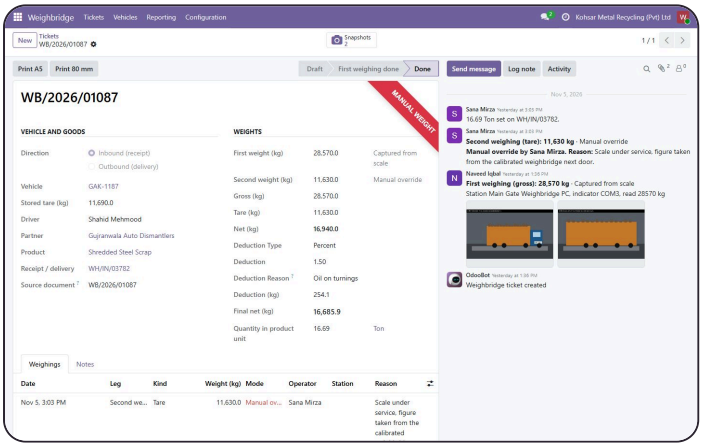


2 The ticket afterwards

The ticket carries a red Manual weight ribbon, the weighing's mode is Manual override in red, and the chatter records who typed it and why.

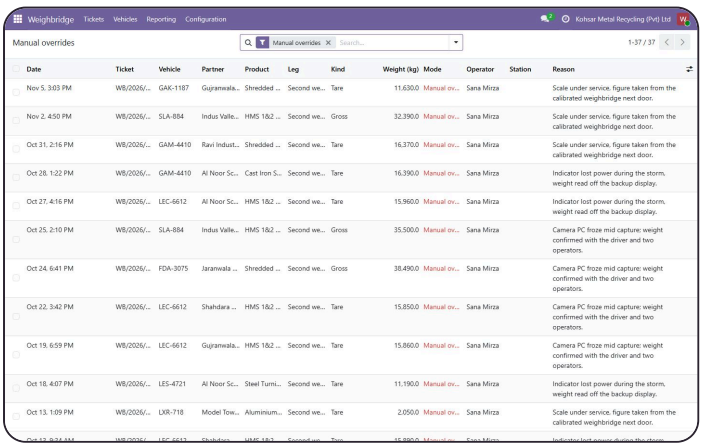

3 Reporting, Manual overrides

Every manual weighing, with the ticket, vehicle, partner, product, leg, weight, operator and reason. Managers only.

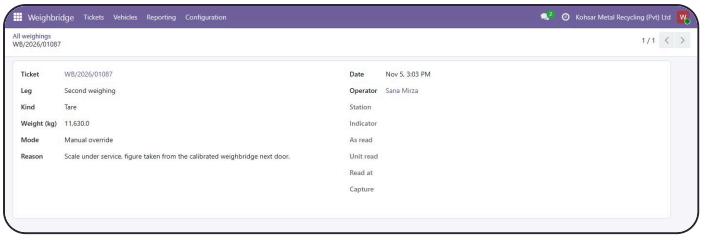

4

The weighing record

Weighings cannot be created, edited or deleted from the screens: they are the audit record.


PART 7 Stock and printed tickets

A done ticket can put its final net on the receipt or delivery, and prints on A5 or on an 80 mm roll.

IN THIS PART YOU WILL LEARN

- How the final net reaches Inventory
- The A5 and 80 mm tickets


With Set stock move quantity when a ticket is done on, and a product counted in a weight unit, a done ticket finds the move for its product on the linked receipt (inbound) or delivery (outbound), or adds one, confirms the transfer if it is still a draft, and sets the move's quantity to the final net in the product's unit. With no transfer linked and Create a receipt or delivery when none is linked on, it creates one on the company's first warehouse. With Validate the receipt or delivery on, it validates it as well; if Inventory needs more information first, the ticket says so in the chatter.

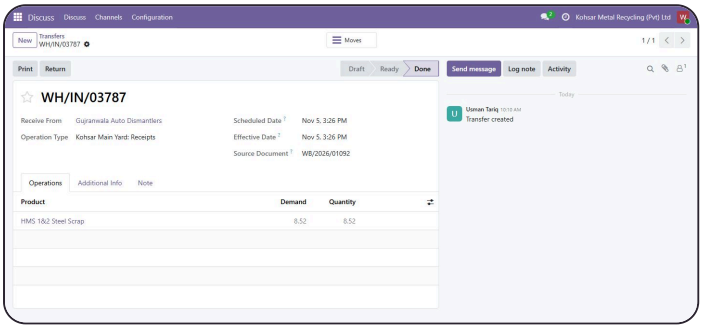

1

The receipt

The receipt created by an inbound ticket, with the ticket as its source document and the final net in tonnes as the quantity.

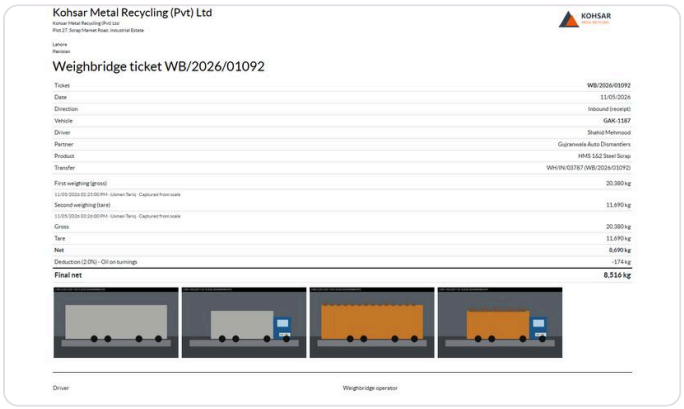

The A5 ticket with both weighings and the snapshots.




The 80 mm roll ticket, marked as a manual weight.

Print A5 and Print 80 mm appear on any ticket past draft. Both show the ticket, date, direction, vehicle, driver, partner, product, the transfer, both weighings with who and how, gross, tare, net, the deduction and final net, with signature lines for the driver and the operator. A ticket with a typed weight is marked as a manual weight.

> Use a product counted in kg or tonnes. A storable product counted in units is refused on a ticket while the stock setting is on.


PART 8 Reporting and the audit trail

Two pivots answer the everyday questions; two manager reports answer the awkward ones.

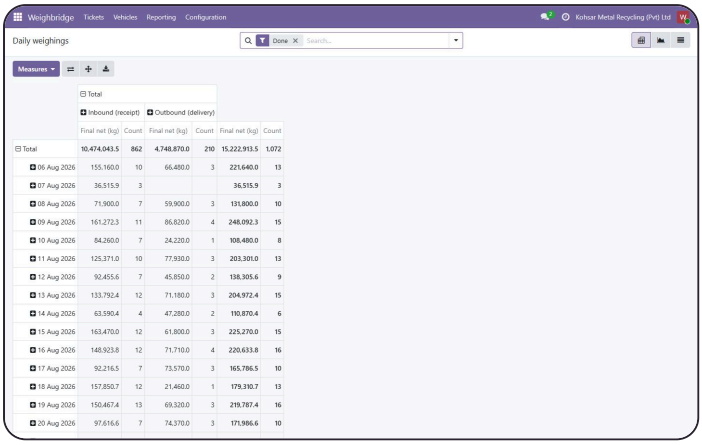


1 Daily weighings

Done tickets by day and direction, with final net and the number of tickets.

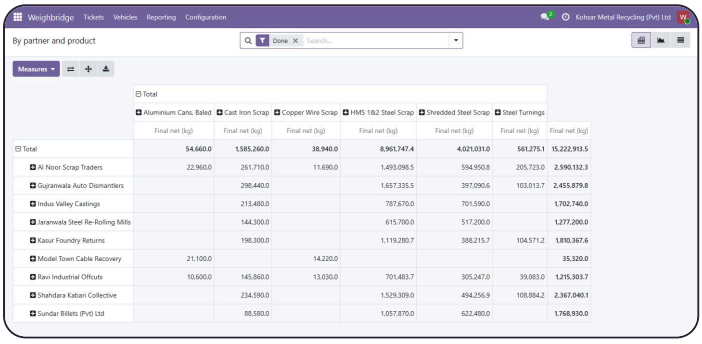


2 By partner and product

Final net per partner and product, which is the figure to check a supplier's or a mill's statement against.

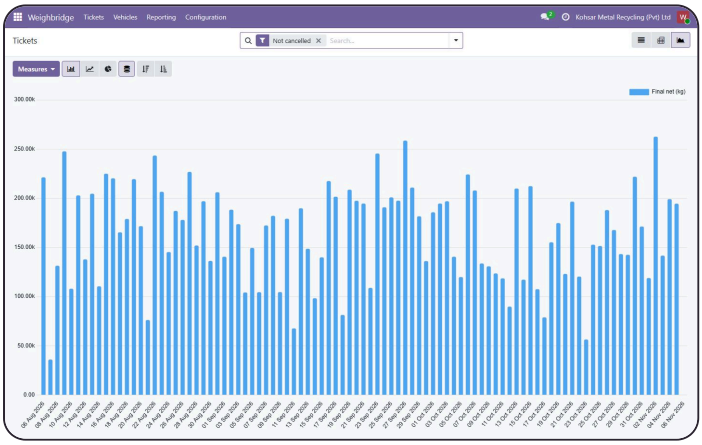


3 The graph

The ticket list as a chart.

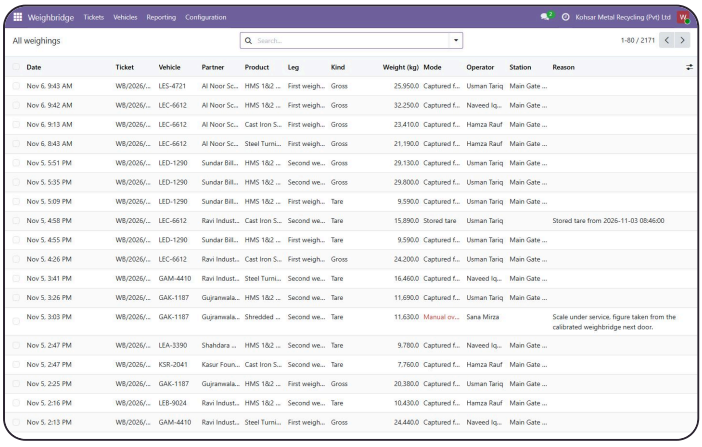

4 All weighings

Every weighing ever recorded, filterable by mode, operator and day. Managers only.

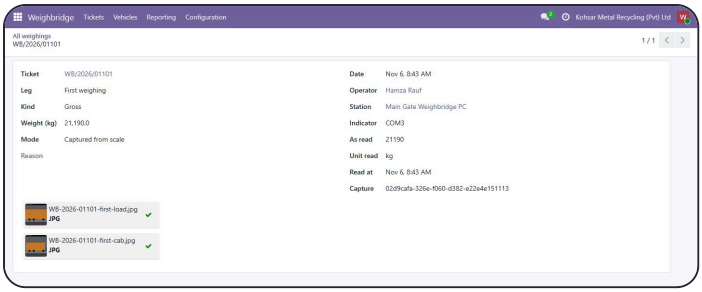

5

One weighing

Leg, kind, weight, the value and unit as the indicator sent them, the mode, station, indicator, the capture id, when it was read and the snapshots.

PART 9 A fifteen minute walk-through

If you have the demo open and fifteen minutes, this path shows the whole weighbridge.

#	DO THIS	AND NOTICE
1	Tickets, filter Waiting for second weighing	*Trucks in the yard right now, weighed loaded and not yet empty.*
2	Open one of them	*The live weight panel saying Not paired, because no agent runs on your computer.*
3	Open a done inbound ticket	*Gross, tare, a 2% deduction for oil on turnings, and the final net in tonnes.*
4	Press Snapshots	*Cab and load pictures for each weighing.*
5	Read its chatter	*Each weighing with station, indicator and the raw reading.*
6	Open a ticket with Stored tare as its second weighing	*One crossing instead of two.*
7	Reporting, Manual overrides	*Every typed weight, by a manager, with the reason.*
8	Open one: the red ribbon	*And the 80 mm print marked as a manual weight.*
9	Vehicles, LES-4721	*The stored tare and its history, refreshed from captured tares.*
10	Reporting, By partner and product	*Tonnes per supplier and grade of scrap for the quarter.*
11	Configuration, Stations	*The paired gate PC and the back gate PC with its key removed.*
12	Configuration, Setup and pairing	*The four steps a new weighbridge PC goes through.*

Questions people ask

QUESTION	ANSWER
Does it need Odoo Enterprise?	No. It runs on Odoo 19 Community and needs Inventory.
Which indicators work?	The free Windows agent reads indicators with a continuous serial output over a COM port, a USB serial adapter or a serial-to-Ethernet converter. See the agent page on way4tech.com.
Can the operator type a weight?	No. Only a Weighbridge Manager can, with a reason, and it is reported.
Can weights be changed through the API?	No. Weights and the status are protected against direct writes.
Do I need cameras?	No. Snapshots are optional and can be turned off in the settings.
Does it invoice the supplier or the customer?	No. It sets the quantity on the receipt or delivery; billing is done from Purchase, Sales or Invoicing.
Can it run several weighbridges?	Yes. Each PC is paired as its own station, and records are kept per company.
Is there a mobile or kiosk screen for drivers?	No. Tickets are run from the browser on the weighbridge PC.

PART 10

The menu map

Every screen in the module, on one page.

Tickets

Tickets	Every ticket: draft, first weighing done, done, cancelled

Vehicles

Vehicles	Plate, owner, driver, stored tare and its validity

Reporting

Daily weighings	Final net by day and direction
By partner and product	Final net per partner and product
Manual overrides	Managers: every typed weight, with the reason
All weighings	Managers: the audit record of every weighing

Configuration

Settings	Agent address, cameras, minimum weight, tare, stock
Stations	Each paired weighbridge PC
Setup and pairing	The four step checklist on the weighbridge PC

Want this on your weighbridge?

We wire the agent to your indicator, pair the weighbridge PC, set up your products in weight units and your receipts and deliveries, connect the cameras and train the operators. Installation help, cabling advice and custom indicator formats are available.

way4tech.com · info@way4tech.com