


USER MANUAL

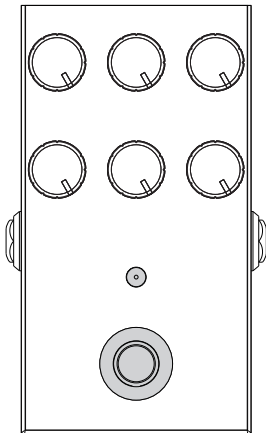

ELEMENTAL

Preface

Thank you for buying our product, ELEMENTAL is a powerful digital modeling delay effector, which can make you travel in various elements, to achieve a significant psychedelic effect, to bring you a unique delay experience. We try our best to provide you with this high quality effector, I hope you can like it!

Attentions

■ The power supply:

Please use 9V(+/-10%) adapter (negative inside and positive outside), otherwise it may cause equipment damage. Please unplug the power when not in use or during thunderstorm weather.

■ The connection:

Be sure to turn off the power of related equipment before connecting or disconnecting the device.

■ The electrical interference:

The electromagnetic wave of radio, television and other equipment may cause interference to the equipment, so please try to stay away from radio, television and other equipment.

■ The location:

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:


- a. Heat sources
- b. Magnetic fields
- c. Sunlight
- d. High temperature or moist district
- e. Excessively dusty or dirty locations
- f. Strong vibrations or shocks

Features

- Artistic appearance design.
- There are nine delay effects, which are suitable for most music styles.
- ELEMENTAL gives you a psychedelic, deep timbre, and it has a good dynamic response.
- Delay time of up to 3,000 ms.
- Two power supply methods are available.
- High-performance digital signal processor, meticulous delay effect.
- TAP mode for using the footswitch to get speed.
- HOLD mode for freezing the delay wet sound, get the unlimited voice delay function.

Knob and interface introduction

- ①. **TIME knob:** Adjust the time of the delay effect, under different delay effects, the adjustable range of parameters is not exactly the same, please see the timbre introduction.(When in HOLD mode, this knob temporarily loses function) .
- ②. **TYPE knob:** Select the delay effect to use, a total of 9 delay effects, please see the timbre introduction.
- ③. **FEEDBACK knob:** Feedback times of the delay.(When in HOLD mode, this knob temporarily loses function) .
- ④. **MIX knob:** Adjust the mixing ratio of dry and wet signals.
- ⑤. **PARAM knob:** In different delay effects, the function of the knob is not exactly the same, please see the timbre introduction.(When in HOLD mode, this knob temporarily loses function) .
- ⑥. **MOD knob:** There is a little amount of modulation timbre in the delay wet sound, this knob is used to adjust the effect of modulation, the function of the knob is not exactly the same, please see the timbre introduction.(When in HOLD mode, this knob temporarily loses function) .
- ⑦. **Power interface:** Use 9V DC transformer (positive outside and negative inside).
- ⑧. **USB-C interface:** Support 5V power supply, it is recommended to use 5V 1A adapter.
- ⑨. **Output interface:** 1 / 4 " mono audio output interface.
- ⑩. **Input interface:** 1 / 4 " mono audio input interface.
- ⑪. **LED:** Indicates the status of the effector. The light is on and means that the effect is on. The LED is out, indicating the BYPASS state. The light flashes, indicating that the TAP mode is on. The light is on (Dark blue, lower brightness than normal mode), indicating that the HOLD mode is on.
- ⑫. **Footswitch:** Trigger the footswitch once to enable/bypass the effector. If device in BYPASS state, you can trigger the footswitch twice or more to enable the TAP mode. If device in the non-BYPASS state, you can trigger the footswitch three times or more to enable the TAP mode. The time interval of each trigger needs to be controlled within 1.5 seconds. With the above actions you can get the delay-time you want.Hold the footswitch for 1 second to enter HOLD mode. Hold for another 1 second to exit the HOLD mode.

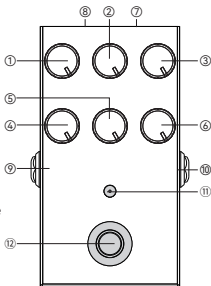

Mode introduction

■ **NOMAL mode**——Trigger the footswitch once to enable the effector, we call this NOMAL usage mode, now the LED is steady blue.

■ **BYPASS mode**——Trigger the footswitch once to bypass the effector, we call this BYPASS mode, now the LED is off.

■ **TAP mode**——If device in BYPASS state, you can trigger the footswitch twice or more to enable the TAP mode. If device in the non-BYPASS state, you can trigger the footswitch three times or more to enable the TAP mode. With the above actions you can get the delay-time you want.

The time interval of each trigger needs to be controlled within 1.5 seconds, more than 1.5 seconds will be judged as a single trigger, that is turn the effect off or on.

After entering TAP mode, the LED blinking speed is consistent with your triggered speed, then you can adjust the TIME knob to fine-tune the speed.

Tips: If you trigger the footswitch for the speed when in the PATTERN, ICE, REVERSE gear, the TIME parameter is limited to 100-1000ms, so the final acquired speed is not audibly slower than 1 second per time. Therefore, in these 3 gears, it is recommended that the speed of your tapping foot is not slower than 1 second. If tapping speed in the range of 1 to 1.5s, the default output speed of this machine is 1s.

■ **HOLD mode**——When it's in NORMAL or TAP mode, then hold the footswitch for 1s to enter the HOLD mode, the machine will read the delay wet sound at this moment, and this sound will be maintained, the LED will be dark blue.

If you trigger the footswitch once in the HOLD mode, you can switch to BYPASS mode. If you hold the footswitch for 1s to return to the NORMAL mode or TAP mode (what mode to go back to depends on what mode to enter from before).

Timbre introduction

GEAR 1: ANALOG, the analog delay is the delay effect of the signal of the analog tube, and the timbre has the characteristics of retro and warm.

MOD knob: PITCH, We add a little detuning effect to the delay wet sound, this knob adjusting the PITCH parameter of the detuning effect, which is a slightly shifted sound, a retro and charming sound.

PARAM knob: PHASER, A little phase effect is added to the delay wet sound, this knob is used to adjust the amount of phase.

TIME knob: 100-2000ms

GEAR 2: DUAL, two independent delay echoes, the time-lag of the first echo and the second echo achieves a very interesting delay rhythm effect.

MOD knob: CHORUS SPEED, A little chorus effect is added to the Delay wet sound, this parameter adjusts the speed of the chorus.

PARAM knob: TIME-MODE, Adjust the time-lag between the two echoes, the minimum is the equivalent of no time-lag, and the greater the value, the greater the time-lag.

TIME knob: 100–2000ms

GEAR 3: DUCK, When we process the delay wet sound, we add the Noise Gate to the part before the wet sound. Thus, the front part of the wet sound is suppressed to achieve a front evasive effect, and the sound is gradually increased, the dynamics of the delay are more ‘felt’ than ‘heard’.

MOD knob: CHORUS SPEED, A little chorus effect is added to the Delay wet sound, this parameter adjusts the speed of the chorus.

PARAM knob: UNPACK, After this parameter is turned up, the sudden rise in the volume of the wet rear part can be unpacked, so as to achieve a smoother delay dynamic.

TIME knob: 100–3000ms

GEAR 4: TREM, A tremolo effect was added to the delay wet sound.

MOD knob: CHORUS SPEED, A little chorus effect is added to the Delay wet sound, this parameter adjusts the speed of the chorus.

PARAM knob: TIME-SPEED, this parameter adjusts the speed of the tremolo.

TIME knob: 100–3000ms

GEAR 5: REVERSE, Reverse Delay organically interact where space and ambience build as the signal is reversed, re-reversed, reverberated, and reversed again within the feedback network.

MOD knob: PITCH, We add a little detuning effect to the delay wet sound, this knob adjusting the PITCH parameter of the detuning effect, which is a slightly shifted sound, a retro and charming sound.

PARAM knob: PHASER, A little phase effect is added to the delay wet sound, this knob is used to adjust the amount of phase.

TIME knob: 100–1000ms

GEAR 6: dTAPE, Tape delay, it replicates the unique delay style of tape machine, you can not only get the warmth and silky of professional grade tape machine, but also simulate the sound effects of tape in real situations such as CRINKLE, BIAS, and so on.

MOD knob: CHORUS SPEED, the CHORUS SPEED takes on the function of TAPE CRINKLE. This parameter adjusts the amount and severity of tape irregularities, including friction, creases, splices and contaminants. Tape Crinkle characteristics track accordingly to tape speed. Set to minimum for a fresh, clean tape. Set to maximum for a tape that has been mangled and chewed for years.

PARAM knob: GRIT, the GRIT takes on the function of TAPE BIAS. This parameter adjusts tape machine bias, from under biased to over-biased, it sounds like an overdrive of wet sounds. Bias sets the dynamic range and headroom of the wet signal.

TIME knob: 100-2500ms

GEAR 7: ICE, ice delay, a delay effect of cutting off the audio and then playback of the selected audio, you can change the pitch of the selected audio.

MOD knob: CHORUS SPEED, A little chorus effect is added to the Delay wet sound, this parameter adjusts the speed of the chorus.

PARAM knob: PITCH, Change the pitch of the selected audio.

TIME knob: 100-1000ms

GEAR 8: LOFI, a special, retro and destructive delay effect, the wet sound reflects the filter, the vinyl record, the noise lo-fi and many other senses.

MOD knob: CHORUS SPEED, A little chorus effect is added to the Delay wet sound, this parameter adjusts the speed of the chorus.

PARAM knob: GRIT, When the parameter is turned up, it sounds like a overdrive wet sound.

TIME knob: 100-3000ms

GEAR 9: PATTERN, an imaginative delay effect with a more complex delay rhythm.

MOD knob: CHORUS SPEED, A little chorus effect is added to the Delay wet sound, this parameter adjusts the speed of the chorus.

PARAM knob: PATTERN, adjust different delay rhythm and length.

TIME knob: 100-1000ms

Technical parameter

Input	Standard 1/4"jack-MONO/TS
Output	Standard 1/4"jack-MONO/TS
Power supply 1	DC 9V $\geq$ 300mA 
Power supply 2	USB 5V $\geq$ 300mA
Size	112(L)X68(W)X40(H)mm
Weight	About 242g

We will continue to improve our products and reserve the right to modify certain functions and specifications (including but not limited to appearance, packaging design, operation manual, accessories, dimensions, specifications, displays, etc.) without prior notice. Please confirm the product functions and specifications with the local distributor before the purchase. Product pictures and color due to the light error and screen admiration setting. It may be different from the physical product effect. Please refer to the physical object accordingly.

FCC Warning Statement

★ Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

延迟单块效果器说明书

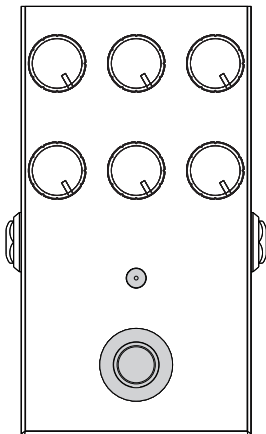

ELEMENTAL

前言

感谢您购买我司产品，ELEMENTAL是一款功能强大的数字建模延迟效果器，使用它能让您的音色在各种元素中遨游，达到非同小可的迷幻效果，给您带来独特的延迟体验。我们尽最大努力给您提供这块高品质效果器，希望您能喜欢它！

注意事项

■ 电源供应：

请使用正确的电源适配器，适配器使用内负外正的9V电源(建议使用9V1A或者5V1A的电源)，擅自使用其他规格电源可能会导致设备损坏！在不需要使用本设备或者雷雨天气时请拔下电源。

■ 连接：

当连接或者断开设备时，请先关闭其他相关设备。

■ 电器干扰：

收音机、电视机等电磁波可能会对设备使用造成信号干扰，因此请尽量远离收音机、电视机等其他电子设备。

■ 放置场所：

为防止变形、变色和其他方面等对产品造成损坏，请尽量避免以下情况：

- a.热源 b.磁场 c.阳光直射
- d.高温潮湿 e.灰尘 f.强烈震荡或摇晃

产品特点

- 富有艺术感的外观设计。
- 一共9种延迟效果，适用于大部分音乐风格。
- ELEMENTAL会让你得到迷幻、深邃的音色，而且它有良好的动态响应。
- 最长3000ms的延迟时间。
- 两种供电方式可选。
- 高性能数字信号处理器，细致入微的延迟效果。
- TAP打拍定速功能。
- HOLD模式，Freeze声音冻结无限延音功能。

旋钮以及接口介绍

①. **TIME旋钮**: 调整延迟效果的时间, 在不同的延迟效果下, 参数的可调节范围不完全一样, 请看音色介绍。在HOLD模式时, 此旋钮暂时失去作用。

②. **TYPE旋钮**: 选择要使用的延迟效果, 一共9种延迟效果, 请看音色介绍。

③. **FEEDBACK旋钮**: 调节延迟的反馈次数。在HOLD模式时, 此旋钮暂时失去作用。

④. **MIX旋钮**: 调节干湿信号的混合比例。

⑤. **PARAM旋钮**: 在不同的延迟效果下, 旋钮的功能不完全一样, 请看音色介绍。在HOLD模式时, 此旋钮暂时失去作用。

⑥. **MOD旋钮**: 用于每种延迟效果MODULATION的调制, 在不同的延迟效果下, 旋钮的功能不完全一样, 请看音色介绍。在HOLD模式时, 此旋钮暂时失去作用。

⑦. **电源接口**: 使用9V直流变压器 (外正内负)。


⑧. **USB-C接口**: 支持5V供电, 建议使用5V 1A适配器。

⑨. **输出接口**: 1/4"单声道音频输出接口。

⑩. **输入接口**: 1/4"单声道音频输入接口。

⑪. **LED灯**: 指示效果器状态。灯亮, 表示效果开启。灯灭, 表示BYPASS状态。灯闪烁, 表示TAP模式开启。灯亮, 亮度低于普通模式, 暗蓝色状态, 表示HOLD模式开启。

⑫. **踩钉**: 单次触发踩钉激活效果器或切换BYPASS状态。在BYPASS状态下连续踩两次或以上踩钉开启TAP功能, 在非BYPASS状态下则需要连续踩3次或以上踩钉才可获取TAP速度, 每次踩的时间间隔需要控制在1.5秒内。长踩1秒则进入HOLD模式。再次长踩1秒可退出HOLD模式。

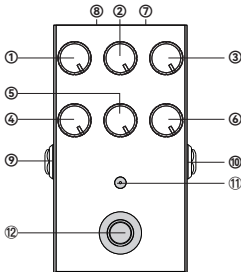

模式介绍

■ 单次触发踩钉激活效果器正常模式——此时LED指示灯为蓝色常亮状态。

■ 单次触发踩钉切换BYPASS模式——此时LED指示灯为熄灭状态。

■ TAP模式——在BYPASS状态时候，连续触发踩钉2次或以上可TAP获取速度（每次触发的时间间隔需在1.5秒以内，超过1.5秒会判定为单次触发踩钉，即关闭或者开启效果），在非BYPASS状态下则需要连续踩3次或以上踩钉才可获取TAP速度。进入TAP模式后，此时LED闪烁速度跟触发的速度一致，此时TIME旋钮可用于微调速度。

温馨提示：若在PATTERN，ICE，REVERSE档位时候TAP获取速度，由于受TIME参数100-1000ms的限制，最终获取的速度听觉上不会慢于1秒每次，因此在这三个档位时候，建议您TAP脚踩时候速度不慢于1秒。如果TAP脚踩速度在1-1.5s的区间，本机默认输出1s的速度。

■ 在正常模式或者TAP模式下长按踩钉1s进入HOLD模式——机器会读取此刻的延时湿声，这个读取后的湿声会一直保持，LED指示灯为暗蓝色状态。在HOLD模式下单次触发踩钉可切换到BYPASS模式，长按踩钉1s回到正常模式或者TAP模式（回到什么模式是取决于之前从什么模式进入）。

音色介绍

档位1: ANALOG，模拟延迟是模拟电子管的信号的延迟效果，音色具有复古、温暖等特点。

MOD旋钮: PITCH，调节失谐效果的PITCH参数，相当于在延迟湿声加入了一点失谐效果，是一种轻微移调的声音，一种复古且迷人的声音。

PARAM旋钮: PHASER，相当于在延迟湿声加入了一点相移效果，调节效果的量。

TIME旋钮: 100-2000ms

档位2: DUAL，两个独立的延迟效果，第一个延时和第二个延时时间的比例达到非常有趣的延迟节奏效果。

MOD旋钮: CHORUS SPEED，可在Delay湿声增加合唱效果，此参数可调节合唱效果的速度。

PARAM旋钮: TIME-MODE，调节两个回音之间的时差，最小值时候就跟相当于没有时差，数值越大时差越大。

TIME旋钮: 100-2000ms

档位3: DUCK，我们在处理延时湿音时候，在湿音发声前部分加入了降噪效果，从而抑制湿音的前部分声音，达到一种前面闪避的效果，有慢慢增大的声音听感。通过非常轻微的闪避，延迟的动态更多的是“感觉到”而不是“听到”。

MOD旋钮: CHORUS SPEED，可在Delay湿声增加合唱效果，此参数可调节合唱效果的速度。

PARAM旋钮: UNPACK, 解除, 参数调大后, 可解除湿声后部分音量的突然上升感觉, 从而达到一种更平缓的延时动态。

TIME旋钮: 100-3000ms

档位4: TREM, 伴随着同步颤音的延迟效果。

MOD旋钮: CHORUS SPEED, 可在Delay湿声增加合唱效果, 此参数可调节合唱效果的速度。

PARAM旋钮: TIME-SPEED, 在Delay湿声中同步有颤音效果, 此参数可调节颤音效果的速度。

TIME旋钮: 100-3000ms

档位5: REVERSE, 一种经过改进的经典反向延迟。

MOD旋钮: PITCH, 调节失谐效果的PITCH参数, 相当于在延迟湿声加入了一点失谐效果, 是一种轻微移调的声音, 一种复古且迷人的声音。

PARAM旋钮: PHASER, 相当于在延迟湿声加入了一点相移效果, 调节效果的量。

TIME旋钮: 100-1000ms

档位6: dTAPE, 它复刻了磁带机特有的延时风格, 你不仅能获得专业级别磁带机的温暖和丝滑, 而且能模拟磁带在褶皱、偏差等等真实情况下的声音特效。

MOD旋钮: CHORUS SPEED, 使用CHORUS SPEED参数来控制磁带不规则的量和严重程度, 包括摩擦、折痕、拼接和污染物。使用最小值以获得清新、干净的磁带延时, 也可使用最大值来获得多年来被破坏和腐蚀的磁带声音。

PARAM旋钮: GRIT, 这个参数调整磁带机的偏差, 从欠偏差到过偏差, 听起来就像湿音过载的感觉。它用于调整延迟湿音的动态范围和余量。

TIME旋钮: 100-2500ms

档位7: ICE, 结冰延迟, 一种切断音频, 然后回放被选择的音频的延迟效果。可以改变回放音频的音高。

MOD旋钮: CHORUS SPEED, 在湿声里面带有类似合唱的效果, 调节效果的速率。

PARAM旋钮: PITCH, 改变回放音频的音高。

TIME旋钮: 100-1000ms

档位8: LOFI, 一种特殊、复古且具有破坏性的延时效果, 增加了过滤器, 黑胶唱片, 噪音低保真等多种效果。

MOD旋钮: CHORUS SPEED, 可在Delay湿声增加合唱效果, 此参数可调节合唱效果的速度。

PARAM旋钮：GRIT，当参数调大时，听起来像是湿音过载的感觉。

TIME旋钮：100-3000ms

档位9：PATTERN，一种充满想象力并拥有更复杂的延迟节奏的延迟效果。

MOD旋钮：CHORUS SPEED，可在Delay湿声增加合唱效果，此参数可调节合唱效果的速度。

PARAM旋钮：PATTERN，调节不同的延迟节奏以及长短。

TIME旋钮：100-1000ms

技术参数

输入	标准1/4“单声道接口/TS
输出	标准1/4“单声道接口/TS
电源供给1	DC9V $\geq$ 300mA 
电源供给2	USB 5V $\geq$ 300mA
尺寸	112(L)X68(W)X40(H)mm
重量	约242g
修订	2024-08-23

我们将不断改进我们的产品并保留修改某些功能和规格(包括但不限于外观、包装设计、操作手册、配件、尺寸、规格参数、显示屏等)的权利,恕不另行通知。购买前请与当地经销商确认产品功能及规格。产品图片及颜色因拍照光线误差及屏幕设定可能与实物产品效果有所差异。请以实物为准。