# MINISWITCH

Remote Tap / Favourite Footswitch · 100 % compatible with the Strymon MiniSwitch, in a smaller enclosure · handmade in Austria by Walter Craffonara

**NOTE** This module is a faithful, circuit-for-circuit clone of the Strymon MiniSwitch and is 100 % compatible with it — built into a smaller enclosure. The names “Strymon” and “MiniSwitch” are used only to identify the original product this build recreates and to state compatibility with it. CRAFFONARA FX is an independent builder and is not affiliated with, authorised by or endorsed by the trademark holder.

## 1 Overview & Concept

The MiniSwitch is a compact remote footswitch for pedals that accept an external switch on their expression jack. A single 1/4″ TRS (stereo) cable carries the switch to the host pedal, so one small box gives you hands-free access to a function you would otherwise have to bend down for. It is 100 % compatible with the Strymon MiniSwitch — same connection, same behaviour — but housed in a noticeably smaller enclosure, so it claims less space on a crowded pedalboard.

A jumper inside the enclosure selects what the footswitch does: TAP (tap tempo) or FAV / BOOST (recall a favourite setting). The LED gives visual feedback of the switch state.

## 2 Connecting the MiniSwitch

**Cable** use a 1/4″ TRS (stereo) cable. A mono TS cable will not work — the ring conductor carries the switch signal.

**Host pedal** connect the MiniSwitch to the EXP (expression) jack of the host pedal.

**Pedal setup** configure the host pedal for an external switch as described in that pedal’s own manual.

## 3 Assembly — Footswitch

Solder the two terminals of the footswitch to the two pads marked SWITCH on the circuit board.

**NOTE** Orientation does not matter. The footswitch is a plain contact, so either terminal can go to either pad.

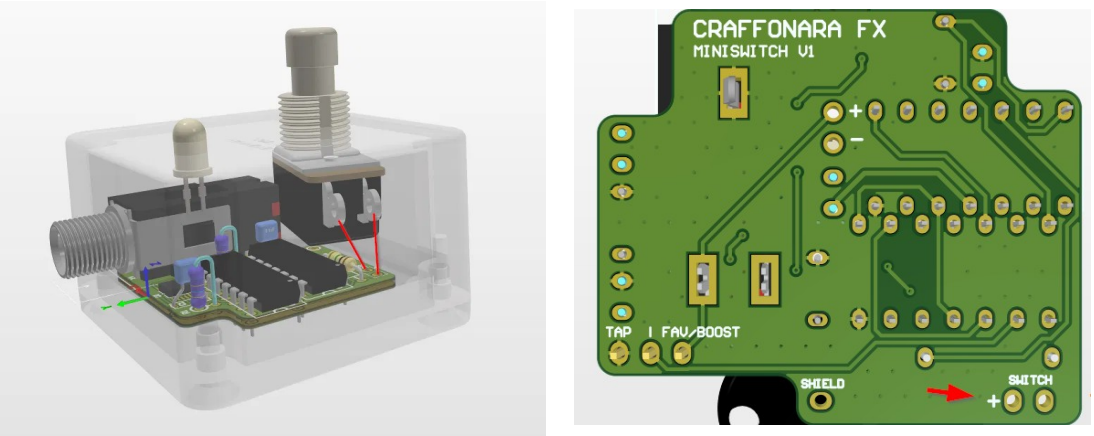



*Fig. 1 — Footswitch connection*

## 4 Assembly — LED

The LED pads are marked + and − on the board: + is the anode, − is the cathode. On a 5 mm LED the cathode is identified by the flat edge on the rim of the housing, and it is normally the shorter of the two legs.

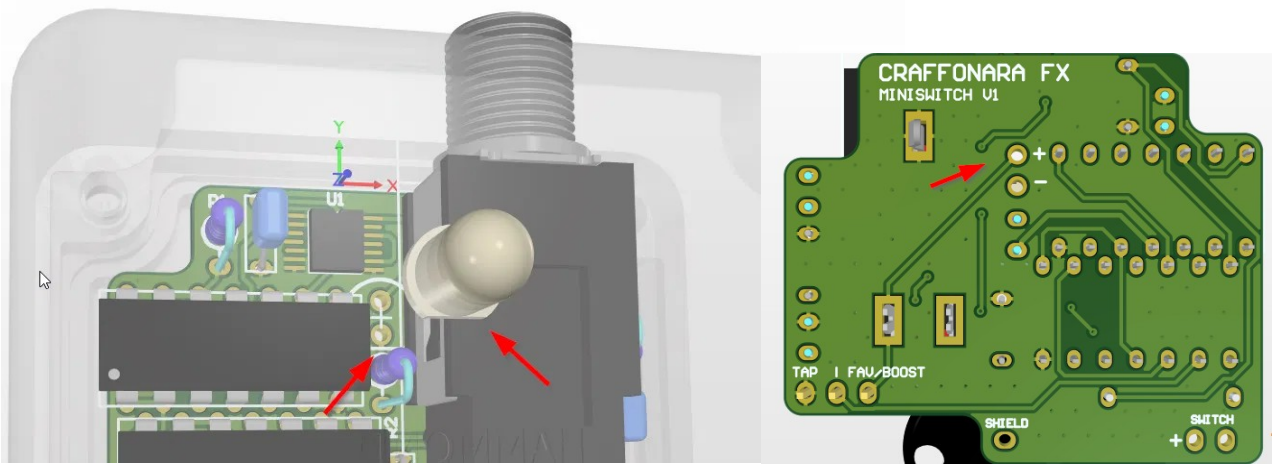



*Fig. 2 — 5 mm LED: flat edge = cathode, solder to the − pad*

**NOTE** Fit the LED the wrong way round and it simply stays dark — it will not be damaged, but the switch gives you no feedback. Check the flat edge before soldering.

## 5 Selecting TAP or FAV / BOOST Mode

1. Remove the four screws on the bottom of the enclosure.
2. Locate the jumper pads underneath the circuit board — they are labelled TAP and FAV/BOOST on the silkscreen.
3. Fit the jumper across the pad pair of the mode you want, as shown below.

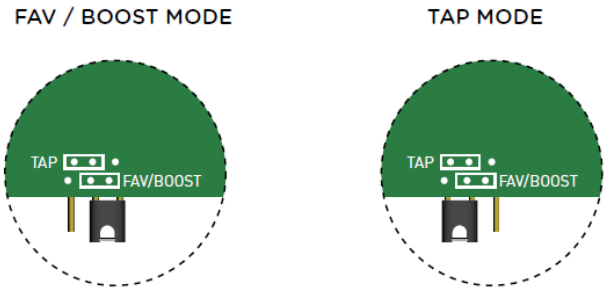



*Fig. 3 — Mode jumper: TAP (left) or FAV / BOOST (right)*

## 6 Specifications

| Parameter | Value |
|---|---|
| **Type** | Remote footswitch — 100 % compatible with the Strymon MiniSwitch, in a smaller enclosure |
| **Modes** | TAP or FAV / BOOST, selected by an internal jumper |
| **Connection** | 1/4″ TRS (stereo) to the host pedal’s EXP jack |
| **Controls** | One footswitch, one 5 mm indicator LED |
| **Power** | None required — powered by the host pedal over the TRS cable |

**NOTE** Trademark notice: “Strymon” and “MiniSwitch” are trademarks of their respective owner. They are used here purely to describe the original product that this independent build recreates. CRAFFONARA FX is not affiliated with, authorised by or endorsed by the trademark holder.