USER MANUAL · REV 1.0

OCD

Dual-Preset MIDI Drive · a faithful clone of the OCD-style overdrive · handmade in Austria by Walter Craffonara

NOTE This pedal is a faithful, circuit-for-circuit clone of the OCD-style overdrive, expanded with functions I added: relay-switched dual presets and MIDI. The name “OCD” is used only to identify the original circuit this build recreates. CRAFFONARA FX is an independent builder and is not affiliated with, authorised by or endorsed by Fulltone Musical Products, Inc.

1 Overview & Concept

At its core this is a faithful clone of the OCD-style overdrive — the same circuit, the same voicing. What I added is the part the original never had: every gain-shaping control is doubled and relay-switched, so you carry two complete settings at once and jump between them by footswitch button or over MIDI. In practice that means four ready sounds in one box.

The Drive and Tone controls each have two pots — one white, one red. A relay picks which pot is live per channel, so nothing is in the audio path except the selected pot. VOL sets the overall output. Two voicing toggles (CLIP and FILTER) and a set of internal DIP switches let you dial in any of the historic OCD-style versions.

2 Controls & Connections

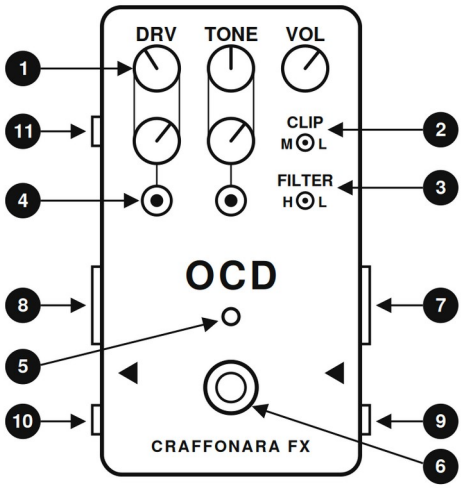


Fig. 1 — Top panel and connections

1 DRV · TONE · VOL the main controls. DRV and TONE are each doubled (a white and a red pot) for two independent presets; VOL sets the output level.

2 CLIP clipping voicing — M = MOSFET/germanium character, L = LED clipping.

3 FILTER tone-stack peak — H = high (brighter, more cut), L = low.

4 PRESET buttons one soft-touch button per channel: LED off = the white pot is active, LED on = the red pot is active.

5 STATUS LED shows engaged / bypassed state and which preset is active.

6 FOOTSWITCH silent soft-touch switch, relay true bypass.

7 INPUT instrument input (1/4″), right-hand side.

8 OUTPUT output to amp or next pedal (1/4″), left-hand side.

9 MIDI IN TRS MIDI input (Type A).

10 MIDI THRU TRS MIDI thru — passes the incoming MIDI on to the next device.

11 POWER 9–18 V DC, center-negative.

3 The Dual-Preset System

Think of the pedal as two OCDs sharing one output. Each channel — Drive and Tone — has a white pot and a red pot. The preset buttons (4) choose, per channel, which pot the relay routes into the circuit: button LED off selects the white pot, LED on selects the red pot.

Because Drive and Tone switch independently, the two white / two red pots give you four instantly available combinations — for example a low-gain rhythm sound on the white pots and a lead boost on the red, recalled in silence by button or MIDI.

> **NOTE** Preset switching is relay-based and click-free. Only the selected pot sits in the signal path, so there is no tone loss from the unused pot.

4 CLIP & FILTER Voicing

CLIP — M / L M gives the classic MOSFET/germanium clipping of the OCD-style circuit; L switches to LED clipping for a louder, tighter, more aggressive edge.

FILTER — H / L sets the tone-stack peak. H is brighter and cuts through a dense mix; L is rounder and darker.

5 OCD-Style Versions (internal DIP)

Internal DIP switches recreate the voicing changes across the OCD-style production run, so one pedal can cover the whole family from the early V1.x boards to the later V2 germanium.

DIP	Adds / changes	Notes
+GE	Germanium clipping character	V2-style softer, warmer breakup
HI CUT	Rolls off top end	Tames fizz for brighter amps
+BASS	More low-end before the clipping stage	Bigger, fuller low strings
+MIDS	Mid-forward voicing	Extra cut for solos / band mix

Combining these covers the tonal range of versions V1.1 through V1.7 and the V2 Custom-Shop-style germanium voicing.

6 MIDI Implementation

The pedal responds to Control Change (CC) messages on MIDI IN; MIDI THRU passes everything on unchanged. Presets recall in silence, so you can automate whole sound changes from a controller or DAW.

CC	Function	Value / notes
CC 00	Recall preset combo	Selects one of the four DRV/TONE combinations
CC 10	Drive channel preset	White / red pot for the Drive channel

CC	Function	Value / notes
CC 30	Tone channel preset	White / red pot for the Tone channel
CC 50	Bypass	Engage / bypass the effect (relay true bypass)

7 Power

Run the pedal on 9–18 V DC, center-negative, from any regulated pedalboard supply. There is no battery compartment. At 18 V the circuit has noticeably more headroom and dynamic range — a slightly louder, more open feel.

8 Specifications

Parameter	Value
Type	Overdrive — faithful clone of the OCD-style circuit, with dual presets and MIDI
Controls	DRV ×2, TONE ×2 (relay-switched presets), VOL, CLIP toggle, FILTER toggle
Switching	Relay true bypass; relay preset switching by button or MIDI
MIDI	IN / THRU (TRS, Type A) — CC 00 / 10 / 30 preset recall, CC 50 bypass
Internal options	DIP: +GE, HI CUT, +BASS, +MIDS (V1.1–V1.7 and V2 voicings)
Audio I/O	1/4″ input and output
Power	9–18 V DC, center-negative
Enclosure	Brushed aluminium, hand-finished

NOTE Trademark notice: “OCD” and “Fulltone” are trademarks of Fulltone Musical Products, Inc. They are used here purely to describe the original circuit that this independent build recreates. CRAFFONARA FX is not affiliated with, authorised by or endorsed by Fulltone. All other trademarks belong to their respective owners.