USER MANUAL · REV 1.0

UNI VIBE

Dual-Preset MIDI Vibe · a faithful clone of the Uni-Vibe-style photocell modulation · handmade in Austria by Walter Craffonara

NOTE This pedal is a faithful, circuit-for-circuit clone of the Uni-Vibe-style photocell modulation, expanded with functions I added: relay-switched dual presets, a wet/dry MIX control and MIDI. The name “Uni-Vibe” is used only to identify the original circuit this build recreates. CRAFFONARA FX is an independent builder and is not affiliated with, authorised by or endorsed by Dunlop.

1 Overview & Concept

At its core this is a faithful clone of the Uni-Vibe-style circuit — the classic lamp-and-photocell modulation with its unmistakable watery, rotating swirl. MODE switches the character between the chorus/vibe voicing and tremolo.

What I added is the part the original never had: the Speed and Depth controls exist twice and switch on relays, a MIX control blends the effect against your dry signal, and everything is reachable over MIDI — so a slow, shimmering rhythm setting and a fast, deep solo setting are one button or one MIDI message apart.

2 Controls & Connections

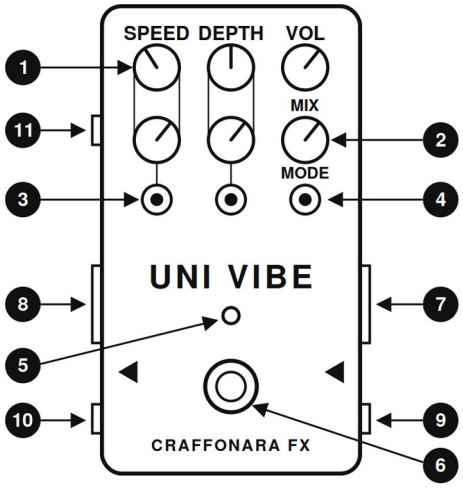


Fig. 1 — Panel and connections

1 SPEED · DEPTH · VOL the main controls for modulation rate, intensity and output level. SPEED and DEPTH each exist twice: an upper pot with a white marker and a lower pot with a red marker.

2 MIX blends the modulated signal with your dry tone — from a subtle shimmer to the full, deep vibe.

3 PRESET buttons one soft-touch button per channel (Speed, Depth). LED ring off = preset #1 (upper pot), LED ring on = preset #2 (lower pot).

4 MODE switches between the chorus/vibe voicing and tremolo. The green LED ring shows the active mode.

5 STATUS LED shows engaged / bypassed state and which preset is active.

6 FOOTSWITCH silent soft-touch switch, engages / bypasses the effect (relay true bypass).

7 INPUT 6.35 mm mono jack from your guitar or the previous pedal.

8 OUTPUT 6.35 mm mono jack to your amp or the next pedal.

9 MIDI IN TRS socket for incoming MIDI (Type A).

10 MIDI THRU TRS socket passing incoming MIDI on to the next device.

11 POWER 9 V DC, center-negative.

3 The Dual-Preset System

Each preset button toggles its channel between two independent pots. With the LED ring off, the upper pot with the white marker is active (preset #1); with the LED ring on, the lower pot with the red marker is active (preset #2).

Because Speed and Depth have their own buttons, the four combinations give you four distinct sounds from one pedal — for example a rhythm setting and a lead setting, recalled by foot or from a MIDI controller.

> **NOTE** Preset switching is relay-based and click-free. Only the selected pot sits in the signal path, so the unused pot causes no tone loss.

4 Voicing Controls

MIX sets how much of the modulated signal you hear against the dry tone. Low settings give a gentle shimmer that keeps the dry attack intact; higher settings move towards the full, immersive swirl.

MODE chooses the chorus/vibe voicing (the classic phase-shifted swirl) or tremolo (amplitude modulation). The green LED ring shows which one is active.

5 MIDI Reference

The pedal responds to MIDI Control Change (CC) messages on its MIDI channel (see the next section).

CC	Value	Command
00	00	DEPTH preset #1 and SPEED preset #1
	01	DEPTH preset #2 and SPEED preset #1
	02	DEPTH preset #1 and SPEED preset #2
	03	DEPTH preset #2 and SPEED preset #2
10	00	DEPTH preset #1
	01	DEPTH preset #2
	02	Toggle DEPTH preset #1 / #2
30	00	SPEED preset #1
	01	SPEED preset #2
	02	Toggle SPEED preset #1 / #2

NOTE The CC assignments follow the same scheme as the other CRAFFONARA FX dual-preset pedals. Please verify them against your build before relying on them in a live set.

6 Setting the MIDI Channel

1. Disconnect the pedal from the power supply.
2. Press and hold the footswitch while connecting the power supply — the LED starts to flash.
3. Press the footswitch as many times as the channel number you want to set (e.g. three times for MIDI channel 3).
4. Press and hold the footswitch until the pedal switches off completely.
5. On the next power-up the pedal responds to the new MIDI channel.

7 Power

Run the pedal on 9 V DC, center-negative, from any regulated pedalboard supply. There is no battery compartment.

8 Specifications

Parameter	Value
Type	Vibe / chorus — faithful clone of the Uni-Vibe-style circuit, with dual presets, MIX and MIDI
Controls	SPEED ×2, DEPTH ×2 (relay-switched presets), VOL, MIX, MODE button
Modes	Chorus / vibe and tremolo, selected by the MODE button (green LED ring)
Presets	2 × Speed, 2 × Depth — relay-switched, four combinations
Bypass	Relay true bypass, silent soft-touch footswitch
MIDI	IN + THRU (TRS, Type A), Control Change
Audio I/O	6.35 mm mono input and output
Power	9 V DC, center-negative
Enclosure	Brushed aluminium, CNC-drilled (Hammond 1590B format)

NOTE Trademark notice: “Uni-Vibe” is a trademark of Dunlop Manufacturing, Inc. It is used here purely to describe the original circuit that this independent build recreates. CRAFFONARA FX is not affiliated with, authorised by or endorsed by Dunlop.