


View from Top side (Scale 2:1)

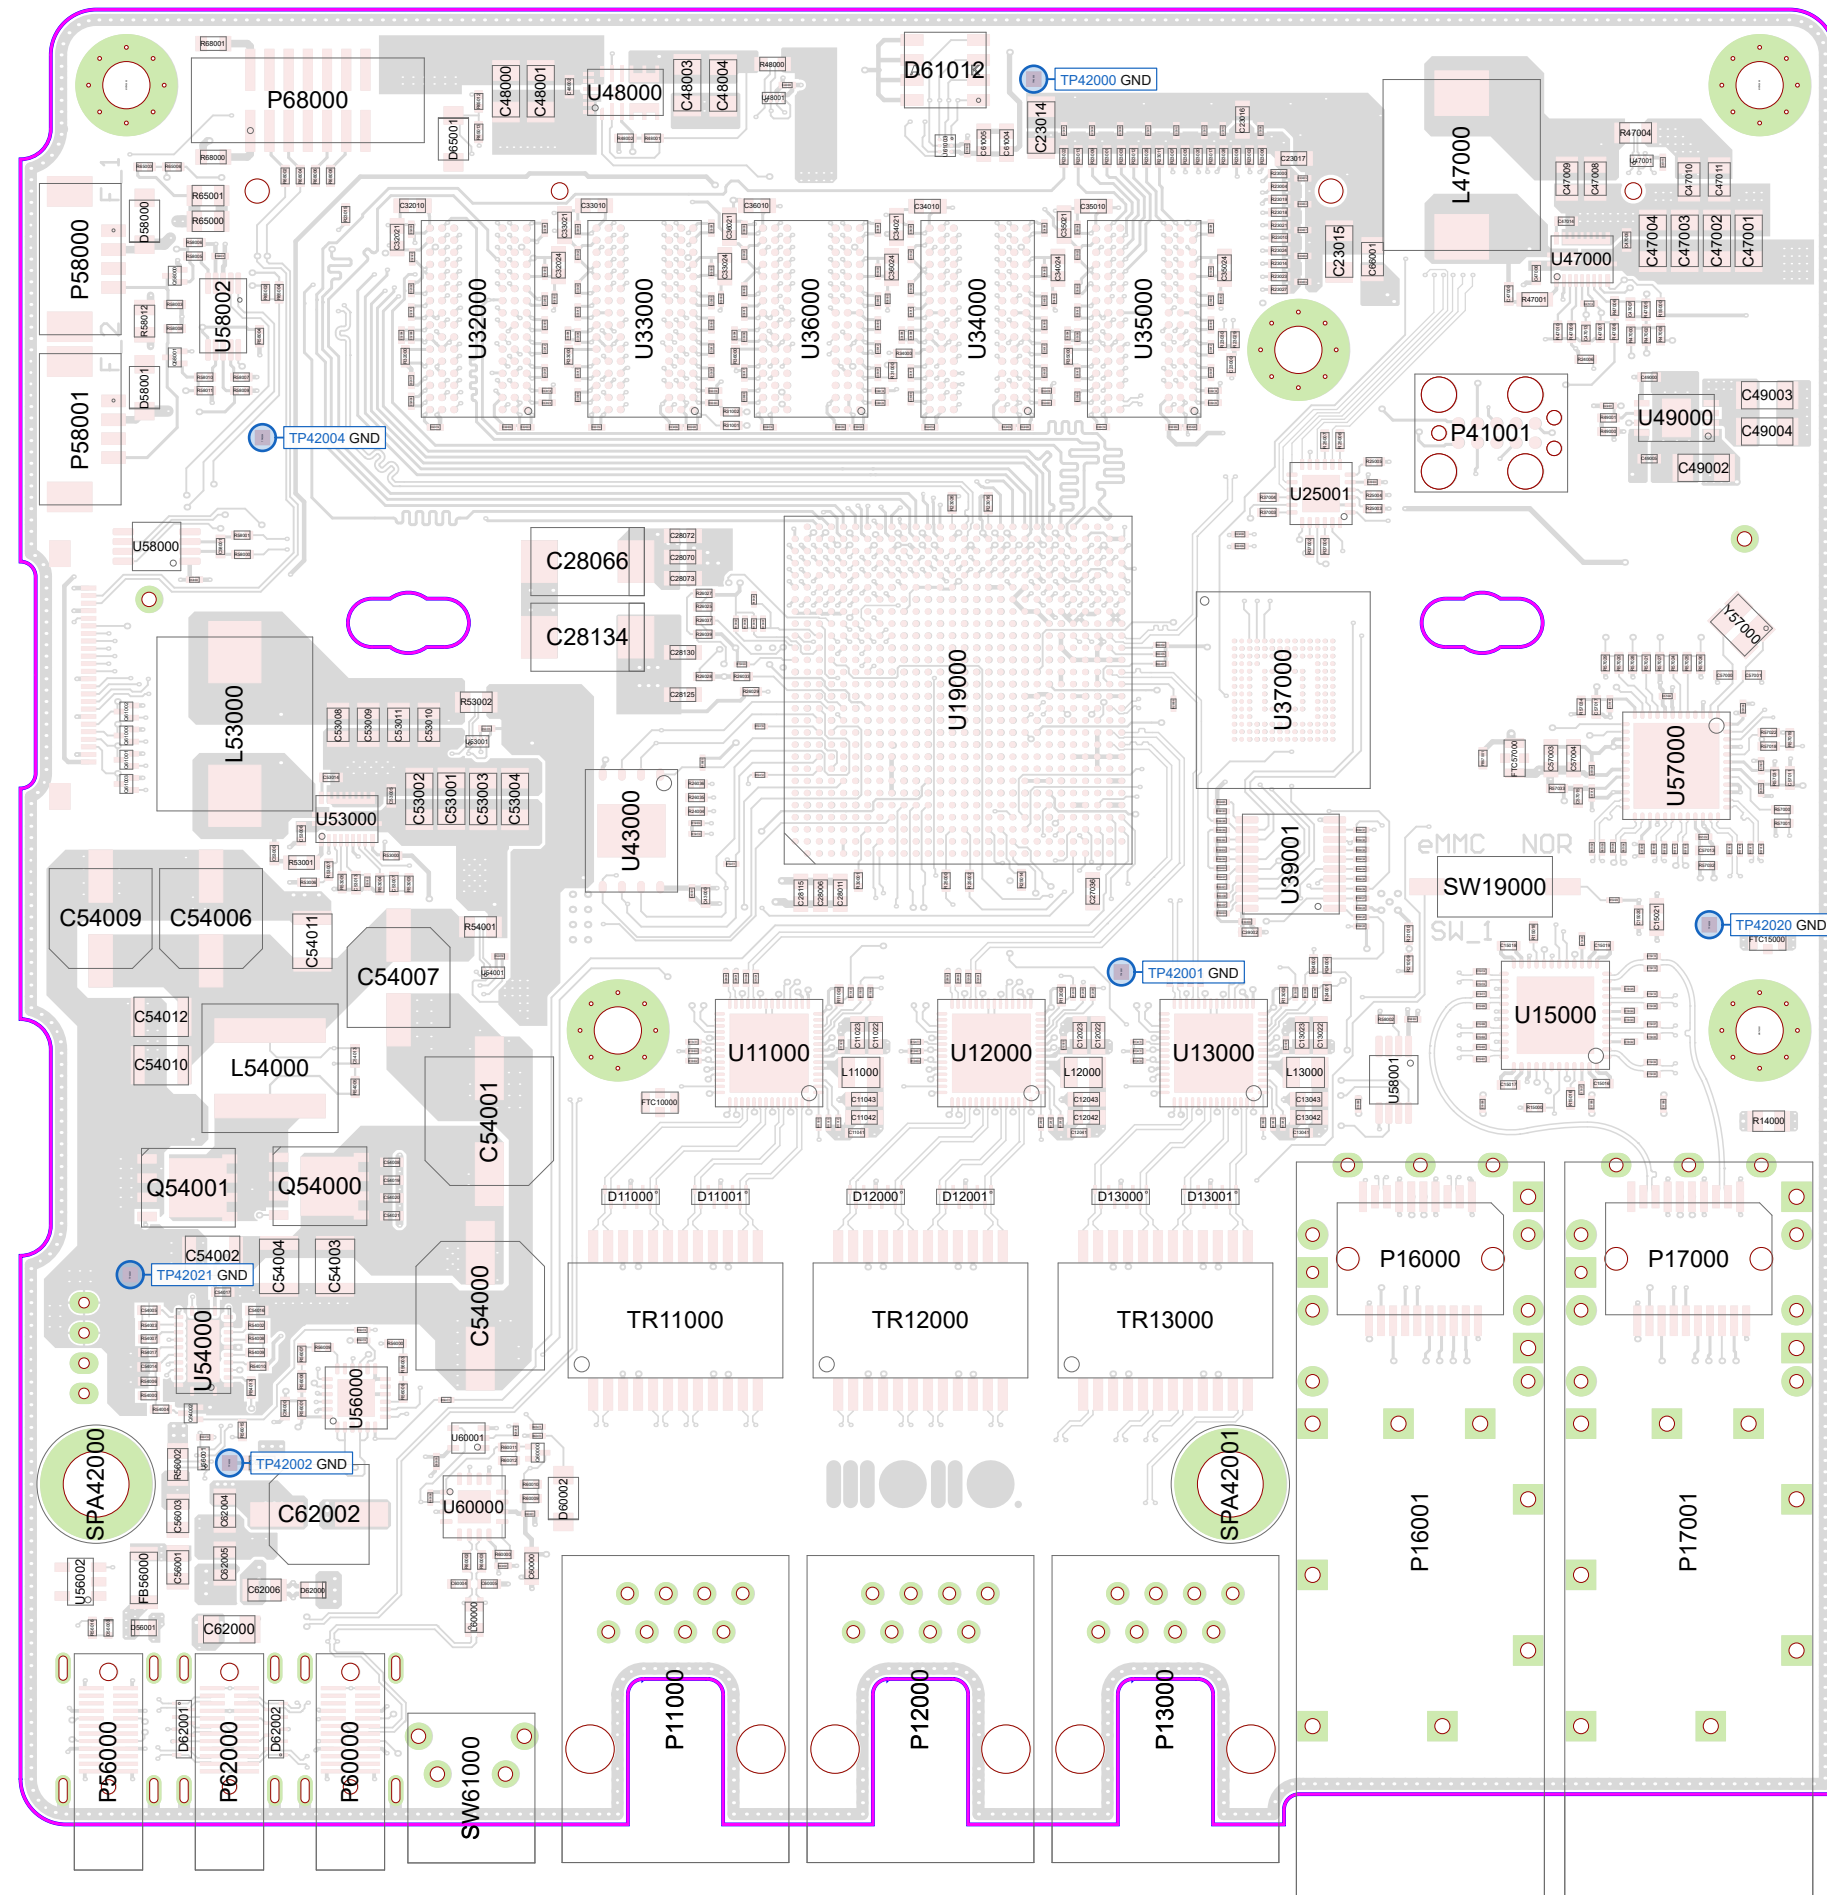

GND Test Points - top side

- GND TP. No PSU output test points on the top side; all PSU output TPs are on the BOTTOM side (sheet 2 of 2).

MONO TECHNOLOGIES INC. 600 N Broad Street Suite 5 # 924 Middletown, DE 19709 USA		License: CLOSE SOURCE
Project: MTUR Main Board.PrjPcb		Assembly variant: DEV_KIT_VAR
Sheet content: PCB Test Points TOP side		
Author(s): Aljaz Titoric		Rev: A1
Date: 15/09/2026		
Size: A3	Sheet: 1 of 2	

PSU output TP (measure +)		GND TP (measure -)				
VCC TP	Rail / PSU output	Nom.	Shunt after TP	GND TP	dist.	Grid
TP56003	USB-PD input	5-20 V	R56002 1 mOhm	TP42019	5 mm	D4
TP54000	5V0_SYS	5.0 V	R54001 1 mOhm	TP42006	24 mm	D3
TP53001	3V3_SYS	3.3 V	R53002 1 mOhm	TP42006	12 mm	D2
TP52000	2V5_SYS	2.5 V	R52000 5 mOhm	TP42014	8 mm	B2
TP51000	1V8_SYS	1.8 V	R51000 5 mOhm	TP42012	16 mm	D3
TP50000	1V35_SERDES	1.35 V	R50000 5 mOhm	TP42019	26 mm	D3
TP48000	1V2_MEM (DDR4)	1.2 V	R48000 5 mOhm	TP42007	10 mm	D1
TP47002	1V_CPU_CORE	1.0 V	R47004 1 mOhm	TP42014	6 mm	B2

Example: 1.8 V system PSU -> measure between TP51000 (+) and GND TP42012 (-).

GND distance = straight line on the PCB (drawing is 2:1). All GND TPs on this side are marked in blue.

1. All PSU output TP's sit on the regulator side of the INA234 current shunts, so they read the true regulator output (no shunt drop).
2. USB-PD input: voltage depends on the negotiated PD contract (5/9/12/15/20 V).
3. DC checks with a DMM can use any GND TP; the listed one is simply the closest.

MONO TECHNOLOGIES INC. 600 N Broad Street Suite 5 # 924 Middletown, DE 19709 USA		License: CLOSE SOURCE
Project: MTUR Main Board.PrjPcb		Assembly variant: DEV_KIT_VAR
Sheet content: PCB Test Points BOTTOM side		
Author(s): Aljaz Titoric		Rev: A1
Date: 15/09/2026		
Size: A3	Sheet: 2 of 2	