New Energy Grid

⚡ INTERACTIVE BROCHURE • STEP-BY-STEP GUIDE • SETTINGS ENCYCLOPEDIA

GEMS User & Configuration Manual

The Complete Interactive Brochure, Step-by-Step Setup Roadmap, Daily Operating Guide, and Field-by-Field Settings Reference for **GRID-EMS (GEMS)** by **New Energy Grid** & **The Charge Grid**


100% Local	1-Second	8 Tabs	4-Tier
ZERO MONTHLY FEES	REAL-TIME CONTROL LOOP	EVERY SETTING EXPLAINED	NEGATIVE PRICE SHIELD

SYSTEM RELEASE
GEMS v9.36.4

WHO THIS GUIDE IS FOR
Homeowners, Residents, Facility Managers & Installers

REFERENCE HARDWARE ECOSYSTEM
Solis Hybrid Inverters & Storage • Raedian Smart EV Chargers • P1 & Shelly

DOCUMENTATION EDITION
Interactive Brochure & Complete A-to-Z Settings Reference

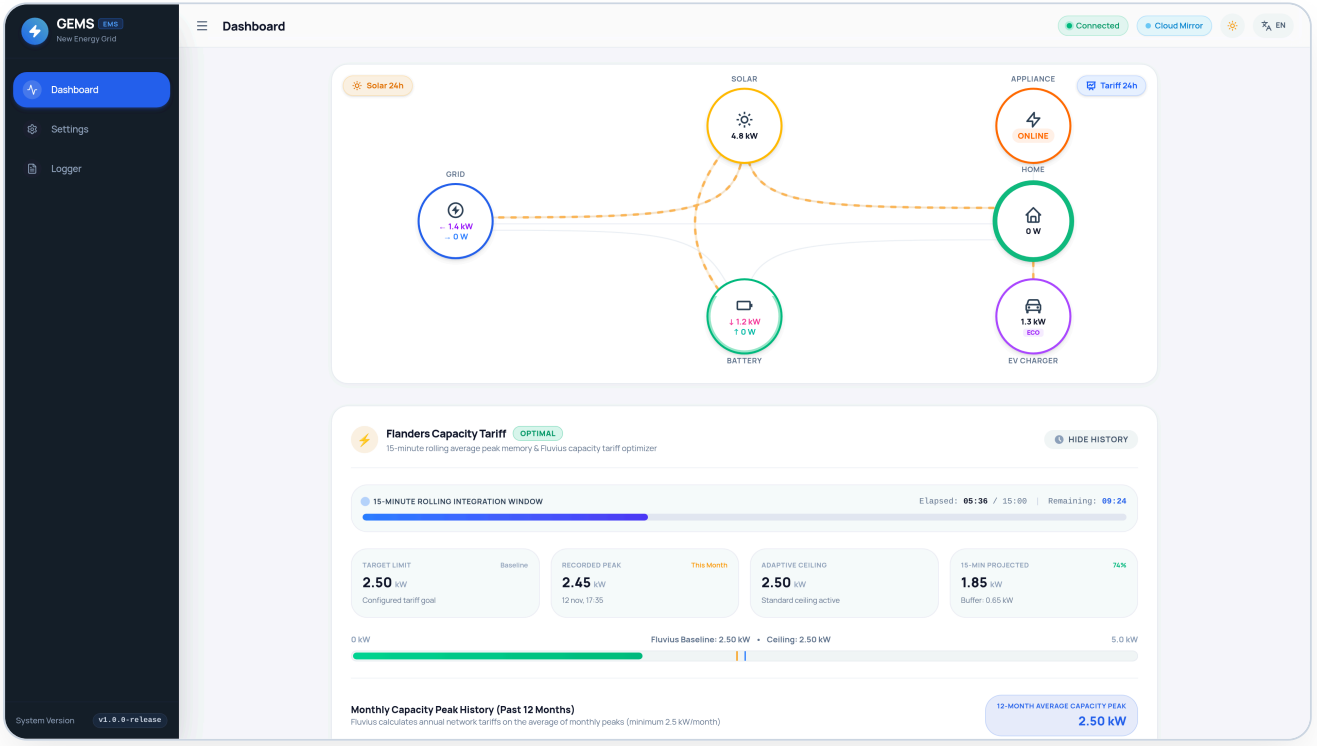

GEMS Energy Management System (GRID-EMS) • New Energy Grid & The Charge Grid

100% Autonomous Edge Intelligence • Optional Cloud Sync

📖 INTERACTIVE ROADMAP & TABLE OF CONTENTS

Part I — The Fun Brochure Tour

1. Welcome to GEMS: Why Your Home Needs an Energy Brain
2. 24 Hours in the Life of GEMS (Interactive Storyboard)

Part II — Step-by-Step Configuration Guide

3. Step-by-Step: The 4-Step First-Boot Commissioning Wizard
4. Normal Homeowner Mode vs. Certified Installer Mode (Padlock)

Part III — Everyday Dashboard & Smart Controls

5. The Interactive PowerFlow Dashboard, KPIs & Deep-Dive Modals
6. EV Charging Modes, 1P/3P Solar Switching & Split-Billing

Part IV — Complete Settings Encyclopedia (All 8 Tabs Explained)

7. Settings Tab 1: Devices & EV Fleet DLB Cluster
8. Settings Tab 2: Strategy, Peak Shaving, GSC, Fluvius & Battery Rules
9. Settings Tab 3: Energy Contract & The 5 Tariff Wizards
10. Settings Tab 4: Smart Relays, Boilers & SG-Ready Heat Pumps
11. Settings Tab 5: Wired Ethernet Network & 60s Safety Rollback
12. Settings Tab 6: System Info, Backup/Restore, PIN, OTA & Local SSL
13. Settings Tab 7: Notifications, Webhooks, Weekly Email & Debug
14. Settings Tab 8: Optional Cloud Server (GRID-EMS-SERVER)

Part V — Tools, Mobile App & Quick Reference

15. Scanner, Live System Logger, PDF Energy Reports & Mobile App
16. Frequently Asked Questions & Settings Cheat Sheet

1. Welcome to GEMS: Why Your Home Needs an Energy Brain

Welcome to **GEMS (Grid Energy Management System)** by **New Energy Grid** and **The Charge Grid**! Installed directly inside your electrical cabinet on an industrial Raspberry Pi 5 edge computer with ultra-durable NVMe solid-state storage, GEMS is the autonomous conductor of your entire electrical ecosystem.

☀️🔋

Maximize Free Solar & Storage

Every surplus watt from your **Solis Hybrid Inverter** is routed first to your household, then into your home battery, then into your **Raedian EV Charger**, and finally into hot water thermal storage—boosting self-consumption up to 85%+.

🛡️📉

Flanders Peak Shaving & Fuse Guard

Reads your digital P1 meter every second. If cooking and laundry spike your load, GEMS instantly discharges your battery and throttles your EV charger so your 15-minute *Capaciteitstarief* peak stays low and your main breaker never trips.

💶⚡

Dynamic Tariff & Negative Price Shield

Downloads Day-Ahead EPEX Spot prices at 13:00 CET daily. Charges your battery and EV during the cheapest night hours and protects you from paying export penalties when afternoon solar prices turn negative.

> **🔒 100% Local Edge Autonomy — Zero Subscriptions, Zero Cloud Lock-In**
>
> Unlike cloud-dependent gadgets that stop working when your internet drops or charge monthly fees, GEMS executes all measurement, dynamic load balancing, battery dispatching, and tariff formulas **100% locally inside your home**. Optionally, you can pair with **GRID-EMS-SERVER** (`https://ems.newenergygrid.com`) for remote smartphone access and installer diagnostics—completely free.

2. 24 Hours in the Life of GEMS (Interactive Storyboard)

Wonder what GEMS actually does while you sleep, work, cook, and relax? Follow a typical 24-hour day in a home equipped with a **Solis S6 Hybrid Inverter + Battery**, a **Raedian NEO Smart EV Charger**, a P1 Smart Meter, and an SG-Ready Heat Pump:

`02:00 – 05:00 • NIGHT ARBITRAGE`

1. Smart Night Pre-Charging (Super-Dal & Spot)

GEMS checks the Open-Meteo solar forecast for tomorrow. If tomorrow is cloudy and tonight's EPEX Spot price drops below your **Grid Charge Ceiling (€/kWh)**, GEMS pre-charges your Solis battery and Raedian EV charger while capping total grid import at `2.50 kW`.

`09:30 – 12:30 • SOLAR HARVEST`

2. 100% Free Sunshine & 1P/3P EV Switching

As solar climbs to `2.8 kW`, GEMS starts your Raedian charger on **Single-Phase (1P)** so even modest sunshine goes into your car. When solar exceeds `4.3 kW`, GEMS automatically switches the charger to **Three-Phase (3P)** after a safe 20-second relay pause!

`13:30 – 15:30 • NEGATIVE PRICE SHIELD`

3. 4-Tier Defense Against Negative Export Prices

Afternoon spot prices drop to `-€0.09/kWh`. GEMS fills the battery (Tier 1), boosts the EV to max speed (Tier 2), triggers the SG-Ready heat pump relay (Tier 3), and—once all buffers are full—throttles the Solis inverter (Tier 4) so you pay **€0.00 in export penalties** (while respecting Flemish GSC subsidies!).

`18:00 – 21:00 • EVENING PEAK SHAVING`

4. Dinner Cooking & Capaciteitstarief Guard

The induction stove, oven, and heat pump draw `5.2 kW` while electricity is expensive (`€0.34/kWh`). Within 1 second, GEMS pauses EV charging and discharges `3.2 kW` from your home battery, keeping net grid import safely below your `2.50 kW` monthly peak target!

3. Step-by-Step Configuration: The 4-Step First-Boot Wizard

When you power on a brand-new (or factory-reset) GEMS controller and open `http://ems.local` (or its IP address) in your browser, GEMS greets you with an interactive **4-Step Commissioning Wizard**. Follow these 4 clear steps to configure your unit in under 3 minutes:

STEP 1 OF 4 — Language Selection, Local Security PIN & Safety Acknowledgment

Interface Language — `NL / FR / EN`

WHAT IT DOES Instantly switches the entire GEMS interface, tooltips, and status banners between **Nederlands (NL)**, **Français (FR)**, and **English (EN)**.

WHEN TO USE Pick your preferred household language; you can also switch it anytime in the top header bar.

Local Installer Access PIN — `Min. 6 chars`

WHAT IT DOES Sets the secret password that unlocks **Certified Installer Mode** (the padlock icon in Settings). Hashed locally with bcrypt and protected by a 5-attempt brute-force lockout.

IMPORTANT Write this PIN down! Everyday homeowners never need a password to use the dashboard, EV charger modes, or PDF reports—this PIN strictly guards electrical & contract engineering settings.

Mandatory Electrical Safety Checkbox: Confirm that physical overcurrent protection (MCBs/RCDs) is installed in compliance with AREI (Belgium) or NEN 1010 (Netherlands) before clicking **Continue to Grid Limits →**.

STEP 2 OF 4 — Country, Region, Grid Topology & Main Breaker Limits

Country & Region — `BE (Flanders) / NL`

WHAT IT DOES Selects **Belgium (BE)** (with sub-regions *Flanders*, *Wallonia*, or *Brussels*) or **Netherlands (NL)**.

WHEN TO USE Choose **BE + Flanders** to enable the 15-minute *Capaciteitstarief* peak shaver and Elia Green Grid widgets. Choose **NL** to enable Dutch *Smart Saldering* and hide Belgian widgets.

Grid System Topology — `1x230V / 3x400V / 3x230V`

WHAT IT DOES Tells GEMS how your street cable is wired so it converts Amps to Watts accurately across phases:

- `single_phase_230v`: 1-Phase 230V + Neutral (e.g. 40A = 9.2 kW)
- `three_phase_400v`: 3-Phase 400V + Neutral Wye (e.g. 3×25A = 17.3 kW)
- `three_phase_230v_delta`: 3-Phase 230V Delta without Neutral (common in older Belgian streets; applies √3 phase-to-phase math).

Main Breaker Rating (A) — `16A – 250A (e.g. 25A/40A)`

WHAT IT DOES Sets both your **Phase Limit (A)** and **Nominal Current (A)** to match the physical main breaker printed on your utility meter (e.g., `25 A`, `32 A`, `40 A`, or `63 A`).

WHY CRITICAL GEMS never allows your EV charger or battery grid-charging to exceed this amperage on any phase (L1, L2, or L3), preventing main fuse blackouts.

Meter Offline Fallback Current (A) — `Default: 6 A (0A–32A)`

WHAT IT DOES Defines the safe failsafe charging current sent to EV chargers if the P1 meter cable is accidentally unplugged or loses communication for more than 30 seconds.

WHEN TO USE Set to `0 A` (Pause) on tight 25A fuses for maximum safety, or `6 A` (minimum charge) so a car can still trickle-charge overnight if the meter cable is loose.

Flanders Capacity Peak Limit (kW): Shown automatically when Flanders is selected (default `2.5 kW`). Sets your monthly 15-minute peak shaving target.

STEP 3 OF 4 **Quick Hardware Discovery (USB Serial & LAN Auto-Scan)**

Click **Scan Now**. GEMS automatically enumerates persistent Linux USB paths (`/dev/serial/by-id/*`) to detect USB P1 Smart Meter cables (`115200 8N1` / `9600 7E1`) and RS-485 Modbus RTU dongles, while sweeping your local `/24` Ethernet network for **Solis** inverters, **Raedian** EV chargers, and **Shelly** smart relays.

STEP 4 OF 4 **Optional Cloud Pairing (GRID-EMS-SERVER) & Finish**

If you have a pairing token (e.g., `PAIR-XXXX-TCG`) from `https://ems.newenergygrid.com`, paste it here to link your unit for remote access—or leave it blank to run 100% offline. Click **Finish & Launch Dashboard**!

4. Normal Homeowner Mode vs. Certified Installer Mode (🔒 Padlock)

GEMS is engineered so that **homeowners enjoy effortless, password-free daily control** while **critical electrical limits remain safely locked** behind a discreet padlock icon in the top-right corner of the **Settings** page.

Feature / Action	🏡 Normal Homeowner Mode (Default — Locked 🔒)	🛠️ Certified Installer Mode (Unlocked via PIN 🔓)
Login Requirement	**Zero password prompts!** Opens immediately on your home Wi-Fi / LAN.	Click the 🔒 **Padlock badge** in Settings and enter your 6+ character Installer PIN.
Dashboard & EV Modes	Full access: Live PowerFlow, click-to-reveal history modals, EV mode switching (`Eco`, `PV Only`, `Fast`, `Off`), and Printable PDF Energy Reports.	Full access + quick strategy mode switcher.
Visible Settings Tabs	**2 Safe Tabs:** `Devices` (read-only status + live `</> Debug` probe & report submission) and `System Info` (view IP/build, `Reboot System`, and verified `Software Update`).	**All 8 Settings Tabs:** `Strategy`, `Energy Contract`, `Devices` (add/edit/delete + Fleet DLB), `Relays & Switches`, `Network`, `System Info` (Backup/Restore, PIN, SSL, Factory Reset), `Notifications`, and `Cloud Server`.
Sidebar Engineering Tools	`Dashboard`, `Logger` (live system logs & export), and `Settings`.	Adds `Scanner` (LAN/Modbus discovery) and `Cockpit Terminal (:9090)`.

5. The Interactive PowerFlow Dashboard, KPIs & Deep-Dive Modals

Your main **Dashboard** updates every second via a live WebSocket stream. At the center is the animated **PowerFlow Hero**, surrounded by real-time financial and energy KPI cards.

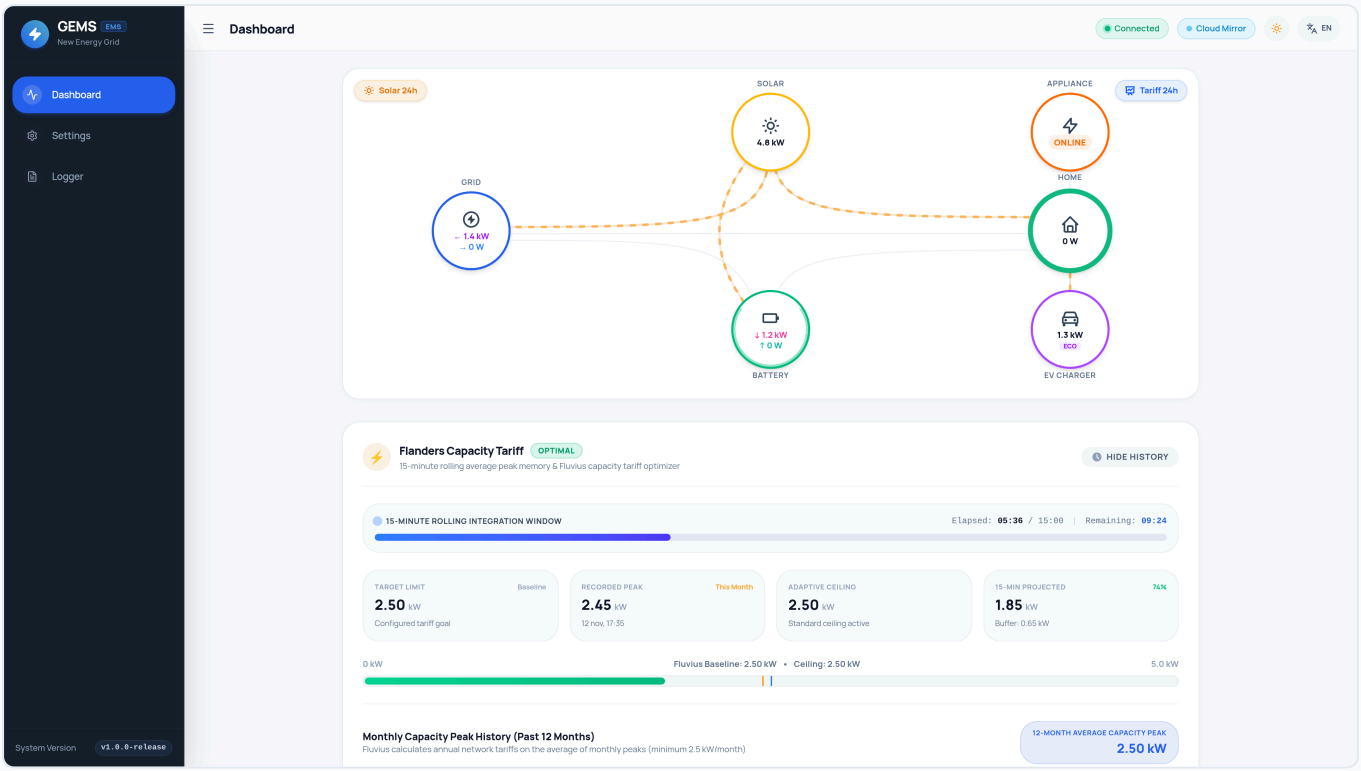


Figure 5.1: The GEMS Dashboard showing live Solar, Home Load, Solis Battery SoC, Grid Import/Export, and Raedian EV Charger status.

Every Dashboard Circle & KPI Number Explained

Node / KPI Card	Color / Example	What It Means & What Happens When You Click It
☀️ **Solar Node**	• **Gold** (`4.8 kW`)	Instantaneous roof solar output and today's total kWh. **Click the circle** to open the 24h Solar bell curve, peak wattage, and inverter curtailment history.
🔋 **Battery Node**	• **Emerald** (`85% SoC`)	Live charge/discharge power and State of Charge (%) of your **Solis** battery. **Click the circle** to inspect 24h SoC %, charge/discharge kW, and battery temperature/health.
⚡ **Grid Node**	• **Blue** (`-1.2 kW`)	Net street meter power (Import from street vs. Export to street). **Click the circle** to view per-phase voltages (L1/L2/L3), import/export curves, and the Flanders 15-minute peak tracker.
🏠 **Home Load Node**	• **Teal** (`0.95 kW`)	Total power consumed by household appliances right now. **Click the circle** to see your 24h domestic consumption profile.
🚗 **EV Charger Node**	• **Purple** (`7.4 kW`)	Live charging speed and mode of your **Raedian** wallbox. **Click the circle** to switch modes (`Eco` , `PV Only` , `Fast` , `Off`) or view session kWh added.
🔥 **Relay / Heat Pump**	• **Orange** (`ON / OFF`)	Shows whether your smart boiler or SG-Ready heat pump is active. **Click the circle** to view thermal runtime and manual override controls.
📊 **Self-Consumption vs. Self-Sufficiency**	`78%` / `92%`	**Self-Consumption:** % of your solar power kept inside your home/battery/EV. **Self-Sufficiency:** % of your home's electricity supplied by your own solar + battery instead of the grid.
🛡️ **Monthly Peak (Flanders)**	`2.50 kW`	Highest 15-minute rolling average grid import recorded this calendar month (resets on the 1st of each month at 00:00). Automatically hidden for Dutch (NL) installations.

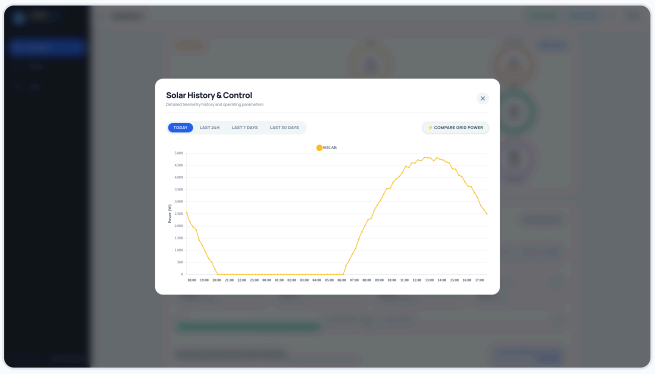


Figure 5.2: Click-to-Reveal Solar Modal with 1h/24h/7d/30d resolution selector and "⚡ Compare Grid Power" overlay button.

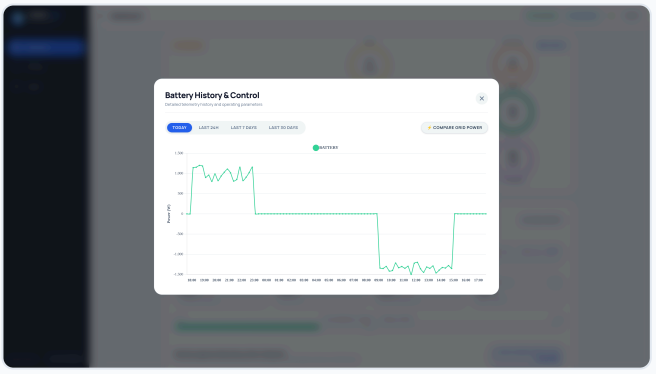


Figure 5.3: Click-to-Reveal Battery Modal showing 24-hour State of Charge (%) and charge/discharge cycles.

6. EV Charging Modes, Automatic 1P/3P Switching & Split-Billing

Whether you tap the EV Charger circle on the Dashboard or configure your **Raedian** wallbox in Settings, GEMS gives you four intelligent charging modes plus automatic single-phase/three-phase solar adaptation:

🚗 WHEN TO USE EACH EV CHARGING MODE

1. ECO (Smart Solar + Cheap Spot Top-Up)
Best for everyday use! Prioritizes free solar surplus during the day and automatically tops up during the configured *Cheapest Spot Price Hours* (e.g. 01:00–05:00) or when the Belgian *Elia Green Grid Share* exceeds 65%.

2. PV ONLY (100% Pure Sunshine)
Best for sunny days when working from home. Starts only when net solar export exceeds the 6A EV minimum (1.4 kW on 1P / 4.1 kW on 3P). Never pulls paid power from the grid!

3. FAST (Max Safe Speed)
Best when you need to leave soon. Charges immediately at maximum rated power (11 kW or 22 kW) while GEMS Dynamic Load Balancing still protects your main house fuse from overloading!

4. OFF (Paused / Hold)
Best when reserving battery power for home use. Keeps the charging session paused even while the cable remains plugged into the vehicle.

🔄 How Automatic 1P/3P Solar Phase Switching Works (1.4 kW → 22 kW Continuous Range)

Normally, a 3-phase EV charger requires at least `3 × 6A = 4.14 kW` of solar surplus before it can start—wasting smaller morning/afternoon sunshine! When you enable **Automatic 1P/3P Solar Phase Switching** on a supported charger (such as the **Raedian NEO**), GEMS starts charging on **1-Phase (1.4 kW to 3.6 kW)** as soon as 1.4 kW of solar is available. Once solar surplus stays above `4.2 kW`, GEMS sends a pause command, waits a mandatory **20-second anti-welding safety delay** so vehicle onboard relays open under zero load, switches the contactor to **3-Phase (4.1 kW to 22 kW)**, and resumes charging seamlessly!

7. Settings Tab 1: Devices & EV Fleet DLB Cluster

Navigate to **Settings → Devices**. In Normal Mode, you can view live device status and run `</> Debug` diagnostic probes. Unlocking **Certified Installer Mode (🔓)** reveals hardware discovery, adding/editing devices from 170+ verified hardware templates (led by **Solis** and **Raedian**), and the **EV Fleet Cluster & DLB** module.

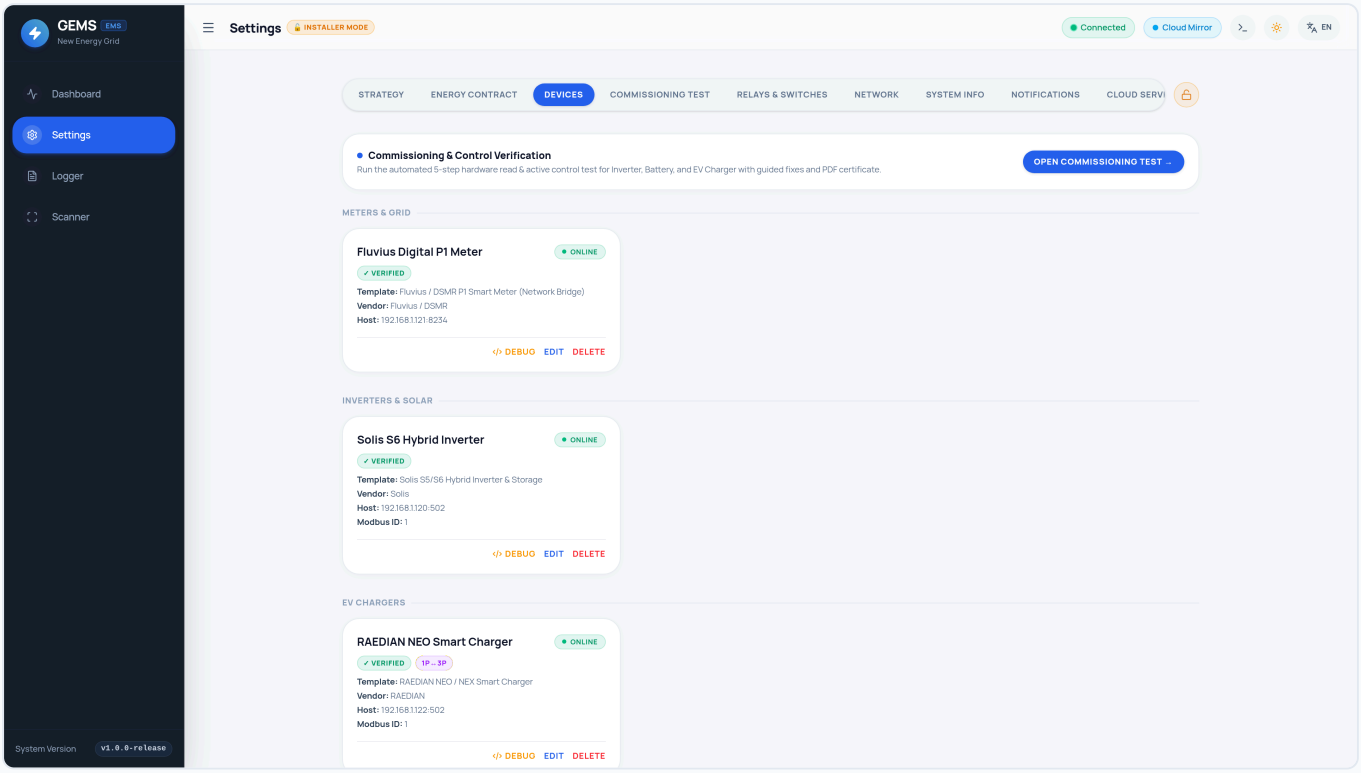


Figure 7.1: Settings → Devices showing connected Solis S6 Hybrid Inverter, Raedian NEO Smart Charger, P1 Meter, and Shelly Pro Relay.

Step-by-Step: Adding or Editing a Device (Every Field Explained)

Click 🔍 **Auto-Detect Serial Devices** (to automatically find USB P1 smart meters and RS-485 dongles), or click **+ Add Device** under *Inverters & Solar*, *Smart Meters*, *Batteries & Storage*, *EV Chargers*, or *Smart Relays*:

Device Name & Template

`170+ Templates`

WHAT IT DOES Gives your hardware a friendly label (e.g. `Solis Roof Hybrid` or `Driveway Raedian NEO`) and selects the exact register map & protocol driver.

BADGES Templates display `✓ Verified` (production tested), `1P .. 3P` (supports phase switching), or `Monitor Only`. Toggle **Show Experimental** in the top bar only when testing beta drivers.

Host IP & TCP Port / Serial Port

`LAN or /dev/serial/by-id/*`

WHAT IT DOES For network devices, enter the local IPv4 address (e.g. `192.168.1.50`) and port (default `502` for Modbus TCP, `80` for REST/Shelly). For USB devices, pick the persistent `/dev/serial/by-id/ ...` dropdown path, baud rate (`115200` or `9600`), and parity (`8N1` or `7E1`).

Modbus Slave ID (Unit ID)

`Default: 1 (1–247)`

WHAT IT DOES The Modbus address configured inside the inverter, meter, or charger menu.

WHEN TO CHANGE Keep at `1` for most Solis and Raedian units. If multiple RS-485 devices share one cable, assign each a unique ID (`1`, `2`, `3`).

Rated Power (kW) & Allow Curtailment

`e.g. 5.0 kW / 11.0 kW`

WHAT IT DOES Sets the maximum hardware capacity (e.g. `5.0 kW` for a Solis inverter or `11.0 kW` for a 3-phase Raedian charger).

ALLOW CURTAILMENT Check **Allow Curtailment** on your solar inverter so GEMS can throttle solar export during negative spot price hours or zero-export limits.

Phase Wiring Rotation

`Auto / L1 / L1-L2-L3`

WHAT IT DOES Maps which physical building phase(s) the device is wired to: `Auto`, single-phase (`L1`, `L2`, or `L3`), or 3-phase rotation (`L1-L2-L3`, `L2-L3-L1`, `L3-L1-L2`).

WHY IMPORTANT If an installer wired charger #2 rotated as `L2-L3-L1` to balance the street feeder, selecting `L2-L3-L1` here ensures GEMS protects the right physical fuse!

Hybrid Inverter Flags (Meter & Battery)

`Solis Hybrid`

WHAT IT DOES Appears on Hybrid Inverters:

- **Grid Meter Connected?** Uncheck if the inverter has no dedicated CT clamps; GEMS will automatically steer the battery using your P1 Smart Meter!
- **Battery Connected? & Capacity (kWh):** Enables battery SoC tracking and enters usable storage size (e.g. `10.0 kWh`).

EV Charger Specific Fields & Optional EV Fleet Cluster DLB Module

When configuring an EV Charger (or clicking **Enable Fleet Cluster & DLB** at the bottom of the Devices tab for multi-charger parking lots up to 64 bays), these specialized settings appear:

EV / Fleet Setting	Options / Default	What It Does & When to Use It
Bay Number & Fleet Priority	Bay `1–64` `VIP`, `High`, `Normal`, `Solar Only`	Assigns a parking bay number and charging priority: **VIP (1.5x weight)** for directors/urgent guests, **High (1.25x)**, **Normal (1.0x)**, or **Solar Only** (pauses when no solar surplus is available).
Enable Automatic 1P/3P Solar Phase Switching	Checkbox (`Off` / `On`)	Enables dynamic 1-Phase (1.4–3.6 kW) to 3-Phase (4.1–22 kW) switching on hardware-capable chargers (such as **Raedian**) with a built-in 20-second contactor protection delay.
Fleet DLB Active & Zero-Touch Auto Onboard	Toggles in Fleet Card	Activates multi-charger Dynamic Load Balancing across up to 32/64 chargers. When **Zero-Touch Auto Onboard** is enabled, any new OCPP charger pointed at `ws://ems.local/ocpp/{id}` is added automatically upon `BootNotification`!
Cluster Max Current (A) & DLB Arbitration Mode	e.g. `63 A` / `80 A` `priority_queue`, `equal_share`, `solar_first`	Caps total combined current of all chargers in the parking group. Choose **Priority Queue** (weighted by VIP/High/Normal), **Equal Share** (identical amps for every active car), or **Solar First** (surplus solar distributed first).
Straight-Through OCPP Smart Forwarder (Proxy)	`Upstream CPO URL` + `Auth Header`	Allows GEMS to control local load balancing via OCPP while transparently forwarding all RFID authorizations and charging transactions (`StartTransaction`, `MeterValues`, `StopTransaction`) to an external CPO billing platform or employer reimbursement service! Use `{chargePointId}` in the URL.
Inbound OCPP 1.6-J Station Authentication	`Username` & `Password`	Optional HTTP Basic Authentication credentials required from chargers connecting to the local GEMS OCPP WebSocket server.

8. Settings Tab 2: Strategy, Peak Shaving, GSC, Fluvius & Battery Rules

Settings → Strategy is the analytical brain of GEMS. It is organized into 8 logical cards. Below is every single field explained in plain language so you know exactly what it does and how to tune it:

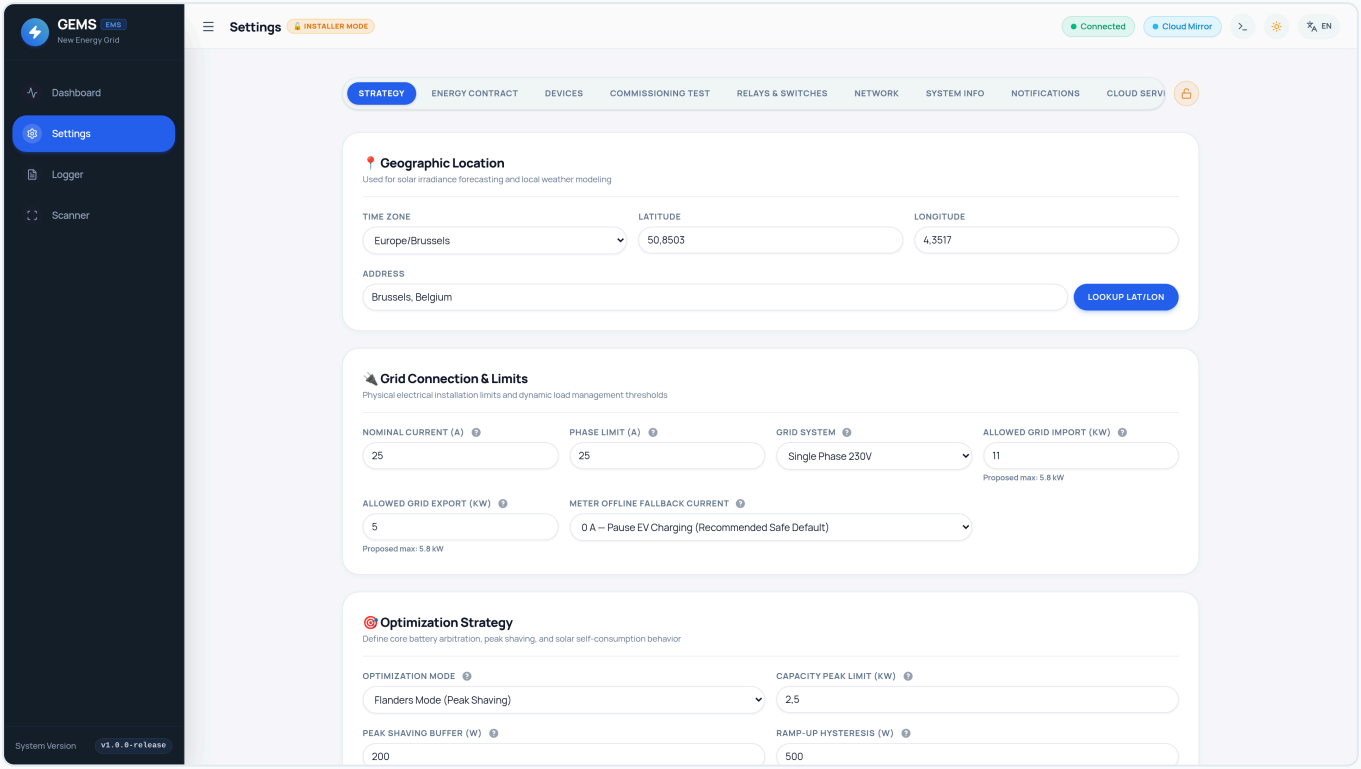


Figure 8.1: Settings → Strategy showing Geographic Location, Grid Limits, Optimization Mode, GSC Subsidy Protection, and Battery Arbitrage.

8.1 Geographic Location & Grid Connection Limits

Time Zone, Address & Lookup Lat/Lon

`Europe/Brussels`

WHAT IT DOES Sets your exact roof coordinates (Latitude & Longitude). Type your street/city and click **Lookup Lat/Lon** to auto-fill.

WHY USED GEMS uses these coordinates to fetch hyper-local hourly solar irradiance forecasts (W/m²) from Open-Meteo so your battery knows whether tomorrow will be sunny or overcast!

Nominal Current (A) & Phase Limit (A)

`e.g. 25 A / 40 A`

WHAT IT DOES Defines the physical main fuse rating per phase. GEMS calculates instantaneous per-phase headroom (`Phase Limit - Active Load`) every second.

WHEN TO USE Always match your physical utility breaker (e.g. `25 A` on 3×400V or `40 A` on 1×230V).

Allowed Grid Import / Export (kW)

`e.g. 17.3 kW / 10.0 kW`

WHAT IT DOES Caps maximum total active power imported from or exported to the street.

ZERO-EXPORT If your grid operator forbids solar feed-in, set **Allowed Grid Export (kW)** to `0.0 kW` and enable **Active Inverter Curtailment**!

Meter Offline Fallback Current

`0 A (Pause) – 16 A`

WHAT IT DOES Selects the safe current limit enforced on EV chargers if the P1 grid meter goes offline: `0 A (Pause – Recommended)`, `6 A`, `8 A`, `10 A`, or `16 A`.

8.2 Optimization Strategy, Flanders Peak Shaving & GSC Subsidy Protection

🧭 WHICH OPTIMIZATION MODE SHOULD YOU CHOOSE?

1. Eco (Max Self-Consumption)
Choose when: You live in Wallonia, Brussels, or have a standard meter without 15-minute capacity billing. Maximizes solar usage inside the home.

2. Flanders (Peak Shaving)
Choose when: You live in Flanders (Fluvius). Activates the 15-minute rolling average *Capaciteitstarief* peak shaver and Smart Adaptive Ceiling!

3. Netherlands (Smart Saldering)
Choose when: You live in the Netherlands. Optimizes for Dutch EPEX Spot, *Energiebelasting*, and prevents costly negative-price feed-in fees (*terugleverkosten*).

Capacity Peak Limit (kW)

`Default: 2.50 kW`

WHAT IT DOES Your target ceiling for the Flanders 15-minute rolling average grid import (Fluvius bills a minimum baseline of `2.50 kW`).

SMART ADAPTIVE CEILING If an unavoidable spike (e.g. `3.8 kW` when the battery was empty) occurs mid-month, GEMS automatically raises its active ceiling to `3.8 kW` for the rest of that month so you enjoy faster charging at zero extra grid cost, then resets to `2.50 kW` on the 1st of the next month!

Peak Shaving Buffer (W) & Hysteresis (W)

`150 W / 250 W`

WHAT IT DOES **Peak Shaving Buffer (W)** (default `150 W`) triggers battery discharge slightly before you hit the exact limit (e.g. at `2,350 W`) so sudden appliance spikes never overshoot. **Ramp-up Hysteresis (W)** (default `250 W`) prevents EV chargers from rapidly oscillating up and down when clouds pass.

Active Inverter Curtailment & Base Threshold

`Toggle + 0.00 €/kWh`

WHAT IT DOES When enabled, GEMS dynamically throttles your **Solis** inverter down to match house load whenever your solar export price drops below the **Base Export Price Threshold (€/kWh)** (default `0.00 €/kWh`) and your battery/EV are already full.

Green Power Certificates (GSC) Subsidy

`Presets: €0 to €450/MWh`

WHAT IT DOES Protects Flemish installations with legacy *Groenestroomcertificaten* (e.g., `€90`, `€210`, `€250`, `€350`, or `€450` per 1,000 kWh).

FORMULA `Effective Curtailment Trigger = Base Threshold - (GSC / 1000)`. With a **€250 GSC**, GEMS keeps your solar panels running at 100% until spot prices fall below **-€0.250/kWh**, so you never lose your green certificate payout!

8.3 Fluvius Telecontrol (IEC 60870-5-104)

Required only for large commercial or high-capacity installations where the Belgian distribution grid operator (Fluvius) installs a physical Telecontrol RTU box in the cabinet:

Fluvius 104 Setting	Default Value	What It Does & When to Use It
Enabled, TCP Port & Common Address (ASDU)	`Off` • Port `2404` • ASDU `1`	Starts the local IEC 60870-5-104 slave server on port `2404`. Leave **Off** for standard residential homes; enable only when a DNO RTU is installed.
Allowed RTU IP / CIDR & Setpoint Unit Mode	`192.168.1.0/24` • `kW` or `%`	Restricts which RTU IP can send curtailment commands and chooses whether ASDU 50 setpoints are interpreted in kilowatts (`kw`) or percentage of rated plant power (`percent`).
Installer Compliance Testing Buttons	`Trip Plant`, `Set 4.0 kW Limit`, `Release`	Lets the installer & Fluvius engineer simulate ASDU Type 45 (Emergency Trip) and ASDU Type 50 (Active Power Ceiling) on-site during commissioning acceptance tests.

8.4 Battery Grid Charging, Arbitrage & Rule-Based Cost Optimization

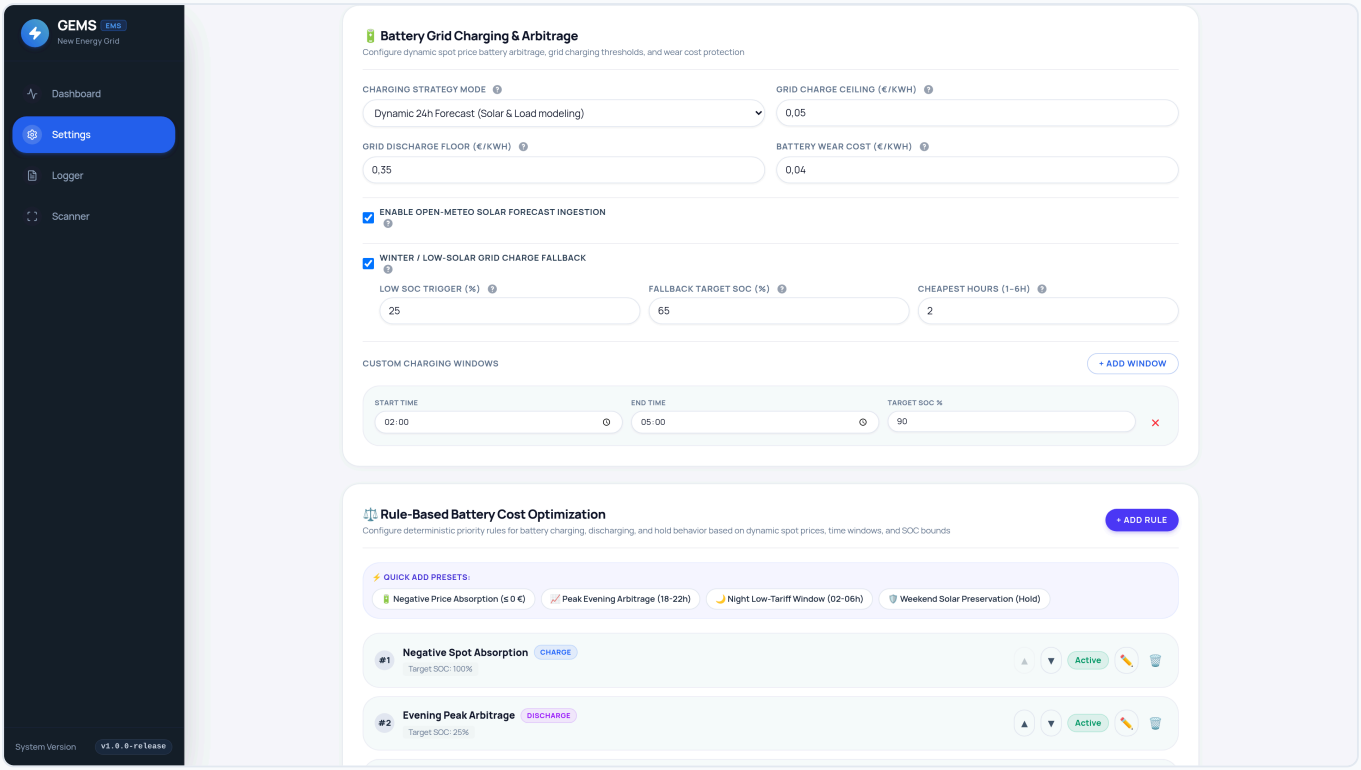


Figure 8.2: Battery Grid Charging Strategy, Wear Cost guard, Custom Charging Windows, and Priority Rule-Based Optimization.

Charging Strategy Mode

`4 Modes Available`

- **Dynamic + Solar Forecast (Recommended):** Combines EPEX Spot prices with tomorrow's Open-Meteo solar irradiance forecast. Only buys grid power at night if tomorrow's sun won't fill the battery!
- **Spot Price Threshold Only:** Charges from the grid whenever price ≤ Ceiling, regardless of weather.
- **Super-Dal Window Only (01:00–07:00):** Charges strictly during night Super-Dal off-peak hours.
- **Hybrid:** Combines Super-Dal night window with daytime negative-price absorption.

Grid Charge Ceiling, Discharge Floor & Wear Cost

`€/kWh Thresholds`

- **Grid Charge Ceiling (€/kWh):** Maximum price at which GEMS is willing to buy grid electricity to charge the battery (e.g. `0.08 €/kWh`).
- **Grid Discharge Floor (€/kWh):** Minimum price required before discharging the battery to save expensive grid import (e.g. `0.18 €/kWh`).
- **Battery Wear Cost (€/kWh):** Accounts for lithium-iron-phosphate (LFP) cell cycle wear (e.g. `0.02 €/kWh`). GEMS only performs price arbitrage if the profit spread exceeds this wear cost!

Custom Charging Windows

`Start • End • Target SoC%`

WHAT IT DOES Click **+ Add Window** to define fixed daily time slots (e.g. `02:00` to `05:00` → `Target SoC 85%`) where the battery is guaranteed to reach a desired charge level before morning coffee.

Winter / Low-Solar Grid Charge Fallback

`Default: On (25% → 65%, 2h)`

WHAT IT DOES When your battery drops to or below the **Low SoC Trigger** (default `25%`) during winter or bad weather and the 24-hour solar forecast cannot recharge it, GEMS automatically charges the battery during the **Cheapest Hours** (default `2 hrs`) up to the **Fallback Target SoC** (default `65%`) so it remains useful for peak shaving and evening self-consumption while leaving headroom for unexpected sun.

Rule-Based Battery Cost Optimization

`Priority #1, #2, #3...`

WHAT IT DOES Lets you build prioritized automation rules evaluated top-to-bottom. Includes 4 one-click presets:
1. ⚡ **Negative Price Absorption** (Force Charge to 100% when price < €0.00)
2. 💶 **Peak Evening Arbitrage** (Discharge during expensive 17:00–21:00 peak)
3. 🌙 **Night Low-Tariff Window** (Charge during 01:00–06:00 cheap hours)
4. ☀️ **Weekend Solar Preservation** (Hold battery for afternoon sunshine).

8.5 Smart EV Optimization, Elia Green Grid Sync & Super-Dal Baseline

Cheapest Spot Price Hours (0 – 8 hrs)

`Default: 4 hrs`

WHAT IT DOES When your EV charger is in **Eco** mode, GEMS automatically unlocks grid charging during the `N` cheapest spot-price hours of every 24-hour cycle (typically 4 hours gives ~44 kWh on an 11 kW charger—over 220 km of range!). Set to `0` for strict solar-only behavior.

Elia Green Grid Sync Boost (Belgium)

`Default: 65% Renewable`

WHAT IT DOES Polls Belgian transmission operator **Elia** for the live national wind + solar generation mix. Whenever the national renewable share exceeds your slider (30%–95%, default `65%`), GEMS boosts EV & battery charging to absorb clean national energy!

Super-Dal Optimization (01:00 – 07:00)

`Toggle + Target SoC %`

WHAT IT DOES Specifically designed for contracts with ultra-cheap night rates between 01:00 and 07:00. Pre-charges your battery to the **Super-Dal Target SoC (%)** while respecting your Flanders `2.50 kW` peak limit.

Household Baseline Load (Watts)

`Default: 350 W`

WHAT IT DOES Your home's typical background consumption (fridge, ventilation, router, standby appliances). Used by the solar forecast solver to calculate how many kWh your home will consume overnight before sunrise.

9. Settings Tab 3: Energy Contract & The 5 Tariff Wizards

Settings → Energy Contract translates raw wholesale electricity prices into your exact **all-in retail price per kWh** (including supplier markups, balancing fees, grid distribution charges, excise taxes, and VAT).

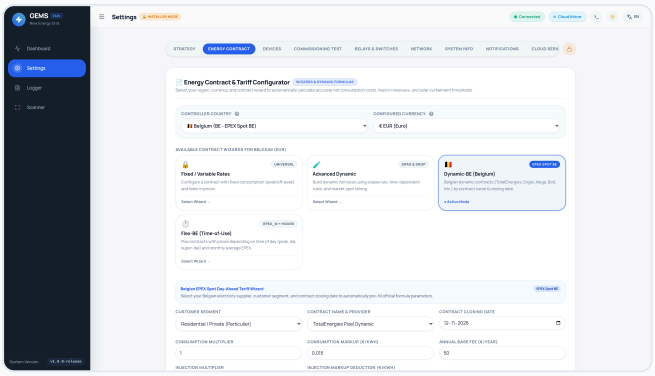


Figure 9.1: Selecting one of the 5 Contract Wizards, DNO regional presets, and tax components.

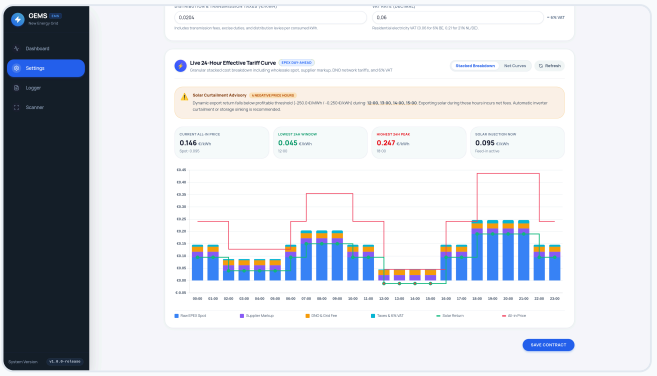


Figure 9.2: Live 24-Hour Effective Tariff Curve Visualizer showing stacked price components and solar injection returns.

Step-by-Step: Choosing the Right Contract Wizard (5 Wizards Explained)

Contract Wizard	Who Should Use It	Every Field Inside This Wizard Explained
1. Fixed / Variable Rates	Homeowners with a classic single/dual tariff meter (Peak / Off-Peak) and fixed feed-in tariff.	• **Peak Rate (€/kWh):** Daytime electricity rate (07:00–22:00 weekdays). • **Off-Peak Rate (€/kWh):** Night & weekend rate (22:00–07:00 + weekends). • **Solar Feed-In Tariff (€/kWh):** Fixed compensation paid per kWh exported to the street.
2. Advanced Dynamic (Visual Formula Builder)	Custom dynamic contracts or power users who want a visual drag-and-drop formula builder.	• **Market Price Source:** Links to live Day-Ahead EPEX Spot (`€/MWh` or `€ct/kWh`). • **Interactive Drag & Drop Formula Builder:** Click or drag chips (`EPEX_EUR_KWH`, `+`, `*`, `0.105`) to build your exact consumption and solar injection formulas, plus optional **Time-Dependent Rules** (e.g. peak grid fee markups).
3. Dynamic-BE (Belgian Hourly EPEX)	Belgian homeowners or businesses on an hourly dynamic contract.	• **Customer Segment:** `Private (6% VAT)` or `Business (21% VAT)`. • **Belgian Provider Preset & Closing Date:** Auto-fills verified Belgian supplier formulas: – `consumption_multiplier` & `consumption_adder` (applied to `EPEX * 0.001 * mult + adder`) – `injection_multiplier` & `injection_adder` (handles negative injection fees) – `Annual Fixed Administrative Fee (€/yr)`.
4. Flex-BE (Time-of-Use + Monthly EPEX)	Belgian variable/flex contracts with Peak, Off-Peak, and Super-Dal (01:00–07:00) brackets.	• **Peak / Off-Peak / Super-Dal Markup (€/kWh):** Supplier tariff for each time window. • **Injection Multiplier & Adder:** Solar feed-in calculation. • **Automatically Charge Battery in Super-Dal Window (01:00–07:00):** One-click toggle + **Target SoC (%)** to fill the battery overnight at Super-Dal rates.
5. Dynamic-NL (Dutch Hourly EPEX)	Dutch homeowners on a dynamic hourly contract in the Netherlands.	• **Dutch Provider Preset:** Auto-fills Dutch supplier parameters: – `Inkoopvergoeding Consumption / Injection (€/kWh)` (procurement markups) – `Energiebelasting (€/kWh)` (Dutch energy tax, default `0.1316 €/kWh`) – `Terugleverkosten (€/kWh)` (solar feed-in cost) & `Vastrecht (€/yr)`.

DNO Regional Presets, Taxes & Live 24-Hour Tariff Visualizer

DNO Preset & Distribution Taxes (€/kWh)

`Fluvius / ORES / Resa / NL`

WHAT IT DOES Click your regional grid operator preset button (**Fluvius**, **ORES**, **Resa**, **Sibelga**, or **NL DNOs**) to auto-fill **Distribution & Transmission Taxes (€/kWh)** and **VAT Rate** (`0.06` for 6% BE residential, `0.21` for 21% NL/Business).

Live 24-Hour Effective Tariff Visualizer

`Stacked & Net Curves`

WHAT IT DOES Displays your exact hour-by-hour retail price for today: **Current All-In Price**, **Lowest 24h Window** (best hour for EV/battery), **Highest 24h Peak**, and **Solar Injection Now**, plus a live **Solar Curtailment Advisory Banner** if afternoon export prices turn negative!

10. Settings Tab 4: Smart Relays, Boilers & SG-Ready Heat Pumps

Settings → Relays & Switches turns surplus solar power and negative spot prices into free hot water and space heating by controlling smart contactors (Shelly Pro/Plus, Modbus TCP/RTU relays, and SG-Ready heat pumps).

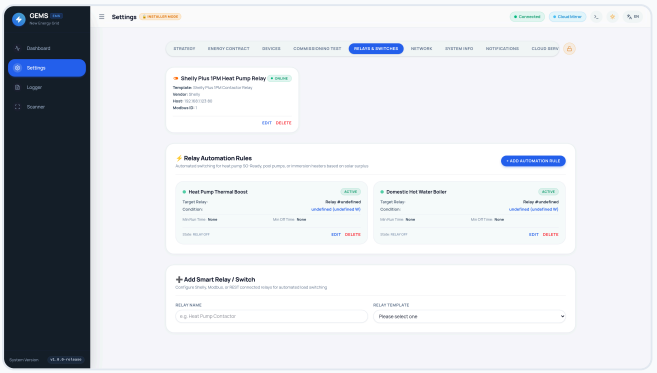


Figure 10.1: Configured Smart Relays with live ON/OFF status and manual override toggle.

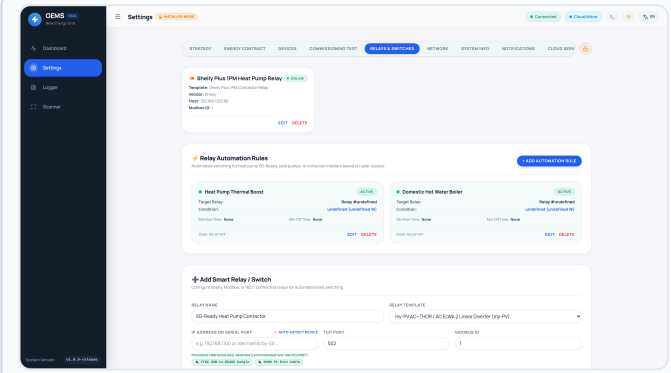


Figure 10.2: Creating an Automation Rule with anti-short-cycling minimum run/off timers.

Every Relay Automation Rule Setting Explained

Condition Type (4 Triggers)

`Solar or Spot Price`

- `solar_export_exceeds`: Triggers when net solar export to the street exceeds **X Watts** (e.g. `1500 W`).
- `grid_import_below`: Triggers when grid import is below **X Watts**.
- `spot_price_below`: Triggers when dynamic electricity price is ≤ **X €/kWh** (e.g. `0.04 €/kWh`).
- `spot_price_negative`: Triggers automatically whenever wholesale prices drop below `€0.00/kWh`!

Min Run Time (sec) & Min Off Time (sec)

`Compressor Protection`

WHAT IT DOES Prevents heat pump compressors and contactors from rapidly clicking ON and OFF ("short-cycling") when passing clouds briefly dip solar production.

RECOMMENDED For heat pumps, set **Minimum Run Time** to `900–1800 sec` (15–30 min) and **Minimum Off Time** to `600 sec` (10 min). For resistive water boilers, `300 sec` (5 min) is ideal.

SG-Ready Heat Pump 2-Relay Operating Matrix

SG-Ready State	Relay 1 : Relay 2	Heat Pump Behavior & When GEMS Activates It
State 1 — Utility Lockout	`1 : 0`	Temporarily blocks compressor during extreme capacity peaks (if configured).
State 2 — Normal Eco Mode	`0 : 0`	Standard thermostat operation (default everyday state).
State 3 — Solar Boost Recommendation	`0 : 1`	Raises domestic hot water & buffer tank temperature target when moderate solar surplus (e.g. > `1,200 W`) or cheap night spot prices are available.
State 4 — Forced Max Thermal Storage	`1 : 1`	Commands immediate maximum thermal boost during high solar surplus (> `2,500 W`) or negative electricity prices.

11. Settings Tab 5: Wired Ethernet Network & 60s Safety Rollback

Settings → Network (visible in Certified Installer Mode) manages your Raspberry Pi's primary wired Ethernet interface (`eth0`). For maximum industrial reliability inside metal electrical cabinets, wireless Wi-Fi interfaces are intentionally omitted in favor of hardwired Ethernet.

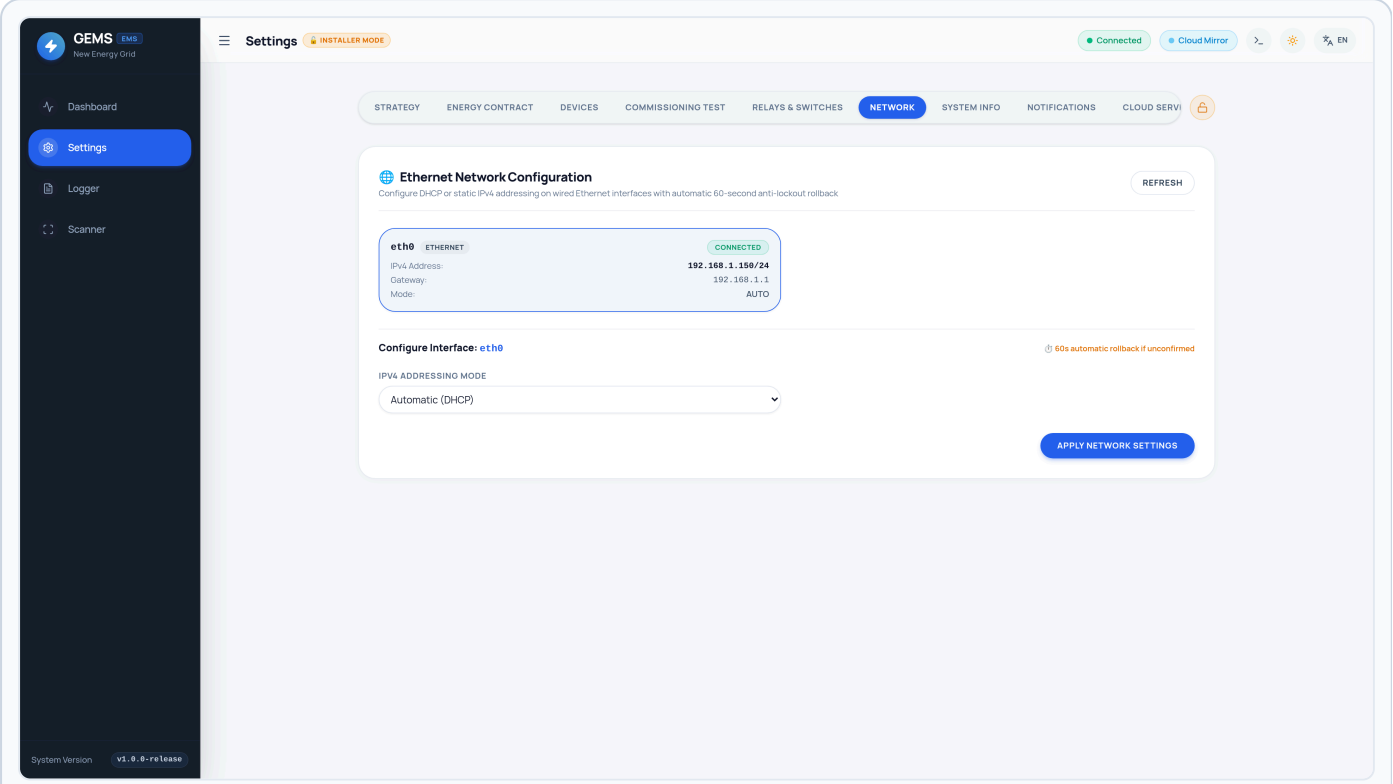


Figure 11.1: Wired Ethernet (eth0) configuration with DHCP or Static IPv4 and automatic 60-second anti-lockout rollback protection.

Configuration Mode: DHCP vs. Static IPv4

`DHCP Default`

- **DHCP (Automatic):** Your router automatically assigns the IP address, gateway, and DNS.
- **Static IPv4 (Manual):** Lock a fixed IP (e.g. `192.168.1.200/24`), **Gateway** (`192.168.1.1`), and **DNS Servers** (`1.1.1.1, 8.8.8.8`). Recommended when Fluvius RTUs or OCPP chargers connect to GEMS by IP.

🛡️ 60-Second Automatic Connectivity Rollback

`Anti-Lockout Guard`

WHAT IT DOES When you apply a new Static IP, GEMS starts a 60-second safety timer and opens a confirmation modal. If you made a typo in the IP or subnet mask and your browser cannot reach the unit within 60 seconds, **GEMS automatically reverts to your previous working network settings** so you never get locked out!

12. Settings Tab 6: System Info, Backups, PIN, OTA Updates & SSL

Settings → System Info provides system identity, safe reboot, cryptographically signed software updates, portable JSON configuration backups, PIN rotation, and local HTTPS certificates:

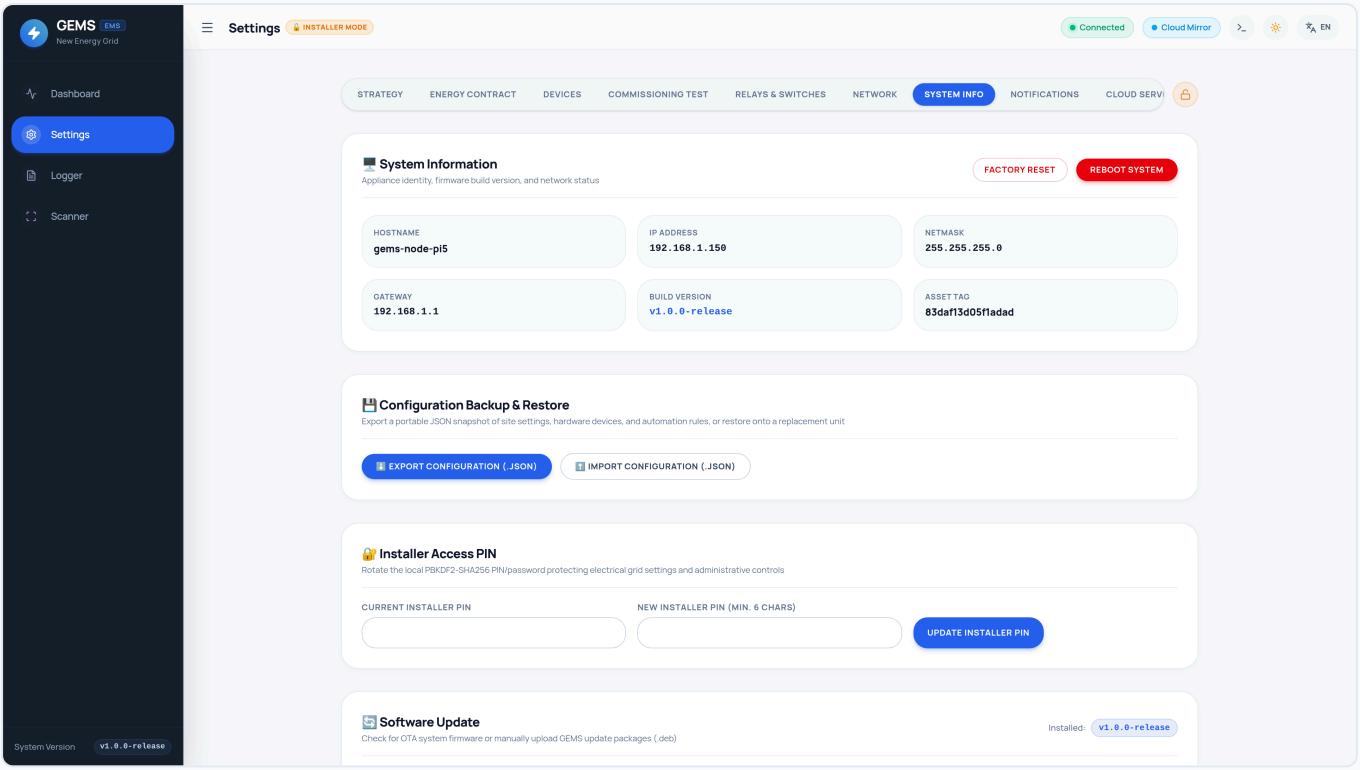


Figure 12.1: System Info showing Hostname, IP, Release Build Tag, Asset Tag, Backup/Restore, and Signed Software Updates.

System Identity, Reboot & Factory Reset

`Always Visible`

Displays **Hostname**, **IP Address**, **Netmask**, **Gateway**, **Build Version** (`v9.32.3`), and unique **Asset Tag**.

- **Reboot System:** Safely flushes the SQLite WAL database and restarts the controller.
- **Factory Reset (Installer Mode):** Wipes configuration & device history and re-launches the 4-Step Commissioning Wizard.

Configuration Backup & Restore (.json)

`Installer Mode`

WHAT IT DOES Click **Export Configuration** to download a portable `.json` snapshot containing all your devices, strategy limits, tariff formulas, and relay rules. Click **Import Configuration** to clone or restore a setup in 5 seconds!

Software Update (Online OTA & Manual .deb)

`Ed25519 Verified`

WHAT IT DOES Click **Check for Updates** to install the latest release over the air, or drag-and-drop an offline `.deb` package. Every update is cryptographically verified (Ed25519 signature + SHA-256 checksum) with live terminal progress logs.

Local CA & SSL Certificate + PIN Rotation

`HTTPS Trust`

WHAT IT DOES Download the GEMS **Root CA Certificate** (`.crt`) or add custom local domains (e.g. `gems.home.lan`) with instant hot-reload and step-by-step trust guides for Chrome, Safari/iOS, macOS, Windows, and Android. You can also rotate your **Installer PIN** here.

13. Settings Tab 7: Notifications, Webhooks, Weekly Email & Debug

Settings → Notifications keeps you proactively informed via real-time webhook alerts, Sunday evening executive email reports, and granular diagnostic logging:

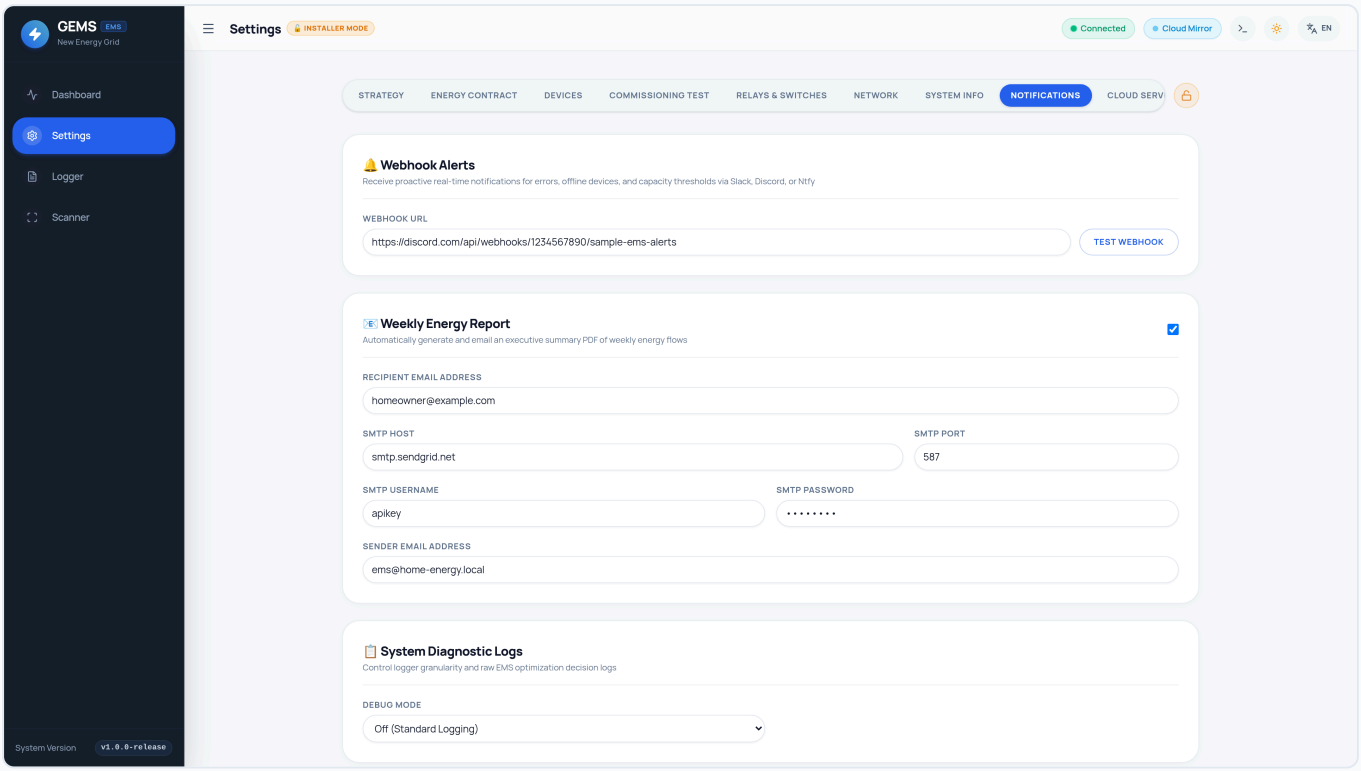


Figure 13.1: Webhook Alert URL, Weekly Email Summary SMTP configuration, and Debug Mode log verbosity toggle.

Webhook URL & Test Webhook

`HTTP POST JSON`

WHAT IT DOES Sends instant JSON alerts to Slack, Discord, Telegram bridges, or generic home automation webhook endpoints whenever your Flanders 15-minute peak approaches **≥ 90%** of your ceiling, or if an inverter/charger drops offline. Click **Test Webhook** to verify delivery immediately.

Weekly Email Report & SMTP Settings

`Sundays at 20:00`

WHAT IT DOES Emails a formatted weekly energy report (solar kWh, self-sufficiency %, EV kWh, and peak kW) every Sunday at 20:00. Enter your **Recipient Email**, **SMTP Host** (e.g. `smtp.gmail.com`), **Port** (`587`), **Username**, **Password**, and **Sender Address**.

Debug Mode (Verbose System Logging)

`Default: Off (INFO)`

WHAT IT DOES Switches the system logger from standard `INFO` level to verbose `DEBUG` level (recording individual Modbus register payloads, OCPP frames, and strategy math). Keep **Off** during normal operation to minimize SD/NVMe wear; enable temporarily when diagnosing a new device.

14. Settings Tab 8: Optional Cloud Server (GRID-EMS-SERVER)

Settings → Cloud Server manages your optional encrypted connection to **GRID-EMS-SERVER** (`https://ems.newenergygrid.com`) for remote monitoring from anywhere in the world and remote installer support.

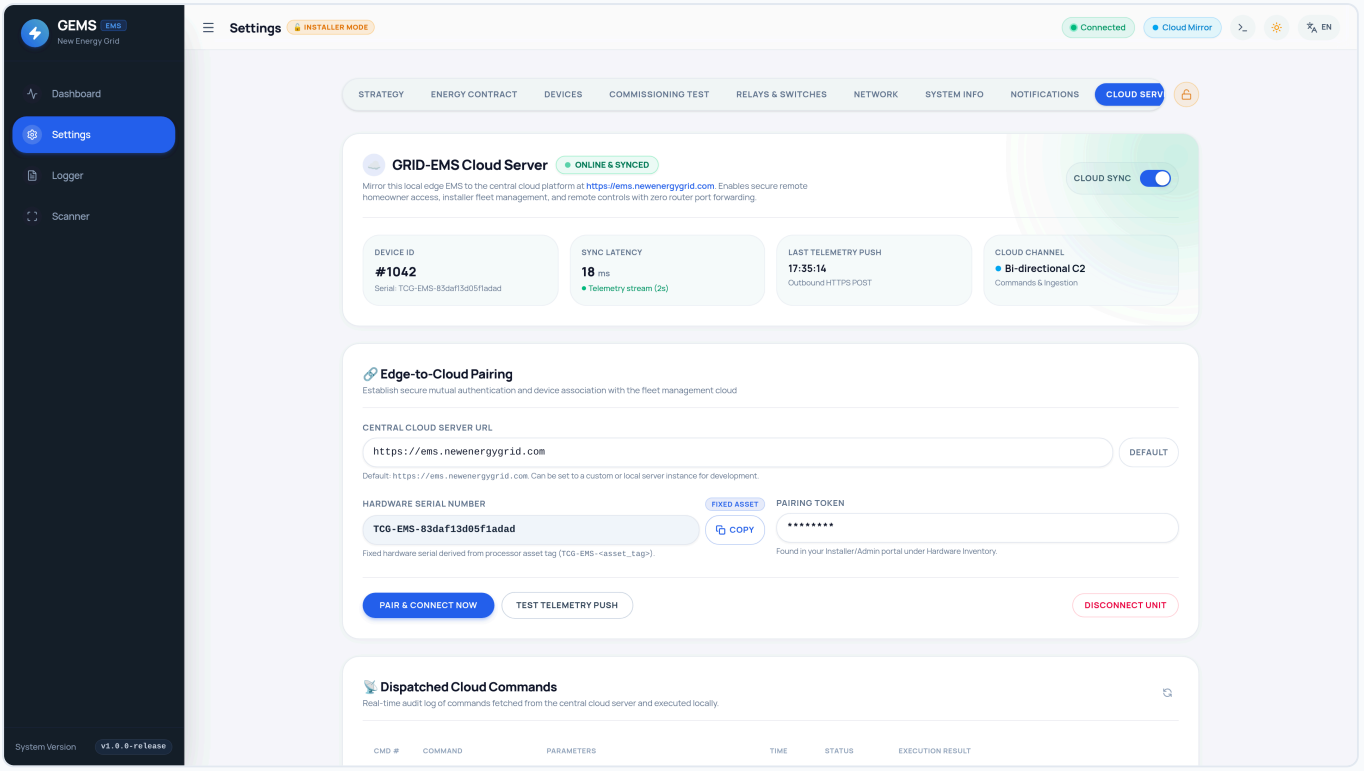


Figure 14.1: Cloud Server pairing interface, live sync latency KPIs, and Dispatched Cloud Commands audit log.

Cloud Sync Toggle & Pairing Token `PAIR-XXXX-TCG`

WHAT IT DOES Paste your 16-character pairing token from `https://ems.newenergygrid.com` and click **Pair & Connect Now**. Uses outbound-only TLS 1.3 encryption—**zero router port forwarding required**!

Test Telemetry Push & Command Audit Log `Live Verification`

WHAT IT DOES View your **Device ID**, **Sync Latency (ms)**, and **Last Telemetry Push** timestamp. Click **Test Telemetry Push** to force an immediate packet sync, or inspect the **Dispatched Cloud Commands** audit log to see every remote mode change acknowledged by your unit.

15. Network Scanner, Live Logger, PDF Energy Reports & Mobile App

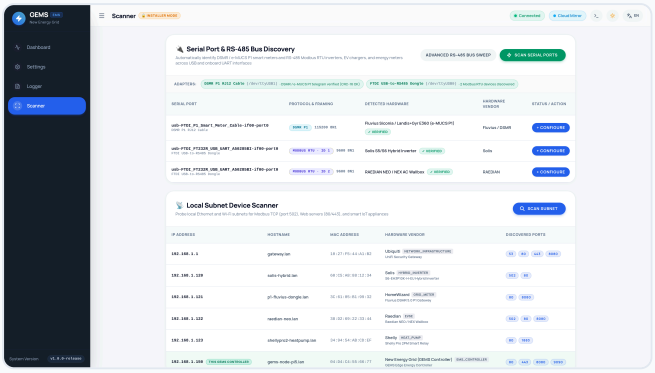


Figure 15.1: Sidebar → Scanner: Automated LAN & Modbus TCP/RTU discovery with one-click "+ Configure Device" onboarding.

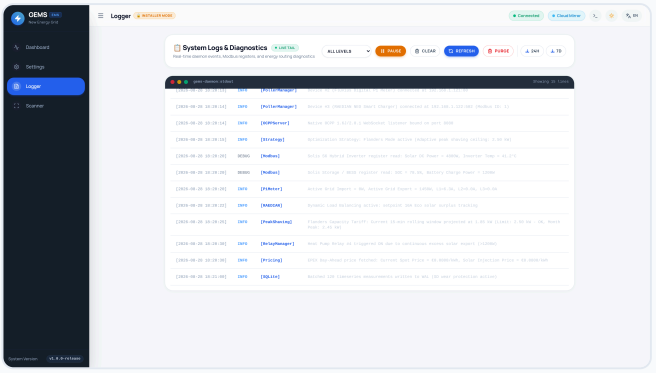


Figure 15.2: Sidebar → Logger: Live color-coded event stream with level filtering, search, Pause, and Export Logs (.log).

📡 Sidebar → Scanner (Installer Mode)

`Auto-Discovery`

WHAT IT DOES Automatically recognizes the GEMS controller itself (`THIS GEMS CONTROLLER`), sweeps your local `/24` network using mDNS, UPnP/SSDP, 24/28/36-bit IEEE MAC OUI resolution, and Modbus/HTTP/TLS protocol fingerprinting, and scans attached USB/RS-485 serial ports with one-click **+ Configure** device onboarding.

📄 One-Click Printable PDF Energy Reports

`Daily / Weekly / Monthly / Yearly`

WHAT IT DOES On the main Dashboard, select **Daily**, **Weekly**, **Monthly**, or **Yearly** and click **Export PDF** to download a formatted executive summary of your solar generation, battery cycles, EV kWh, and capacity peak savings.

📱 Pro-Tip: Install GEMS as a Full-Screen App on Your Smartphone

Connect your phone to your home Wi-Fi and open `http://ems.local` in Safari (iPhone) or Chrome (Android). Tap **Share** → **Add to Home Screen**. GEMS launches as a sleek full-screen mobile app with a thumb-friendly bottom navigation bar!

16. Frequently Asked Questions & Quick Settings Cheat Sheet

Goal / Scenario	Where to Go in GEMS	Exact Setting to Adjust
Charge my EV using 100% free sunshine only	Dashboard → Click **EV Charger Circle**	Select **PV Only** mode (or **Eco** with *Cheapest Spot Price Hours = 0*). Also enable **Automatic 1P/3P Phase Switching** on your Raedian charger!
Keep my Flanders monthly peak at the 2.50 kW minimum	Settings → **Strategy**	Set **Optimization Mode** = `Flanders (Peak Shaving)`, **Capacity Peak Limit** = `2.50 kW`, and **Peak Shaving Buffer** = `150 W`.
Stop paying penalties when afternoon solar spot prices go negative	Settings → **Strategy** & **Devices**	Check **Allow Curtailment** on your Solis inverter in *Devices*, and enable **Active Inverter Curtailment** in *Strategy* with **Base Export Price Threshold** = `0.00 €/kWh`.
Protect my Flemish Groenestroomcertificaten (GSC) during negative prices	Settings → **Strategy**	Select your **GSC Preset** (e.g. `€250` or `€350/MWh`). GEMS will only curtail solar if the negative spot price exceeds your subsidy value!
Pre-charge my home battery overnight before a cloudy winter day	Settings → **Strategy**	Under *Battery Grid Charging*, select **Dynamic + Solar Forecast** and set your **Grid Charge Ceiling (€/kWh)** (e.g. `0.10 €/kWh`) or add a **Custom Charging Window**.
Heat my water boiler or SG-Ready heat pump with excess solar	Settings → **Relays & Switches**	Add a rule with **Condition** = `solar_export_exceeds` (e.g. `1500 W`) and set **Min Run Time** = `900 sec`.