

香港機場水牌

機場風格航班資訊顯示器
使用說明

3 連接裝置熱點

在手機的 Wi-Fi 清單中選擇 **AirportDisplay-XXXX** (XXXX 為螢幕 MAC 的後 4 位)，密碼為 **HK-XXXXXX**。

4 開啟控制台

在瀏覽器輸入 **http://192.168.4.1/**；出現登入視窗時，帳號輸入 **admin**，密碼輸入 **HK-XXXXXX**。

快速上手：四個步驟

1 接通電源並開機

以 USB-C 5V 供電，打開機側電源開關。螢幕會先熄滅片刻，數秒後亮起並顯示示範航班。

2 查看螢幕底部

記下 **MAC** 後面的 6 位英數；所有密碼均為 **HK-**加上這 6 位。

水牌會自行開啟 Wi-Fi 熱點，無需互聯網即可完成設定。瀏覽器可能顯示「不安全」警告，原因是裝置使用本機 HTTP 網頁，屬正常情況。

設定一次即可。日後每次開機，水牌都會沿用已儲存的航班資料與背景圖片，離線時仍可正常顯示。

螢幕內容說明



- 航班編號 (例: CX 548)
- 出發時間 (24 小時制)
- 代碼共享航班 (可留空)
- 出發地
- 目的地 (大字、黃色)
- 登機狀態 (例: 登機中)
- 系統帶: **MAC**、網絡狀態與 BOOT 提示

系統帶說明

- AP**: 水牌正在廣播自身熱點，等待連線設定。
- STA 192.168.x.x**: 水牌已連接您的 Wi-Fi，並顯示其 IP 位址。
- 中間的圖案為可更換的背景圖片，出廠時為預設圖。

未進行任何設定前，水牌顯示內建示範資料: CX 548 · 08:55 · JL 7030 · 香港 → 東京羽田 · 登機中。

控制台：航班資料

登入後，控制台分為五個區域：**航班資料**、**Wi-Fi 設定**、**背景圖片**、**OTA / 維護**、**登入設定**。

欄位	填寫內容
Flight number 航班編號	例: CX 548
Codeshare 代碼共享	例: JL 7030, 沒有可留空

欄位	填寫內容
Departure 出發地	英文、繁中、簡中各一格
Destination 目的地	英文、繁中、簡中各一格
Departure time 出發時間	24 小時制, 例: 08:55
Status 狀態	例: 登機中 / Boarding
顯示語言	繁體中文、簡體中文或 English, 選擇後即時生效

修改後請按「儲存航班設定」，螢幕會即時更新。

裝置未連接外部航班 API，會直接顯示您填寫的內容，因此可填入自己的航班、朋友的航班，甚至自訂一班「登機中」。

顯示語言一經更改即時套用：螢幕與控制台會同時切換為繁體中文、简体中文或 English。

恢復原廠設定

按住機側 **BOOT** 約 **5 秒**（螢幕底部會顯示 BOOT 提示），放開後裝置會重新啟動。航班資料、Wi-Fi、背景圖片與登入帳號將全部清除，並回復出廠示範資料。

下載模式（維修／重新刷機用）

按住 **BOOT**，按一下 **RST**，然後放開 BOOT，裝置便會進入下載模式。

常見問題

無法連接 AirportDisplay-XXXX?

請靠近水牌，確認手機使用 2.4GHz、關閉 VPN，然後重新開機再試一次。

忘記控制台密碼？

請查看螢幕底部的 MAC 後 6 位，密碼即為 **HK-** 加上這 6 位。如曾更改而忘記，請執行一次原廠重設。

輸入 192.168.4.1 沒有反應？

請確認手機仍連接水牌的熱點，不要切換至流動數據。

內建繁體與簡體中文字型。若個別字元顯示為方格，請改用其他語言或常見字詞。

可以用 5GHz Wi-Fi 嗎？

不可以。水牌只支援 2.4GHz；路由器同時廣播兩個頻段時，請選擇 2.4GHz 的那一個。


支援

如有任何問題，歡迎於市集現場洽詢，或掃描 QR code 開啟重新刷機（USB）網頁。

github.com/wedsamuel1230/airport-sign-flash-station



維護與復原

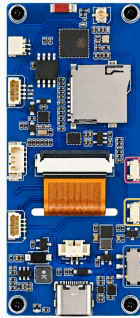

- 1 **RST**：按一下重新啟動（不會清除設定）
- 2 **BOOT**：按住約 5 秒 = 原廠重設
- 3 電源開關（機側最底，近 USB-C）：ON/OFF

OTA 韌體更新（進階）

先短按並放開 BOOT 以完成授權（授權有效期 120 秒），然後在「維護工具」上載同型號的 **.bin** 檔案。

警告：上載錯誤檔案會導致水牌無法開機。如不清楚操作內容，請勿自行更新，並於市集現場尋求協助。

如需使用電腦重新刷機，請參閱封底的 flash station 網址與 QR code。

修改設定後螢幕沒有變化？

請按「儲存航班設定」；背景圖片需等待上載完成後才會套用。

上載背景圖片失敗？

僅支援 PNG 或 JPEG。裝置會自動裁切為 320×212，建議使用橫向構圖。

螢幕沒有畫面？

請檢查電源開關與 USB-C 線，並重新開機一次；若仍未顯示，則需要維修。

中文無法顯示？

重新刷機需要 Chrome 或 Edge，以及一條可傳輸資料的 USB-C 線。

請勿自行拆開外殼；避免高溫、潮濕與陽光直射。只建議使用 5V USB 電源。

HONG KONG AIRPORT DISPLAY

Hong Kong Airport Display

Airport-style flight information display
User guide

USB-C 5V power · Works offline · Traditional Chinese, Simplified Chinese and English

Hong Kong Airport Display · User guide

Page 1 / 16

3 Join the device hotspot

On your phone, join AirportDisplay-XXXX (the last four MAC characters) with the password HK-XXXXXX.

4 Open the console

Open <http://192.168.4.1/> in a browser and sign in as admin with HK-XXXXXX.

The display runs its own Wi-Fi hotspot, so no internet is needed for setup. A browser warning that the page is "Not secure" is expected: it is served locally over HTTP.

Hong Kong Airport Display · User guide

Page 3 / 16

Quick start: four steps

1 Power on

Connect USB-C 5V power and switch the unit on. The screen stays dark briefly, then shows the demo flight.

2 Read the screen footer


Note the six characters after **MAC**; every password is **HK-** plus those six.

Hong Kong Airport Display · User guide

Page 2 / 16

Setup is a one-off. Later starts reuse the saved flight data and background image, and work with no network.

What the screen shows

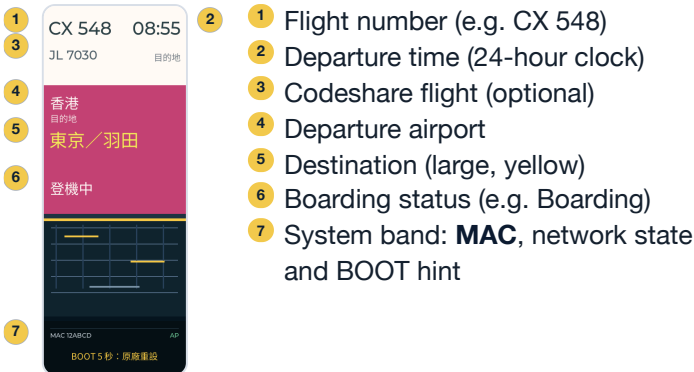

Hong Kong Airport Display · User guide

Page 5 / 16

Reading the system band

- AP: the display is broadcasting its own hotspot and waiting to be configured.
- STA 192.168.x.x: the display has joined your Wi-Fi and shows its IP address.
- The artwork in the middle is the replaceable background image; the factory default is shown.

Hong Kong Airport Display · User guide

Page 6 / 16

Before any change, the display shows the built-in demo record: CX 548 · 08:55 · JL 7030 · Hong Kong → Tokyo Haneda · Boarding.

Console: flight data

After signing in, the console has five areas: **flight data**, **Wi-Fi settings**, **background image**, **OTA / maintenance** and **login settings**.

Field	What to enter
Flight number	e.g. CX 548

Hong Kong Airport Display · User guide

Page 7 / 16

Field	What to enter
Codeshare	e.g. JL 7030, leave blank if none
Departure	English, Traditional and Simplified Chinese
Destination	English, Traditional and Simplified Chinese
Departure time	24-hour clock, e.g. 08:55
Status	e.g. Boarding / 登機中
Display language	Traditional Chinese, Simplified Chinese or English; applies immediately

Hong Kong Airport Display · User guide

Page 8 / 16

Press "**Save flight settings**" after editing; the screen updates immediately.

The display has no external flight API, so it shows exactly what you enter: your own flight, a friend's, or an invented boarding flight. Changing the display language applies at once to the screen and the console.

Factory reset

Hold **BOOT** for about **5 seconds** (the screen footer shows the hint), then release. The display restarts and clears flight data, Wi-Fi, the background image and the console account.

Download mode (service and re-flashing)

Hold **BOOT**, tap **RST**, then release BOOT. The display enters download mode.

Frequently asked questions

Cannot find AirportDisplay-XXXX?

Move closer, check the phone is on 2.4GHz, turn off any VPN, then power-cycle and retry.

I forgot the console password.

Read the six characters after MAC at the bottom of the screen: the password is HK— plus those six. If you changed it and forgot, run a factory reset.

192.168.4.1 does not respond.

Check that the phone is still connected to the display's hotspot rather than mobile data.

Chinese fonts are built in. If a single character shows as a box, try another language or a simpler word.

Can it join a 5GHz network?

No. The display only supports 2.4GHz. If your router broadcasts both bands, pick the 2.4GHz SSID.


Support

If you have any questions, ask us at the market, or scan the QR code to open the USB re-flash page.

github.com/wedsamuel1230/airport-sign-flash-station



Maintenance and recovery

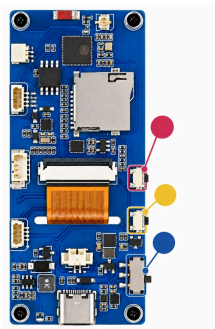

- 1 **RST**: press to restart (keeps your settings)
- 2 **BOOT**: hold about 5 s = factory reset
- 3 Power switch (lowest on the side, by the USB-C): ON/OFF

OTA firmware update (advanced)

Press and release BOOT to authorise an update (valid for 120 seconds), then upload a `.bin` file for this product under "Maintenance tools".

Warning: uploading the wrong file can leave the display unable to boot. If you are unsure, do not update it yourself; ask us at the market.

To re-flash from a computer, see the flash station address and QR code on the back page.

Nothing changes after I edit the settings.

Press "Save flight settings". A background image is applied only after the upload finishes.

The background upload fails.

Only PNG and JPEG are supported; the device crops to 320×212, so use a landscape picture.

The screen is blank.

Check the power switch and USB-C cable, then restart. If it stays blank, the unit needs service.

Chinese characters do not appear.

Re-flashing needs Chrome or Edge and a USB-C cable that carries data.

Do not open the enclosure. Keep the unit away from heat, moisture and direct sunlight. Use a 5V USB power source.