

# 香港機場水牌

機場風格航班資訊顯示器  
使用說明

## 3 連接裝置熱點

在手機的 Wi-Fi 清單中選擇 **AirportDisplay-XXXX** (XXXX 為螢幕 MAC 的後 4 位)，密碼為 **HK-XXXXXX**。

## 4 開啟控制台

在瀏覽器輸入 **http://192.168.4.1/**；出現登入視窗時，帳號輸入 **admin**，密碼輸入 **HK-XXXXXX**。

# 快速上手：四個步驟

## 1 接通電源並開機

以 USB-C 5V 供電，打開機側電源開關。螢幕會先熄滅片刻，數秒後亮起並顯示示範航班。

## 2 查看螢幕底部

記下 **MAC** 後面的 6 位英數；所有密碼均為 **HK-**加上這 6 位。

**水牌會自行開啟 Wi-Fi 熱點**，無需互聯網即可完成設定。瀏覽器可能顯示「不安全」警告，原因是裝置使用本機 HTTP 網頁，屬正常情況。

設定一次即可。日後每次開機，水牌都會沿用已儲存的航班資料與背景圖片，離線時仍可正常顯示。

# 螢幕內容說明



- 航班編號 (例: CX 548)
- 出發時間 (24 小時制)
- 代碼共享航班 (可留空)
- 出發地
- 目的地 (大字、黃色)
- 登機狀態 (例: 登機中)
- 系統帶: **MAC**、網絡狀態與 BOOT 提示

# 系統帶說明

- AP**: 水牌正在廣播自身熱點，等待連線設定。
- STA 192.168.x.x**: 水牌已連接您的 Wi-Fi，並顯示其 IP 位址。
- 中間的圖案為可更換的背景圖片，出廠時為預設圖。

未進行任何設定前，水牌顯示內建示範資料: CX 548 · 08:55 · JL 7030 · 香港 → 東京羽田 · 登機中。

# 控制台：航班資料

登入後，控制台分為五個區域：**航班資料**、**Wi-Fi 設定**、**背景圖片**、**OTA / 維護**、**登入設定**。

| 欄位                 | 填寫內容              |
|--------------------|-------------------|
| Flight number 航班編號 | 例: CX 548         |
| Codeshare 代碼共享     | 例: JL 7030, 沒有可留空 |

| 欄位                  | 填寫內容                        |
|---------------------|-----------------------------|
| Departure 出發地       | 英文、繁中、簡中各一格                 |
| Destination 目的地     | 英文、繁中、簡中各一格                 |
| Departure time 出發時間 | 24 小時制, 例: 08:55            |
| Status 狀態           | 例: 登機中 / Boarding           |
| 顯示語言                | 繁體中文、簡體中文或 English, 選擇後即時生效 |

修改後請按「儲存航班設定」，螢幕會即時更新。

裝置未連接外部航班 API，會直接顯示您填寫的內容，因此可填入自己的航班、朋友的航班，甚至自訂一班「登機中」。

顯示語言一經更改即時套用：螢幕與控制台會同時切換為繁體中文、简体中文或 English。

## 恢復原廠設定

按住機側 **BOOT** 約 **5 秒**（螢幕底部會顯示 BOOT 提示），放開後裝置會重新啟動。航班資料、Wi-Fi、背景圖片與登入帳號將全部清除，並回復出廠示範資料。

## 下載模式（維修／重新刷機用）

按住 **BOOT**，按一下 **RST**，然後放開 BOOT，裝置便會進入下載模式。

## ## 常見問題

### 無法連接 AirportDisplay-XXXX?

請靠近水牌，確認手機使用 2.4GHz、關閉 VPN，然後重新開機再試一次。

### 忘記控制台密碼?

請查看螢幕底部的 MAC 後 6 位，密碼即為 **HK-** 加上這 6 位。如曾更改而忘記，請執行一次原廠重設。

### 輸入 192.168.4.1 沒有反應?

請確認手機仍連接水牌的熱點，不要切換至流動數據。

內建繁體與簡體中文字型。若個別字元顯示為方格，請改用其他語言或常見字詞。

### 可以用 5GHz Wi-Fi 嗎?

不可以。水牌只支援 2.4GHz；路由器同時廣播兩個頻段時，請選擇 2.4GHz 的那一個。


## 支援

如有任何問題，歡迎於市集現場洽詢，或掃描 QR code 開啟重新刷機（USB）網頁。

[github.com/wedsamuel1230/airport-sign-flash-station](https://github.com/wedsamuel1230/airport-sign-flash-station)



## 維護與復原

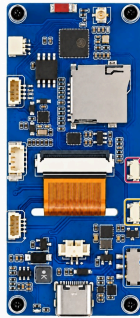

- 1 **RST**：按一下重新啟動（不會清除設定）
- 2 **BOOT**：按住約 5 秒 = 原廠重設
- 3 電源開關（機側最底，近 USB-C）：ON/OFF

## OTA 韌體更新（進階）

先短按並放開 BOOT 以完成授權（授權有效期 120 秒），然後在「維護工具」上載同型號的 **.bin** 檔案。

**警告：**上載錯誤檔案會導致水牌無法開機。如不清楚操作內容，請勿自行更新，並於市集現場尋求協助。

如需使用電腦重新刷機，請參閱封底的 flash station 網址與 QR code。

### 修改設定後螢幕沒有變化?

請按「儲存航班設定」；背景圖片需等待上載完成後才會套用。

### 上載背景圖片失敗?

僅支援 PNG 或 JPEG。裝置會自動裁切為 320×212，建議使用橫向構圖。

### 螢幕沒有畫面?

請檢查電源開關與 USB-C 線，並重新開機一次；若仍未顯示，則需要維修。

### 中文無法顯示?

重新刷機需要 Chrome 或 Edge，以及一條可傳輸資料的 USB-C 線。

請勿自行拆開外殼；避免高溫、潮濕與陽光直射。只建議使用 5V USB 電源。

## HONG KONG AIRPORT DISPLAY

# Hong Kong Airport Display

Airport-style flight information display  
User guide

USB-C 5V power · Works offline · Traditional Chinese, Simplified Chinese and English

Hong Kong Airport Display · User guide

Page 1 / 16

## 3 Join the device hotspot

On your phone, join AirportDisplay-XXXX (the last four MAC characters) with the password HK-XXXXXX.

## 4 Open the console

Open <http://192.168.4.1/> in a browser and sign in as admin with HK-XXXXXX.

**The display runs its own Wi-Fi hotspot**, so no internet is needed for setup. A browser warning that the page is "Not secure" is expected: it is served locally over HTTP.

Hong Kong Airport Display · User guide

Page 3 / 16

## Quick start: four steps

### 1 Power on

Connect USB-C 5V power and switch the unit on. The screen stays dark briefly, then shows the demo flight.

### 2 Read the screen footer

Note the six characters after **MAC**; every password is **HK-** plus those six.

Hong Kong Airport Display · User guide


Page 2 / 16

Setup is a one-off. Later starts reuse the saved flight data and background image, and work with no network.

Hong Kong Airport Display · User guide

Page 4 / 16

## What the screen shows

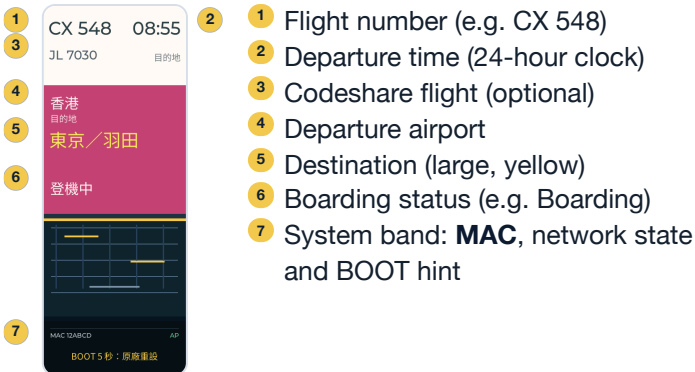

Hong Kong Airport Display · User guide

Page 5 / 16

Before any change, the display shows the built-in demo record: CX 548 · 08:55 · JL 7030 · Hong Kong → Tokyo Haneda · Boarding.

## Console: flight data

After signing in, the console has five areas: **flight data**, **Wi-Fi settings**, **background image**, **OTA / maintenance** and **login settings**.

| Field         | What to enter |
|---------------|---------------|
| Flight number | e.g. CX 548   |

Hong Kong Airport Display · User guide

Page 7 / 16

## Reading the system band

- AP: the display is broadcasting its own hotspot and waiting to be configured.
- STA 192.168.x.x: the display has joined your Wi-Fi and shows its IP address.
- The artwork in the middle is the replaceable background image; the factory default is shown.

Hong Kong Airport Display · User guide

Page 6 / 16

| Field            | What to enter                                                           |
|------------------|-------------------------------------------------------------------------|
| Codeshare        | e.g. JL 7030, leave blank if none                                       |
| Departure        | English, Traditional and Simplified Chinese                             |
| Destination      | English, Traditional and Simplified Chinese                             |
| Departure time   | 24-hour clock, e.g. 08:55                                               |
| Status           | e.g. Boarding / 登機中                                                     |
| Display language | Traditional Chinese, Simplified Chinese or English; applies immediately |

Hong Kong Airport Display · User guide

Page 8 / 16

Press "**Save flight settings**" after editing; the screen updates immediately.

The display has no external flight API, so it shows exactly what you enter: your own flight, a friend's, or an invented boarding flight. Changing the display language applies at once to the screen and the console.

## Factory reset

Hold **BOOT** for about **5 seconds** (the screen footer shows the hint), then release. The display restarts and clears flight data, Wi-Fi, the background image and the console account.

## Download mode (service and re-flashing)

Hold **BOOT**, tap **RST**, then release BOOT. The display enters download mode.

## ## Frequently asked questions

### Cannot find AirportDisplay-XXXX?

Move closer, check the phone is on 2.4GHz, turn off any VPN, then power-cycle and retry.

### I forgot the console password.

Read the six characters after MAC at the bottom of the screen: the password is HK— plus those six. If you changed it and forgot, run a factory reset.

### 192.168.4.1 does not respond.

Check that the phone is still connected to the display's hotspot rather than mobile data.

Chinese fonts are built in. If a single character shows as a box, try another language or a simpler word.

### Can it join a 5GHz network?

No. The display only supports 2.4GHz. If your router broadcasts both bands, pick the 2.4GHz SSID.


## Support

If you have any questions, ask us at the market, or scan the QR code to open the USB re-flash page.

[github.com/wedsamuel1230/airport-sign-flash-station](https://github.com/wedsamuel1230/airport-sign-flash-station)



## Maintenance and recovery

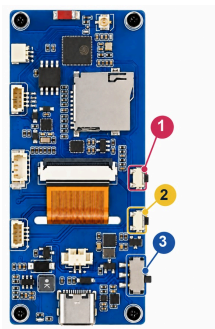

- 1 **RST**: press to restart (keeps your settings)
- 2 **BOOT**: hold about 5 s = factory reset
- 3 Power switch (lowest on the side, by the USB-C): ON/OFF

## OTA firmware update (advanced)

Press and release BOOT to authorise an update (valid for 120 seconds), then upload a `.bin` file for this product under "Maintenance tools".

**Warning:** uploading the wrong file can leave the display unable to boot. If you are unsure, do not update it yourself; ask us at the market.

To re-flash from a computer, see the flash station address and QR code on the back page.

### Nothing changes after I edit the settings.

Press "Save flight settings". A background image is applied only after the upload finishes.

### The background upload fails.

Only PNG and JPEG are supported; the device crops to 320×212, so use a landscape picture.

### The screen is blank.

Check the power switch and USB-C cable, then restart. If it stays blank, the unit needs service.

### Chinese characters do not appear.

Re-flashing needs Chrome or Edge and a USB-C cable that carries data.

Do not open the enclosure. Keep the unit away from heat, moisture and direct sunlight. Use a 5V USB power source.