

- ▶ Metrology台灣黑馬牌潛艦系列電子卡尺,數值讀取系統採用即時記憶電感測量掃描晶片,不論在開機或關機之狀態下均可即時記憶任意位置之量測數值
- ▶ 防護等級符合IP67(IEC 60529)完全防塵、防水、防油、1M深內水中亦可操作使用
- ▶ 雙鍵式按鈕操作簡單,具備即時記憶功能,不需重覆歸零,掃描晶片感應快速、可靠、抗環境干擾能力強、耐操、耐用、穩定性高、壽命更長
- ▶ 可視需求選購藍芽無線傳輸內建配置功能之SB型卡尺,不須安裝任何軟體即可傳送數據至電腦及手機之可儲存編輯電子文檔或EXCEL進行編輯及運算



最佳選擇標章
台灣優良產品金鑽獎

潛艦系列 SUBMARINE



IP67 WATERPROOF 電子式卡尺

特性介紹 FEATURE

- ▶ 防護等級IP67(IEC60529)
完全防塵、防水、防油
一般水壓和時間下,浸入水中亦可正常使用
- ▶ 11mm超大LCD數顯晶片
響應速度無限大,無超速誤差
- ▶ 整體硬化不銹鋼
硬度HRC48~52,含微調滾輪
- ▶ 雙鍵選單式功能鍵
可移位自動開機、手動開關機和自動關機
- ▶ 任意位置歸零和公英制模式切換功能
- ▶ 3V鋰電池(CR2032),壽命2000小時
- ▶ 附原廠保固及JCC檢驗合格校正報告


型號	量測範圍	解析度	精度(最大誤差)
EC-9001SS	0-150mm/6"	0.01mm/0.0005"	0.03mm/0.0010"
EC-9002SS	0-200mm/8"		0.03mm/0.0015"
EC-9003SS	0-300mm/12"		0.04mm/0.0015"

*可視需求選購藍芽無線傳輸內建配置功能之SB型卡尺

Product Instruction

Please read the product instruction carefully and use the product correctly under the instruction

1. Product Figure and Buttons

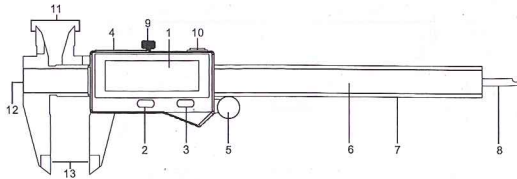


1. LCD screen: display measurement value
2. MODE button: Short press for inch/metric conversion.
3. 0/⏻ button: Short press to turn on or set zero, long press to turn off.
4. Battery cover: replace battery
5. Thumb roller
6. Scale
7. Beam
8. Depth measurement rod: measuring depth
9. Locking screw: Unlock the caliper counterclockwise and lock the current position of the caliper clockwise.

10. DATA button: bluetooth function button, use the function for the bluetooth product, see the bluetooth operation and made a detailed instruction.
11. Internal jaws: measuring Internal dimension
12. Step measurement: measuring step dimension
13. External jaw: measuring external dimension


2. Use steps

Before use, please make sure that the battery is installed.


1. Rotate to unlock the lock of the caliper, and hand-pushed roller caliper can be moved.
2. Turn on to check if the caliper work well.
3. Clean the measuring surface of the measuring tool. Close the measuring claw with appropriate force, short-press 0/⏻ to turn on and set zero, and the caliper can be used normally, size of different parts can be measured by following operation.

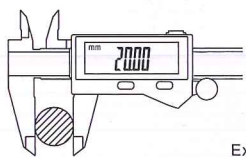


External measurement

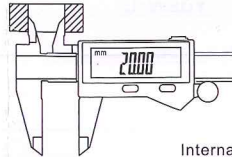

Internal measurement

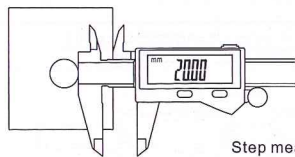

Step measurement



Depth measurement

3. Bluetooth operation

Only bluetooth form products can use this function

Before using the bluetooth function, please set the language in the input method software of receiving equipment to English mode, if inputting under the Chinese mode, the decimal point will become the dot. When using, please try not to apply too many other software at the same time to avoid the stumble system operation and affect the data transmission.

1. Matching:

When the measuring tool matches with the receiving device with bluetooth for the first time use, both shall be matched for operation, turn on the bluetooth searching function of receiving device (computer, phone), at the same time, long-press DATA button on the measuring tool for more than 3 seconds, till  on the screen twinkles slowly, it means that the measuring tool enters in the searched mode, loosen DATA button, wait till the receiving equipment searches the Bluetooth Keyboard device, then click to connect, and wait for the connection between the measuring tool and device. After connecting,  will display on the screen all the time. If it can not be connected within 5 minutes,  will disappear, the measuring tool will exit the searched mode automatically. If continuing connection, please repeat the above actions.

2. Send data:

After connecting, short-press DATA button, data can be sent to the receiving device (computer, phone), the screen will winkle  at the same time, to remind that data has been sent. When the measuring tool and receiving device match and connect, please try to keep the closest distance to avoid the bluetooth from disturbance and interruption, when the measuring tool doesn't send data for more than 15 minutes, the bluetooth will be turned off automatically to save power.




3. Caution:

If one measuring tool matches and connects with several receiving device, the device which is connected recently has the priority of connection. Because of the receiving device system difference, after one measuring tool matches and connects with one receiving device, when connecting with Windows computer, it can not be connected by long-pressing DATA button of measuring tool for the reconnection directly, it's needed to delete Bluetooth Keyboard shown on the computer, and match again to connect.

(DATA bluetooth function button):
long-press the bluetooth ON or OFF function,
short-press to send the data after connecting.

After the bluetooth turns on, the flickering bluetooth indicator will be displayed on the screen, at that time, it is the bluetooth searching mode, the bluetooth indicator will be displayed on the screen after connecting.

After the bluetooth connects, short-press DATA (bluetooth function button) to send the data, at the same time, the indicator of sending data will be displayed on the screen.

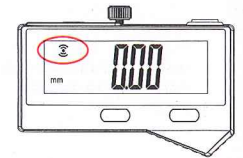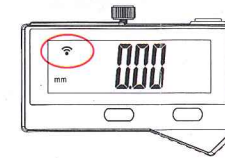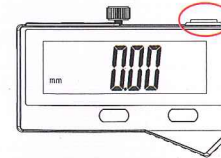

4. Product characteristics

1. Inductive relative measurement system.
2. Protection class: IP67, it can prevent foreign bodies from entering the product, and can be used in water less than 1 meter deep in short time.
3. Response speed: 3.2m/s.
4. Automatic power off, power on function.
Note: when the caliper no use for 8 hours, if you want to use the caliper again, please close the measuring jaws gently and short press the "0/⏻" key to set zero.
5. CR2032 lithium battery, battery life > 1 year.
6. LCD screen word height: 11mm
7. Low power alarm: when the battery voltage is too low, the screen displays "B" to remind the user to replace the battery
8. Option: English score function

Range of measurement

Resolution : 0.01mm/0.0005"
0-150mm/0-6" Accuracy : 0.02mm/0.001"
0-200mm/0-8" Accuracy : 0.03mm/0.0015"
0-300mm/0-12" Accuracy : 0.03mm/0.0015"

Resolution : 0.001mm/0.00005" (optional)

0-150mm/0-6" Accuracy : 0.01mm/0.0004"
0-200mm/0-8" Accuracy : 0.01mm/0.0004"
0-300mm/0-12" Accuracy : 0.02mm/0.0008"




Working temperature: 0-40°C

Storage and transportation: -20-70°C

Environmental humidity: unlimited

5. Replace battery

1. Prepare for the caliper, straight screwdriver and soft cloth.
2. Wrap a screwdriver with soft cloth to avoid scratching the caliper surface.
3. Align the straight screwdriver with the battery cover flatly.
4. With the index finger as the fulcrum, the battery cover can be removed and the old battery can be taken out with a slight upward force.
5. The new battery is loaded into the battery cover according to the positive pole upward, and then the battery cover is inserted into the corresponding position.
6. Gently press the battery cover to complete installation.

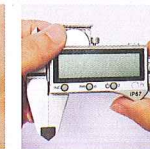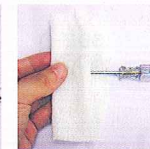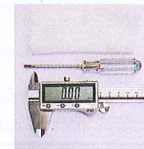

6. Caution

Although you own the high-quality product, like any other electronic product, appropriate attention is necessary


1. The product belongs to the precise measuring tool, please avoid the product contact with liquid, exposure in sunshine, do not disassemble or collide the product.
2. About the battery: forbid to charge or burn, the old battery must be disposed according to the local laws and regulations.
3. In order to ensure the good condition of measuring tool for long time, clean the oil contamination and liquid on the measuring tool with the soft cloth after using.
4. If you do not use for a long time, please take out the battery.

7. Failure removal

1. When the number twinkles on the screen or "B" is displayed on the screen, please change the battery.




Water-Proof Digital Depth Caliper with inductive measuring system

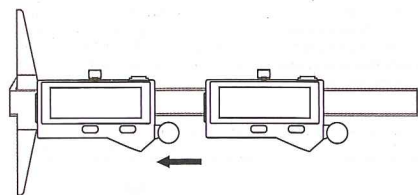

Digital double hook depth gage

SDE-A
SDEW-A


Push the slider to the left to gently touch the measuring face, press zero key to reset.

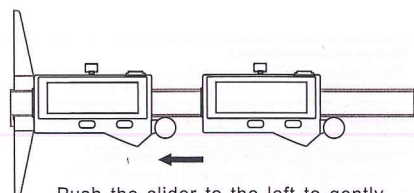

Digital hook depth gage

SDE-B
SDEW-B


Push the slider to the left to gently touch the measuring face, press zero key to reset.

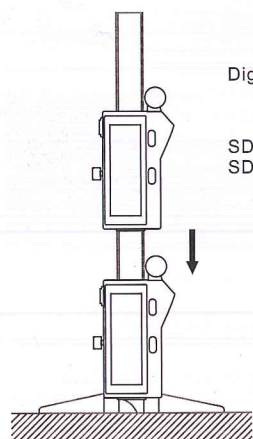

Digital depth gage

SDE-C
SDEW-C

Push the slider down to make the measuring face touch the reference plane gently, press zero key to reset.

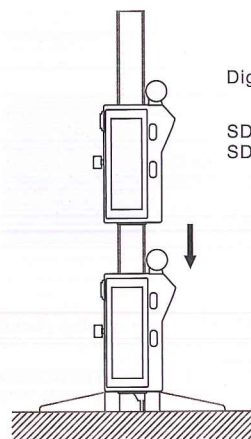


Digital point depth gage

SDE-D
SDEW-D

Push the slider down to make the measuring face touch the reference plane gently, press zero key to reset.

Water-Proof Special Digital Caliper with inductive measuring system


Tube thickness measuring digital caliper

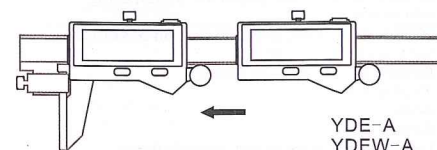

YDE-A
YDEW-A

Push the slider to the left to gently touch the measuring face, press zero key to reset.


Outside slot measuring digital caliper

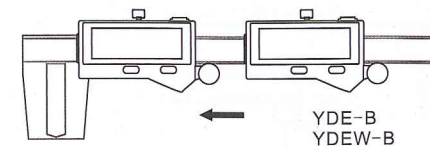

YDE-B
YDEW-B

Push the slider to the left to gently touch the measuring face, press zero key to reset.


Internal slot measuring digital caliper

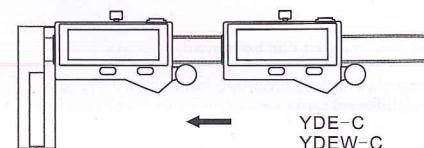

YDE-C
YDEW-C

Push the slider to the left to gently touch the measuring face, press zero key to reset.


Internal slot measuring digital caliper

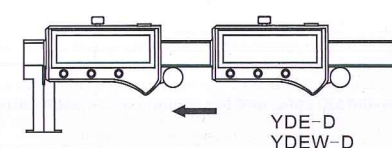

YDE-D
YDEW-D

Push the slider to the left, then preset the size of the measuring tips.


Digital caliper with Interchangeable anvils
for inner and outside slot measuring

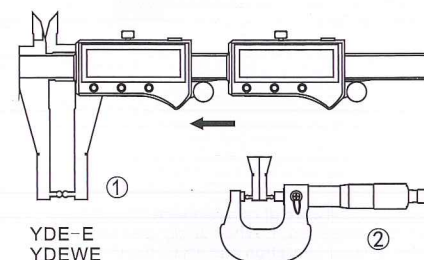

YDE-E
YDEWE

- 1) Push the slider to the left to gently touch the measuring face, press zero key to reset.
- 2) Preset the actual size of the measuring anvils. Push the slider to the left to gently touch the measuring face, press zero key to reset.

Digital caliper with Interchangeable anvils
for inner and outside slot measuring

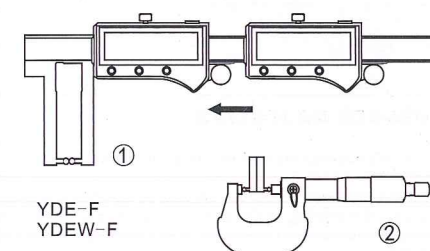

YDE-F
YDEW-F

- 1) Push the slider to the left to gently touch the measuring face, press zero key to reset.
- 2) Preset the actual size of the measuring anvils. Push the slider to the left to gently touch the measuring face, press zero key to reset.