


数字输入



NPN & PNP






NPN

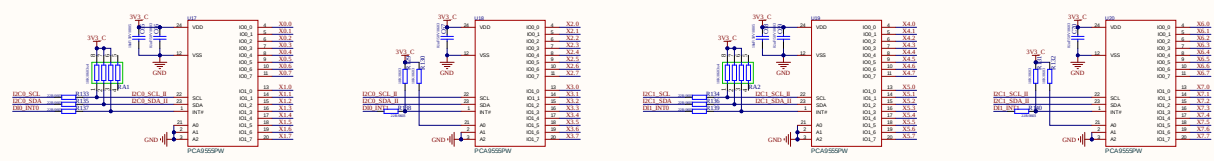










Title		
Size	Number	Revision
AI		
Drawn	09/2020	Sheet 06
Checked	09/2020	Sheet 06



DAC

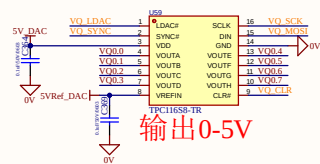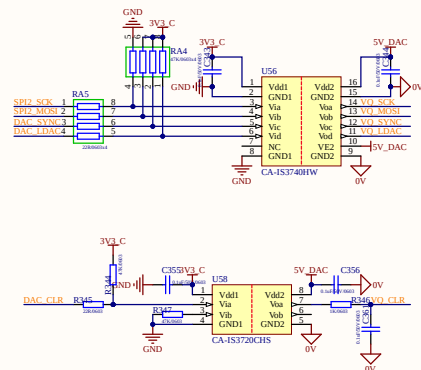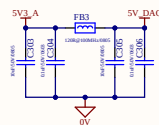

输出电压计算:
1. 差分放大器公式:
当: $R_2=R_2$, $R_1=R_1$
 $V_2=(V_0-V_1)(R_2/R_1)$ ——公式1
2. 电压源放大计算公式:
放大倍数 $\beta=(R_1/R_2+1)$
A. R_2 焊接, $R_1=R_2$, $\beta=2$
B. R_2 不焊接, $R_1=R_2$, $\beta=1$
 $V_0=V_2$
当参考电压选择2.5V时,
 $V_0=2.5V$, $V_0=(0-5V)$
 V_2 取值范围: $-5.32V \sim 5.32V$
 V_0 取值范围: $-10.64V \sim 10.64V$
【 $V_0=V_2 \pm 2.128 \times 2$ 】
当参考电压选择0V时,
 $V_0=0V$, $V_0=(0-5V)$
 V_2 取值范围: $0V \sim 10.64V$
 V_0 取值范围: $0V \sim 12V$ (电源电压 $\pm 12V$, 程序输出使 V_0 限制在 $0 \sim 2.5V$ 范围, 超过 $2.02V$, V_0 饱和无并)
【 $V_0=V_2 \pm 2.128 \times 2$ 】
参考电压选择:
通过跳线箱来选择输出量程:
则接2V5R_DAC, Ref_VQ, 参考电压为2.5V;
则接0V, Ref_VQ, 参考电压为0V;
R11, R2电阻为内部跳线电阻, 可不通过跳线箱而直接选择焊接电阻来配置参考电压;
焊接R11, 参考电压为2.5V;
焊接R2, 参考电压为0V;

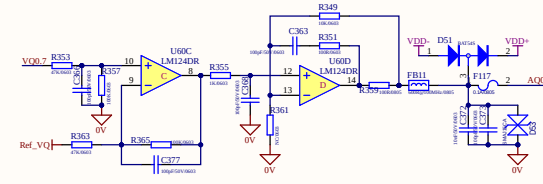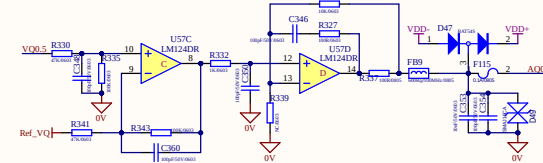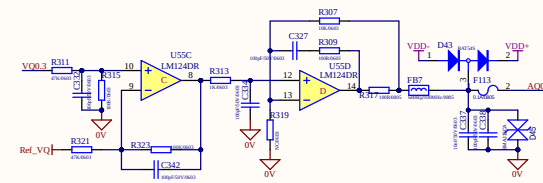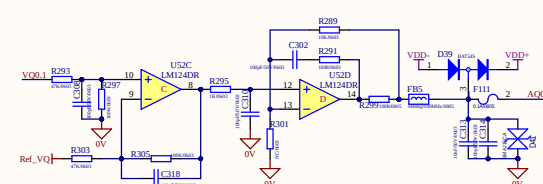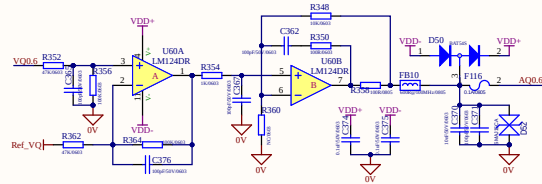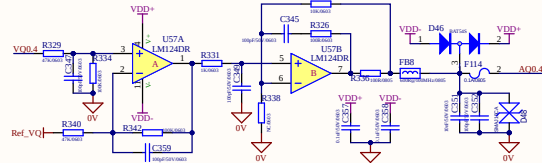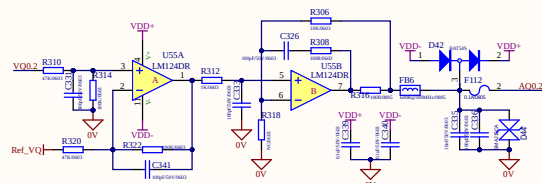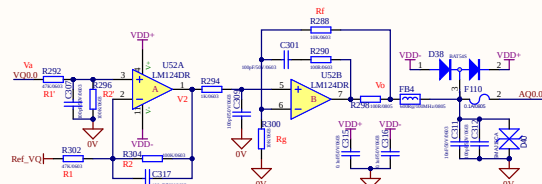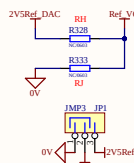

Title		
Size	Number	Revision
A2		
Date	6-30-2026	Sheet of
File	F:\Designs_VH-VCU02M-AO-V1.0_Sch	Drawn By: